


STOLL

Spare parts catalog

CMS 830 C (Type 631)

Component type 006

E2,5.2

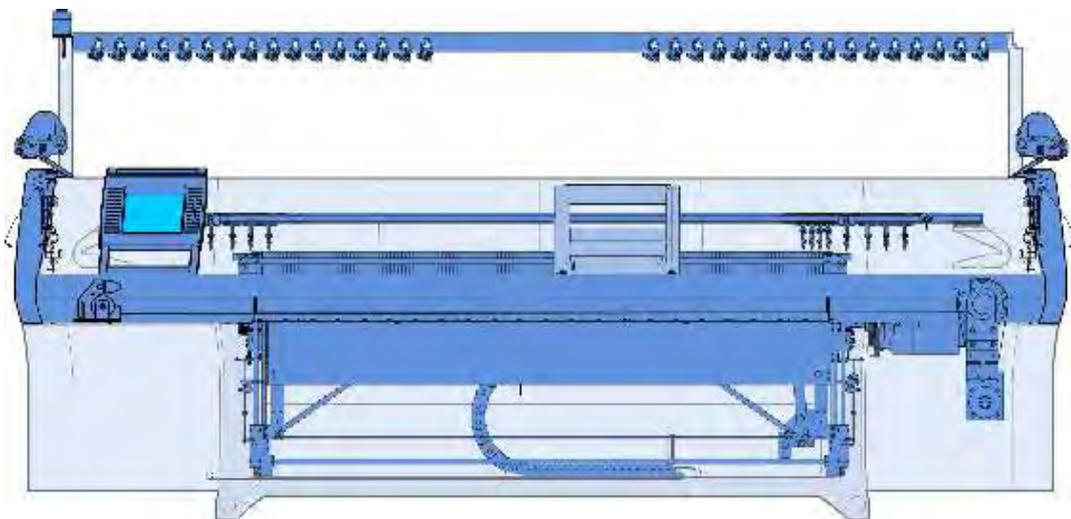

Document No. 257125_06_EN

Release 2016/02

1 Introduction

Imprint

All rights reserved.

The utilisation of texts and pictures, also in extracts, without our agreement is unfavourable to the copyright.

Our products are being developed further continuously. They are therefore subject to technical modifications.

The indications of this catalog are without liability.

©

H. Stoll AG & Co.KG

Stollweg 1

D-72760 Reutlingen, Germany

Phone: +49 (07121) 313-289

Fax: +49 (07121) 313-347

e-mail: spareparts@stoll.com

Notes for the order

This catalog serves to order spare parts.

It can only be applied to the machine type recorded on the title page.







When ordering spare parts we imperatively ask for the following indications as otherwise a delivery of spare parts is not possible:

1. Type of machine, gauge, no. of machine.
2. Page no., designation, ID, quantity.

Only genuine STOLL spare parts may be used for repairs.

1.1 Search help

In order to make the search of the spare parts easier, the following elements will be used in the spare parts catalog:
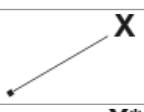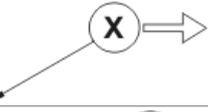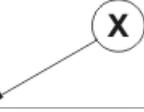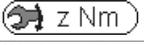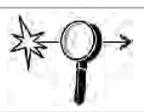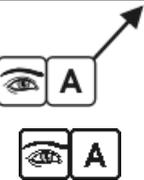
| Symbol | Meaning |
|---|---|
| Σ | Indicates an assembly |
|  | Position indicator with the position number (X). |
|  | Indicates an element of another assembly. |
|  | Indicates an assembly which is represented more detailed beside. |
|  | Indicates an assembly which is represented on another page more detailed. |
|  | Screw torques (z) deviating from the preferential row. |
|  | Detail, represented enlarged in the direction of the arrow. |
|  | Explosion representation, single elements enlarged. |
|  | Indicates a group of parts. |
|  | Indicates the left side or view. |
|  | Indicates the right-hand side or view. |
|  | Indicates a sectional drawing or a view in the viewing direction. |

1.2 Torques

Preferential row of screw torques

- Torques are **valid** for:
Connection steel-steel, black, phosphatized, galvanized, rolled or cut thread as well as only for plain (head) supports.
- Torques are **not valid** for:
protected screws with: lock washers, rib heads, coated and clamping screws and nuts. They are also not used for self-cutting threads.
- Torques differing from this preferential row of torques must be taken from the corresponding location in the drawings.

| Drehmomente Torques Couples Coppias Momentos de rotación [Nm] ± 10 % (für $\mu_{ges} = 0,12$) | | Festigkeitsklassen | | |
|--|-----|-----------------------|------------|------------|
| | | Property class | | |
| | | Classes de résistance | | |
| | | Classi di resistenza | | |
| | | Clasas de resistencia | | |
| | | 4,8 | 8,8 | 12,9 |
| Regelgewinde Coarse-pitch thread Filetage à pas gros Filetto regolatore Filete regulador | M3 | 0,6 | 1,2 | 2,5 |
| | M4 | 1,2 | 2,5 | 5 |
| | M5 | 2,5 | 5 | 9 |
| | M6 | 5 | 9 | 18 |
| | M8 | | 18 | 40 |
| | M10 | | 40 | |
| | M12 | | 80 | |

Table of Contents

| | | |
|----------|--|-----------|
| 1 | Introduction | 3 |
| 1.1 | Search help | 4 |
| 1.2 | Torques | 5 |
| 2 | Carriage drive | 11 |
| 2.1 | Drive | 12 |
| 2.1.1 | Motor and belt drive | 13 |
| 2.1.2 | Tension bearing | 14 |
| 2.2 | Energy chain and plunger | 15 |
| 3 | Racking | 17 |
| 3.1 | Racking drive | 18 |
| 4 | Needle beds | 19 |
| 4.1 | Needle bed E2,5.2 | 20 |
| 4.2 | Continuation needle bed E2,5.2 | 21 |
| 4.3 | Left clamping/cutting bed | 22 |
| 4.4 | Clamping/cutting bed on the right | 23 |
| 4.5 | Cover on the left and on the right | 24 |
| 5 | Carriage | 25 |
| 5.1 | Overview of Carriage Parts | 26 |
| 5.2 | Needle cam at the top | 27 |
| 5.3 | Needle cam at the bottom | 28 |
| 5.4 | Yarn carrier driving without guide part | 29 |
| 5.5 | Yarn carrier driving with guide part | 30 |
| 5.6 | Jack cam box | 31 |
| 5.7 | Holding-down jack cam box E2,5.2 | 32 |
| 5.8 | Carriage assembly | 33 |
| 5.9 | Carriage cover | 34 |
| 5.10 | Carriage guide | 35 |
| 5.11 | Needle detector | 36 |
| 5.12 | Brush holder | 37 |
| 5.13 | Spare parts package carriage guide bar | 38 |
| 6 | Main take-down | 39 |
| 6.1 | Main take-down | 40 |
| 6.2 | Main take-down on the left | 41 |
| 6.3 | Main take-down on the right | 42 |
| 6.3.1 | Mounting plate | 43 |
| 6.3.2 | Full floating axle | 44 |
| 6.4 | Main take-down in the middle | 45 |
| 6.4.1 | Rear take-down roller | 46 |
| 6.4.2 | Front take-down roller | 47 |
| 6.4.3 | Front roller elements | 48 |
| 6.4.4 | Pressure angle rail | 49 |
| 6.4.5 | Stripper angle | 50 |
| 6.4.6 | Impulse sensor and motor | 51 |
| 6.5 | Take-down closing device | 52 |
| 6.6 | Continuation of take-down closing device | 53 |
| 6.6.1 | Right swivel support | 54 |
| 6.6.2 | Swivel holder in the middle | 55 |
| 6.6.3 | Left swivel holder | 56 |
| 7 | Auxiliary Take-down | 57 |
| 7.1 | Auxiliary Take-down | 58 |
| 7.1.1 | Auxiliary take-down pre-assembled | 59 |
| 7.1.2 | Motor | 64 |
| 7.2 | Yarn brake at clamping and cutting bed | 65 |

| | | |
|-----------|--------------------------------------|------------|
| 8 | Comb Take-down | 67 |
| 8.1 | Comb Take-down | 68 |
| 8.1.1 | Comb take-down on the left | 69 |
| 8.1.2 | Comb take-down on the right | 70 |
| 8.1.3 | Comb take-down in the middle | 73 |
| 9 | Yarn delivery device | 77 |
| 9.1 | Yarn guide system with 32 FKE | 78 |
| 9.2 | Left yarn guide | 79 |
| 9.2.1 | Left yarn tensioner | 80 |
| 9.2.2 | Left tension axle | 81 |
| 9.2.3 | Yarn deflector on the left | 82 |
| 9.3 | Right yarn guide | 83 |
| 9.3.1 | Right yarn tensioner | 84 |
| 9.3.2 | Right tension axle | 85 |
| 9.3.3 | Yarn deflector on the right complete | 86 |
| 9.4 | Carriage of yarn carrier | 87 |
| 9.5 | Bar unit | 88 |
| 9.6 | Bobbin board | 89 |
| 9.7 | Left friction feed wheel | 90 |
| 9.8 | Right friction feed wheel | 91 |
| 9.9 | Stopping device on the left | 92 |
| 9.10 | Stopping device on the right | 93 |
| 10 | Fluff absorption | 95 |
| 10.1 | Fluff absorption | 96 |
| 10.2 | Lint container | 97 |
| 10.3 | Set of hose | 98 |
| 10.4 | Suction tube | 99 |
| 11 | Operation and control | 101 |
| 11.1 | Input unit | 102 |
| 11.2 | Starting device | 103 |
| 11.2.1 | Bearing of the engaging rod | 104 |
| 11.3 | Signal light | 105 |
| 11.4 | Control of Collecting Area | 106 |
| 11.5 | Shock stop motion | 107 |
| 11.6 | Measuring device | 108 |
| 12 | Protective devices | 109 |
| 12.1 | Lateral safety doors | 110 |
| 12.2 | Panelling | 111 |
| 12.3 | Rear panel | 112 |
| 13 | Electrical equipment | 113 |
| 13.1 | Circuit diagram (221) as PDF | 114 |
| 13.2 | Trailing cable | 115 |
| 13.3 | Cable set installation | 116 |
| 13.3.1 | Loom of cables base 1 | 117 |
| 13.3.2 | Loom of cables base 2 | 118 |
| 13.3.3 | Loom of cables 84" | 119 |
| 13.3.4 | Loom of cables COMB | 120 |
| 14 | Control electronics | 121 |
| 14.1 | Left control cabinet | 122 |
| 14.2 | Right control cabinet | 123 |
| 15 | Deliverable accessories | 125 |
| 15.1 | Accessories part 1 | 126 |
| 15.2 | Accessories part 2 | 127 |
| 16 | Special attachments | 129 |
| 16.1 | Complete intarsia yarn carriers | 130 |
| 16.1.1 | Carriage IFF | 131 |


| | | |
|---------|--|-----|
| 16.1.2 | Bow and head IFF | 132 |
| 16.2 | Complete intarsia yarn carriers (for ultra coarse yarns) | 133 |
| 16.2.1 | Bow and head IFF (for ultra coarse yarns) | 134 |
| 16.3 | Yarn carrier carriage (for ultra coarse yarns) | 135 |
| 16.4 | Carriage of plating yarn carrier | 136 |
| 16.5 | Additional board at the bottom | 137 |
| 16.6 | Additional board retrofit kit | 138 |
| 16.7 | Bobbin holder on the left | 139 |
| 16.8 | Bobbin holder on the right | 140 |
| 16.9 | Yarn length measuring device on the right complete | 141 |
| 16.9.1 | Yarn length measuring device on the right | 142 |
| 16.10 | Yarn length measuring device on the left complete | 143 |
| 16.10.1 | Yarn length measuring device on the right | 144 |
| 16.11 | Adjusting plates, Devices needle bed | 145 |

2 Carriage drive




2.1 Drive

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--------------------------|---------|-----|-----------------------|---------|
| Σ | Drive unit | | 23 | Fan complete | 242 413 |
| 11 | Drive unit complete | 240 743 | 23a | Fan plate drive motor | 241 823 |
| 12 | Tension bearing complete | 251 581 | 23b | Fan complete512 | 213 722 |
| 14 | Toothed belt50AT10/7150 | 236 656 | 523 | Cap screws M8x12 | 023 138 |
| 17 | Parabolic spring | 200 661 | 905 | Sliding nut M10X12 | 023 471 |
| 18 | Hexagon bolt | 214 275 | 907 | Cap screw M10X25 | 020 157 |

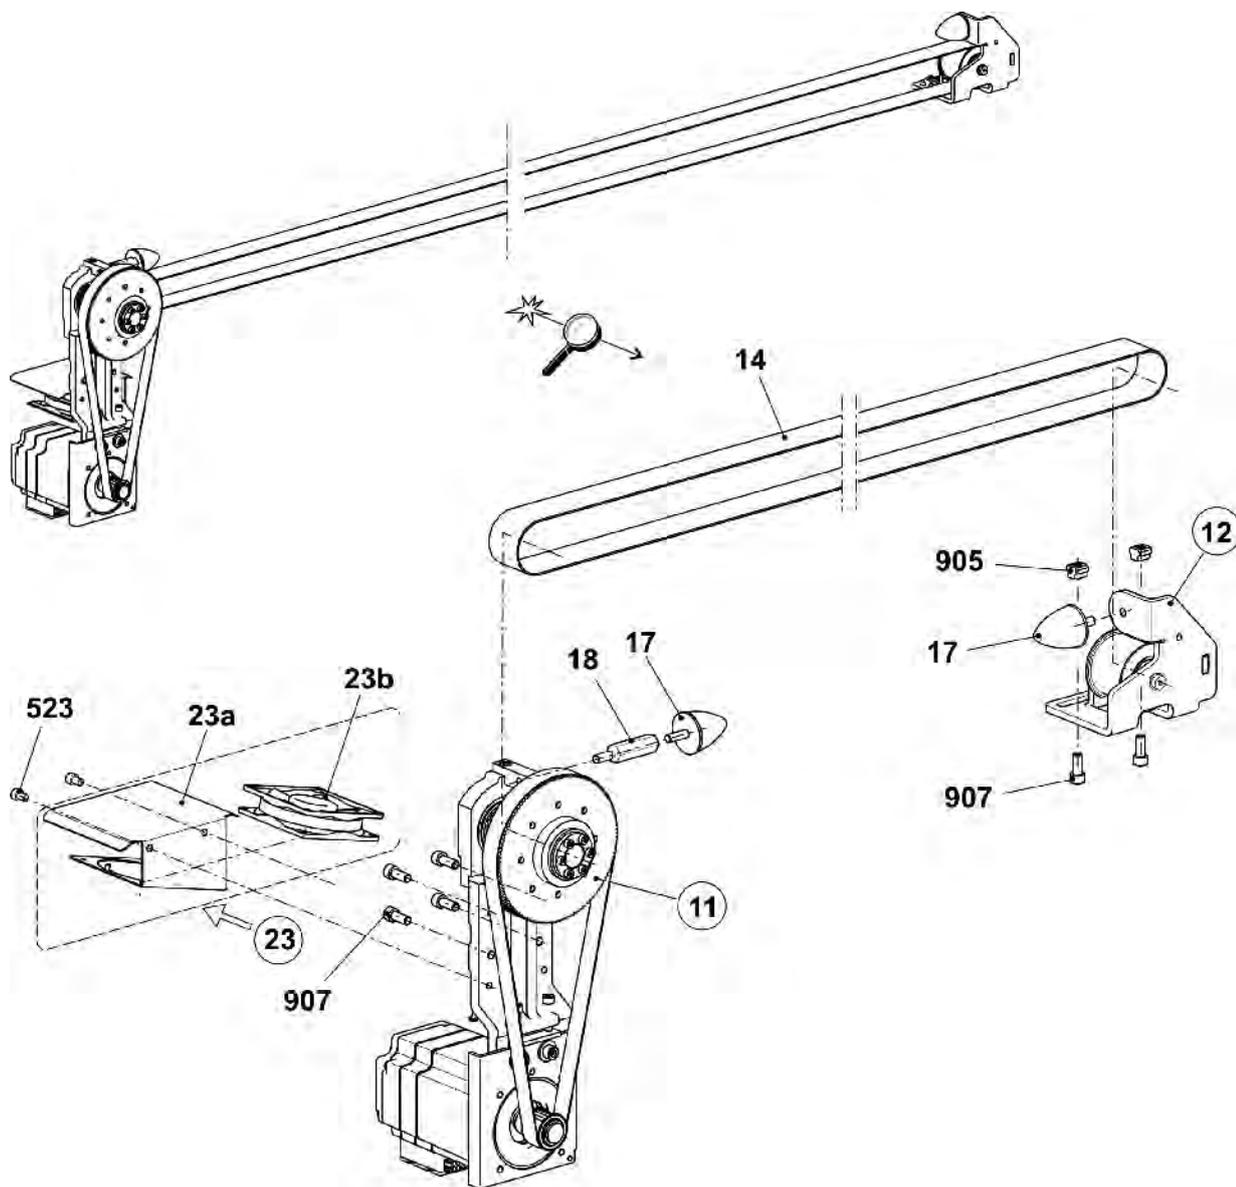


2.1.1 Motor and belt drive

| Pos | Designation | Id | Pos | Designation | Id |
|----------|----------------------------|----------------|-----|---------------------------------|---------|
| Σ | Drive unit complete | 240 743 | | | |
| 1 | Drive unit | 256 301 | 521 | Retaining ring 72x2.5 | 022 914 |
| 2 | Drive bearing complete | 255 005 | 522 | Grooved ball bearing 6207-2RS | 022 915 |
| 2a | Drive bearing ECO2 | 252 634 | 523 | Tension set 30X55 | 023 208 |
| 2b | Toothed belt pulley | 240 616 | 524 | Cap screw M8X25 12.9 | 020 142 |
| 2c | Pinion 57 AT10 18 | 242 039 | 3 | Toothed belt 250 HP-S5M 1050 NG | 240 628 |
| 2d | Support of buffer | 222 100 | 500 | Cap screw M10X25 | 020 157 |
| 520 | Cap screw M8X35 | 020 144 | 501 | Disk 10,5X25X2,5 | 022 178 |

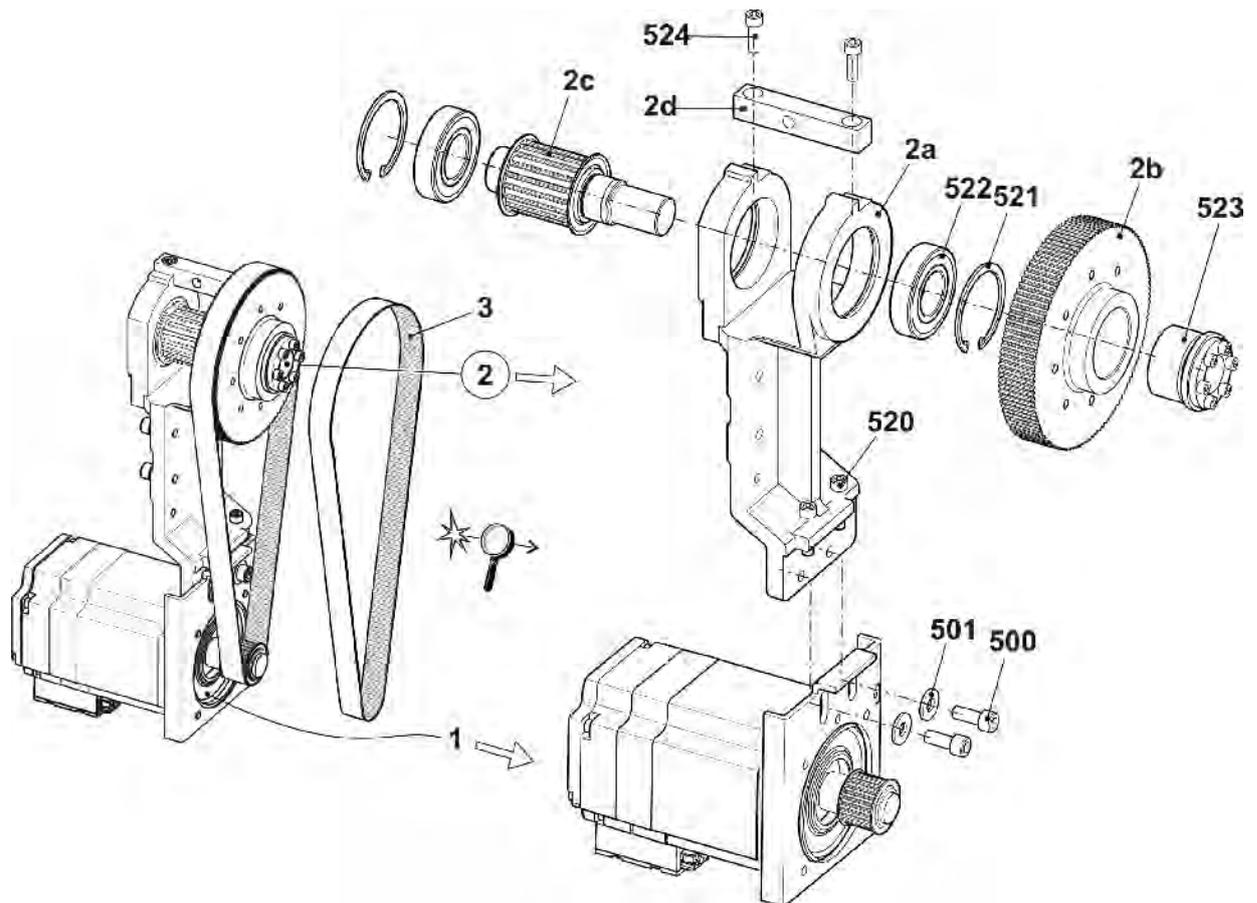


2.1.2 Tension bearing

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---------------------------------|----------------|------|---------------------------------------|---------|
| Σ | Tension bearing complete | 251 581 | 2 | 500 Grooved ball bearing 625-6305-2RS | 255 686 |
| 1 | Tension bearing | 251 560 | | 504 Retaining ring 471-25x1,2 | 251 617 |
| 2 | Tension roller complete | 256 640 | 501 | Cap screw M10x25 | 023 751 |
| | 2a Tension roller | 255 684 | 502 | Washer | 020 874 |
| | 2b Axle | 251 579 | 510* | Eccentric | 255 499 |

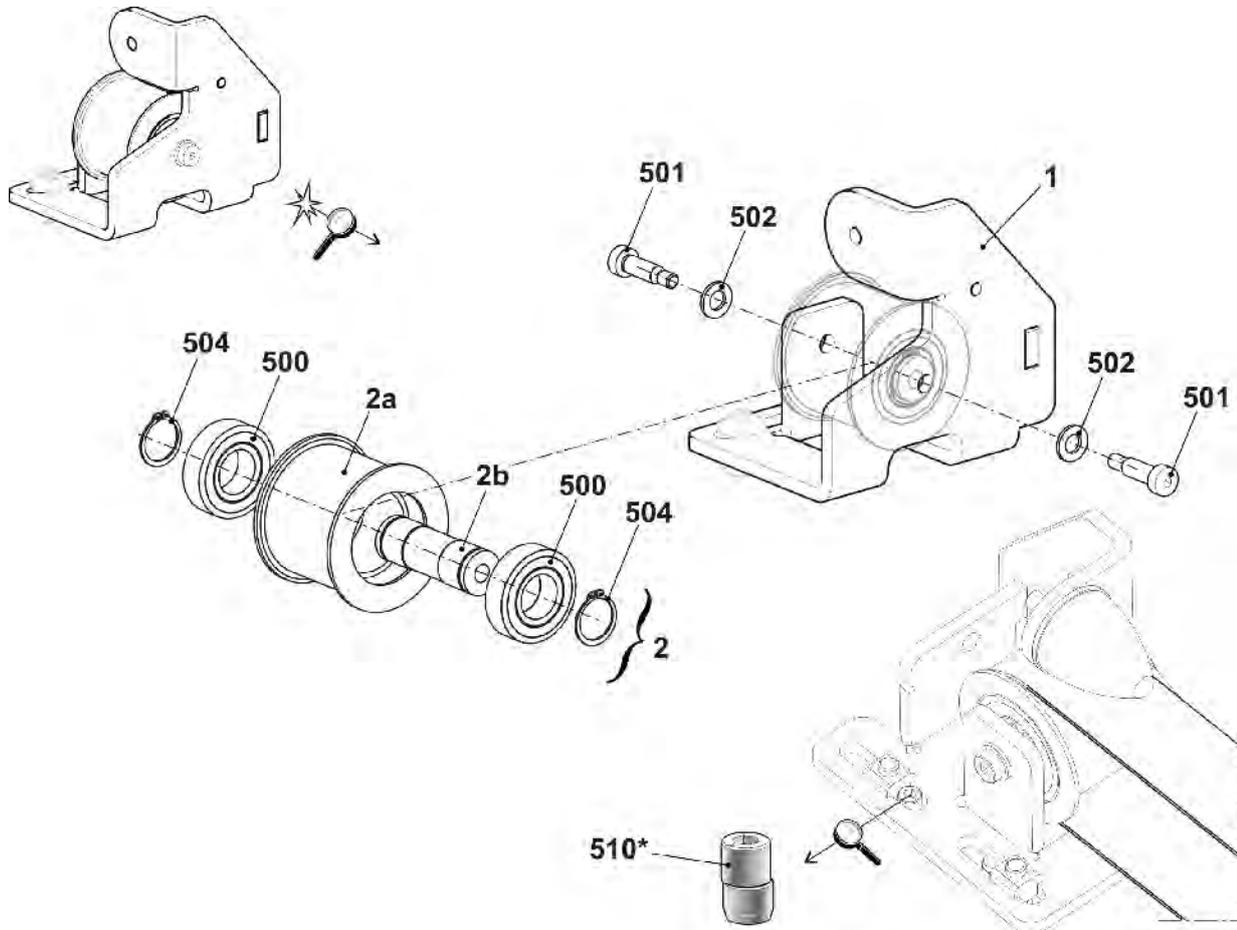


2.2 Energy chain and plunger

| Pos | Designation | ID | Pos | Designation | ID |
|-----|-----------------------------|---------|-----|---------------------------------------|---------|
| 1 | Energy chain 40 links | 259 232 | 7 | Continuation carriage driver complete | |
| 4 | Depositing gutter | 259 273 | 77 | Cover strip | 258 379 |
| 5 | Threaded spacer | 214 584 | 574 | Cap screw M6x12 | 020 134 |
| 7 | Carriage driver complete | 259 280 | 577 | Cap screw M8x30 | 020 143 |
| 71 | Carriage driver | 258 380 | 579 | Fixing element | 026 489 |
| 72 | Switch flag carriage driver | 258 381 | 570 | Cap screw M6x8 | 023 411 |
| 73 | Cable driver | 259 286 | 10 | Hose clip | 214 653 |
| 74 | Clamping plate | 252 592 | 500 | Cap screw M6x20 | 020 136 |
| 75 | Cable holder | 204 688 | 502 | Cap screw M6x8 | 023 411 |
| 76 | Cellular caoutchouc black | 202 597 | 503 | Cap screw M6x16 | 020 135 |

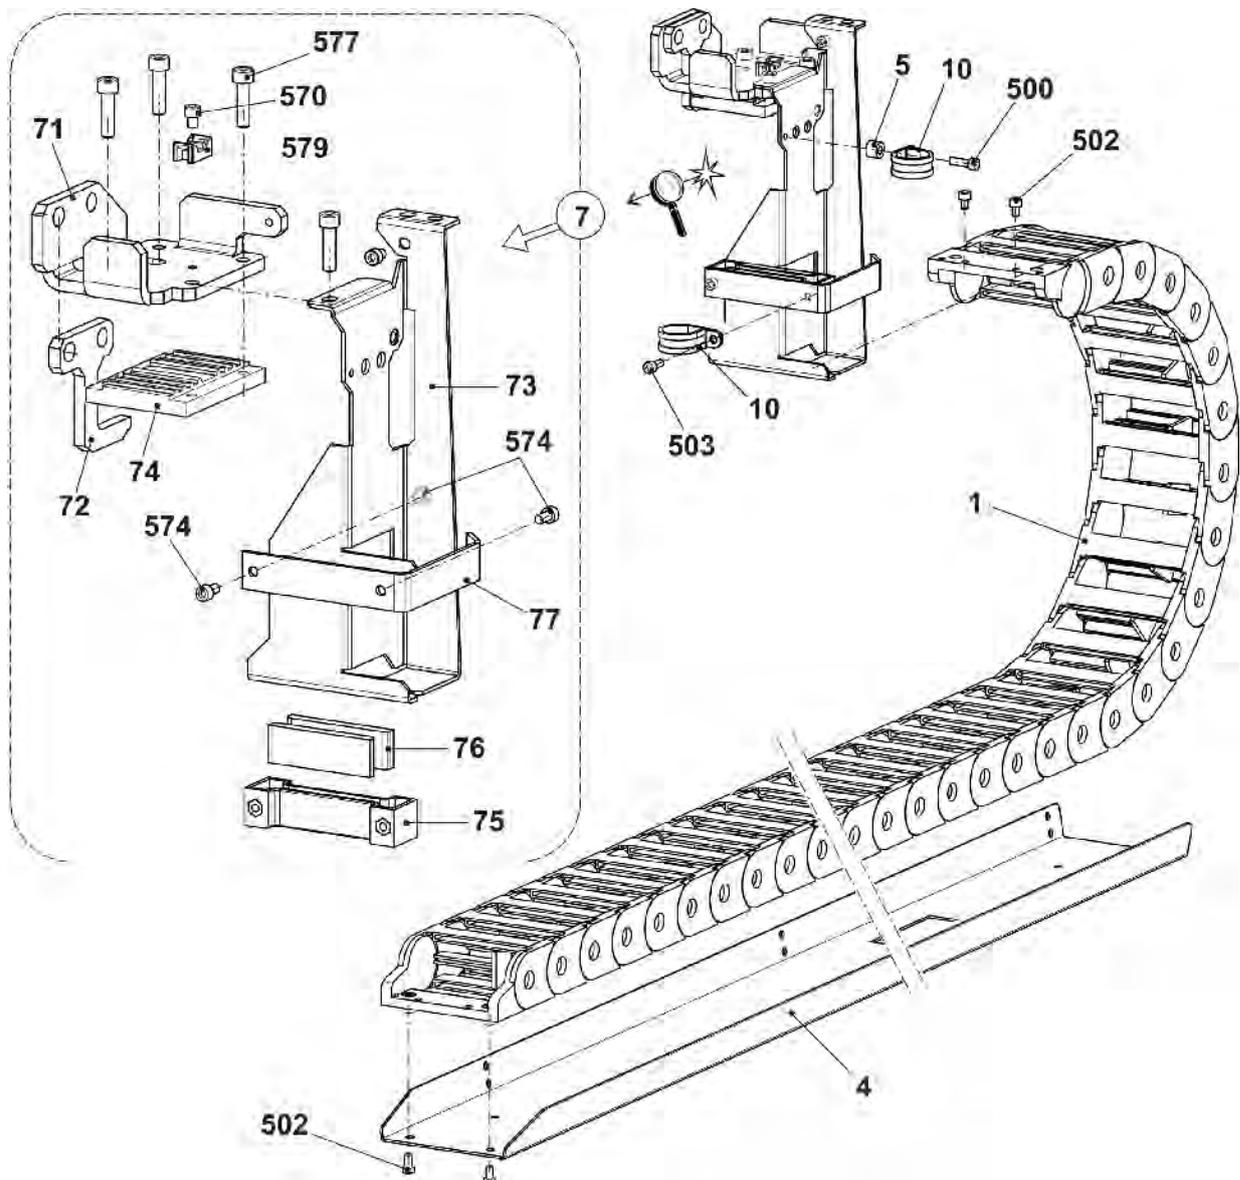


3 Racking

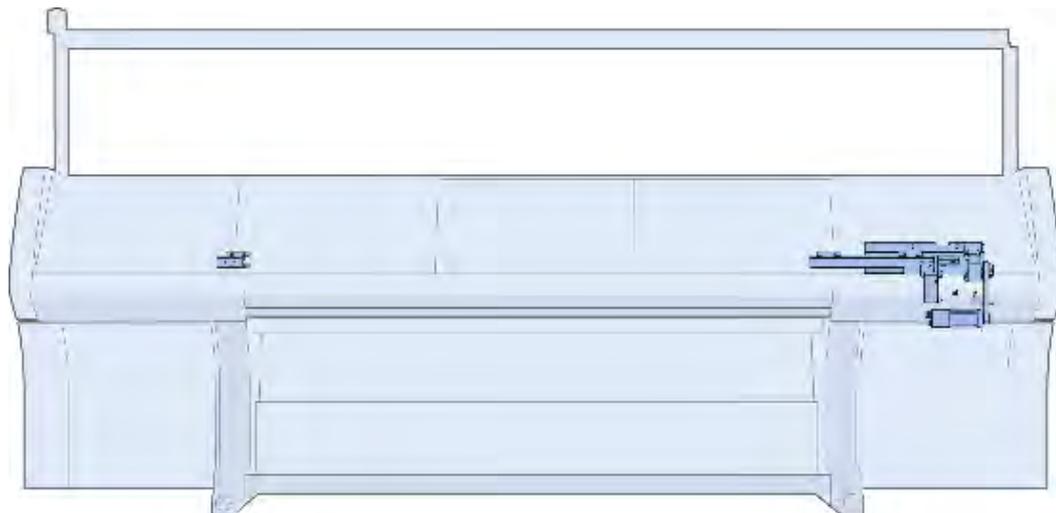


3.1 Racking drive

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|---------------------------|---------|-----|----------------------|---------|
| Σ | Racking | | | | |
| 1 | Racking motor complete | 258 192 | 503 | Pan head screw M6x10 | 023 183 |
| 2 | Bearing | 227 605 | 504 | Cap screw M5x12 | 020 132 |
| 3 | Spindle bearing complete | 253 262 | 505 | Washer | 022 175 |
| 4 | Card racking limit switch | 229 396 | 509 | Shim 0,03x15x85 | 023 162 |
| 5 | Racking cover plate | 230 048 | 510 | Shim 0,05x15x85 | 023 163 |
| 6 | Racking strip | 241 921 | 511 | Shim 0,1x15x85 | 023 164 |
| 7 | Racking strip on the left | 240 696 | 512 | Shim 0,2x15x85 | 023 170 |
| 8 | Guide strip | 206 382 | 518 | Shim 0,03x15x75 | 023 395 |
| 9 | Toothed belt 150 S 5M 490 | 229 281 | 519 | Shim 0,05x15x75 | 023 396 |
| 13 | Switch plate | 240 722 | 520 | Shim 0,1x15x75 | 023 397 |
| 19 | Stop screw | 221 386 | 521 | Shim 0,2x15x75 | 023 398 |
| 20 | Cover plate | 232 544 | 900 | Cap screw M6x12 | 022 795 |
| 21 | Distance bolt | 232 543 | 901 | Pan head screw M6x10 | 023 183 |
| 500 | Cap screw M4x4 | 022 767 | 902 | Cap screw M8x30 | 020 143 |
| 501 | Cap screw M6x16 | 023 116 | 903 | Cap screw M8x25 | 020 142 |

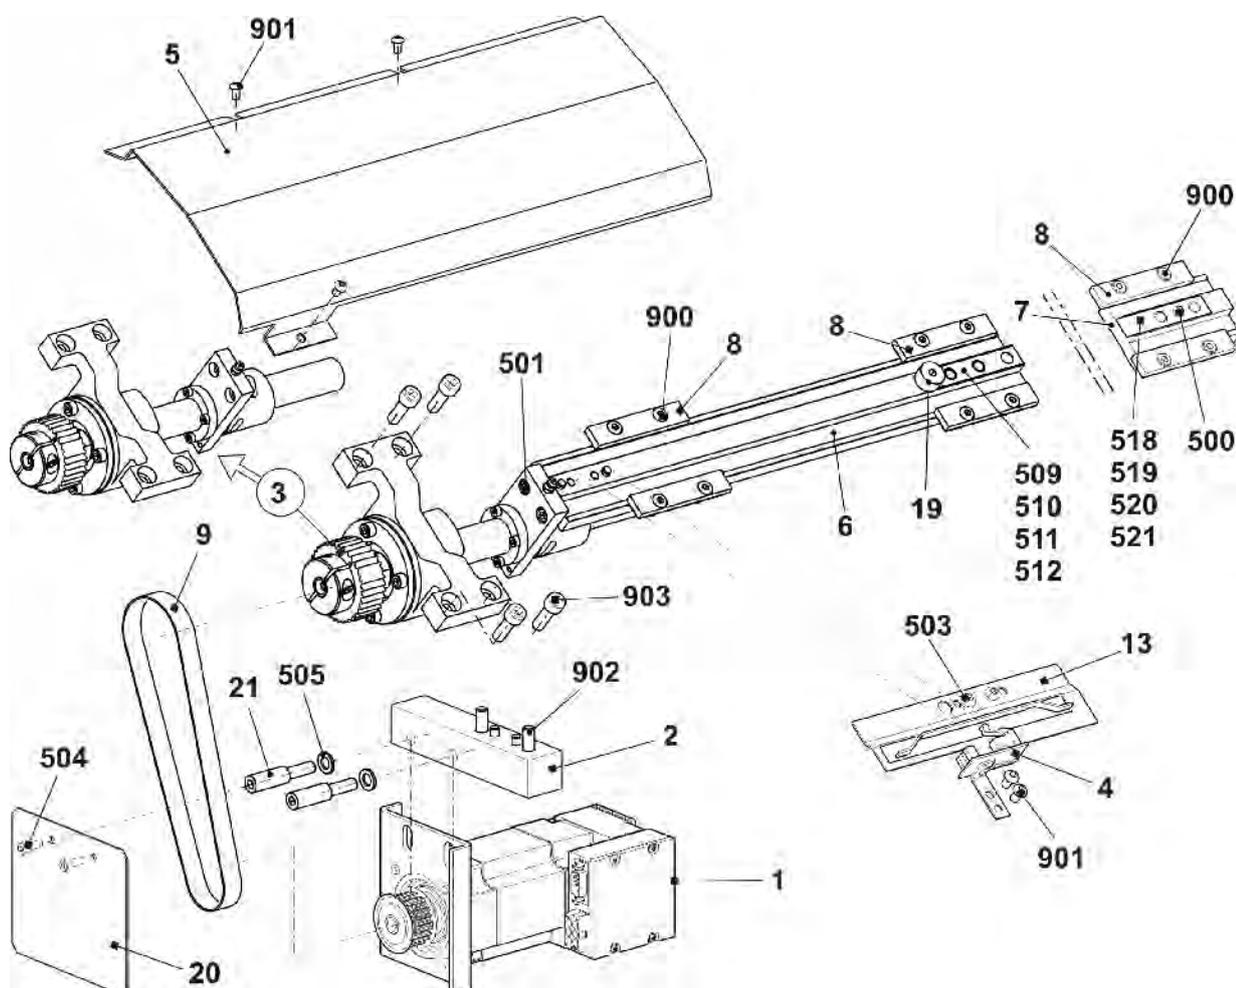


4 Needle beds

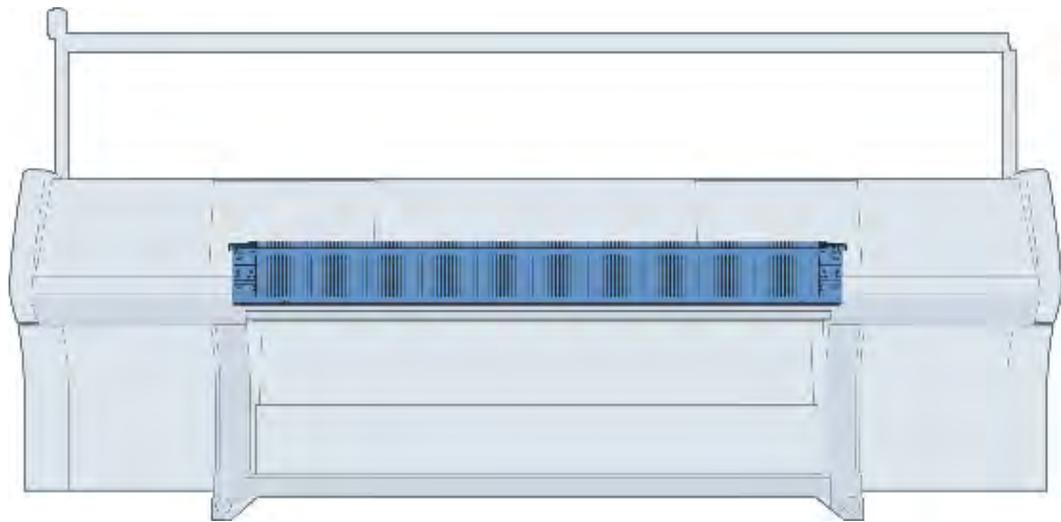


4.1 Needle bed E2,5.2

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|------|-------------------------------|---------|
| Σ | Needle bed complete at the front and rear E2,5.2 | 265 393 | | | |
| 1 | Needle bed at the front + rear | 264 805 | 25 | Locating wire D=1,5 | 239 206 |
| 2 | Needle ultra-coarse E2,5.2 | 238 071 | 52 | Holding-down jack bed frontE5 | 237 303 |
| 3 | Coupling part E3-4 | 239 194 | 53 | Holding-down jack bed rear E5 | 237 306 |
| 4 | Intermediate slider E3-4 | 218 799 | 57 | Limiter on the right E4-8 | 205 344 |
| 5a | Selection jack E3-4 | 213 372 | 58 | Holding-down jack slideE4-5 | 237 374 |
| 5b | Selector spring E4-8 | 200 690 | 30* | Adjusting pieceD = 15 | 206 375 |
| 7 | Holding-down jack | 264 788 | 31* | Set screw complete | 207 712 |
| 8 | Spring steel wire E4-5 D=1 | 237 406 | 40* | Disk brush | 235 612 |
| 9 | SupportE2,5.2 | 237 200 | 41* | Disk brush 12 | 202 600 |
| 10 | SpringE2,5.2 | 237 425 | 503 | Cap screw M5x8 | 023 154 |
| 13 | Spring slide at the frontE4-5 | 237 380 | 505 | Cap screw M5x12 | 022 943 |
| 14 | Spring slide at the rear E4-5 | 237 381 | 506 | Setscrew M6x12 | 022 400 |
| 17 | Locating wire D=1,6 | 237 384 | 507 | Springy thrust piece B-M10 | 023 177 |
| 20 | Support | 206 352 | 520* | Cap screw M5x12 | 020 032 |

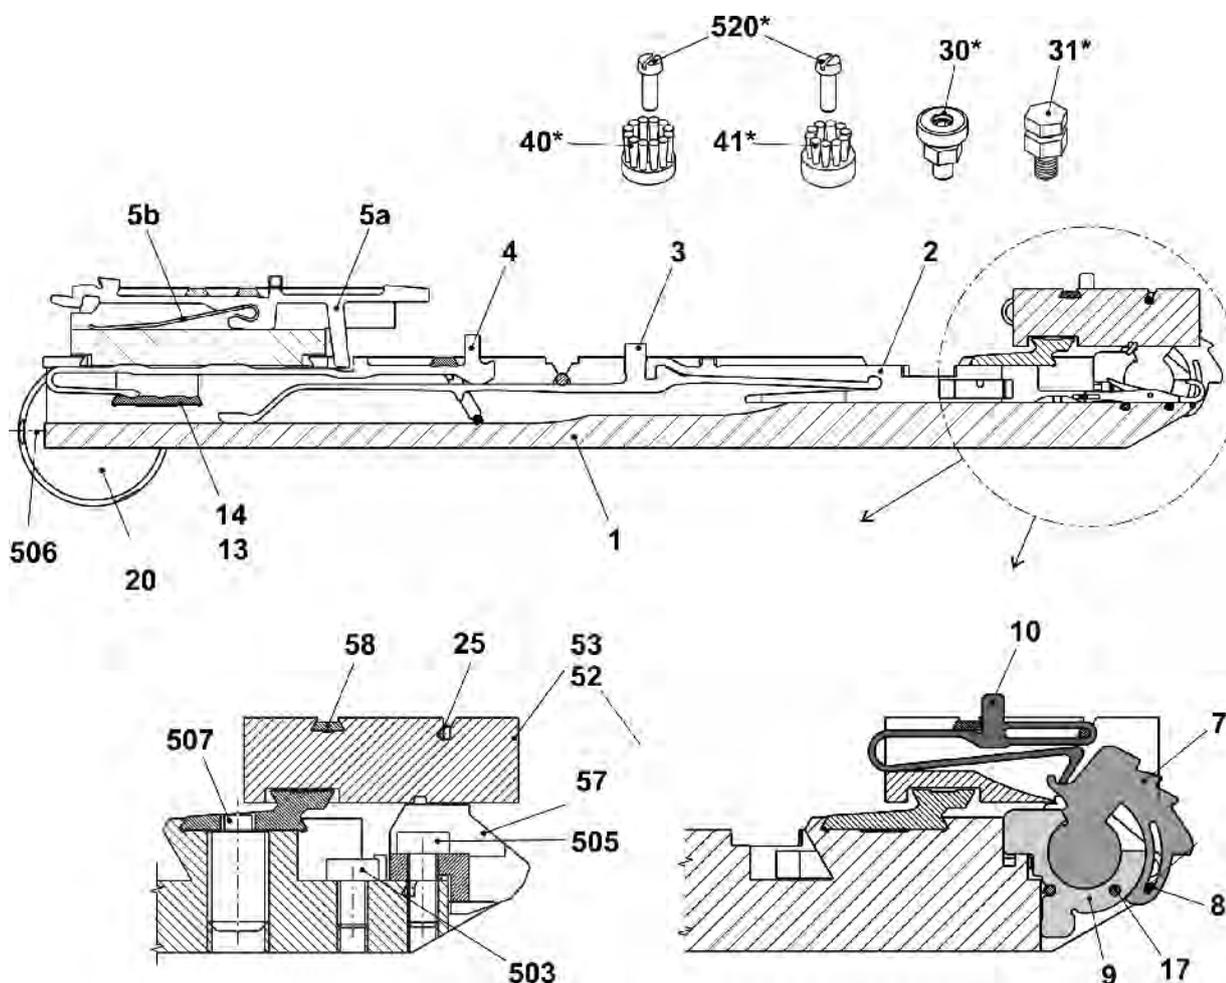


4.2 Continuation needle bed E2,5.2

| Pos | Designation | ID | Pos | Designation | ID |
|-----|------------------------------------|---------|-----|--------------------------------|---------|
| 2 | Holding-down jack bed frontE5 | 237 303 | 22 | Needle bar in the middle | 237 838 |
| 3 | Holding-down jack bed rear E5 | 237 306 | 23 | Clamping piece | 236 649 |
| 4 | Selection jack bed at the front E5 | 237 309 | 24 | Needle bar on the left + right | 237 837 |
| 5 | Selection jack bed at the rear E5 | 237 312 | 31* | Adjusting bolt | 240 765 |
| 6 | Limiter on the left E4-8 | 205 343 | 500 | Cap screw M5x10 | 022 918 |
| 7 | Limiter on the right E4-8 | 205 344 | 501 | Cap screw M5x20 | 020 133 |
| 9 | Needle bar on the left | 237 835 | 502 | Cap screw M6x14 | 022 658 |
| 10 | Needle bar on the right | 237 836 | 503 | Cap screw M5x8 | 023 154 |
| 11 | Cover rail at the front E5 | 237 377 | 504 | Cap screw M5x25 | 023 523 |
| 12 | Cover rail at the rear | 237 379 | 510 | Shim0,05x18,5x34 | 023 196 |
| 15 | Cover rail | 237 382 | 511 | Shim0,10x18,5x34 | 023 197 |
| 16 | Cover rail | 237 383 | 512 | Shim0,20x18,5x34 | 023 253 |
| 18 | Locating wire D=2,8 | 223 862 | 513 | Cap screw M2,5x8 | 023 756 |
| 19 | Spring steel wire D=2,0 | 223 854 | 514 | Cap screw M3x5 | 022 688 |
| 21 | Eccentric | 204 603 | | | |

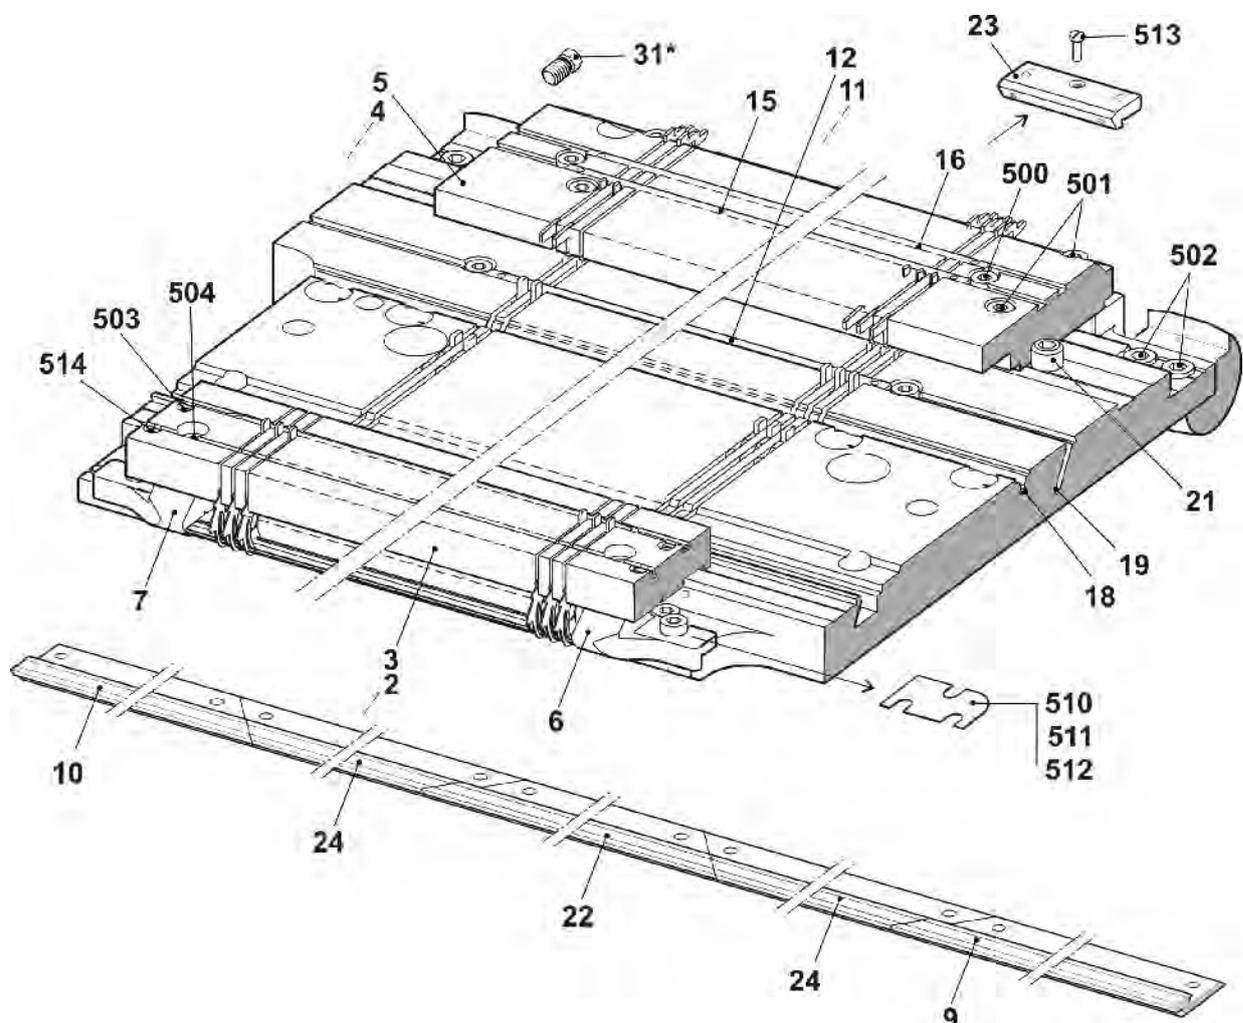


4.3 Left clamping/cutting bed

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|------|----------------------------------|---------|
| Σ | Left clamping and cutting bed E3-4m.3L | 261 806 | | | |
| 1 | Guide plate with EPT on the left E3-4m.3L | 261 805 | 11 | Coupling part E3-4 | 213 348 |
| 1b | Cover rail | 211 358 | 12 | Intermediate slider E3-4 | 218 799 |
| 1c | Cover rail | 216 105 | 13 | Selection jack E3-4 | 213 372 |
| 1d | Cover rail | 209 224 | 14 | Selector spring E4-8 | 200 690 |
| 1e | Locating wire | 215 927 | 15 | Deflector plate on the left | 262 359 |
| 1f | Bolts E3-4m.3L | 261 786 | 500 | Cap screw M4x10 | 023 136 |
| 1g | Axle | 257 201 | 501 | Cap screw M4x16 | 020 131 |
| 1h | Guide pin | 211 351 | 503 | Hexagon nut M4 | 023 046 |
| 1i | Selection jack bed on the left E3-4 | 215 906 | 504 | Washer 4 | 020 870 |
| 1j | Spring slide | 215 908 | 505 | Washer 4,3x7x0,5 | 022 153 |
| 511 | Dowel pin 5x12 | 021 988 | 507 | Circlip 3,2 | 021 019 |
| 5 | Cover on the left complete E3-4 | 215 925 | 508 | Tension spring 4x0,55x18,9 | 023 392 |
| 6 | Catch hook on the left E3-4 | 215 887 | 509 | Compression spring 0,9x3,6x24,36 | 023 331 |
| 7 | Slider | 215 827 | 510 | Ball 5 | 023 309 |
| 8 | Catch needle on the left E3-4m.3L | 261 544 | 511 | Countersunk screw M3x6 | 020 286 |
| 9 | Blade on the left E3-4m.3L | 262 350 | 520* | Cap screw M6x25 | 023 335 |
| 10 | Clamp on the left complete E3-4m.3L | 262 293 | 521* | Washer 7,6x11,6x1,5 | 023 334 |

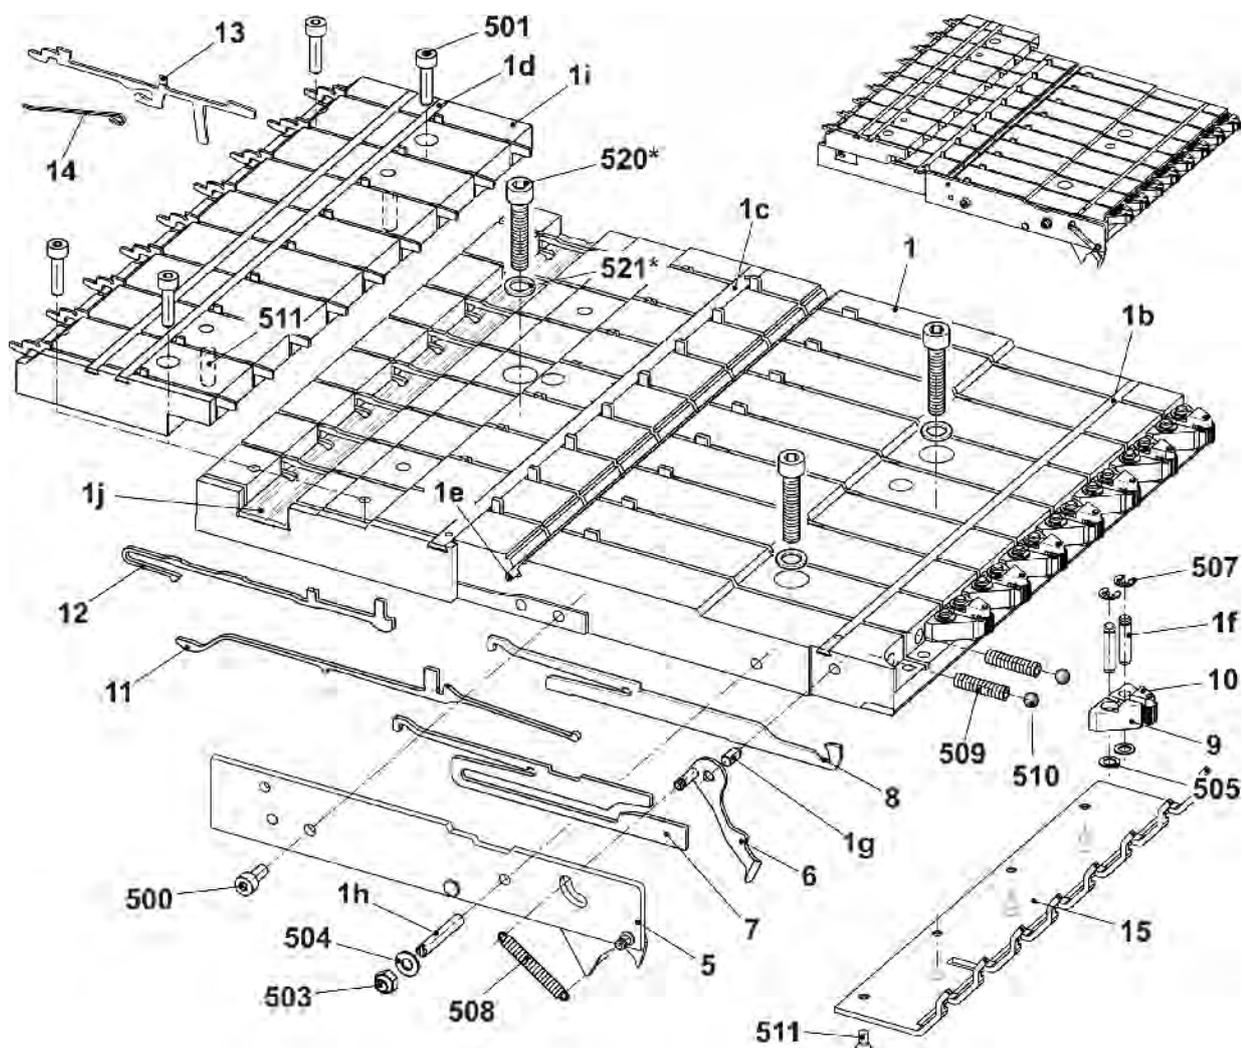


4.4 Clamping/cutting bed on the right

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|------|--|---------|
| Σ | Clamping and cutting bed on the right E3-4m.3L | 261 785 | | | |
| 1 | Guide plate EPT on the right E3-4m.3L | 261 784 | 11 | Coupling part E3-4 | 213 348 |
| 1b | Cover rail | 211 358 | 12 | Intermediate slider E3-4 | 218 799 |
| 1c | Cover rail | 216 105 | 13 | Selection jack E3-4 | 213 372 |
| 1d | Cover rail | 209 224 | 14 | Selector spring E4-8 | 200 690 |
| 1e | Locating wire | 215 927 | 15 | Deflector plate on the right | 262 360 |
| 1f | Bolts E3-4m.3L | 261 786 | 500 | Cap screw M4x10 | 023 136 |
| 1g | Axle | 257 201 | 501 | Cap screw M4x16 | 020 131 |
| 1h | Guide pin | 211 351 | 503 | Hexagon nut M4 | 023 046 |
| 1i | Selection jack bed on the right E3-4 | 215 907 | 504 | Washer 4 | 020 870 |
| 1j | Spring slide | 215 908 | 505 | Washer 4,3x7x0,5 | 022 153 |
| 511 | Dowel pin 5x12 | 021 988 | 507 | Circlip 3,2 | 021 019 |
| 5 | Cover on the left complete E3-4 | 215 926 | 508 | Tension spring 4x0,55x18,9 | 023 392 |
| 6 | Catch hook on the right E3-4 | 215 888 | 509 | Compression spring 0,9x3,6x24,36261 786 | 023 331 |
| 7 | Slider | 215 827 | 510 | Ball 5 | 023 309 |
| 8 | Catch needle on the right E3-4m.3L | 261 545 | 511 | Countersunk screw M3x6 | 020 286 |
| 9 | Blade on the right E3-4m.3L | 262 351 | 520* | Cap screw M6x25 | 023 335 |
| 10 | Clamp on the right complete E3-4m.3L | 262 294 | 521* | Washer 7,6x11,6x1,5 | 023 334 |

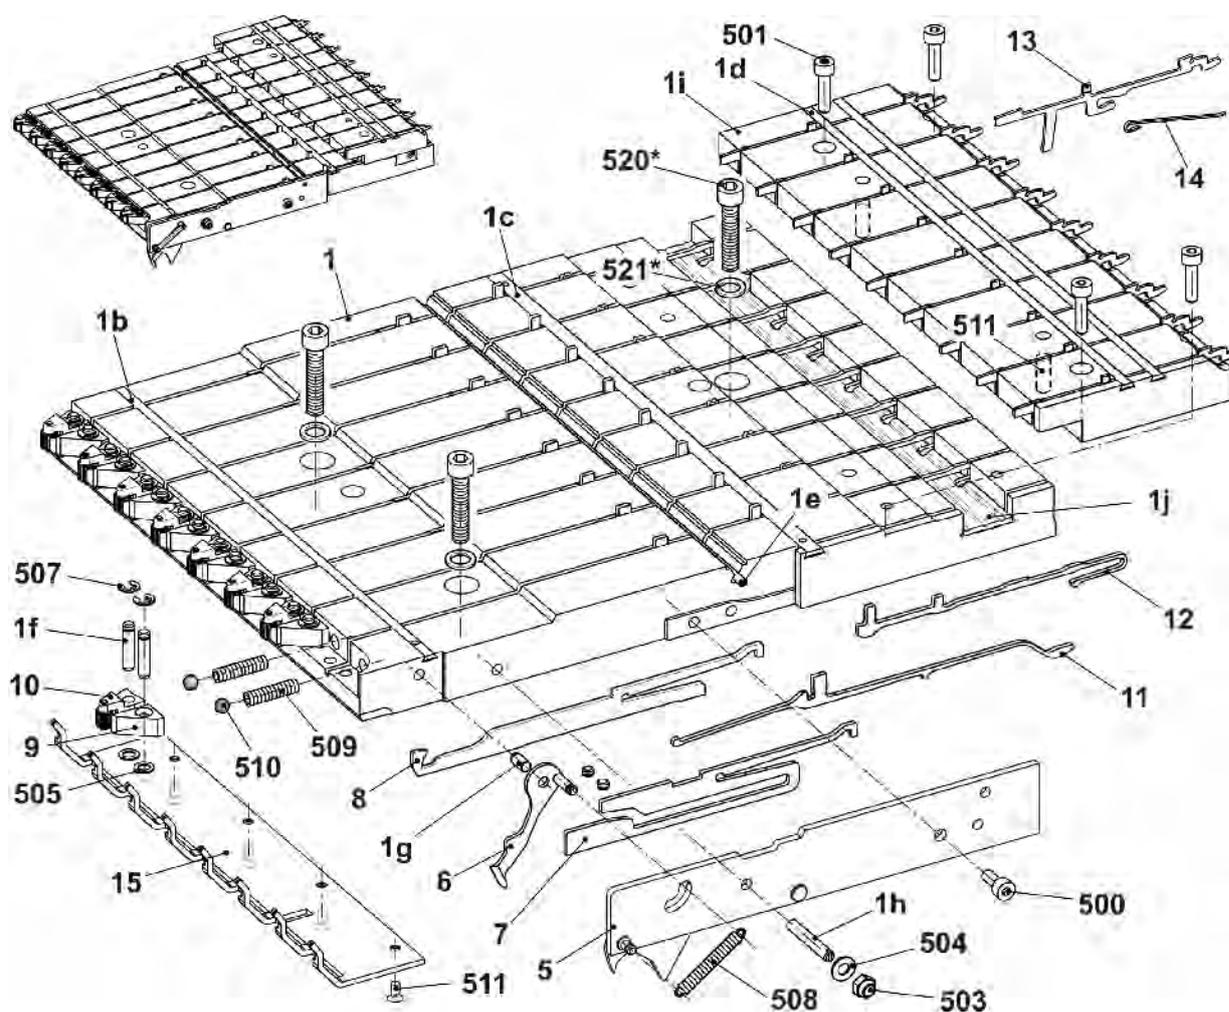


4.5 Cover on the left and on the right

| Pos | Designation | ID | Pos | Designation | ID |
|-----|--------------------|---------|-----|----------------------|---------|
| 1 | Cover on the left | 243 428 | 500 | Pan-head screw M8x10 | 241 930 |
| 2 | Cover on the right | 243 429 | | | |

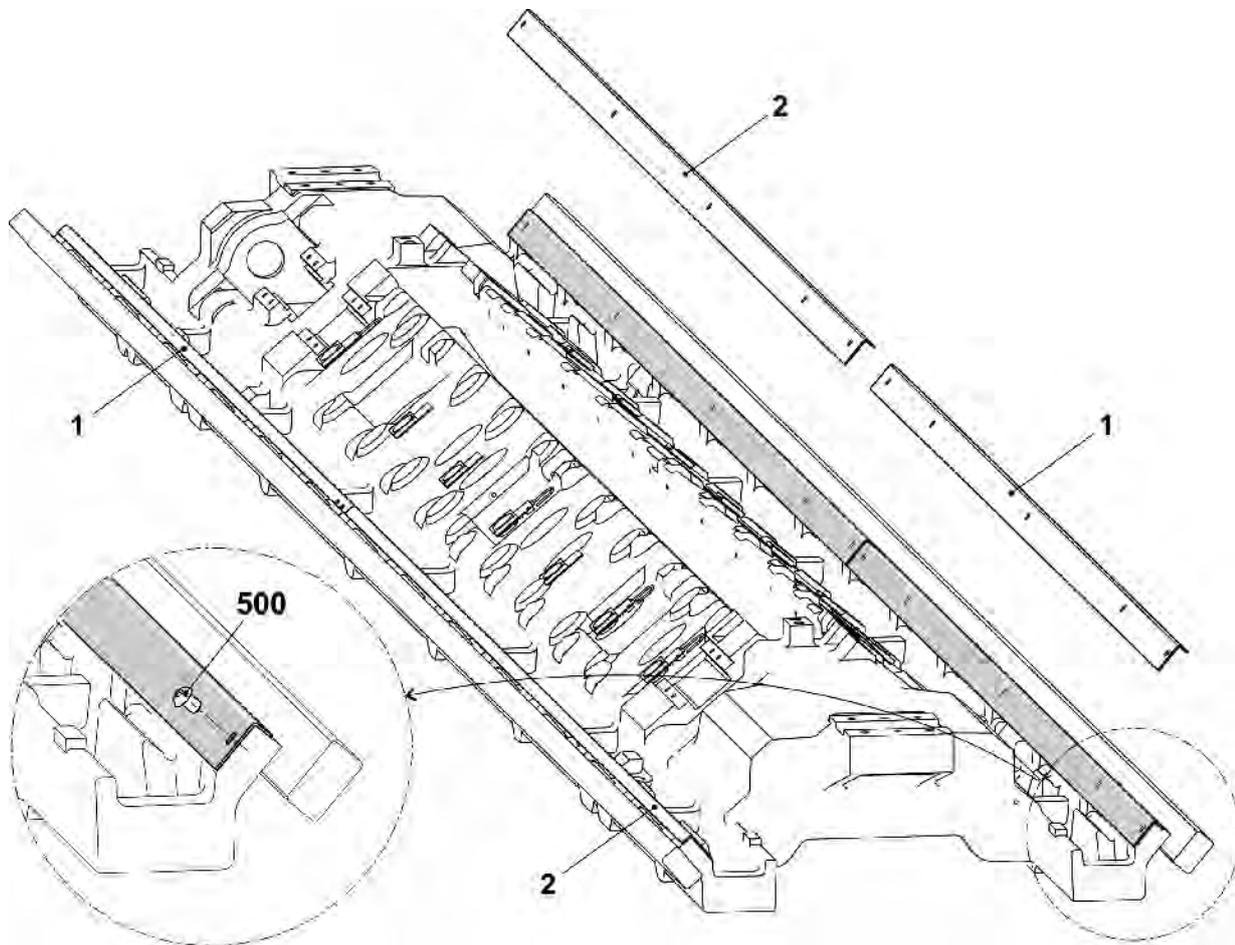


5 Carriage

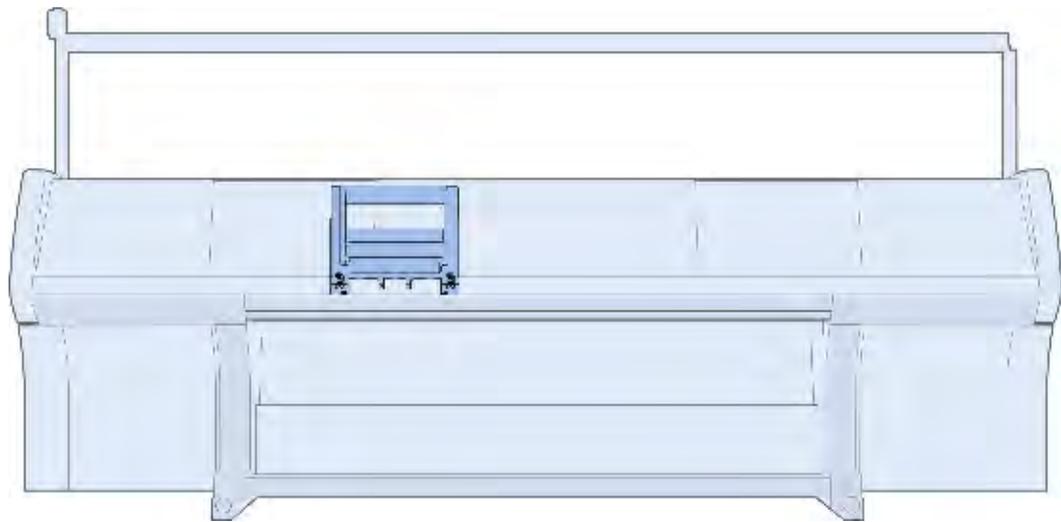


5.1 Overview of Carriage Parts

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------------|----------------|-----|------------------------------------|---------|
| Σ | Carriage complete E2,5.2 | 256 646 | 11 | Bolts | 212 392 |
| 1 | Needle cam complete E3-4 | 267 394 | 12 | Bolts | 243 171 |
| 2 | FF driving outside complete | 241 080 | 13 | Carriage assembly 3 cam boxes 830C | 256 500 |
| 3 | FF driving in the middle complete | 241 081 | 16 | Motor unit complete | 214 946 |
| 4 | Jack cam box complete E3-4 | 267 395 | 16a | Gear rack at the top | 265 348 |
| 5 | Cam box holding-down jacks E2,5.2 | 244 346 | 16b | Gear rack in the middle | 265 349 |
| 7 | Distributor at the rear 830C okc3 | 259 675 | 16c | Gear rack at the bottom | 261 393 |
| 9 | Selection system complete E2 - E8 | 216 218 | 560 | Screw M4x30 | 023 290 |
| 10 | Wiper felt | 241 411 | 33 | Cover plate at the top | 265 390 |

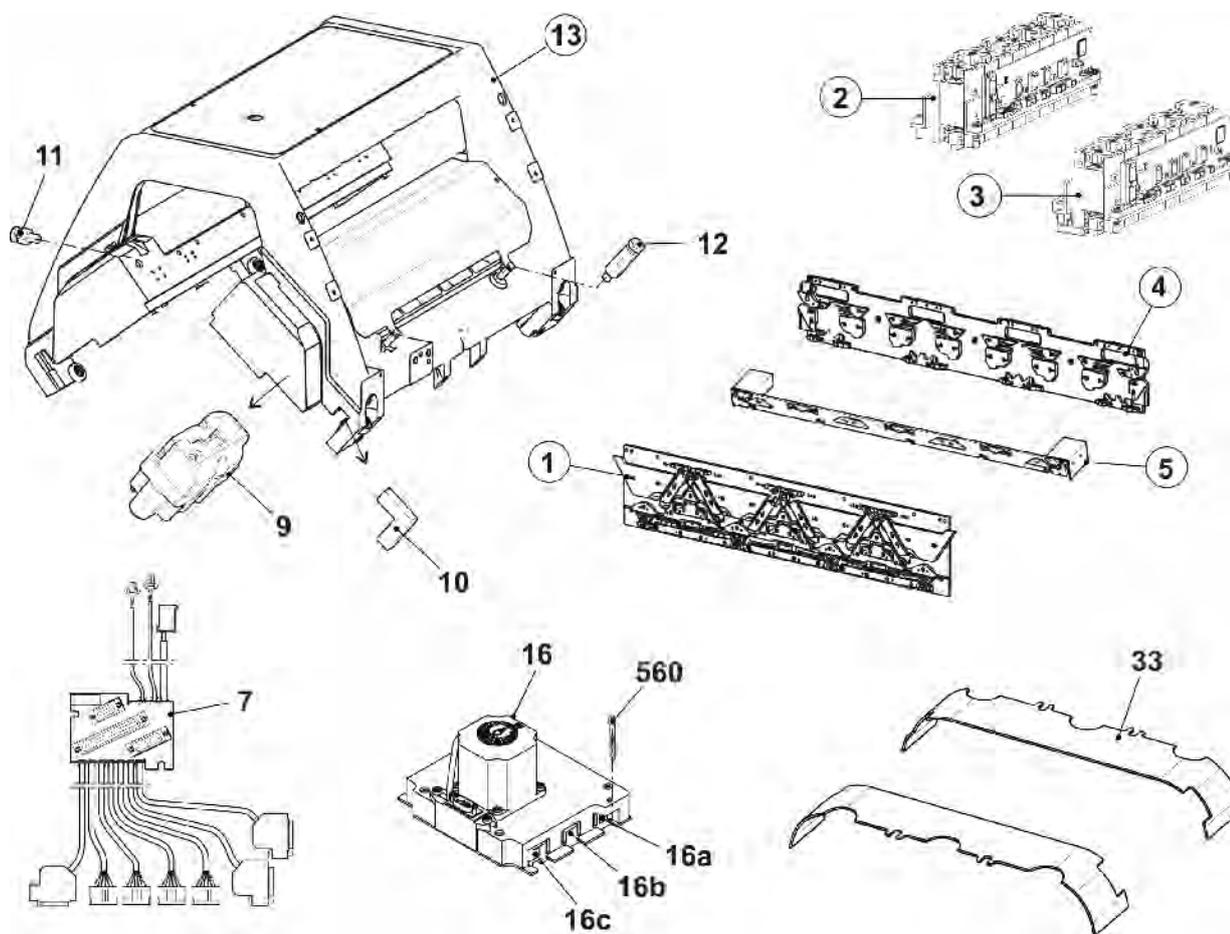


5.2 Needle cam at the top

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|------------------------|---------|
| Σ | Needle cam complete E3-4 | 267 394 | | | |
| 21 | Loop sinking cam on the left complete | 214 657 | 24 | 541 Disk 4,3x7x0,5 | 022 153 |
| 22 | Loop sinking cam on the right complete | 214 656 | | 542 Circlip 3,2 | 021 019 |
| 23 | Rod guide element on the left | 214 477 | | 543 Compression spring | 023 344 |
| | 23a Rod guide element on the left | 214 475 | 25 | Switching piece | 214 322 |
| 24 | Rod guide element on the right | 214 478 | 26 | Slider | 214 336 |
| | 24a Rod guide element on the right | 214 473 | 30 | Spacer | 214 603 |
| | 24b Spring rod | 214 476 | 500 | Cap screw M4x8 | 020 091 |

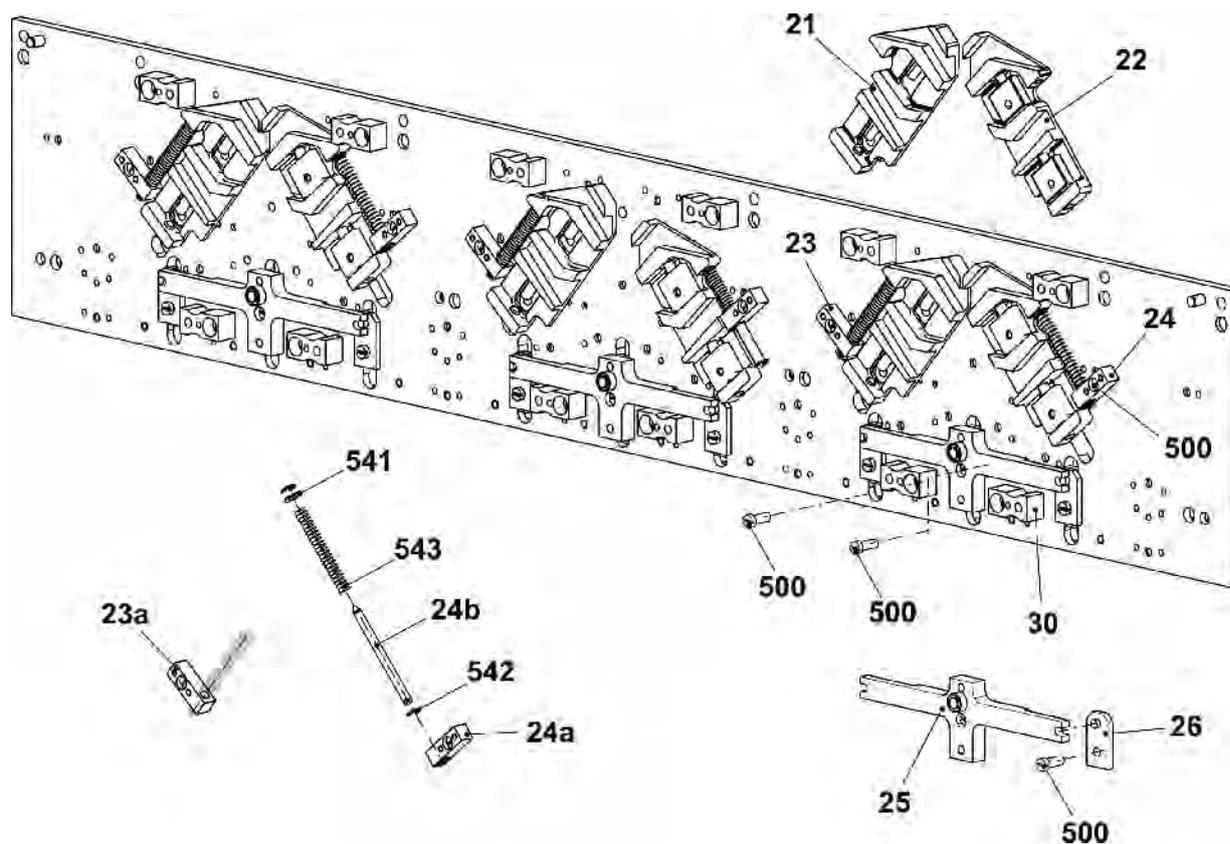


5.3 Needle cam at the bottom

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|---|---------|
| Σ | Needle cam box complete E3-4 (at the bottom) | 267 394 | 12 | Stitch cam on the right E3-4 | 214 896 |
| 1 | Needle cam plate E2,5-5 | 245 214 | 13 | Knitting raising plate | 214 286 |
| 2 | Entry cam on the left E3-4 | 266 447 | 14 | Raising cam without split-stitch | 266 458 |
| 3 | Entry cam on the right E3-4 | 266 448 | | Raising cam with split-stitch (Accessories) | 267 217 |
| 4 | Entry cam in the middle E3-4 | 266 449 | 15 | Receiving cam | 214 190 |
| 5 | Entry cam | 214 579 | 16 | Tuck limiting cam E2,5.2 | 218 047 |
| 6 | Knitting position cam E3-4 | 220 179 | 17 | Limiting cam on the left E3-4 | 218 048 |
| 7 | Pressure strip E3-4 | 214 663 | 18 | Limiting cam on the right E3-4 | 218 049 |
| 8 | Pressure cam receiving on the left E3-4 | 266 650 | 19 | Pointer E3-4 | 218 050 |
| 9 | Pressure cam receiving on the right E3-4 | 266 651 | 20 | Screw | 214 576 |
| 10 | Tuck pressure cam E3-4 | 216 130 | 31 | Limiting cam at the bottom E3-4 | 215 994 |
| 11 | Stitch cam on the left E3-4 | 214 895 | 500 | Cap screw M4x8 | 020 091 |

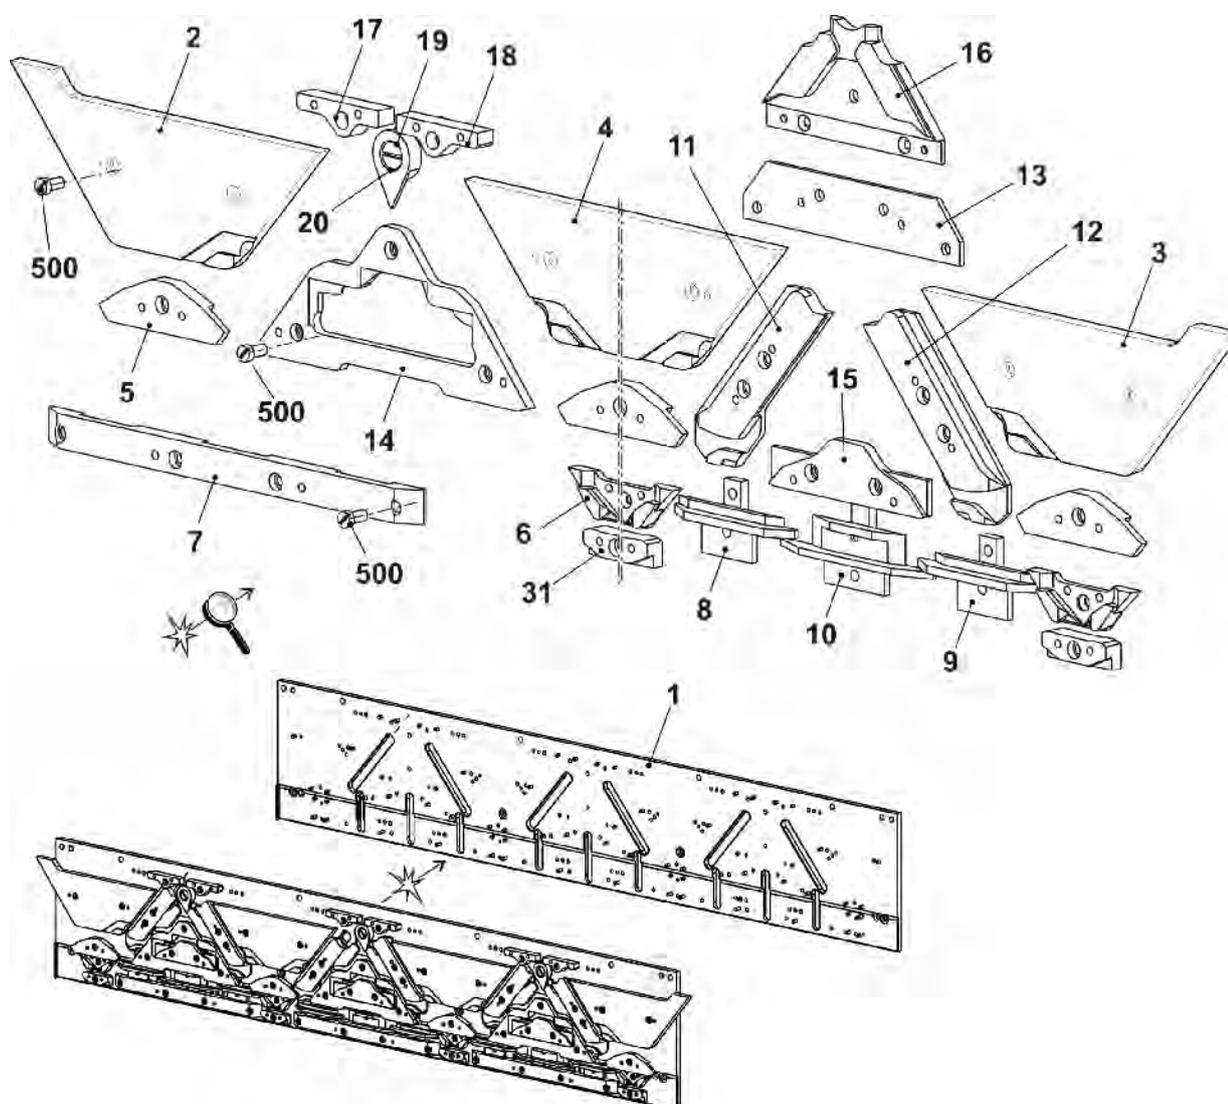


5.4 Yarn carrier driving without guide part

| Pos | Designation | Id | Pos | Designation | Id |
|----------|------------------------------------|----------------|-----|------------------------|---------|
| Σ | YC driving outside complete | 241 080 | | | |
| 1 | Yarn carrier plunger complete | 242 214 | 500 | Cap screw M4x14-I-Torx | 242 279 |
| 2 | Holding angle for jack | 241 038 | 501 | Cap screw M3x12-12.9 | 022 648 |
| 3 | Card yarn carrier final stagesOKC | 300 960 | 900 | Cap screw M6x14 | 022 658 |
| 4 | Holding angle for YC driving | 242 903 | 901 | Shoulder screw | 231 899 |

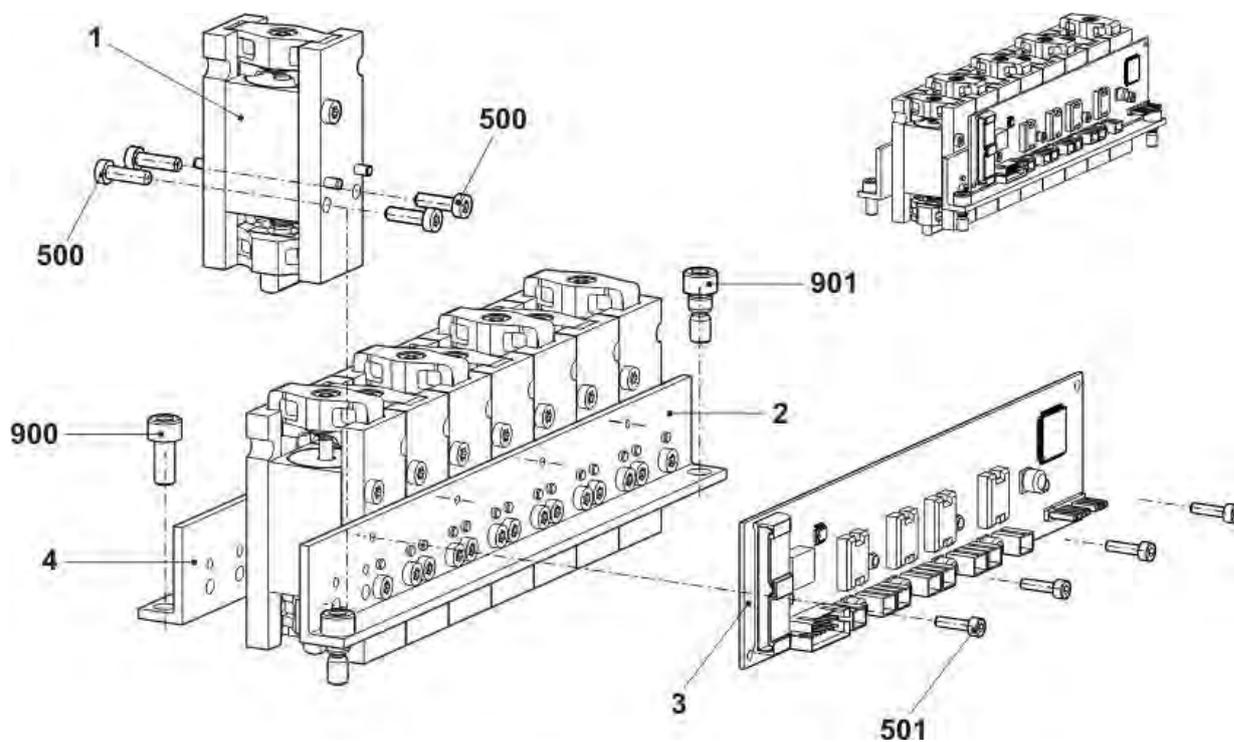


5.5 Yarn carrier driving with guide part

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|------------------------|---------|
| Σ | FF driving in the middle complete | 241 081 | | | |
| 1 | Yarn carrier plunger complete | 242 214 | 500 | Cap screw M4x14-I-Torx | 242 279 |
| 2 | Holding angle for jack | 241 038 | 501 | Cap screw M3x12-12.9 | 022 648 |
| 3 | Holding angle for YC driving | 241 044 | 502 | Screw KB60X20 | 243 625 |
| 4 | Card yarn carrier final stagesOKC | 300 960 | 900 | Cap screw M6x14 | 022 658 |
| 5 | Guide part | 239 972 | 901 | Shoulder screw | 231 899 |

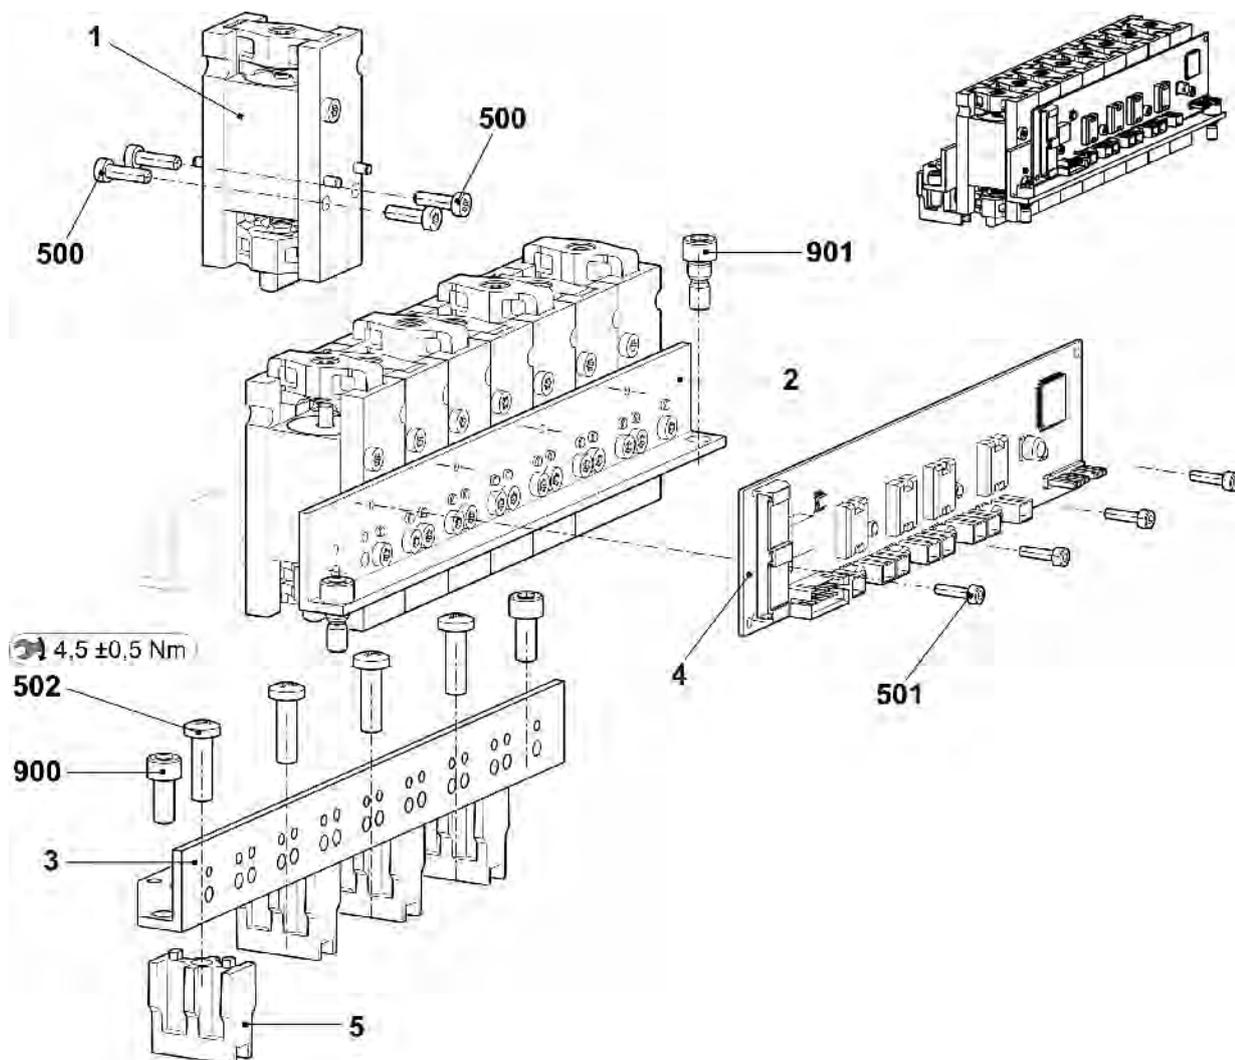


5.6 Jack cam box

| Pos | Designation | ID | Pos | Designation | ID |
|----------|------------------------------|----------------|-----|----------------------------|---------|
| Σ | Jack cam box complete | 267 395 | 9 | Cam at the right E3-4 | 266 445 |
| 1 | Jack cam box plate E2,5-5 | 245 215 | 12 | Selection cam on the left | 213 868 |
| 2 | Cam on the left | 214 594 | 13 | Selection cam on the right | 213 870 |
| 3 | Cam part at the right | 214 596 | 14 | Selection cam | 213 869 |
| 4 | Cam on the left | 214 586 | 15 | Offering cam | 210 185 |
| 5 | Cam part at the right | 214 587 | 500 | Cap screw M4x8 | 020 091 |
| 6 | Cam on the left E3-4 | 266 442 | 900 | Pan head screw M3x4 | 023 142 |
| 7 | Cam at the right E3-4 | 266 443 | 901 | Shim 0,1x12x75 | 022 830 |
| 8 | Cam on the left E3-4 | 266 444 | 902 | Shim 0,2x12x75 | 022 831 |

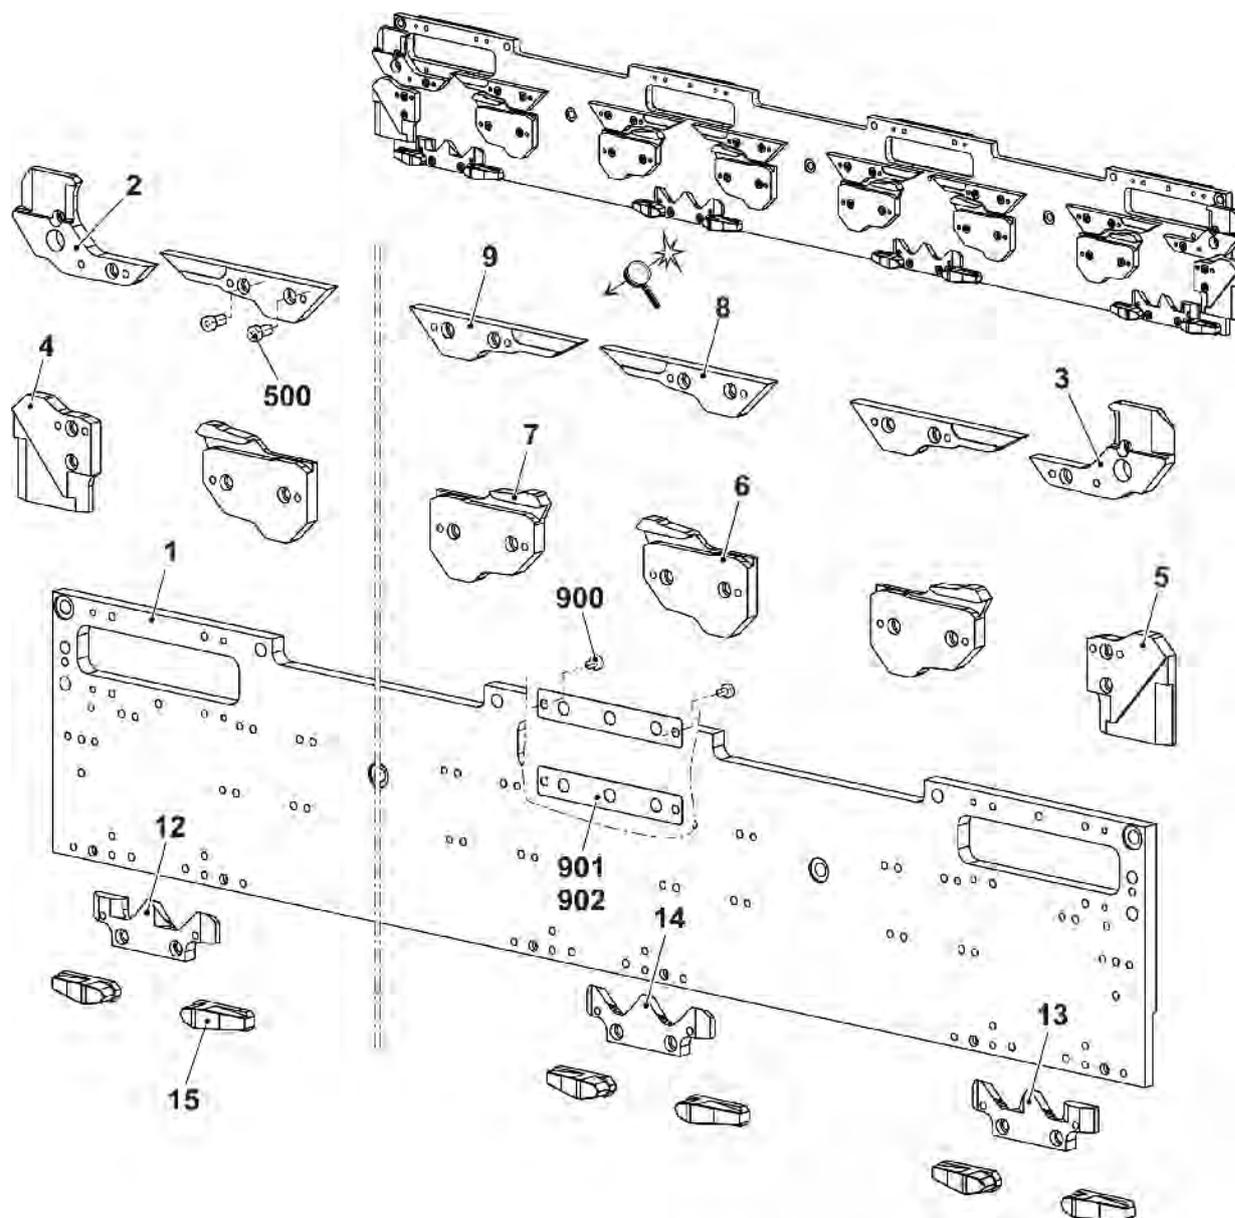


5.7 Holding-down jack cam box E2,5.2

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|------------------------------------|---------|
| Σ | Holding-down jack cam box E2,5.2 | 244 346 | 10 | Magnet holderE4-5 | 237 285 |
| 1 | Jack cam box plate | 237 424 | 11 | Slider | 237 453 |
| 2 | Closer outsideE2,5.2 | 237 436 | 500 | Cap screw M4x8 | 020 020 |
| 3 | CloserE2,5.2 | 237 435 | 501 | Screw KB30x8 | 236 228 |
| 4 | Jack openerE2,5.2 | 237 346 | 502 | Cap screw M4x10 | 023 136 |
| 5 | Jack opener switchable E2,5.2 | 237 437 | 503 | Pan-head screw M4x10 | 023 450 |
| 6 | Yoke | 237 343 | 504 | Cap screw M4x16 | 020 131 |
| 7 | Magnet holding-down jack control40V/BI | 237 426 | 505 | Pan-head screw M4x10 | 020 295 |
| 8 | Guide on the left | 227 308 | 506 | Compression spring 0,48x7,02x17,29 | 023 654 |
| 9 | Guide on the right | 227 309 | 507 | Pan-head screw M4x8 | 023 579 |

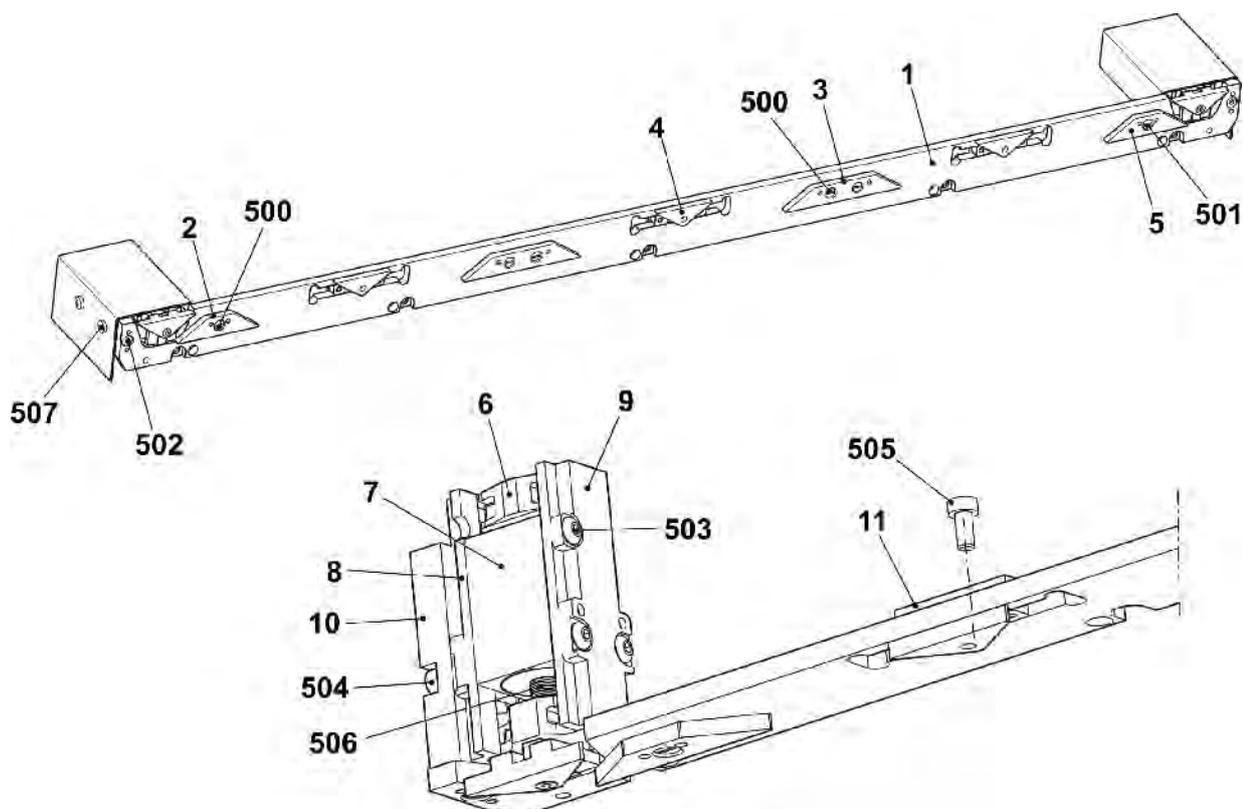


5.8 Carriage assembly

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|----------------------------|---------|
| Σ | Carriage assembly 3 cam boxes C | 256 500 | | | |
| 1 | Carriage frame, 3 cam boxes | 259 017 | 10 | Bush | 209 274 |
| 2 | Carriage part 3 cam boxes C | 242 697 | 13 | Locating bolt linking spot | 244 179 |
| 4 | Shim | 225 312 | 500 | Cap screw M8x30 | 020 143 |
| 5 | Shoulder screw | 211 750 | 514 | Dowel pin 5x14 | 020 670 |
| 8 | Bush | 207 546 | 520 | Circlip 6 | 021 022 |
| 9 | Bush | 209 275 | | | |

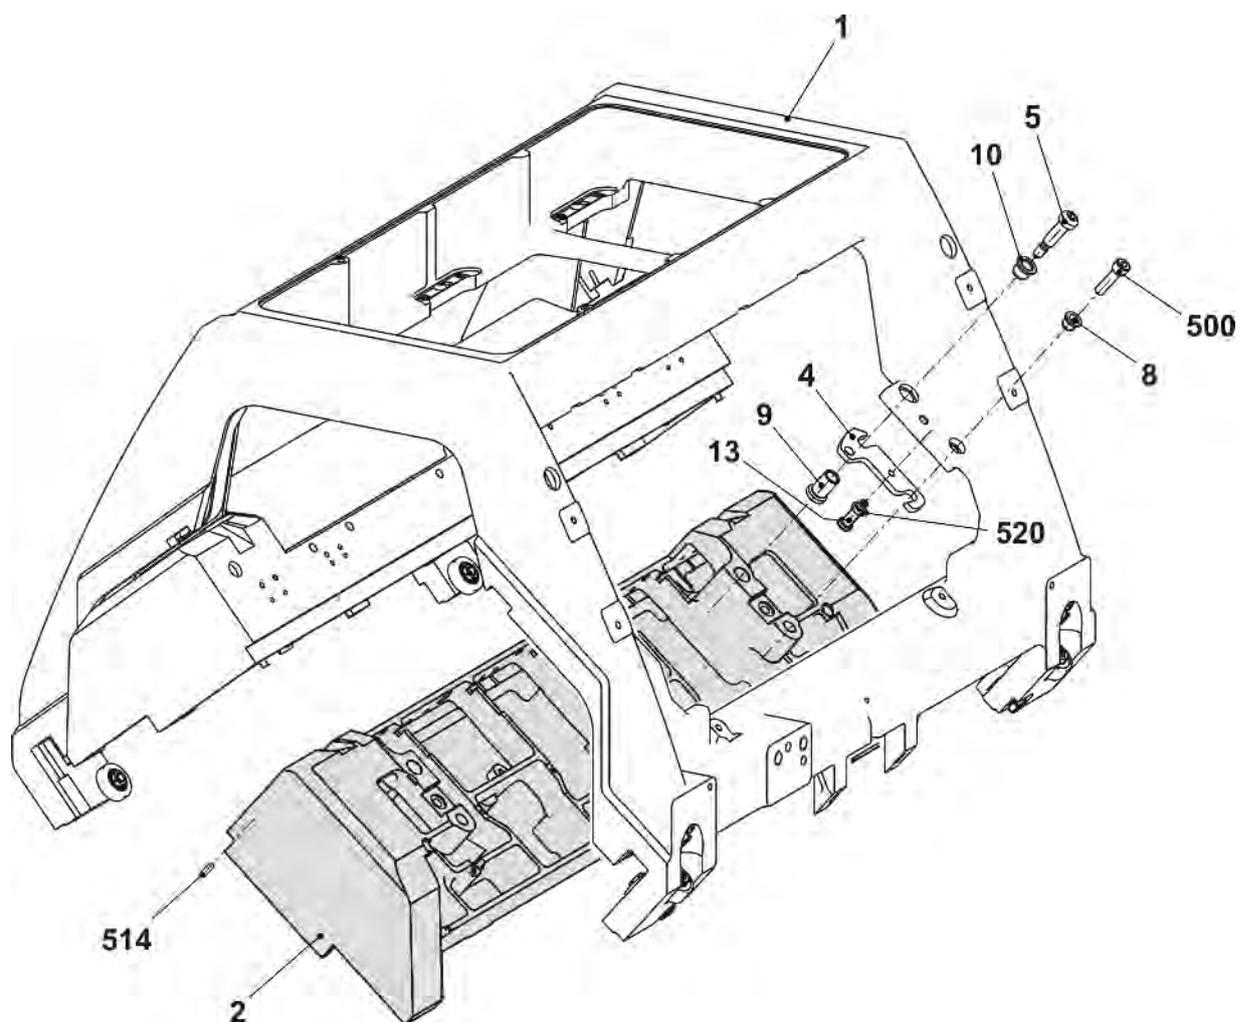


5.9 Carriage cover

| Pos | Designation | ID | Pos | Designation | ID |
|-----|--|---------|-----|------------------------------------|---------|
| 1 | Carriage cover at the top 4 cam boxes complete | 257 101 | 10 | Locating bolt | 242 382 |
| | 1a Carriage cover at the top 4 cam boxes 6Z | 256 511 | 500 | Hexagon nut M6 | 257 088 |
| 2 | Carriage cover at the rear complete | 257 173 | 501 | Serrated lock washer 6,4 | 022 385 |
| | 2a Carriage cover at the rear 830C | 256 772 | 502 | Washer 6.1x9x0,5 | 023 554 |
| 3 | Carriage cover at the front complete | 257 172 | 503 | O-ring 3x2 | 242 420 |
| | 3a Carriage cover at the front 520C | 256 771 | 504 | Compression spring 0,48x7,02x17,29 | 023 654 |

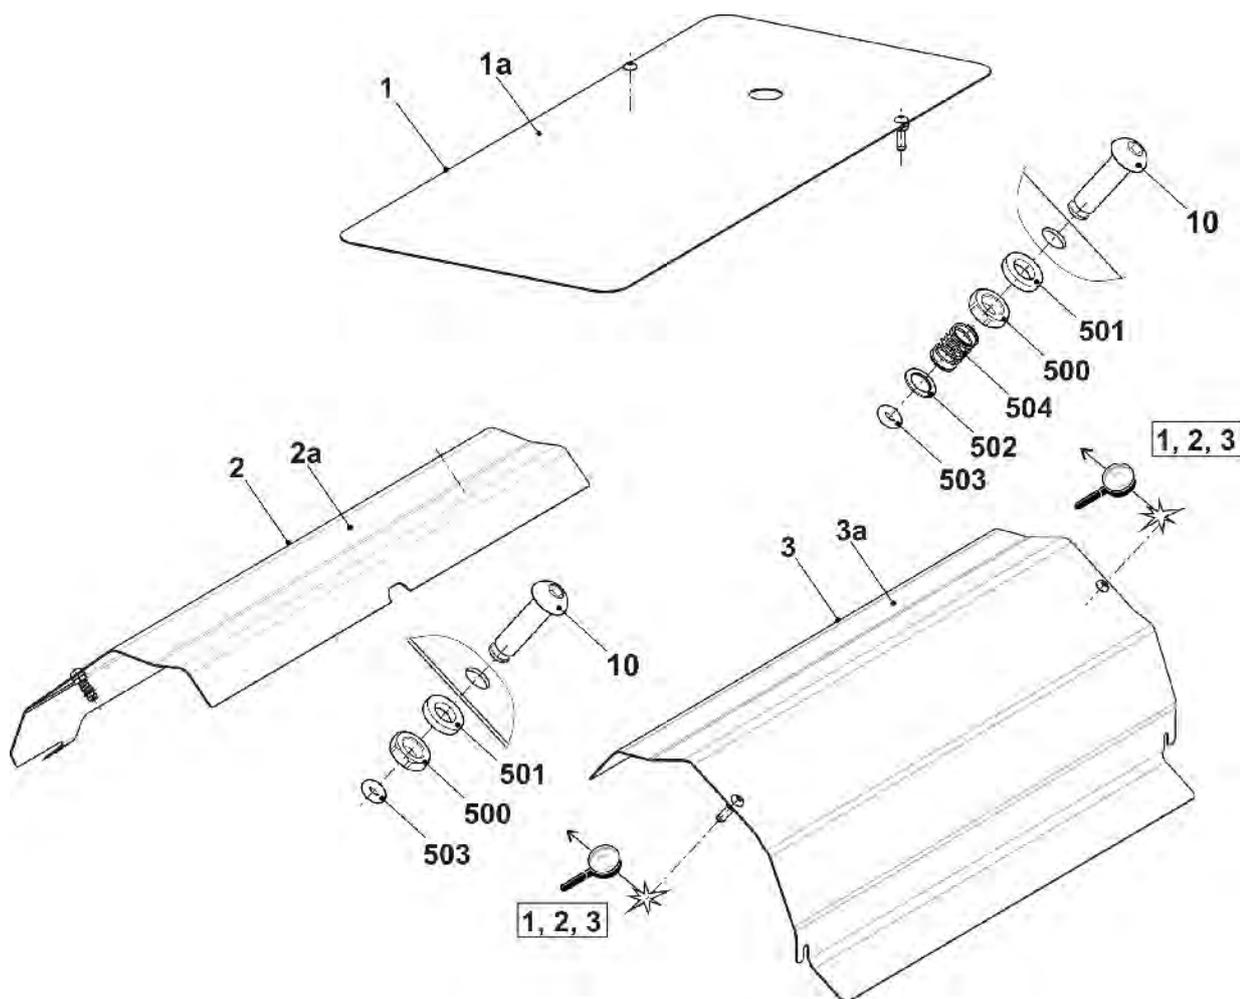


5.10 Carriage guide

| Pos | Designation | ID | Pos | Designation | ID |
|-----|----------------------------|---------|-----|---------------------------------|---------|
| 7 | Bearing bolt eccentric 0,5 | 240 624 | 511 | Shim ring 10x16x1 | 023 260 |
| 12 | Bolt pre-assembled | 244 283 | 518 | Grooved ball bearing 62201-2RS | 241 408 |
| 508 | NutM10 | 023 316 | 519 | Grooved ball bearing 62300-2RS1 | 242 070 |
| 510 | Shim ring 12x18x1 | 023 315 | | | |

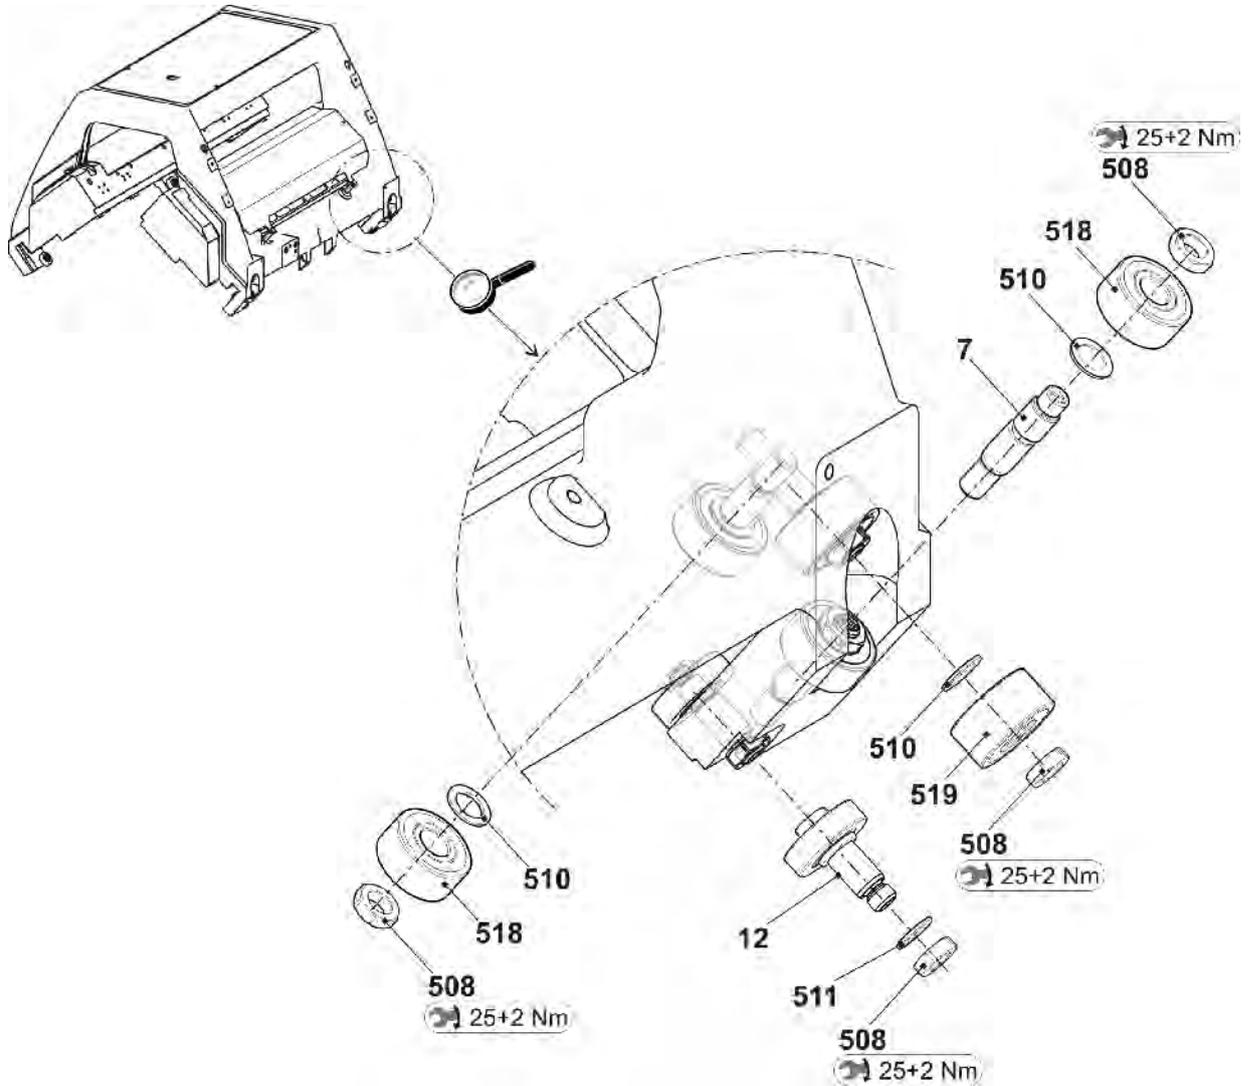


5.11 Needle detector

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-------------------------------|----------------|-----|----------------------|---------|
| Σ | Needle detector | 237 675 | 2 | Sensor pre-assembled | 237 674 |
| 1 | Needle detector pre-assembled | 221 773 | 500 | Oval head-screwM4x6 | 023 427 |

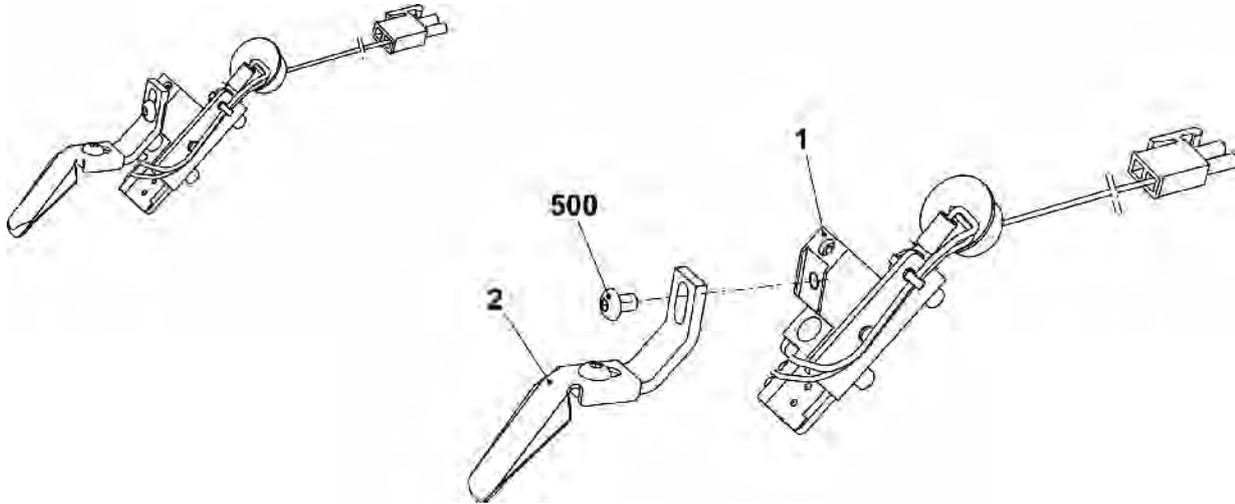


5.12 Brush holder

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--------------------------------------|----------------|-----|------------------------------|---------|
| Σ | Brush holder complete E3 E4 | 214 710 | | | |
| 1 | Brush holder | 213 009 | 500 | Countersunk head screw M4x12 | 023 062 |
| 2 | Brush clamp | 213 010 | 501 | Hexagon nut M8-4 | 020 856 |
| 3 | Threaded rod | 209 740 | 502 | Shim ring 5x10x0,5 | 023 348 |
| 4 | Needle brush E2-4 | 061 407 | 503 | Retaining ring 5x0,6 | 023 347 |

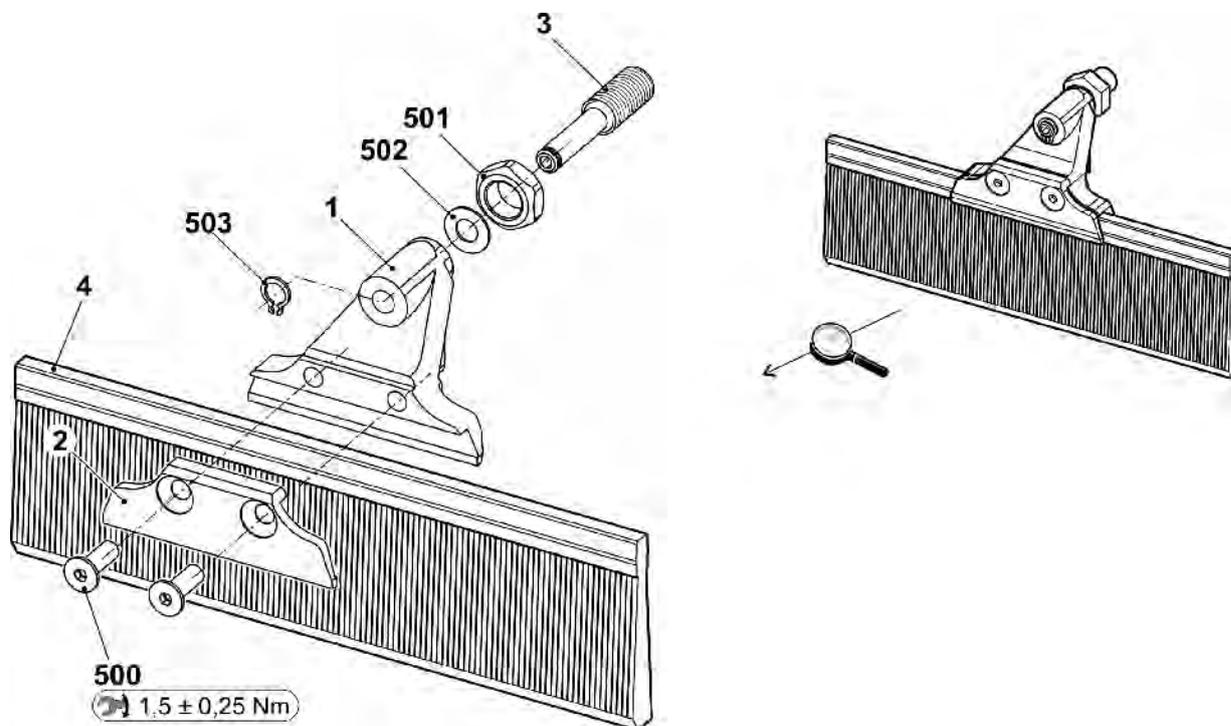


5.13 Spare parts package carriage guide bar

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|------|-----------------|---------|
| Σ | Spare parts package carriage guide bar⁸⁴ | 252 993 | 501 | Shim0,05x22x42 | 243 291 |
| 1 | Carriage guide rail | 242 486 | 502 | Shim0,10x22x42 | 243 292 |
| 2 | Adjusting eccentric | 241 219 | 503 | Shim0,20x22x42 | 243 293 |
| 500 | Shim0,03x22x42 | 243 289 | 510* | Cap screw M8x20 | 020 141 |

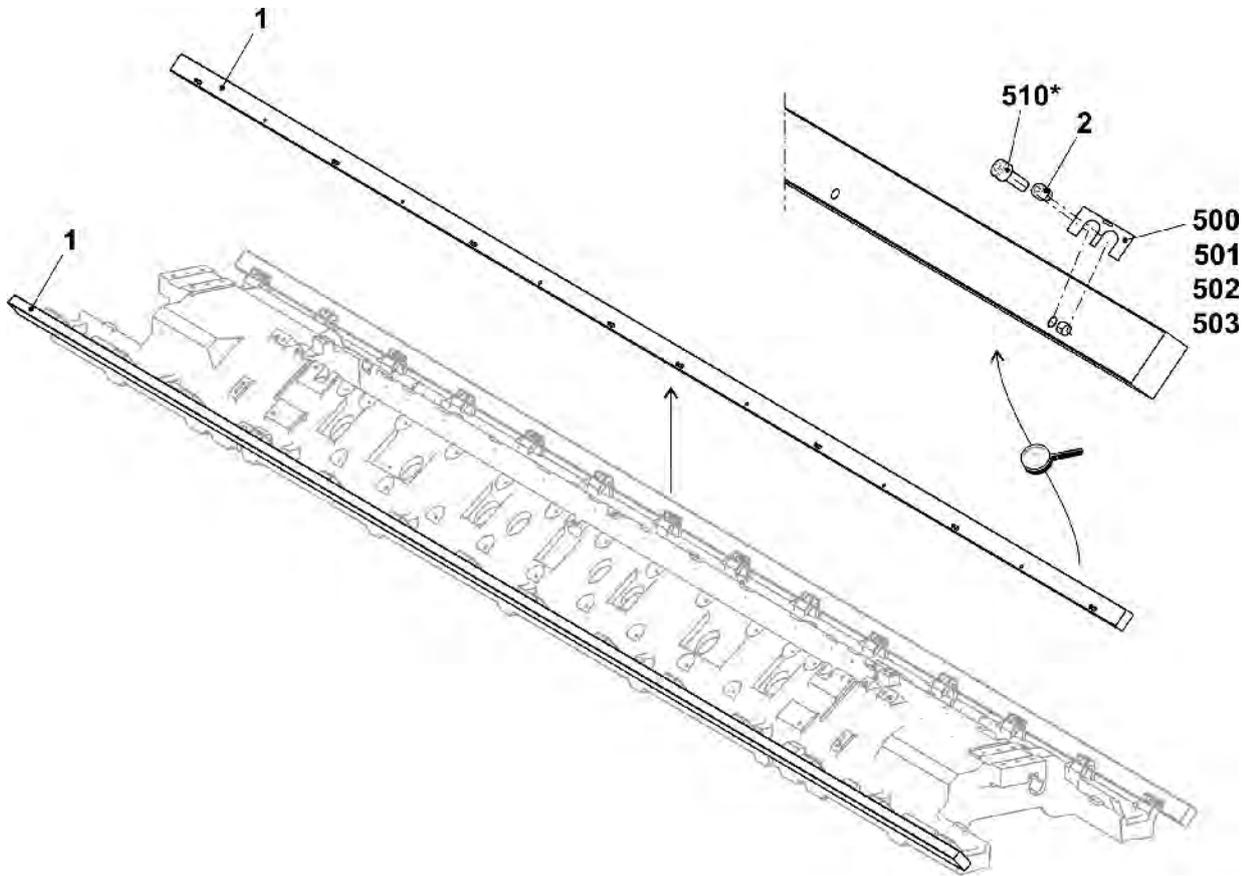


6 Main take-down

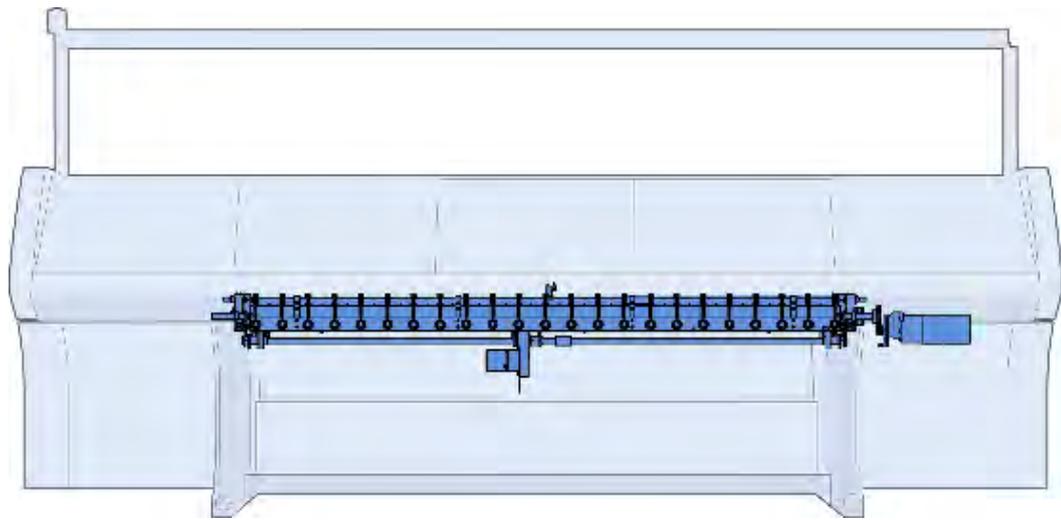


6.1 Main take-down

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------|---------|-----|--------------------------------------|---------|
| Σ | Main take-down | | | | |
| 1 | Main take-down on the left | 255 257 | 3 | Main take-down in the middle E2,5.2 | 255 249 |
| 2 | Main take-down on the right | 255 258 | 4 | Main take-down on / off complete 84" | 253 387 |

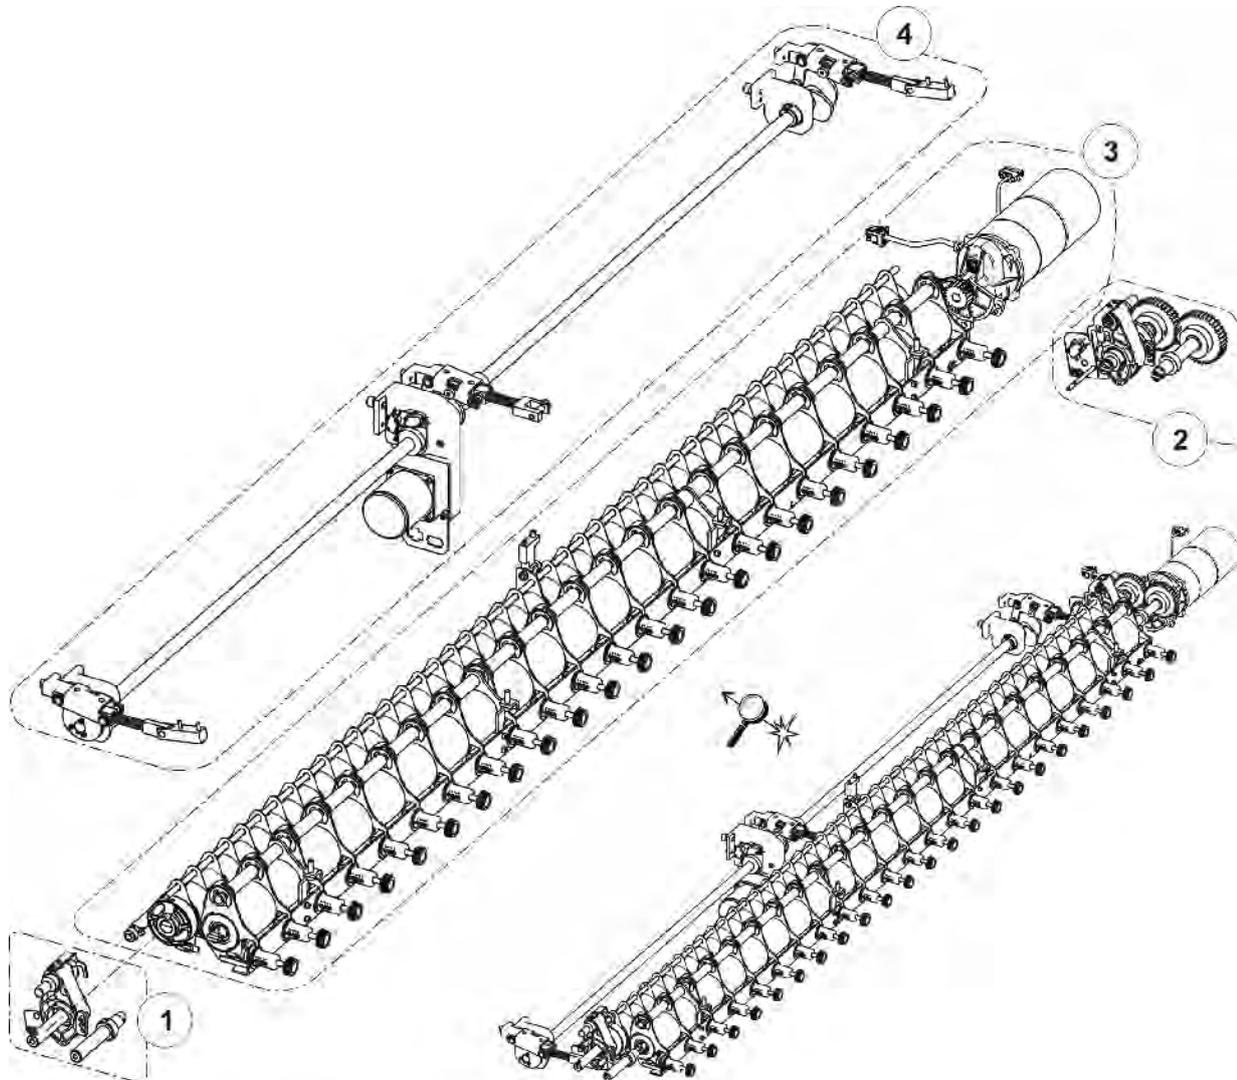


6.2 Main take-down on the left

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-------------------------------------|----------------|-----|--------------------------------|---------|
| Σ | Main take-down on the left | 255 257 | 11 | Full floating axle on the left | 237 354 |
| 3 | Shaft on the left at the rear | 255 305 | 19 | Stop point | 252 503 |
| 5 | Bolts | 208 538 | 500 | Screw 50x15 | 251 728 |
| 7 | Mounting plate on the left complete | 231 725 | 504 | Washer 18 | 023 295 |
| 9 | Swivel-mounted bearing | 253 247 | 505 | Retaining ring 18x1,2 | 020 955 |
| | 9a Swivel-mounted bearing | 253 200 | 507 | Set collar | 020 938 |
| | 9b Sheet metal support | 253 212 | 508 | Setscrew | 022 684 |
| | 590 Screw 35x10 | 251 729 | 511 | Cap screw M6x12 | 020 134 |

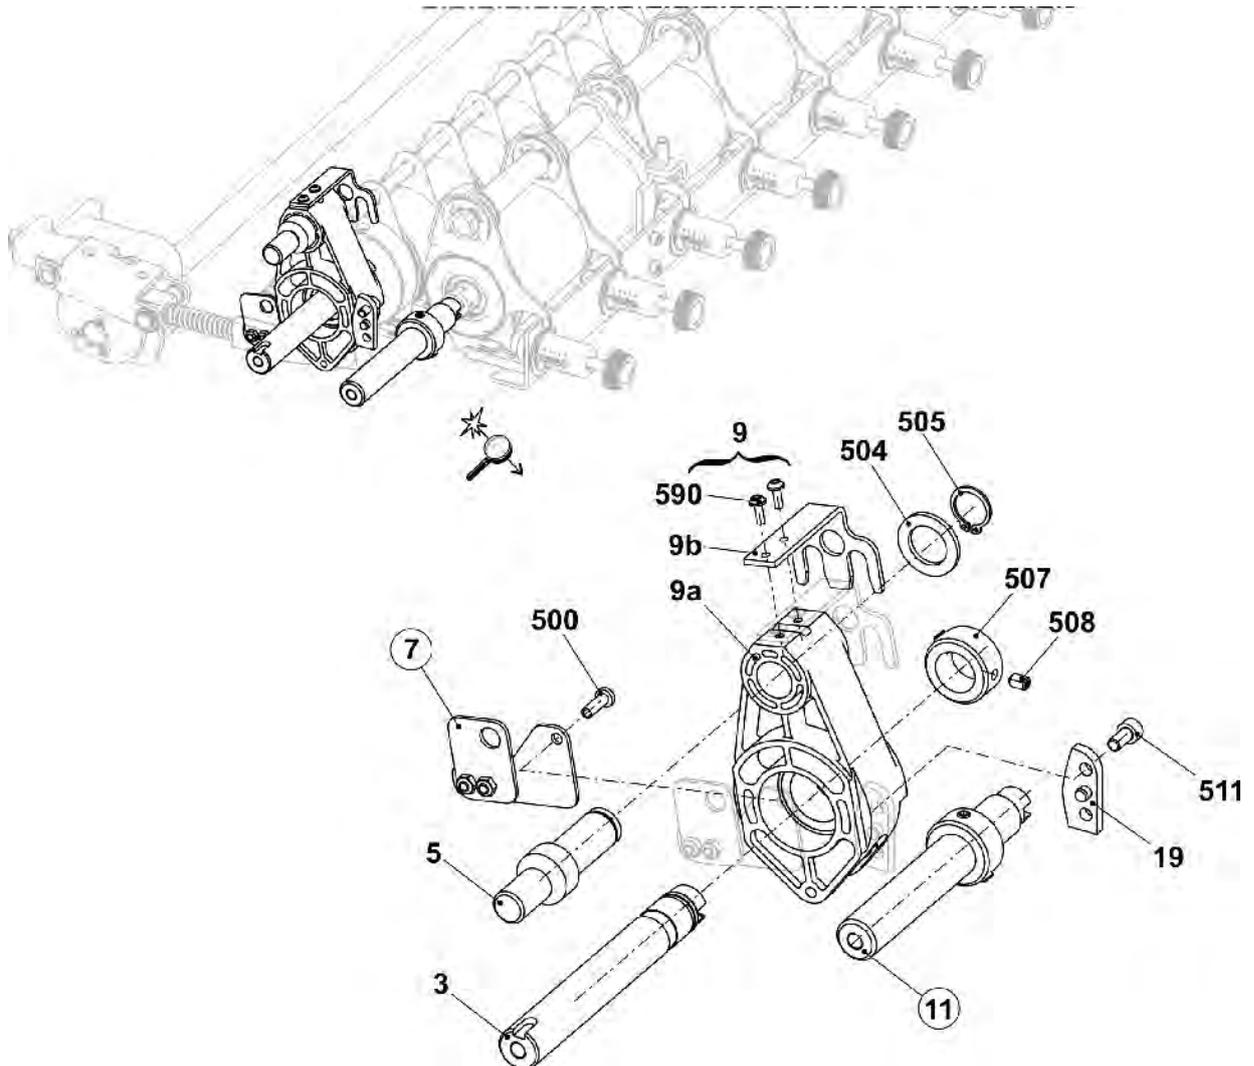



6.3 Main take-down on the right

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--------------------------------------|----------------|-----|---------------------------------|---------|
| Σ | Main take-down on the right | 255 258 | 10 | Full floating axle on the right | 237 353 |
| 1 | Clutch set | 253 260 | 19 | Stop point | 252 503 |
| 5 | Bolts | 208 538 | 500 | Screw 50x15 | 251 728 |
| 8 | Mounting plate on the right complete | 260 090 | 504 | Washer 18 | 023 295 |
| 9 | Swivel-mounted bearing | 253 247 | 505 | Retaining ring 18x1,2 | 020 955 |
| | 9a Swivel-mounted bearing | 253 200 | 507 | Set collar A20 | 020 938 |
| | 9b Sheet metal support | 253 212 | 508 | Setscrew M6x8 | 022 684 |
| | 590 Screw 35x10 | 251 729 | 511 | Cap screw M6x12 | 020 134 |

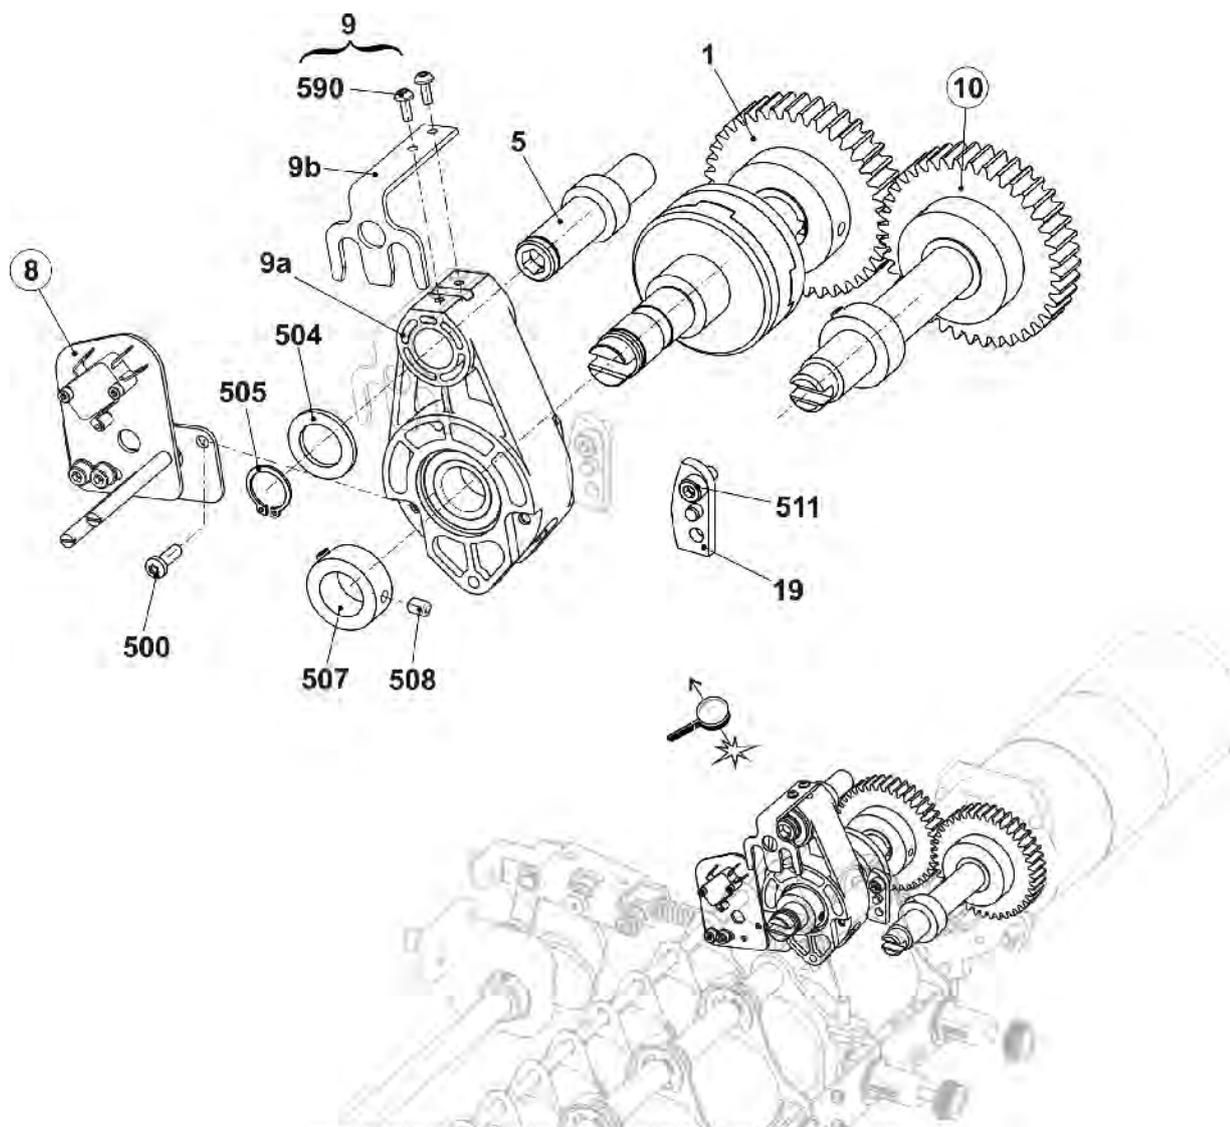



6.3.1 Mounting plate

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|------------|---|----------------|-----|------------------------------|---------|
| Σ A | Mounting plate on the left complete | 231 725 | 2 | Shoulder screw | 240 067 |
| 1 | Mounting plate on the left | 231 541 | 3 | Retaining plate on the right | 240 066 |
| 2 | Retaining plate on the left | 231 539 | 500 | Hexagon nut M4-6 | 022 536 |
| 500 | Pan-head screw M5x10 | 023 247 | 501 | Microswitch | 026 259 |
| 501 | Serrated lock washer J5,3 | 022 489 | 502 | Cap screw M3x16 | 022 583 |
| Σ B | Mounting plate on the right complete | 260 090 | 503 | Cap screw M5x8 | 244 278 |
| 1 | Mounting plate on the right | 260 067 | 504 | Washer 5-200 | 020 871 |

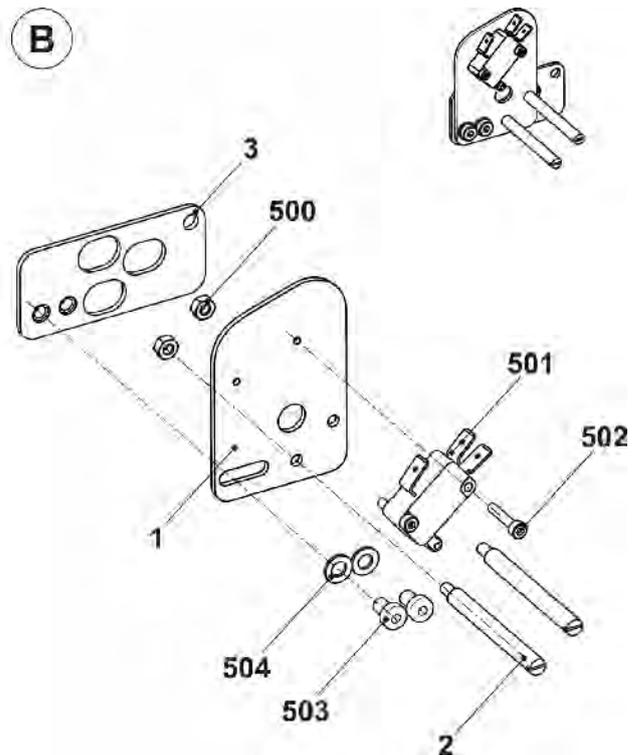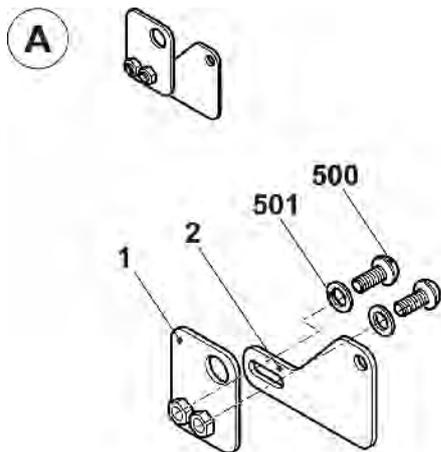


6.3.2 Full floating axle

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|------------|---------------------------------------|----------------|------------|--|----------------|
| Σ L | Full floating axle on the left | 237 354 | Σ R | Full floating axle on the right | 237 353 |
| 1 | Shaft on the left at the front | 237 334 | 1 | Shaft on the right in front | 237 340 |
| 500 | Set collar | 020 938 | 2 | Gear wheel Z=40, M=2 | 213 744 |
| 501 | Setscrew M6x8 | 022 684 | 500 | Set collar | 020 938 |
| | | | 501 | Setscrew M6x8 | 022 684 |
| | | | 502 | Feather key A 6x6x25 | 023 017 |

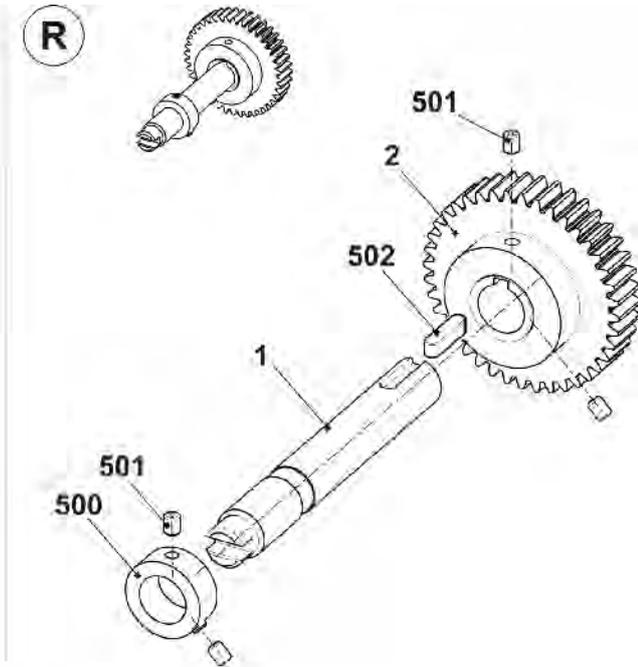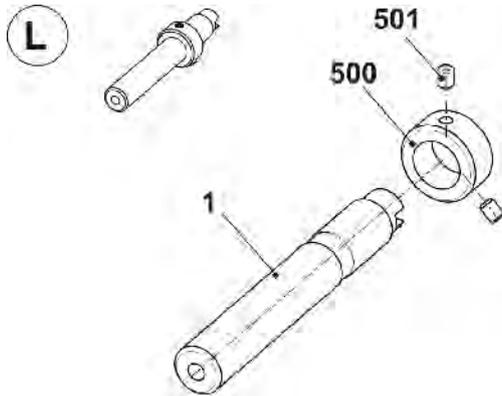


6.4 Main take-down in the middle

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|---|----------------|------|---------------------|---------|
| Σ | Main take-down in the middle E5-14 | 255 249 | 509 | Cap screw M8x25 | 020 142 |
| 4 | Stripper angle at the rear complete | 259 987 | 510 | Pan-head screw M4x6 | 235 450 |
| 12 | Motor take-down unit complete | 253 803 | 30* | Bearing block | 237 204 |
| 13 | Take-down roller at the rear complete E3-14 | 243 810 | 530* | Bolts | 237 211 |
| 15 | Take-down roller at the front complete | 253 390 | 531* | Setscrew M6x8 | 023 723 |
| 20 | Connection cable winding plate | 241 703 | 532* | Cap screw M8x20 | 020 136 |

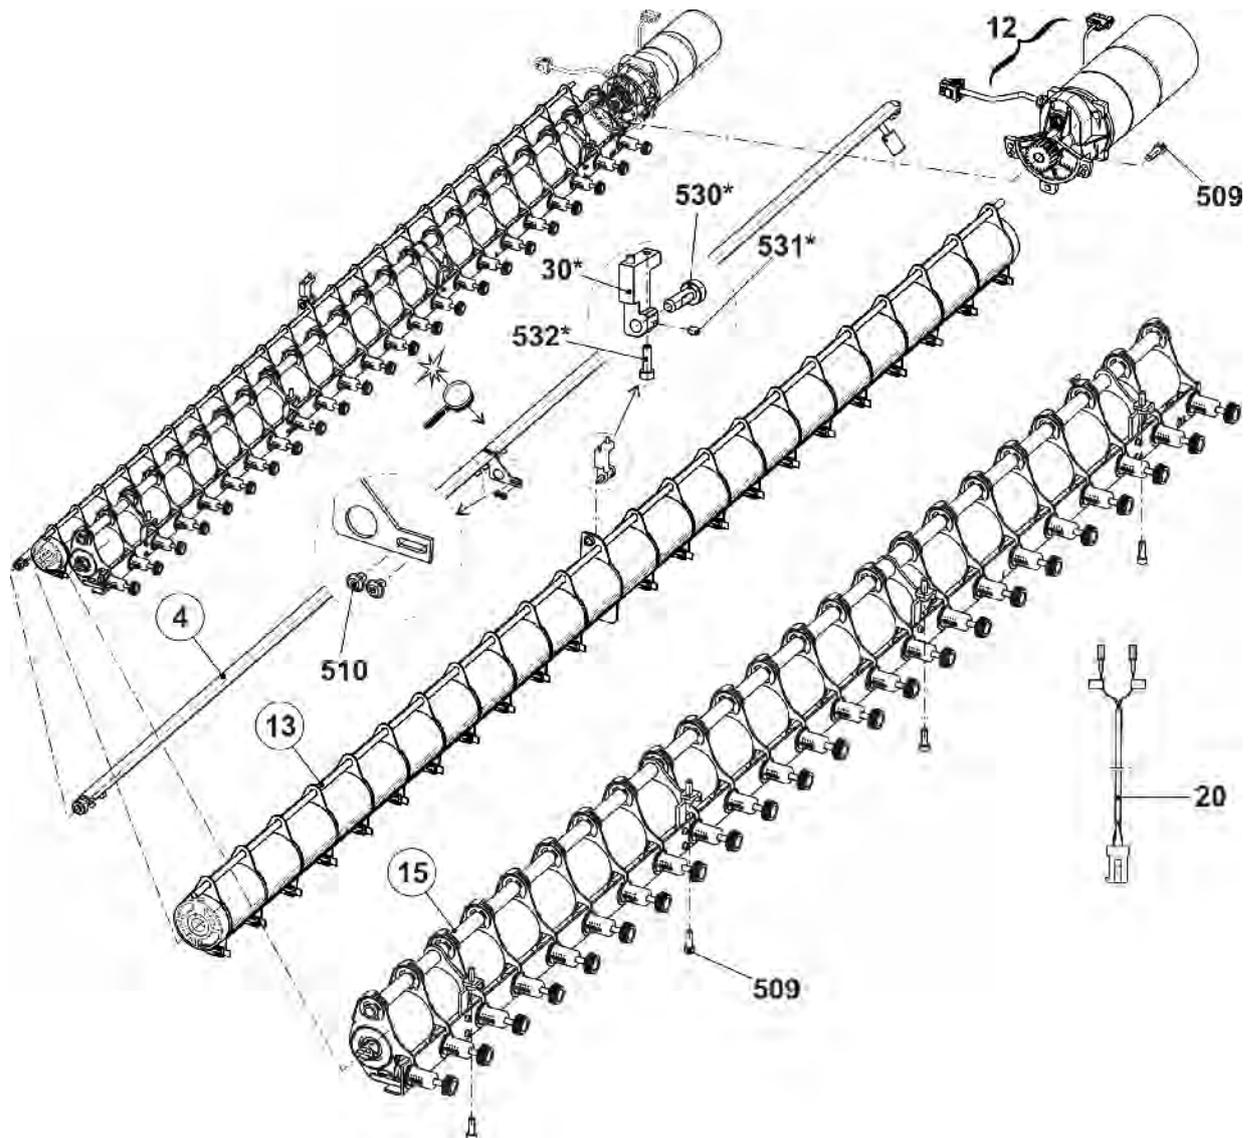


6.4.1 Rear take-down roller

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|-----|-----------------------------|---------|
| Σ | Take-down roller at the rear complete | 243 810 | | | |
| 1 | Roller | 264 624 | 10a | Supporting plate | 232 512 |
| 2 | Stripper | 241 612 | 10b | Bearing | 232 571 |
| 3 | Shaft | 237 190 | 10c | Ring | 222 895 |
| 4 | Ring on the left | 255 830 | 11 | Brush | 225 819 |
| 5 | Ring on the right | 255 831 | 12 | Rod | 237 192 |
| 6 | Spacer slide | 222 062 | 500 | Setscrew | 258 910 |
| 7 | Stop ring on the left | 204 369 | 501 | Dowel pin 6x32 | 020 685 |
| 8 | Spacer slide | 264 669 | 510 | Grooved ball bearing 16007 | 021 697 |
| 9 | Stop ring on the left | 222 910 | 511 | Slide bearing GFM-101216-06 | 023 280 |
| 10 | Support | 232 578 | 512 | Slide bearing GFM-101216-09 | 023 356 |

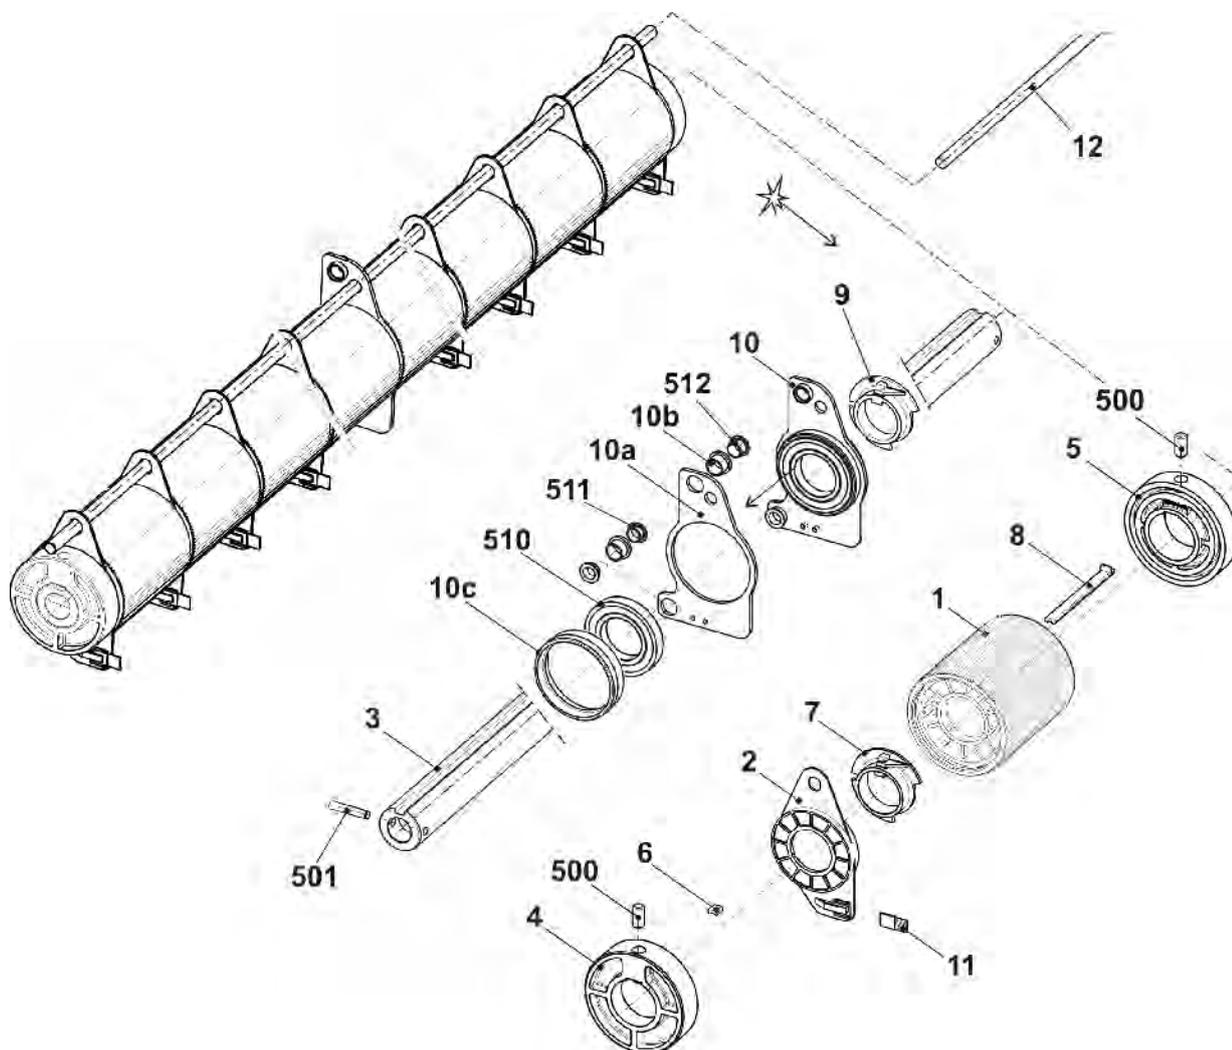


6.4.2 Front take-down roller

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|----------------------------|---------|
| Σ | Take-down roller at the front complete | 253 390 | 4 | Locating piece | 221 935 |
| 1 | Take-down roller at the front | 253 423 | 500 | Compression spring 1x10x30 | 023 741 |
| 2 | Angle rail complete | 242 316 | 501 | Cap screw M5x12 | 020 132 |
| 3 | Pressure sleeve | 220 911 | 502 | Washer 5-200 | 020 880 |

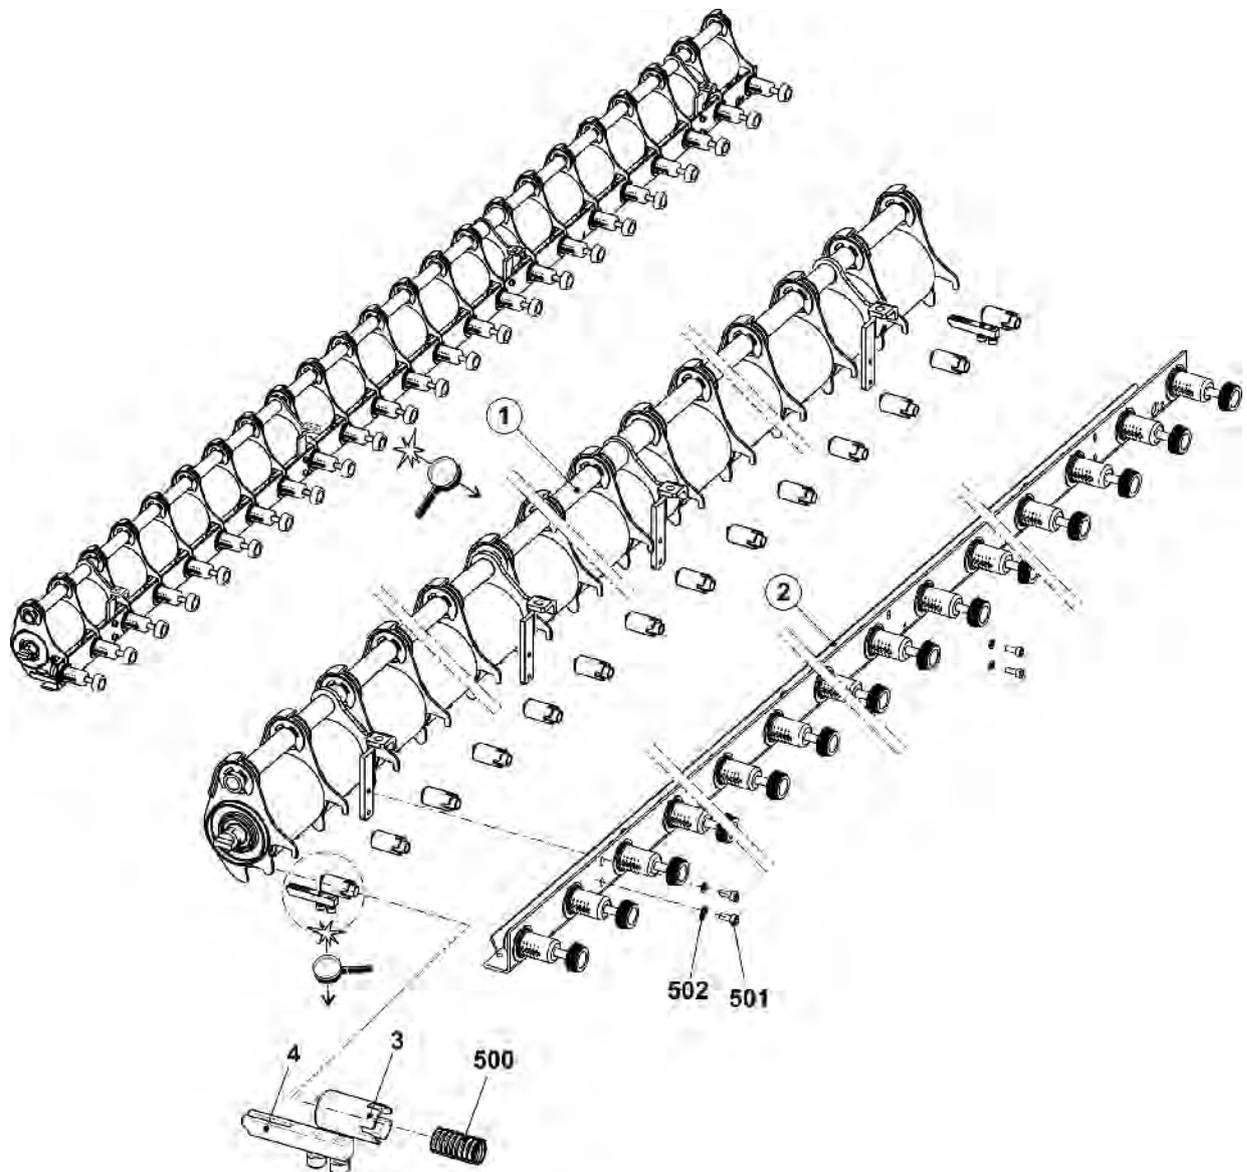


6.4.3 Front roller elements

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--------------------------------------|----------------|-----|---------------------------------------|---------|
| Σ | Take-down roller at the front | 253 423 | 4 | Roller | 220 905 |
| 1 | Bearing support on the left complete | 221 225 | 5 | Tube | 237 191 |
| 1aa | adaptor | 221 132 | 6 | Bearing support on the right complete | 221 240 |
| 1ab | Universal joint | 221 137 | 1aa | Universal joint | 221 137 |
| 1b | Bearing support | 220 913 | 1ab | adaptor | 221 132 |
| 1c | Gear wheel | 220 910 | 1b | Bearing support | 220 913 |
| 510 | Cap screw M5x20 | 020 133 | 1c | Gear wheel | 220 910 |
| 511 | Washer 5 | 023 542 | 510 | Cap screw M5x20 | 020 133 |
| 515 | Spring dowel sleeve 4x20 | 023 551 | 511 | Washer 5 | 023 542 |
| 2 | Straps | 251 557 | 515 | Spring dowel sleeve 4x20 | 023 551 |
| 3 | Bearing support complete | 221 241 | 7 | Spacer pipe on the right | 253 407 |
| 3a | Bearing support | 220 913 | 8 | Spacer pipe on the left | 253 408 |
| 3b | Gear wheel | 220 910 | 500 | Circlip | 021 025 |
| 531 | Hexagon nut M5-8 | 023 541 | | | |
| 532 | Cap screw M5x30 | 022 396 | | | |

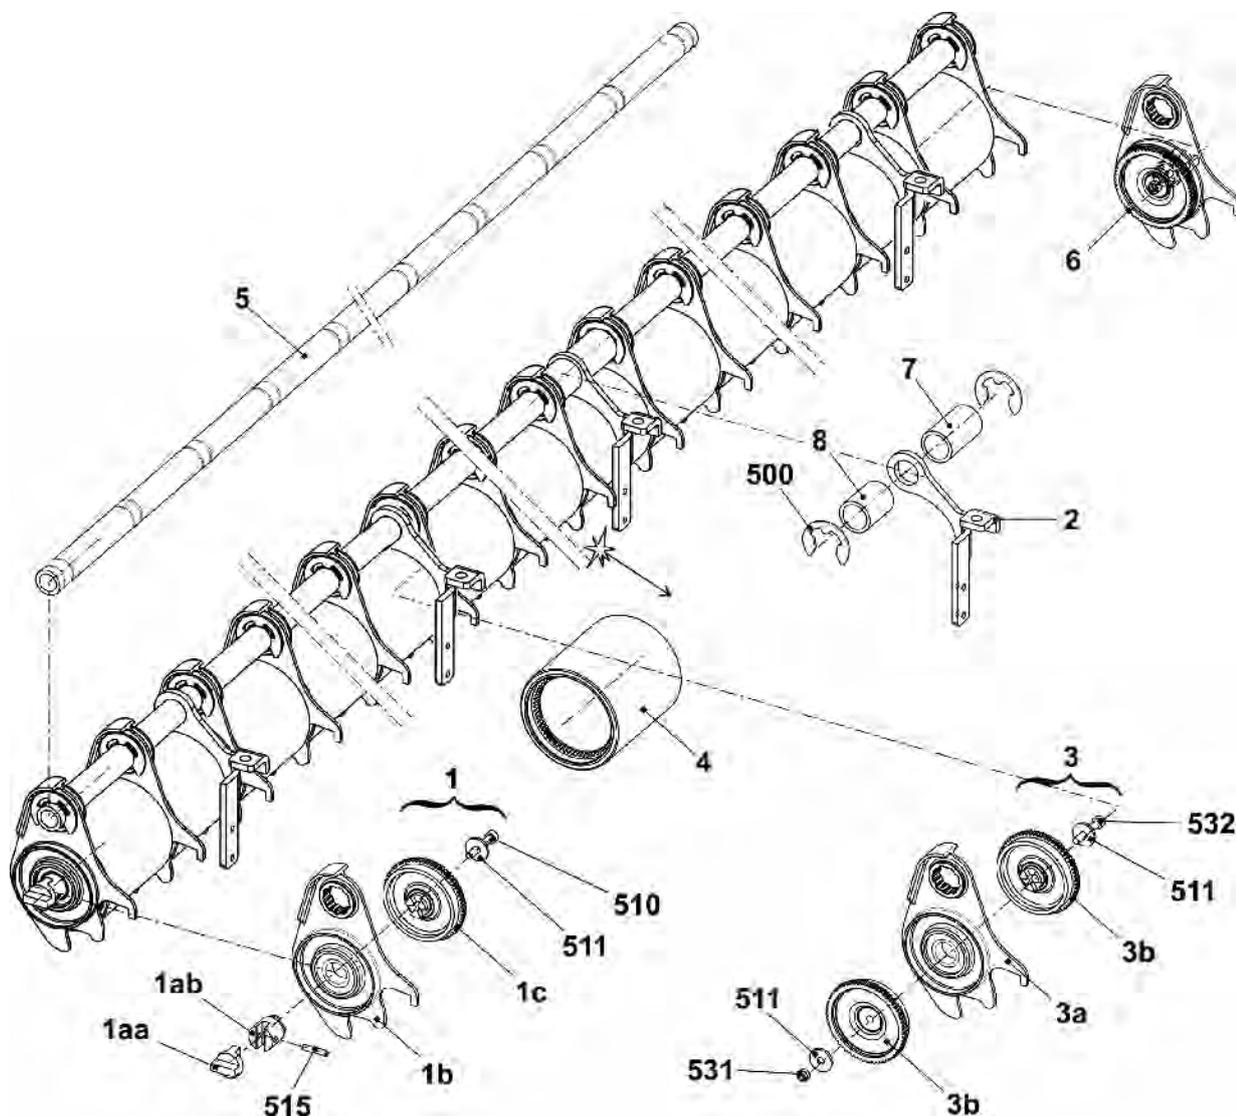


6.4.4 Pressure angle rail

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|----------------------------|----------------|-----|---------------------------------|---------|
| Σ | Angle rail complete | 242 316 | 500 | Washer 6 | 022 431 |
| 1 | Switch complete with cable | 221 265 | 501 | Hexagon nut M5-8 | 023 541 |
| 2 | Spring flange | 242 327 | 502 | Compression spring 0,8x9,2x27,5 | 023 537 |
| 3 | Angle rail | 242 277 | 503 | Cap screw M2x12 | 023 522 |
| 4 | Winding plate | 237 195 | 504 | Washer 2-200 | 022 908 |
| 5 | Retaining ring | 242 325 | 505 | Shoulder screw M5x20x5 | 023 675 |

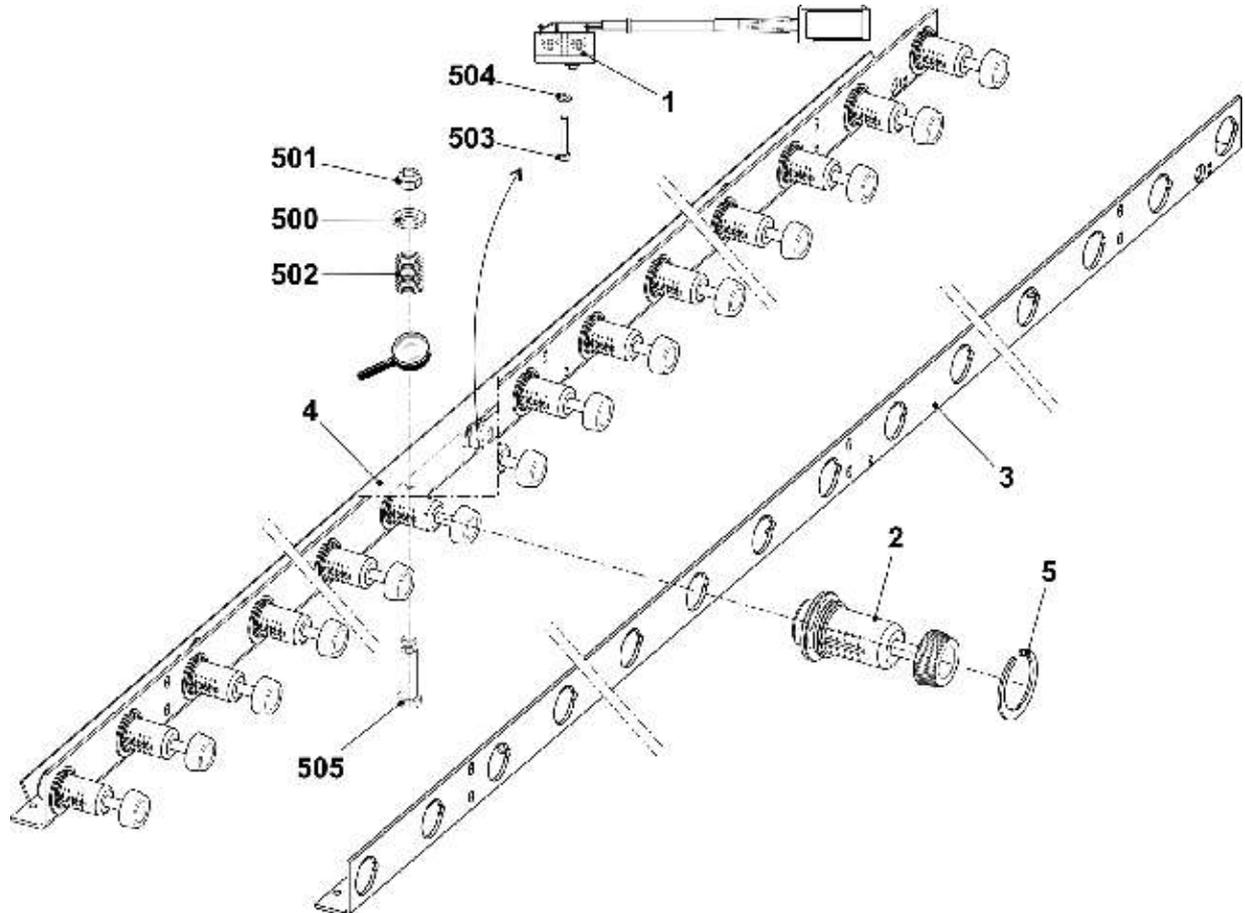


6.4.5 Stripper angle

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|-----|-------------------|---------|
| Σ | Stripper angle at the rear complete | 259 987 | 6 | Adjustment weight | 260 426 |
| 1 | Stripper angle on the right | 259 976 | 7 | Bracket | 260 060 |
| 2 | Stripper angle on the left | 259 977 | 8 | Cam | 260 109 |
| 3 | Axle | 259 969 | 500 | Cap screw M5x8 | 023 319 |
| 4 | Axle | 259 970 | 501 | Setscrew M5x6 | 022 738 |
| 5 | Bolts | 228 310 | 502 | Set collar | 020 934 |

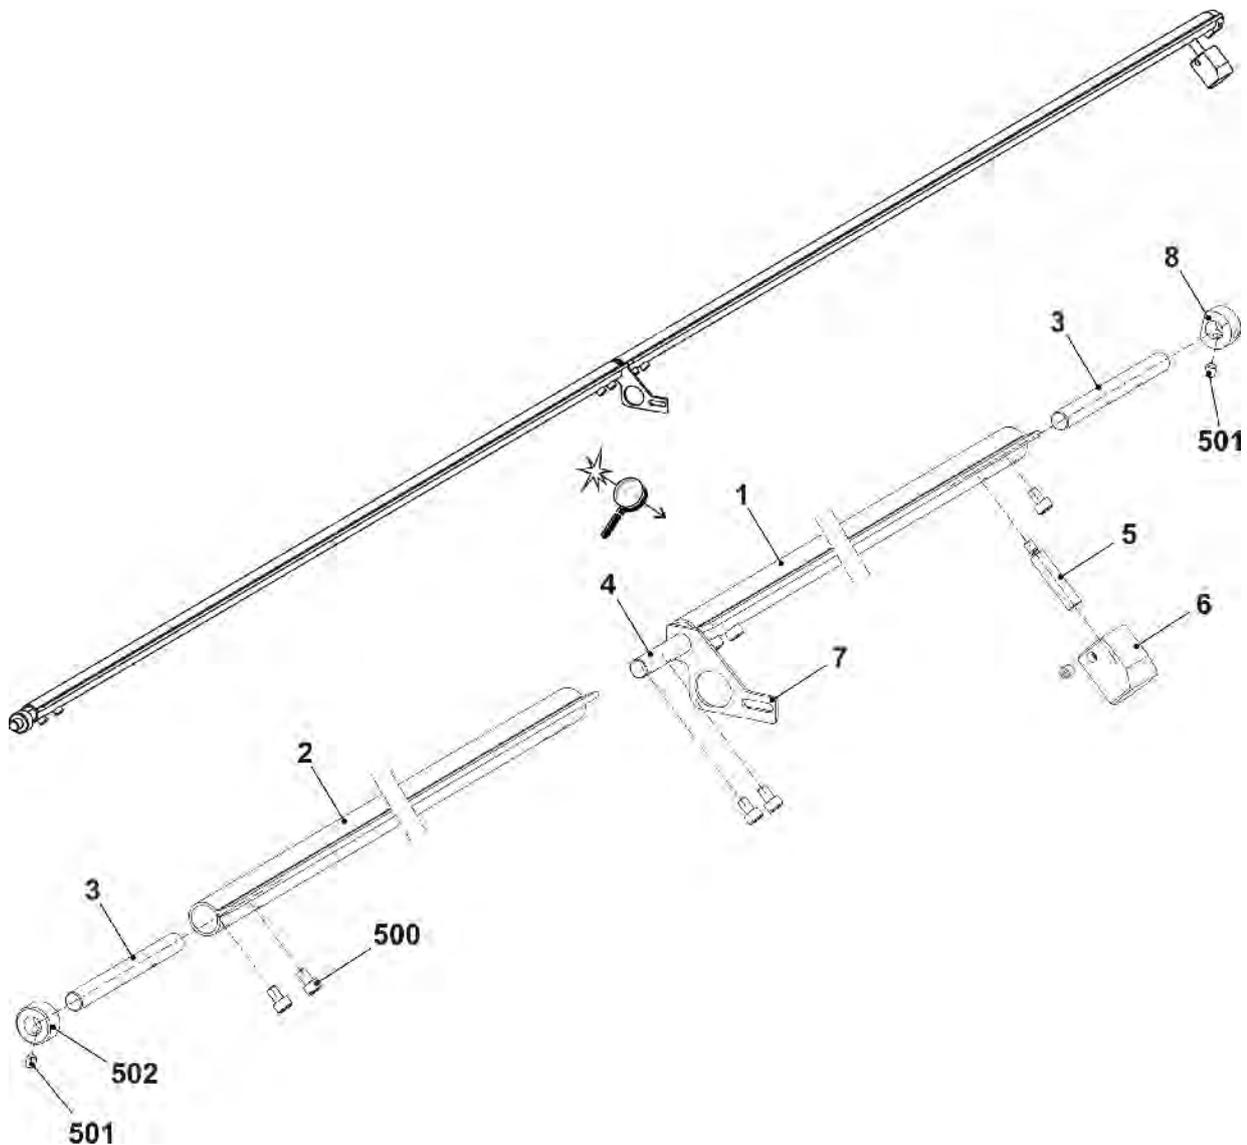


6.4.6 Impulse sensor and motor

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--------------------------------------|----------------|------|-----------------|---------|
| Σ | Motor take-down unit complete | 253 803 | | | |
| 1 | Asynchronous torque motor (complete) | 257 438 | 500 | Cap screw M4x8 | 022 501 |
| 2 | Impulse disc | 208 716 | 501 | Washer 4-200 | 020 879 |
| 3 | Light barrier take-down + comb | 300 744 | 502 | Circlip | 022 774 |
| 4 | Cover | 212 262 | 503 | Shim ring 4x8x1 | 023 369 |
| 5 | Gear wheel | 241 668 | 510* | Cap screw M8x25 | 020 142 |

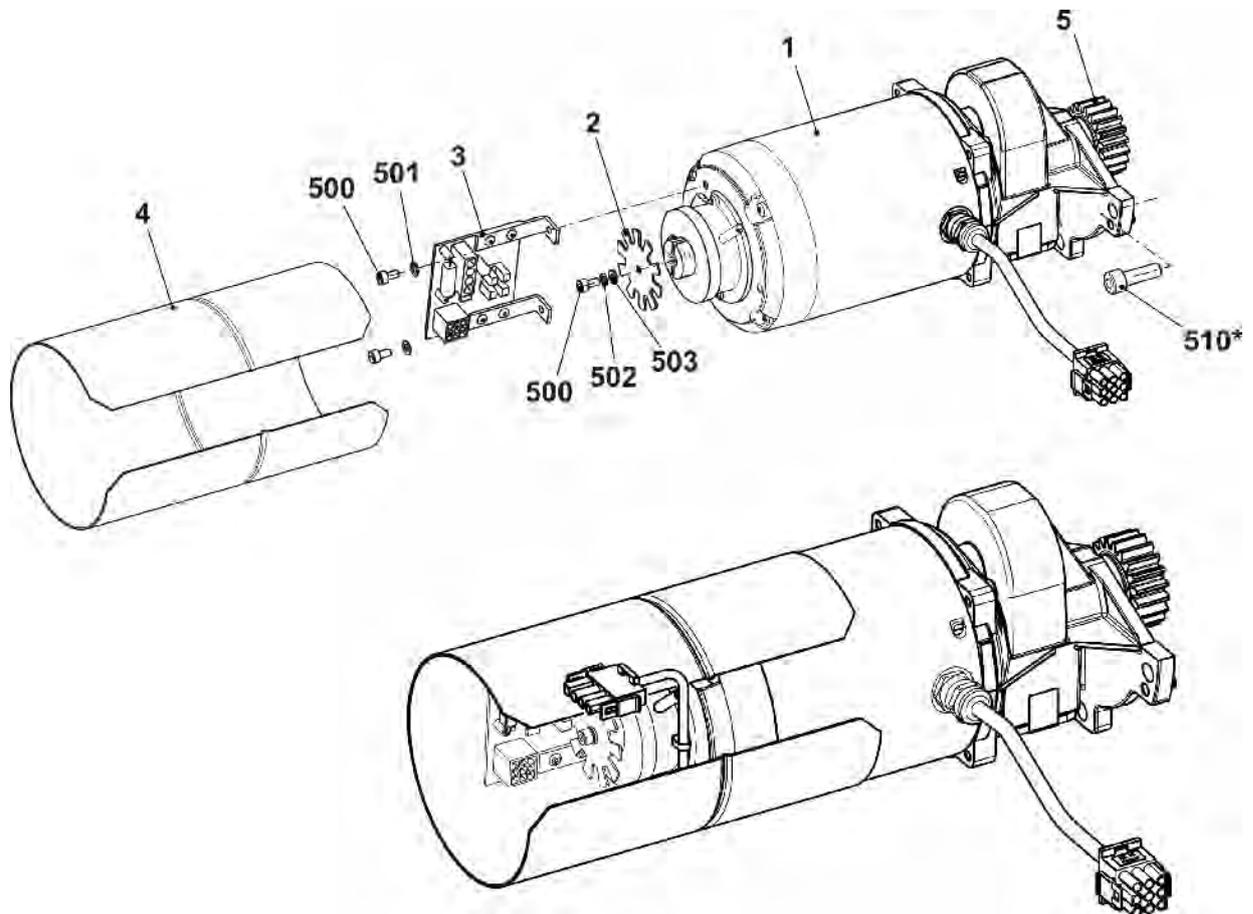


6.5 Take-down closing device

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|--------------------------------------|---------|
| Σ | Main take-down on / off complete | 253 387 | 19 | Swivel support on the right complete | 253 389 |
| 1 | Motor complete | | 20 | Swivel holder in the middle complete | 239 188 |
| 1a | Motor 25W | 232 456 | 21 | Swivel holder on the left complete | 253 388 |
| 1b | Gear unit | 234 983 | 22 | Cable switch HAAB open | 232 442 |
| 510 | Cap screw M5x55 | 023 321 | 500 | Cap screw M5x8 | 023 319 |
| 2 | Sheet metal | 232 992 | 501 | Setscrew M4x4 | 022 875 |
| 3 | Gear wheel | 232 434 | 505 | Cap screw M3x15 | 020 009 |
| 5 | Support in the middle complete | | 506 | Assembling element | 209 543 |
| 550 | Grooved ball bearing 6004-2Z | 022 720 | 900 | Cap screw M6x14 | 022 658 |
| 551 | Retaining ring 42x1,75 | 023 293 | 901 | Cap screw M10x16 | 023 895 |
| 11 | Limit switch retaining plate | 235 190 | 902 | Screw M50x30 | 253 257 |
| 12 | Microswitch XGK2-S21 250 VAC | 210 510 | 903 | Cap screw M10x25 | 023 751 |

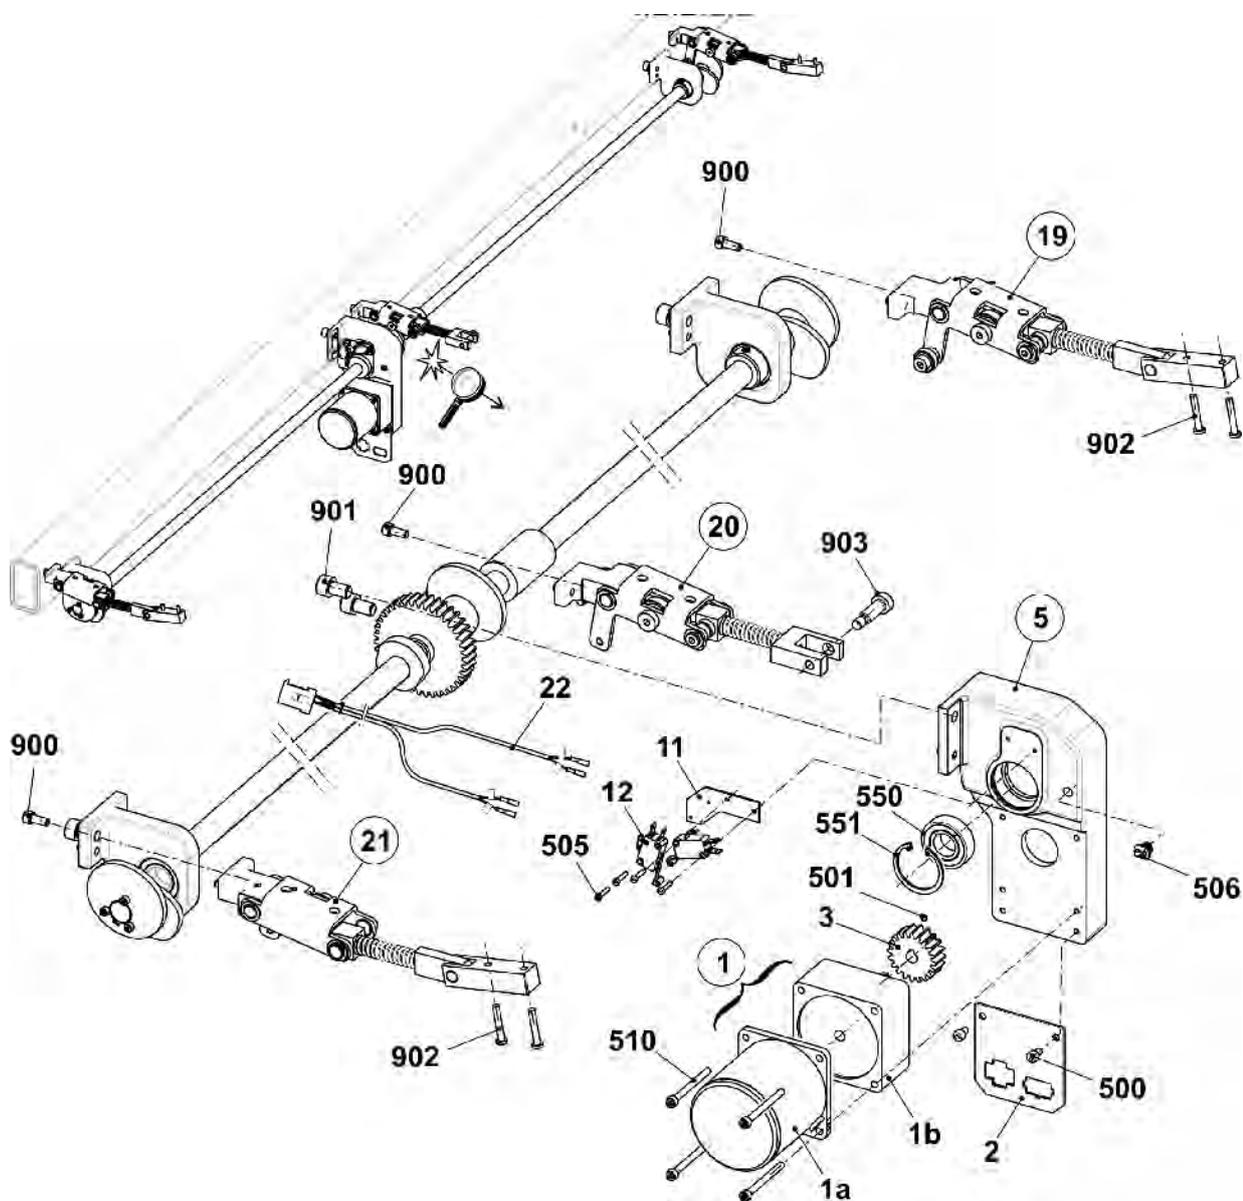


6.6 Continuation of take-down closing device

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|---|----------------|-----|----------------------|---------|
| Σ | Main take-down on / off complete | 253 387 | 15 | Guide bush | 234 876 |
| 4 | Gear wheel | 213 744 | 16 | Guide bush | 235 623 |
| 6 | Shaft | 237 180 | 17 | Eccentric | 232 382 |
| 7 | Shaft | 237 181 | 18 | Spacer pipe | 235 128 |
| 8 | Threaded spacer | 232 385 | 502 | Feather key A 6x6x25 | 023 017 |
| 9 | Trip cam | 232 383 | 503 | Setscrew M6x8 | 023 723 |
| 10 | Coupling | 232 604 | 504 | Setscrew M6x5 | 023 192 |
| 13 | Support on the outside complete | 235 248 | 508 | Set collarA20 | 020 938 |
| | 13a Support | 234 780 | 510 | Cap screw M4x25 | 023 302 |
| | 513 Grooved ball bearing 6004-2Z | 022 720 | 511 | Cap screw M4x14 | 023 604 |
| 14 | Eccentric | 235 135 | 901 | Cap screw M10x16 | 023 895 |

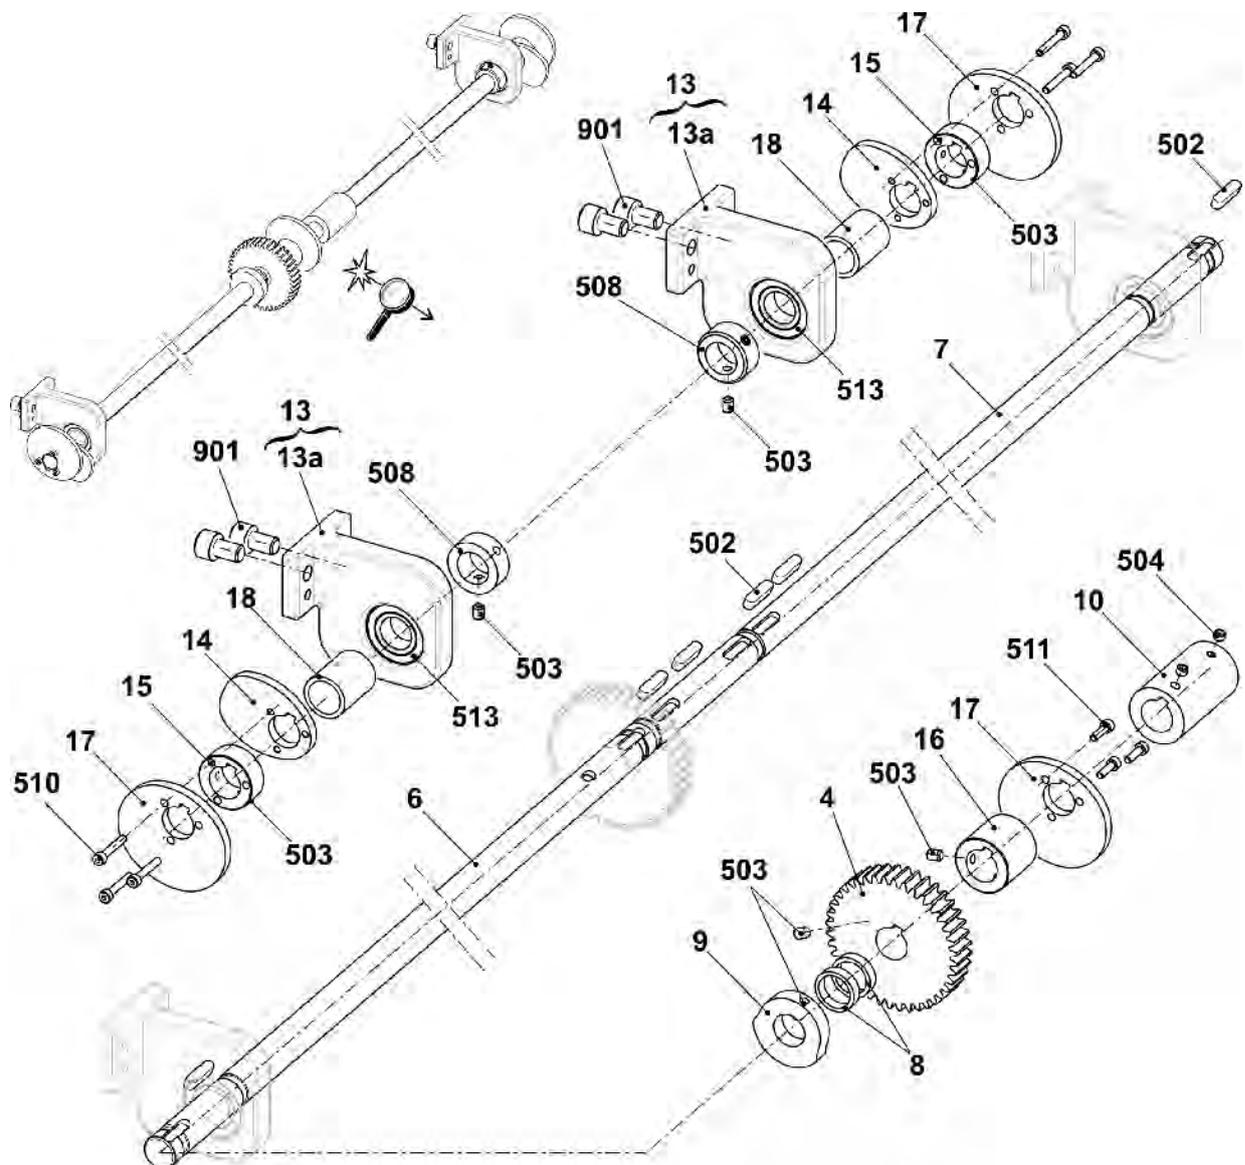


6.6.1 Right swivel support

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|----------------------------------|---------|
| Σ | Swivel support on the right complete | 253 389 | 11 | Lever | 253 199 |
| 1 | Support | 239 163 | 500 | Grooved ball bearing 619/8-2RS | 023 728 |
| 2 | Bearing pin | 239 164 | 501 | Grooved ball bearing 6000-2Z | 022 599 |
| 3 | Bow | 238 974 | 502 | Hexagon nut M8-8 | 022 843 |
| | 3a Clip bearing 11-MCM-12-04 | 023 639 | 503 | Shim ring 10x16x2 | 023 600 |
| 4 | Shoulder screw | 239 133 | 504 | Slide bearing GFM-081014-06 | 023 358 |
| 5 | Threaded spacer | 239 134 | 505 | Slide bearing GSM-0810-10 | 023 896 |
| 6 | Shoulder screw | 239 132 | 506 | Shim ring 12x18x1 | 023 315 |
| 7 | Swivel-mounted bearing | 239 100 | 507 | Retaining ring 12x1 | 020 951 |
| 8 | Bearing bolt | 239 117 | 508 | Compression spring 2,5x12,5x67,5 | 023 743 |
| 9 | Spring mandrel on the inside | 232 388 | 509 | Dowel pin 10x20 | 023 616 |
| 10 | Lever | 238 370 | 510 | Slide bearing GSM-1012-10 | 239 178 |

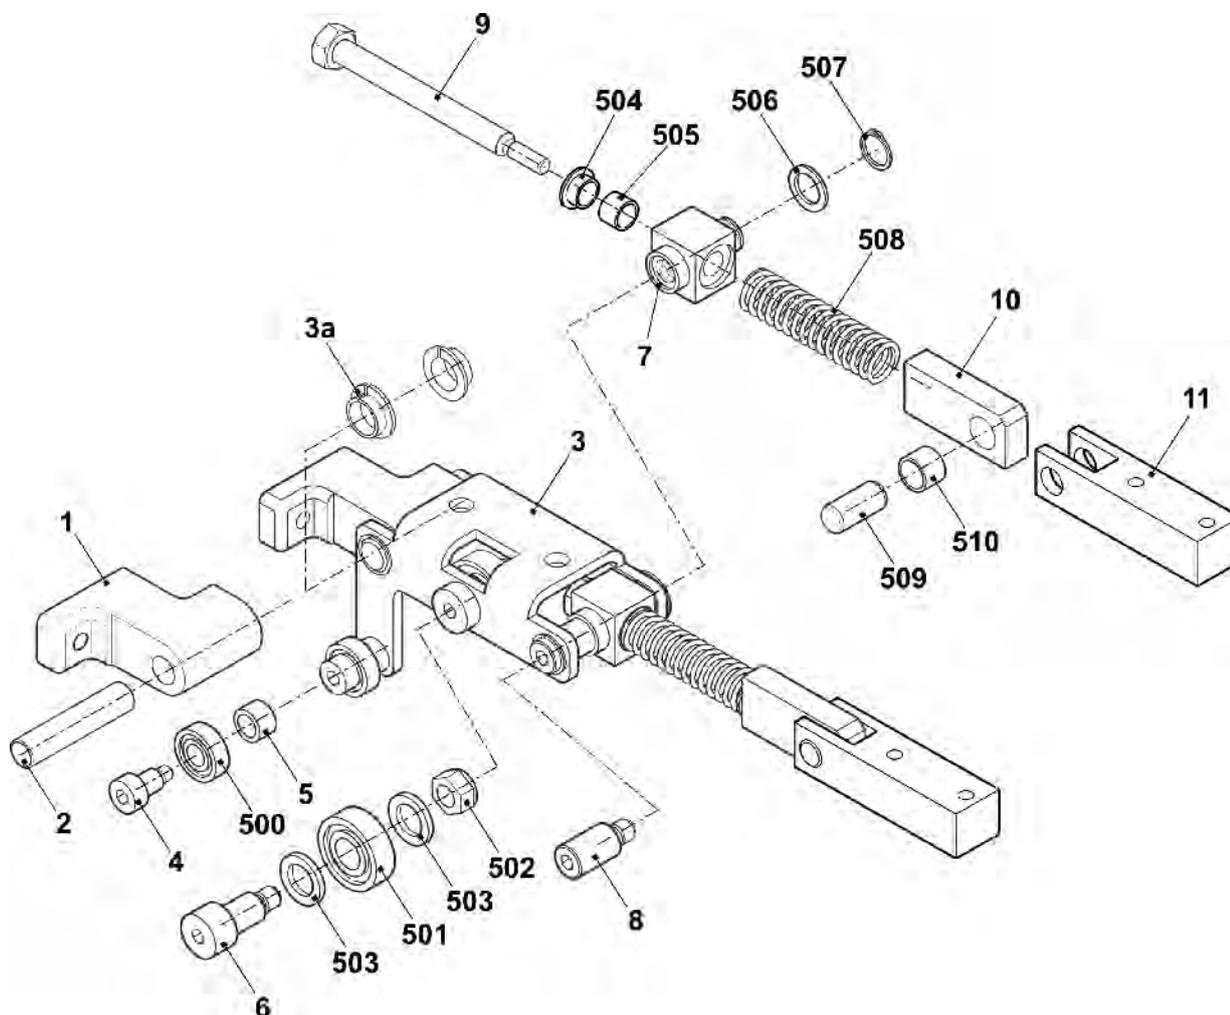


6.6.2 Swivel holder in the middle

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|---------|-----|----------------------------------|---------|
| Σ | Swivel holder in the middle complete | 239 188 | 10 | Angle | 238 778 |
| 1 | Support | 239 163 | 501 | Grooved ball bearing 6000-2Z | 022 599 |
| 2 | Bearing pin | 239 164 | 502 | Hexagon nut M8-8 | 022 843 |
| 3 | Bow | 238 974 | 503 | Shim ring 10x16x2 | 023 600 |
| 3a | Clip bearing 11-MCM-12-04 | 023 639 | 504 | Slide bearing GFM-081014-06 | 023 358 |
| 6 | Shoulder screw | 239 132 | 505 | Slide bearing GSM-0810-10 | 023 896 |
| 7 | Swivel-mounted bearing | 239 100 | 506 | Shim ring 12x18x1 | 023 315 |
| 8 | Bearing bolt | 239 117 | 507 | Retaining ring 12x1 | 020 951 |
| 9 | Spring mandrel on the inside | 232 388 | 508 | Compression spring 2,5x12,5x67,5 | 023 743 |

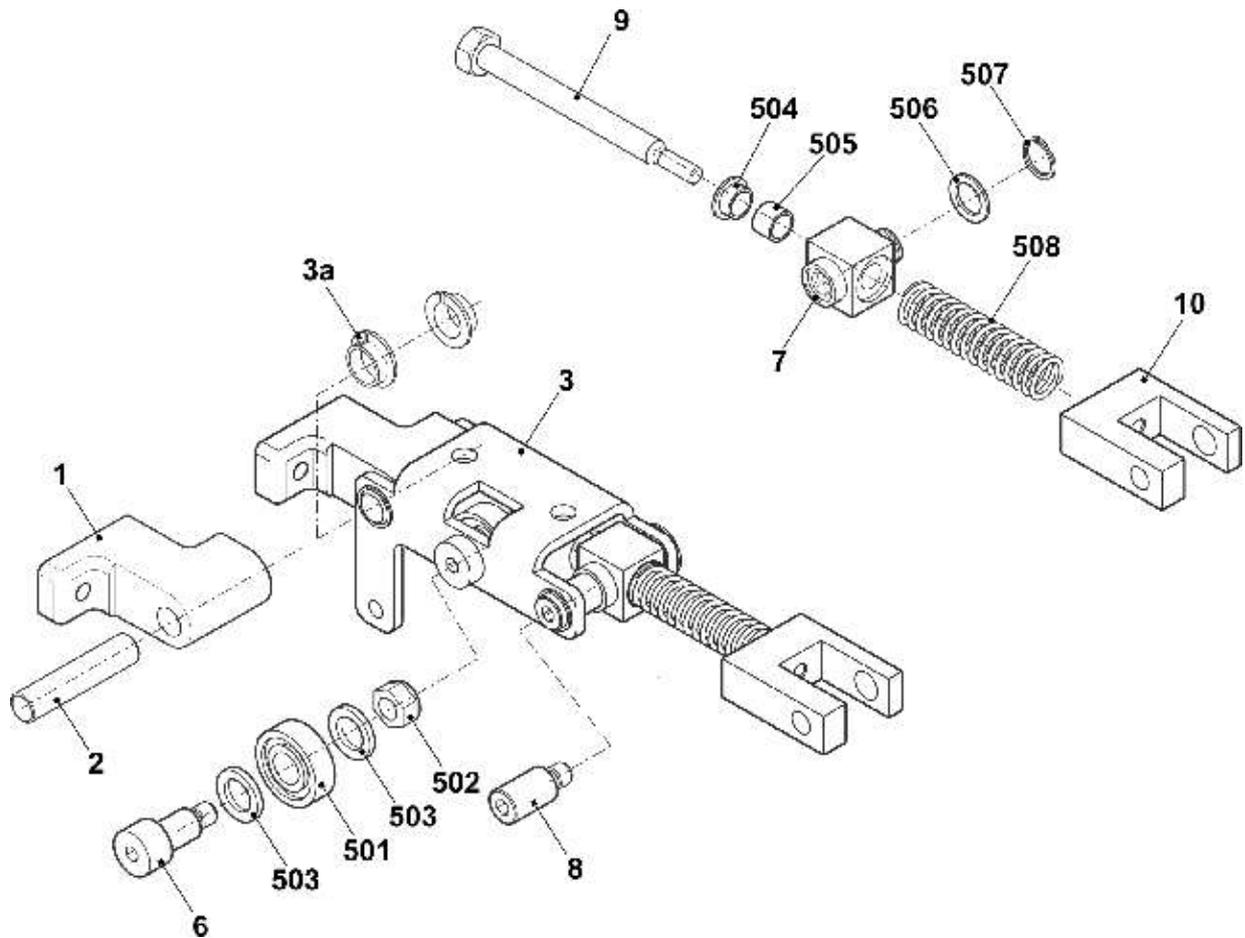


6.6.3 Left swivel holder

| Pos | Designation | ID | Pos | Designation | ID | |
|----------|---|---------------------------|---------|----------------------------------|-------------------|---------|
| Σ | Swivel holder on the left complete | 253 388 | 11 | Lever | 253 199 | |
| 1 | Support | 239 163 | 500 | Grooved ball bearing 619/8-2RS | 023 728 | |
| 2 | Bearing pin | 239 164 | 501 | Grooved ball bearing 6000-2Z | 022 599 | |
| 3 | Bow on the left | 239 184 | 502 | Hexagon nut M8-8 | 022 843 | |
| | 3a | Clip bearing 11-MCM-12-04 | 023 639 | 503 | Shim ring 10x16x2 | 023 600 |
| 4 | Shoulder screw | 239 133 | 504 | Slide bearing GFM-081014-06 | 023 358 | |
| 5 | Threaded spacer | 239 134 | 505 | Slide bearing GSM-0810-10 | 023 896 | |
| 6 | Shoulder screw | 239 132 | 506 | Shim ring 12x18x1 | 023 315 | |
| 7 | Swivel-mounted bearing | 239 100 | 507 | Retaining ring 12x1 | 020 951 | |
| 8 | Bearing bolt | 239 117 | 508 | Compression spring 2,5x12,5x67,5 | 023 743 | |
| 9 | Spring mandrel on the inside | 232 388 | 509 | Dowel pin 10x20 | 023 616 | |
| 10 | Lever | 238 370 | 510 | Slide bearing GSM-1012-10 | 239 178 | |

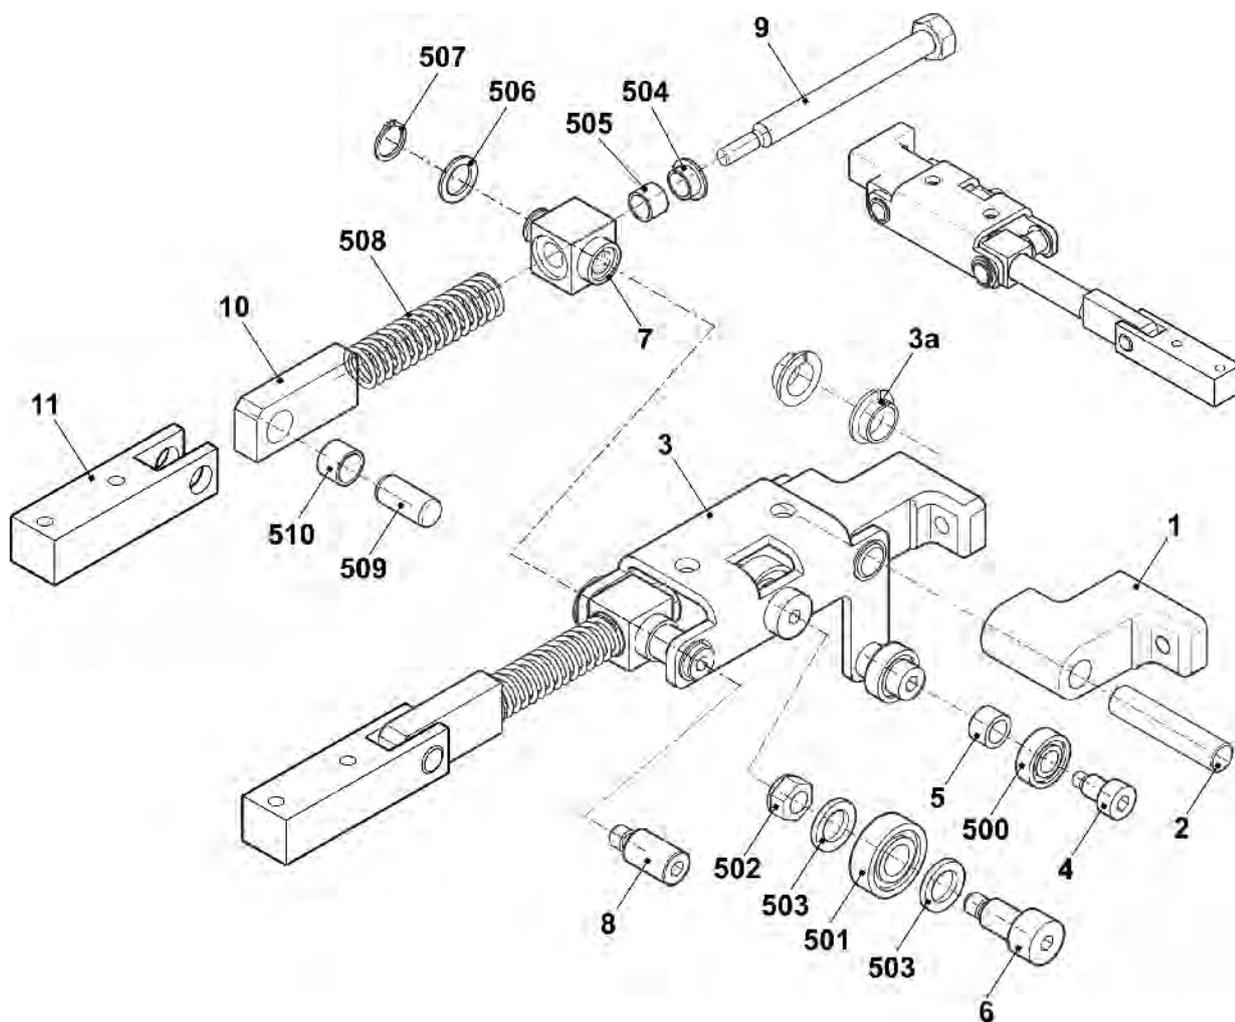


7 Auxiliary Take-down

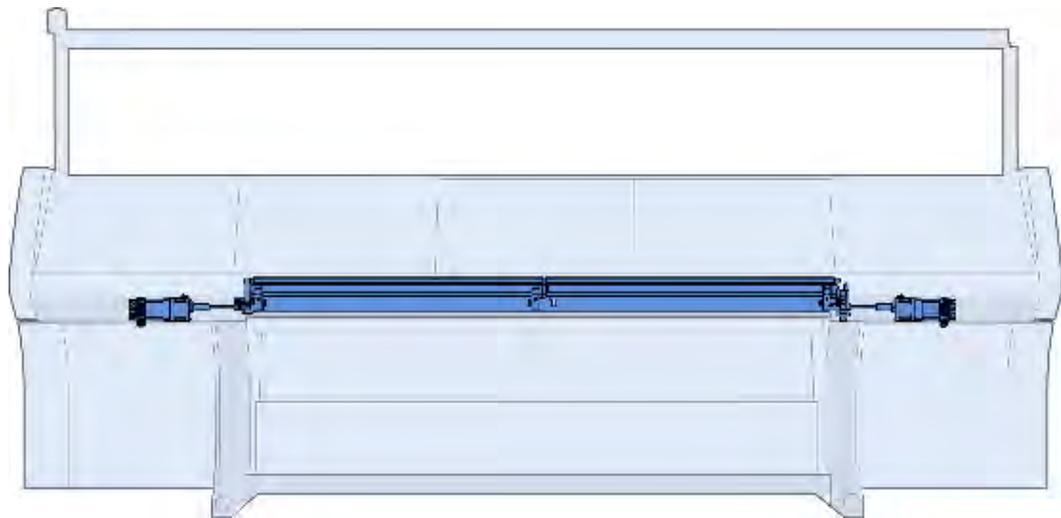


7.1 Auxiliary Take-down

| Pos | Designation | Id | Pos | Designation | Id |
|----------|-----------------------------------|---------|-----|--|---------|
| Σ | Auxiliary take-down | | | | |
| 1 | Auxiliary take-down pre-assembled | 254 974 | 1a | Motor with 2 phases auxiliary take-down complete | 235 602 |

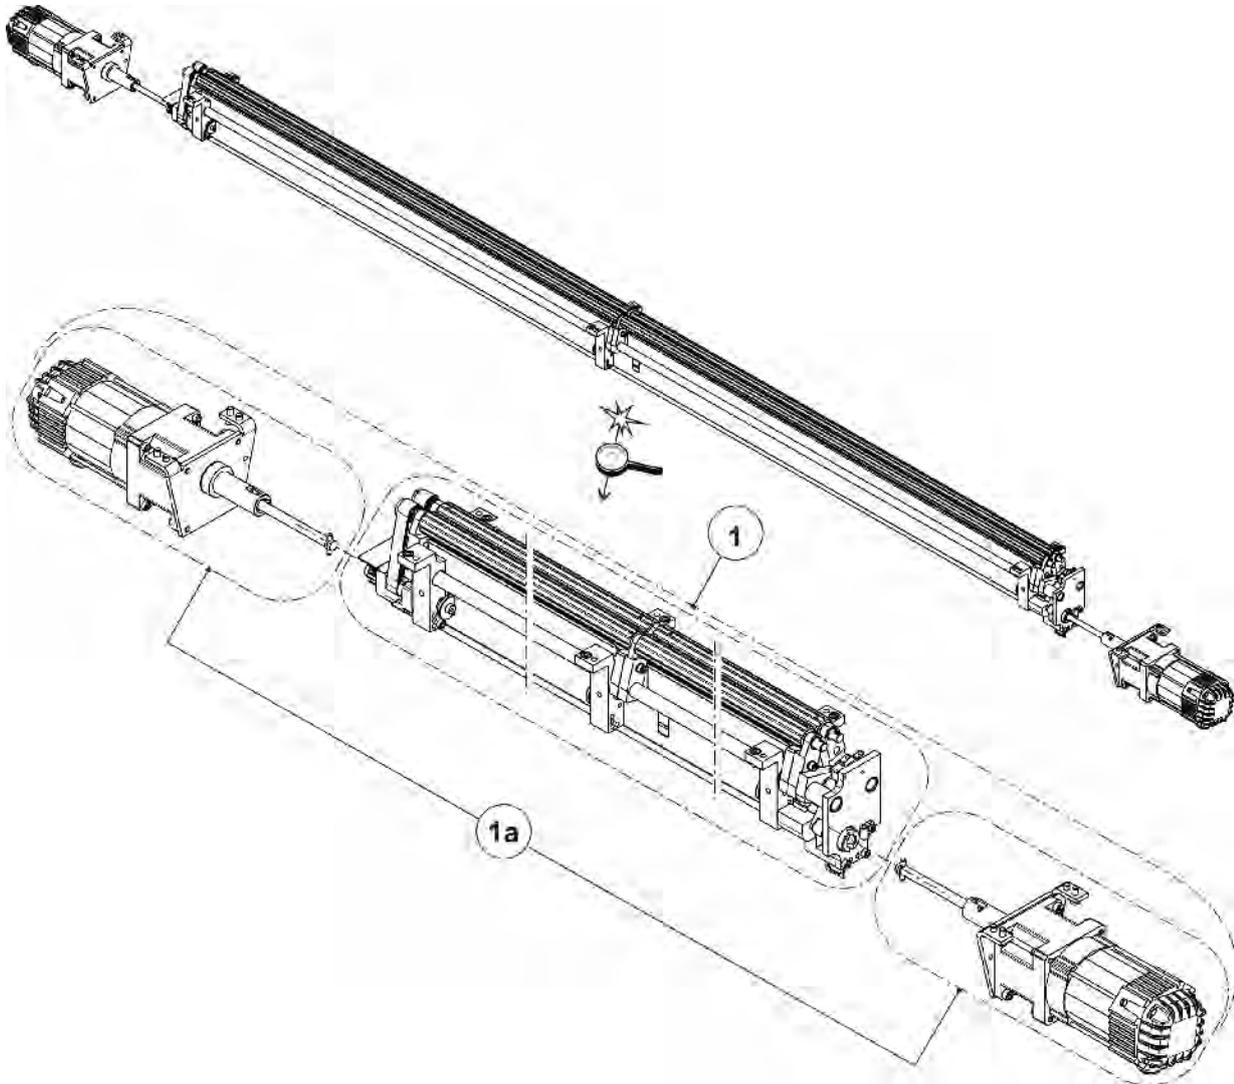


7.1.1 Auxiliary take-down pre-assembled

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|---------------------------|---------|
| Σ | Auxiliary take-down pre-assembled | 254 974 | | | |
| 6 | Contact shaft | 237 126 | B | Take-down roller | 237 128 |
| 7 | Lever | 235 164 | L | Bearing on the left | 236 894 |
| 8 | Clamping lever | 235 156 | R | Bearing on the right | 235 353 |
| 9 | Eccentric | 236 952 | 500 | Cap screw M5x10 | 022 918 |
| 10 | Spacer pipe | 235 189 | 502 | Cap screw 6x10 | 235 448 |
| 11 | Spacer pipe | 235 192 | 503 | Stop disk GTM-1524-015 | 235 447 |
| 12 | Cover plate | 237 127 | 504 | Disk5 | 020 871 |
| 13 | Roll | 235 178 | 512 | Dowel pin 6x10 | 023 268 |
| 24 | Support | 235 150 | 513 | Slide bearing FSM-1517-20 | 237 060 |
| A | Contact lever | 235 356 | 900 | Cap screw M6x12 | 020 134 |

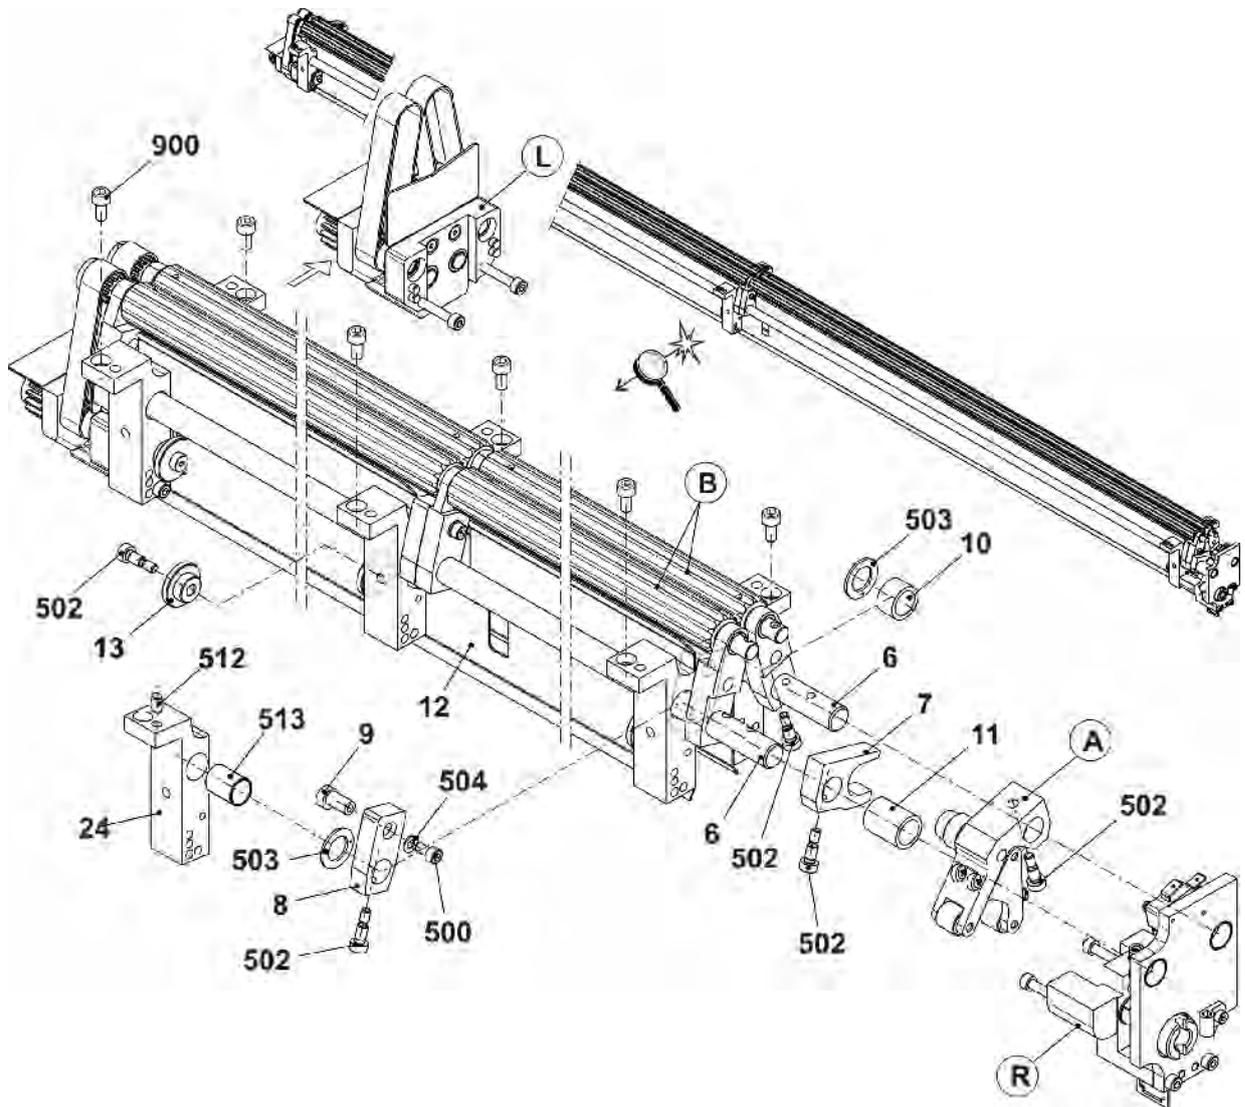


7.1.1.1 Contact lever

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---------------------------------|----------------|-----|------------------------------|---------|
| Σ | Contact lever | 235 356 | 526 | Slide bearing GFM-10x1216-06 | 023 280 |
| 33 | Lever | 235 172 | 527 | Cap screw M10x16 | 023 748 |
| 34 | Tilting lever | 235 173 | 528 | Countersunk screw M4x45 | 023 291 |
| 35 | Roller | 235 176 | 529 | Hexagon nut M4-8 | 023 046 |
| 36 | Roll | 235 171 | 530 | Dowel pin 5x22-A-ST | 023 716 |
| 515 | Compression spring 1,6x6,4x27,1 | 023 288 | 532 | Washer 4 | 020 870 |

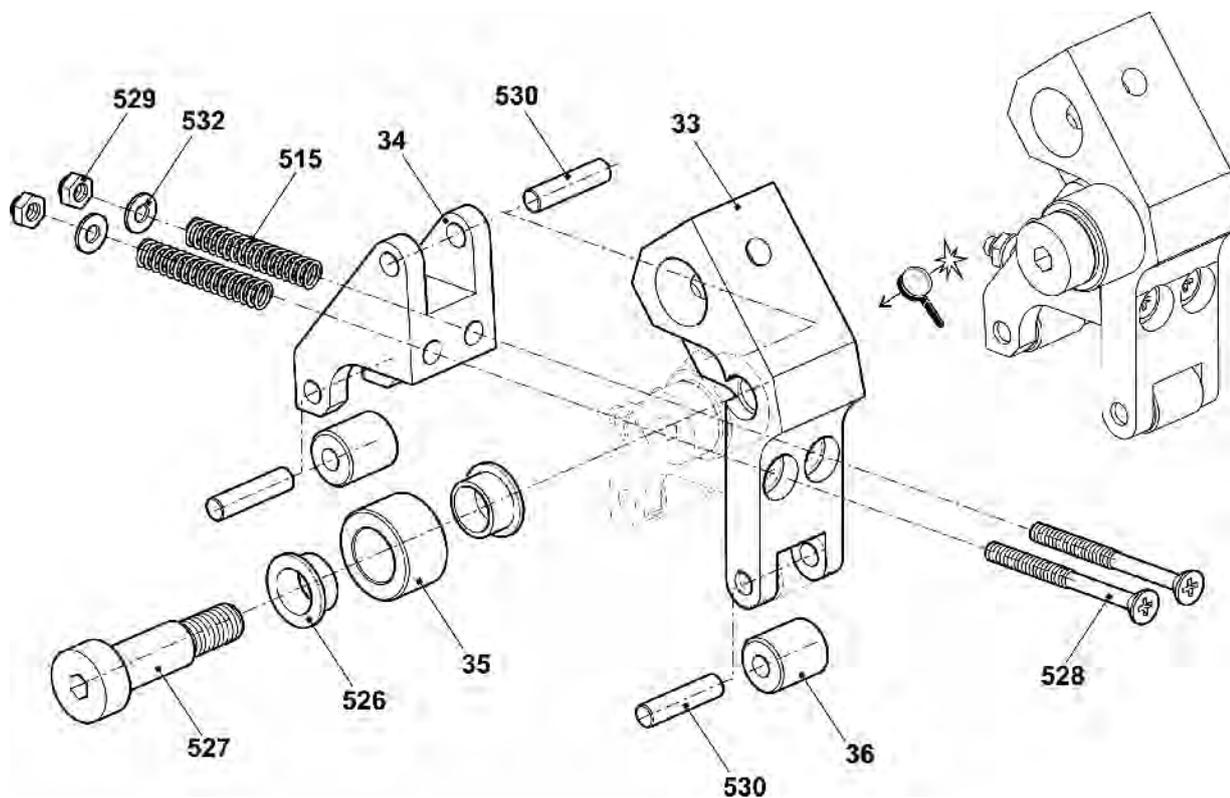


7.1.1.2 Take-down roller

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|-----------------------------------|----------------|-----|--------------------------------------|---------|
| Σ | Take-down roller | 237 128 | | | |
| 22 | Timing belt pulley | 237 043 | 40a | Needle roller bearing 10x14x12 | 023 665 |
| 37 | Take-down roller | 237 125 | 41 | Lever bearing in the middle complete | 235 359 |
| 39 | Bolts | 236 973 | 531 | Slide bearing GFM-101214-07 | 023 627 |
| 40 | Lever bearing right/left complete | 235 358 | 510 | Spring dowel sleeve 3x18 | 237 059 |

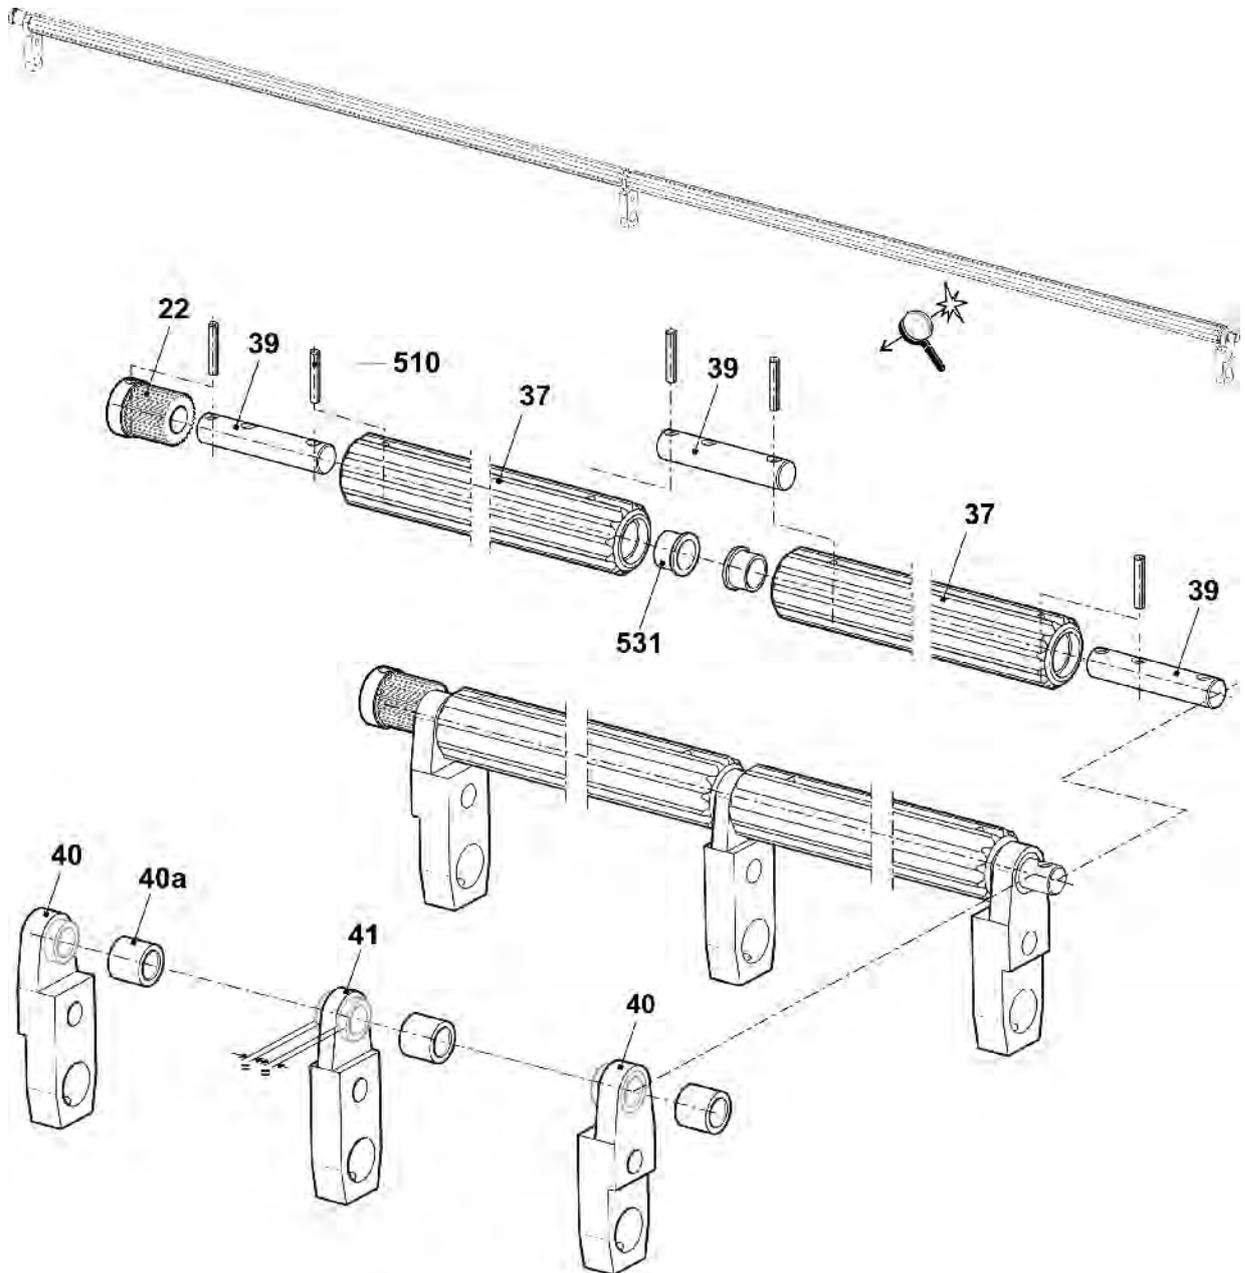


7.1.1.3 Left bearing of the auxiliary take-down

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|----------------------------|----------------|-----|---------------------------------|---------|
| Σ | Bearing on the left | 236 894 | 22 | Timing belt pulley | 237 043 |
| 14 | Drive bearing | 237 422 | 23 | Toothed belt HPS5M NG CLEAN | 237 118 |
| 15 | Cover plate | 236 970 | 505 | Grooved ball bearing 61900-2RS1 | 023 714 |
| 16 | Cover plate | 237 037 | 506 | Needle roller bearing 10x14x10 | 023 664 |
| 17 | Bolts | 236 964 | 507 | Cap screw M4x8 | 022 501 |
| 18 | Bolts | 236 963 | 508 | Countersunk screw M4x12 | 023 062 |
| 19 | Gear wheel | 236 914 | 509 | Retaining ring 10x1 | 020 950 |
| 20 | Gear wheel | 236 916 | 510 | Spring dowel sleeve 3x18 | 237 059 |
| 21 | Gear wheel | 236 917 | 900 | Cap screw M5x35 | 022 879 |

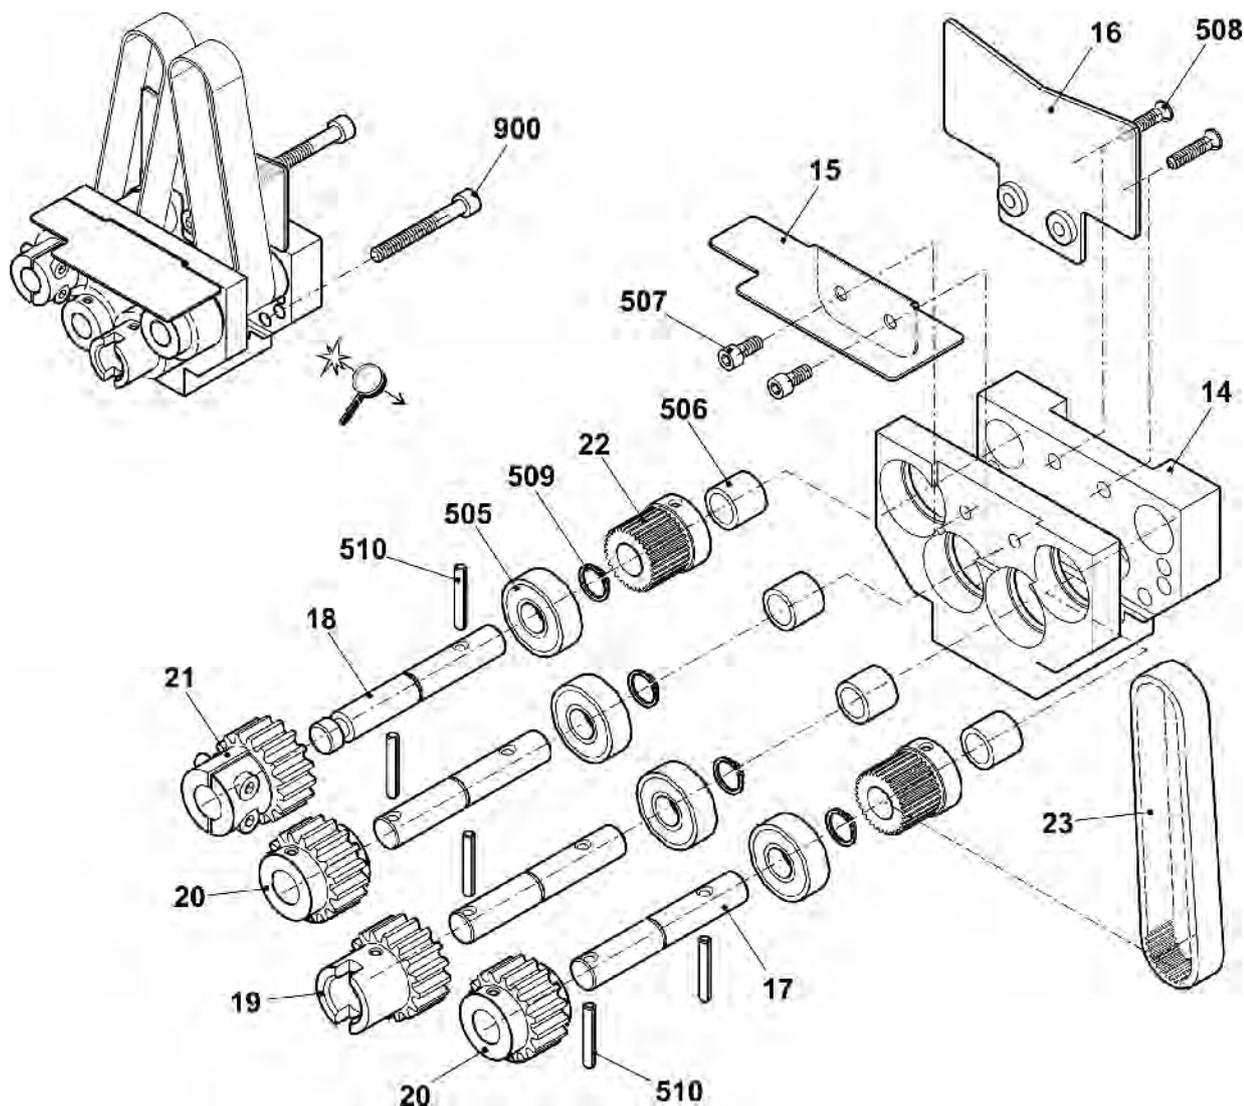


7.1.1.4 Right bearing of the auxiliary take-down

| Pos | Designation | Id | Pos | Designation | Id |
|----------|-----------------------------|----------------|-----|---------------------------------|---------|
| Σ | Bearing on the right | 235 353 | | | |
| 25 | Bearing on the right | 237 520 | 514 | Slide bearing GFM-101216-09 | 023 356 |
| 26 | Plate | 235 168 | 515 | Compression spring 1,6x6,4x27,1 | 023 288 |
| 27 | Microswitch | 026 259 | 516 | Slide bearing GFM-2427-07 | 023 712 |
| 28 | Cable clip N-3B 5mm | 210 729 | 517 | Hexagon screw M3x16 | 237 058 |
| 29 | Cable switch HIAB St468 | 235 027 | 519 | Setscrew M6x12 | 023 724 |
| 30 | Sheet metal for plug | 236 068 | 520 | Cap screw M5x16 | 022 726 |
| 31 | Shaft | 235 159 | 521 | Slide bearing GFM-1517-09 | 235 342 |
| 32 | Eccentric | 235 165 | 522 | Feather key A 4x4x20 | 235 349 |
| 501 | Pan-head screw M4x8 | 023 579 | 524 | Washer 3 | 020 877 |
| 507 | Cap screw M4x8 | 022 501 | 900 | Cap screw M5x35 | 022 879 |

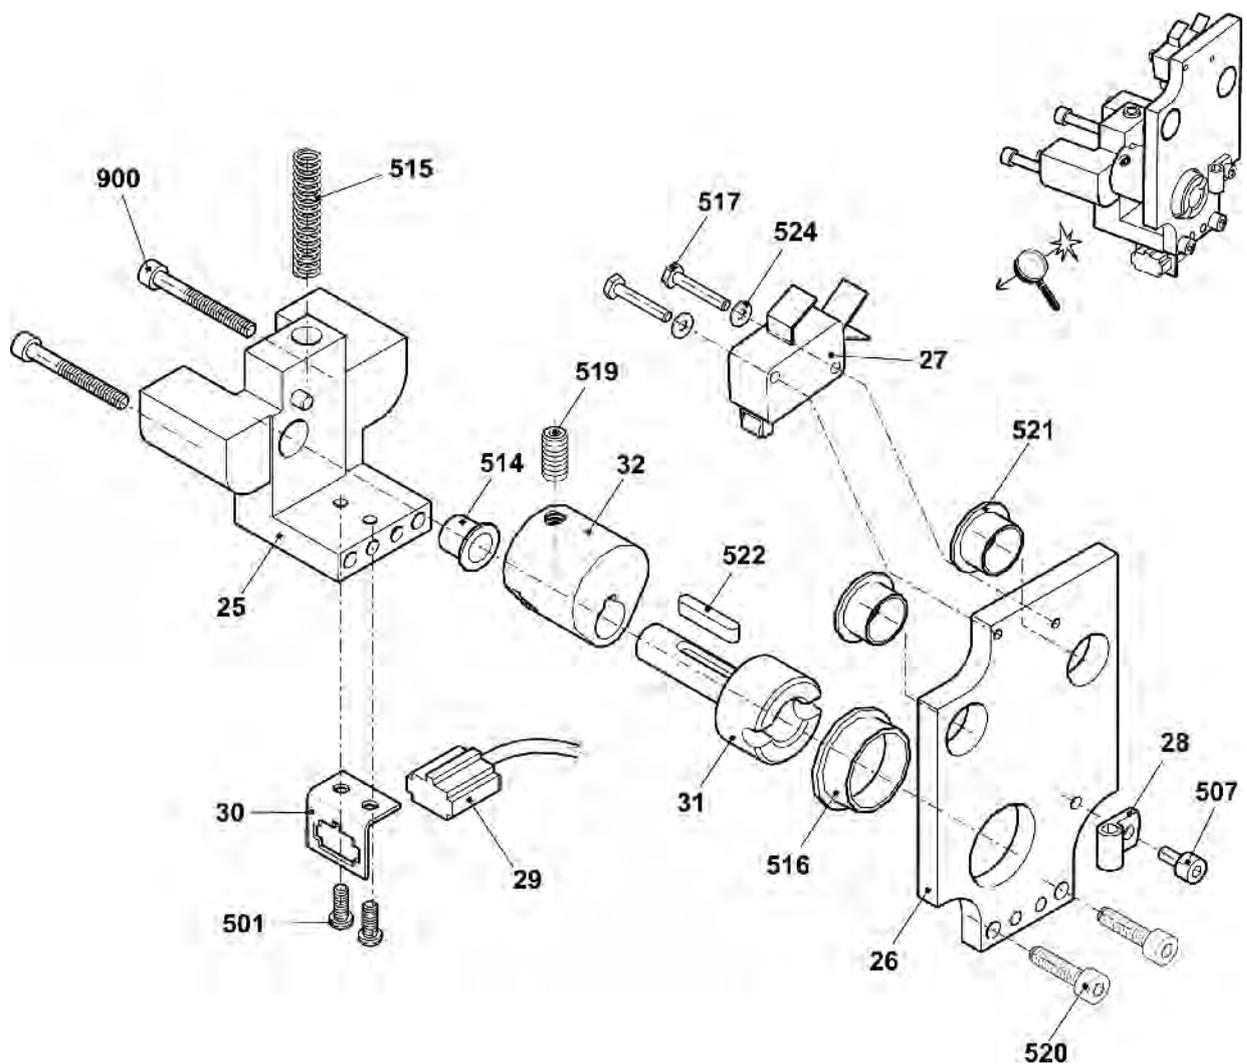


7.1.2 Motor

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|------|----------------------------------|---------|
| Σ | Motor with 2 phases auxiliary take-down complete | 235 602 | | | |
| 1 | Motor 1,8NM 30MIN-1 | 234 805 | 501 | Cap screw M6x16 | 020 135 |
| 2 | Motor bracket | 235 276 | 502 | Compression spring 0,63x10,97x40 | 023 500 |
| 3 | Drive sleeve | 235 285 | 503 | Shim ring 6x12x1 | 023 444 |
| 4 | Shaft | 235 300 | 504 | Dowel pin 5x22-A-ST | 023 716 |
| 500 | Setscrew M6x10 | 023 543 | 510* | Cap screw M6x12 | 020 134 |

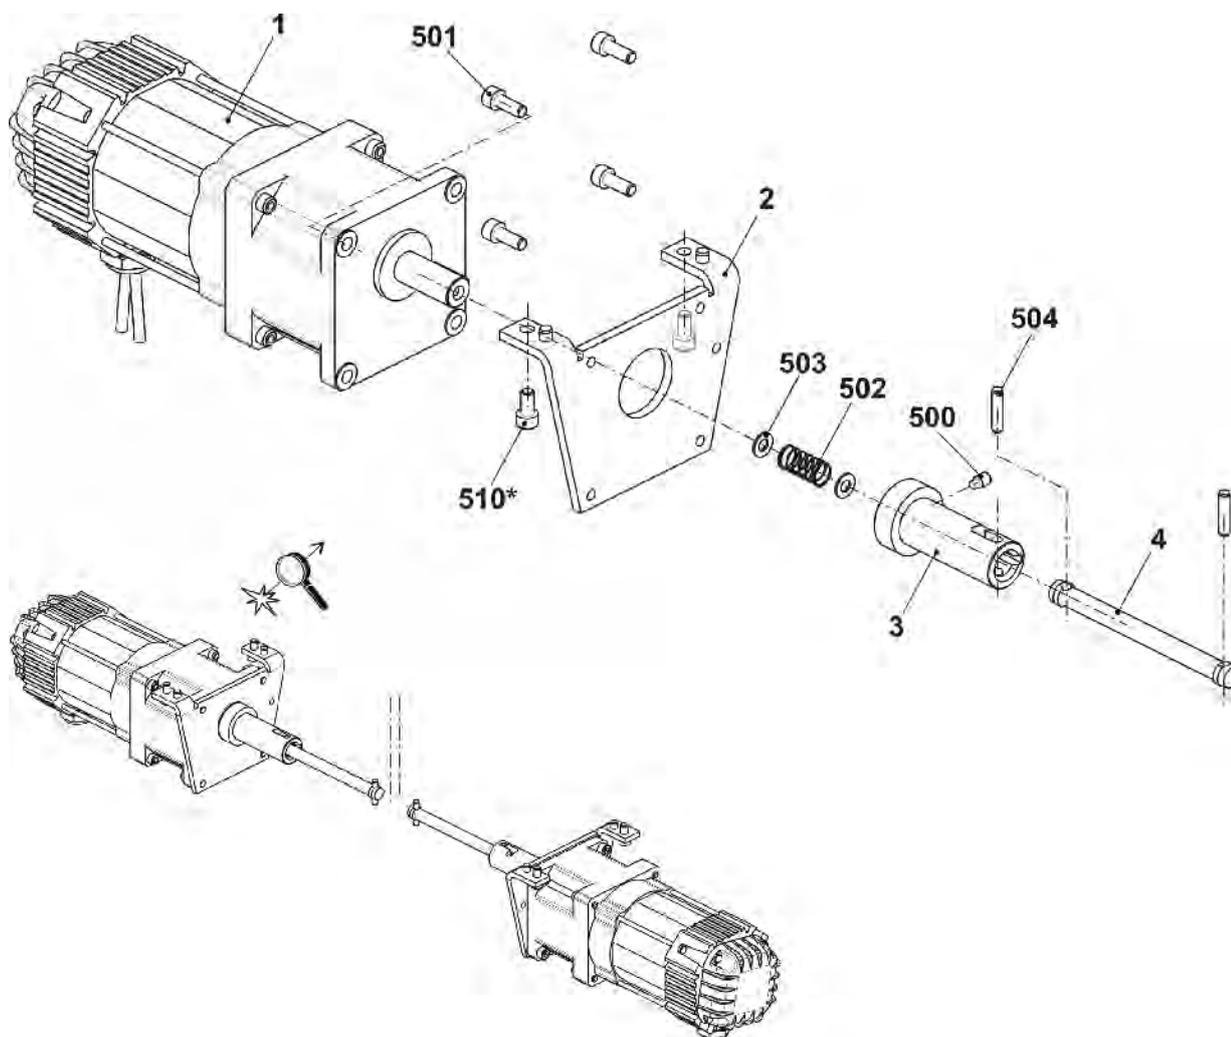


7.2 Yarn brake at clamping and cutting bed

| Pos | Designation | Id | Pos | Designation | Id |
|------------|-------------------------------|----------------|------------|--------------------------------|----------------|
| Σ L | Yarn brake on the left | 262 378 | Σ R | Yarn brake on the right | 262 377 |
| 1 | Cover on the left | 262 376 | 3 | Cover on the right | 262 375 |
| 2 | Leaf spring | 256 712 | 1 | Leaf spring | 256 712 |
| 3 | Test clamping plate | 256 713 | 2 | Test clamping plate | 256 713 |
| 500 | Cap screw M4x6 | 023 067 | 500 | Cap screw M4x6 | 023 067 |

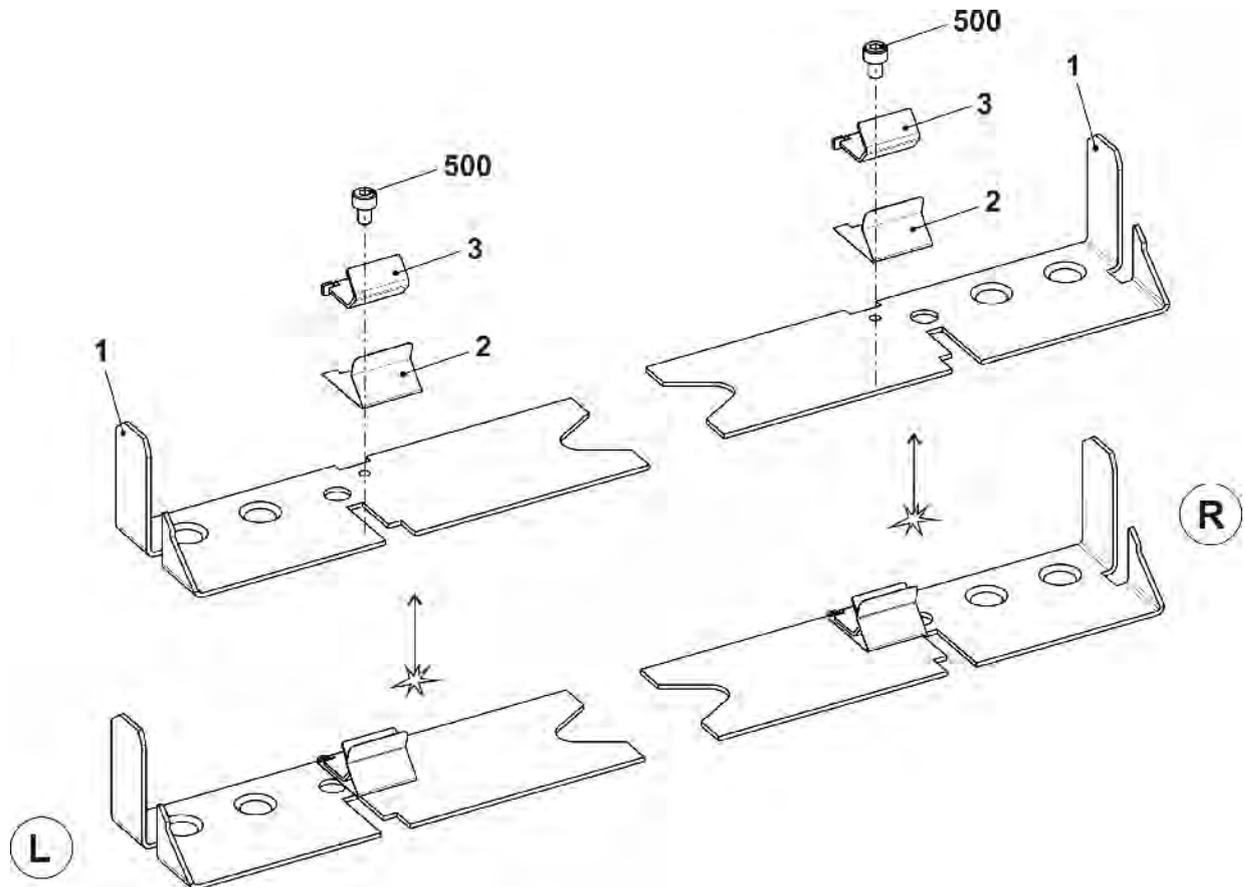


8 Comb Take-down

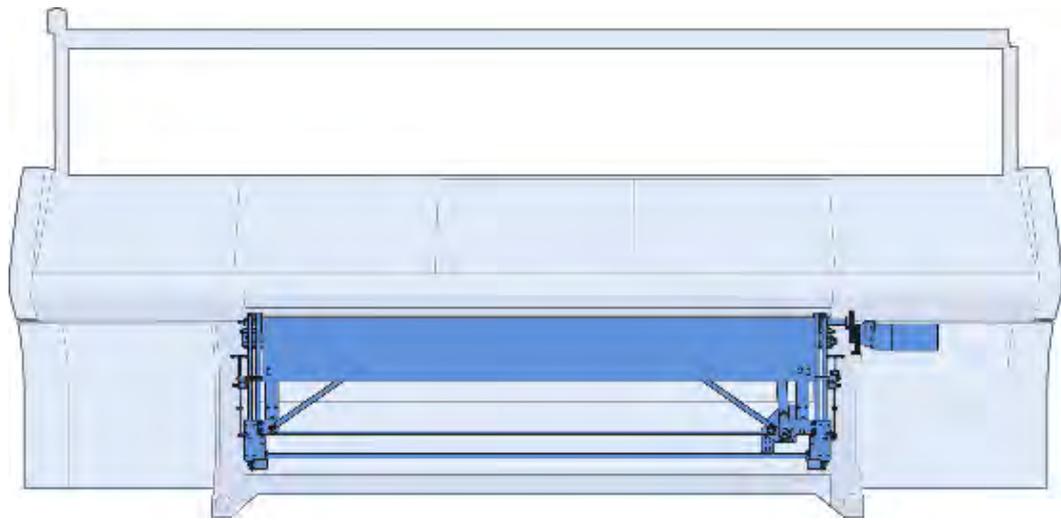


8.1 Comb Take-down

| Pos | Designation | ID | Pos | Designation | ID |
|----------|----------------------------|---------|-----|------------------------------------|---------|
| Σ | Comb take-down | | 2 | Comb take-down on the right | 256 839 |
| 1 | Comb take-down on the left | 261 815 | 3 | Comb take-down in the middleE2,5.2 | 255 289 |

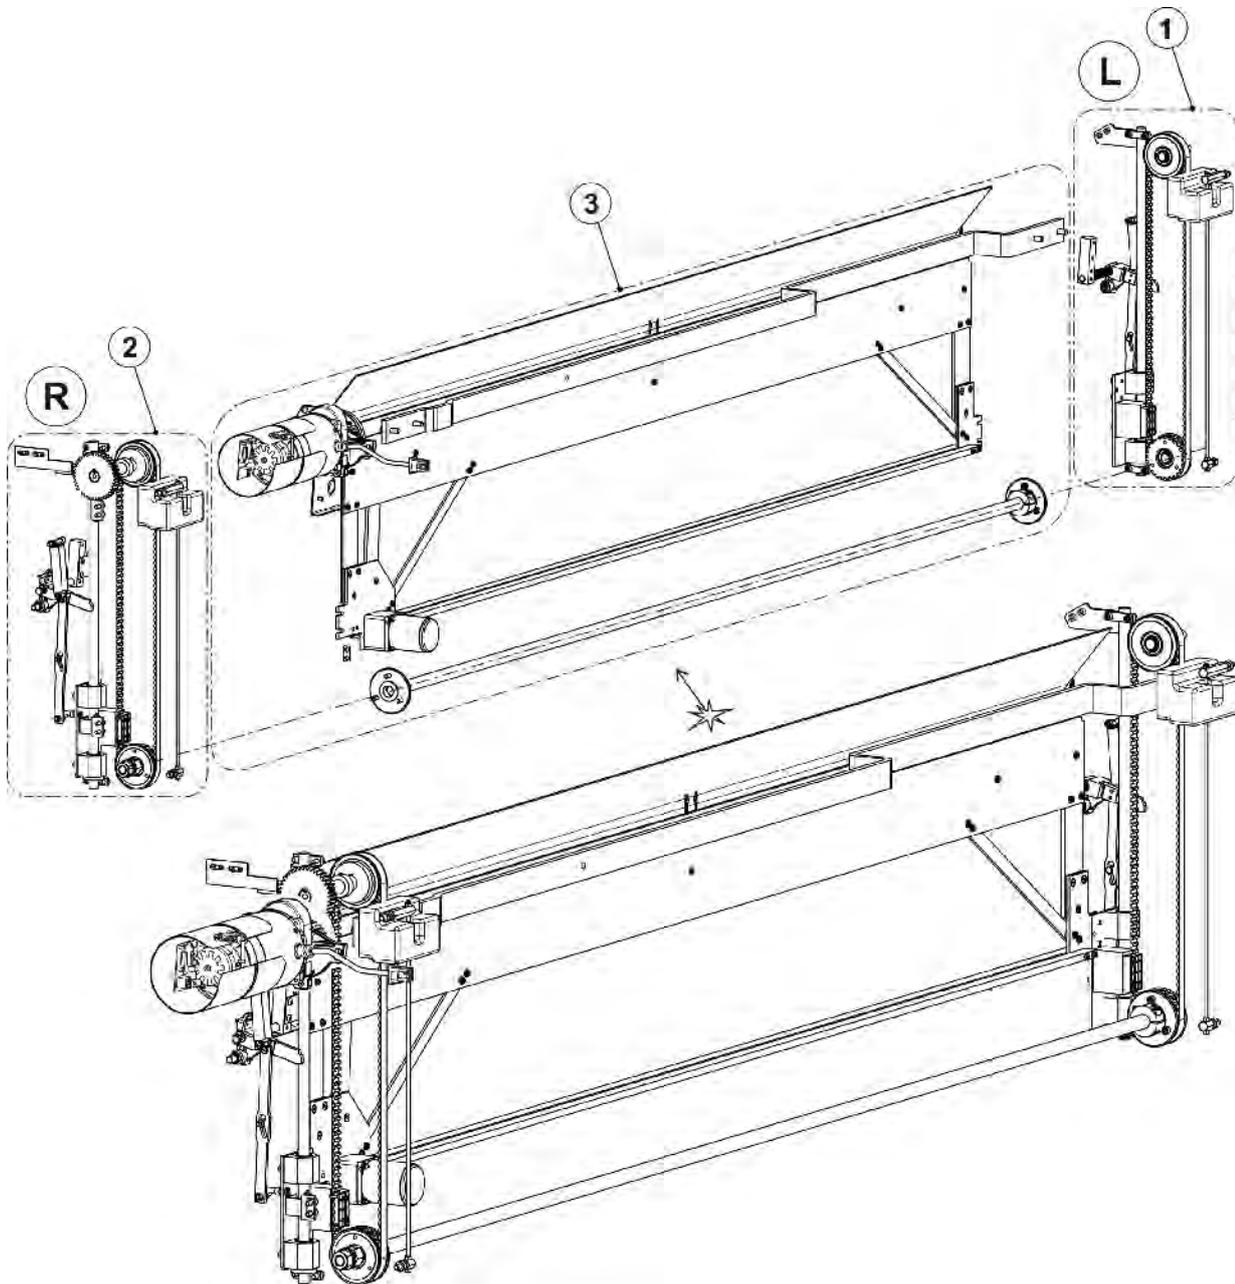


8.1.1 Comb take-down on the left

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|------|--------------------------------------|---------|
| Σ | Comb take-down on the left | 261 815 | | | |
| 1 | Clamping piece | 209 379 | | 528 Hexagon nut M8-6 | 020 838 |
| 2 | Pressure plate | 241 967 | 34 | Swivel lever on the left | 252 859 |
| 3 | Bolts | 222 152 | 36 | Clamping plate | 227 159 |
| 5 | Toothed belt 16T10/1300 | 240 065 | 500 | Cap screw M6x16 | 020 135 |
| 6 | Eccentric pin | 222 320 | 507 | Cap screw M6x65 | 240 162 |
| 11 | Bolts | 207 689 | 508 | Cap screw M6x45 | 022 689 |
| 14 | Toothed lock washer at the bottom complete | 211 822 | 511 | Hexagon nut M5-8 | 023 541 |
| 15 | Toothed lock washer at the top complete | 211 823 | 512 | Hexagon nut M5-6 | 020 835 |
| 17 | Stay bolt | 222 315 | 513 | Hexagon nut M6-6 | 020 836 |
| 18 | Stay bolt | 240 056 | 514 | Hexagon nut M8-6 | 020 838 |
| 19 | Threaded rod M5 | 240 057 | 515 | Hexagon nut M16-6 | 020 845 |
| 25 | Reflector complete | 261 374 | 517 | Washer 16 | 020 876 |
| 26 | Guide bar C35 | 206 560 | 524 | Retaining ring 17x1 | 023 299 |
| 27 | Rubber buffer | 206 561 | 530 | Tension spring Din2097 15x1,50x70,94 | 251 614 |
| 28 | Comb guide on the left | 255 425 | 531 | Cap screw M6x12 | 020 134 |
| 28a | Driving bolt | 255 427 | 540* | Pan-head screw M5x10 | 023 247 |

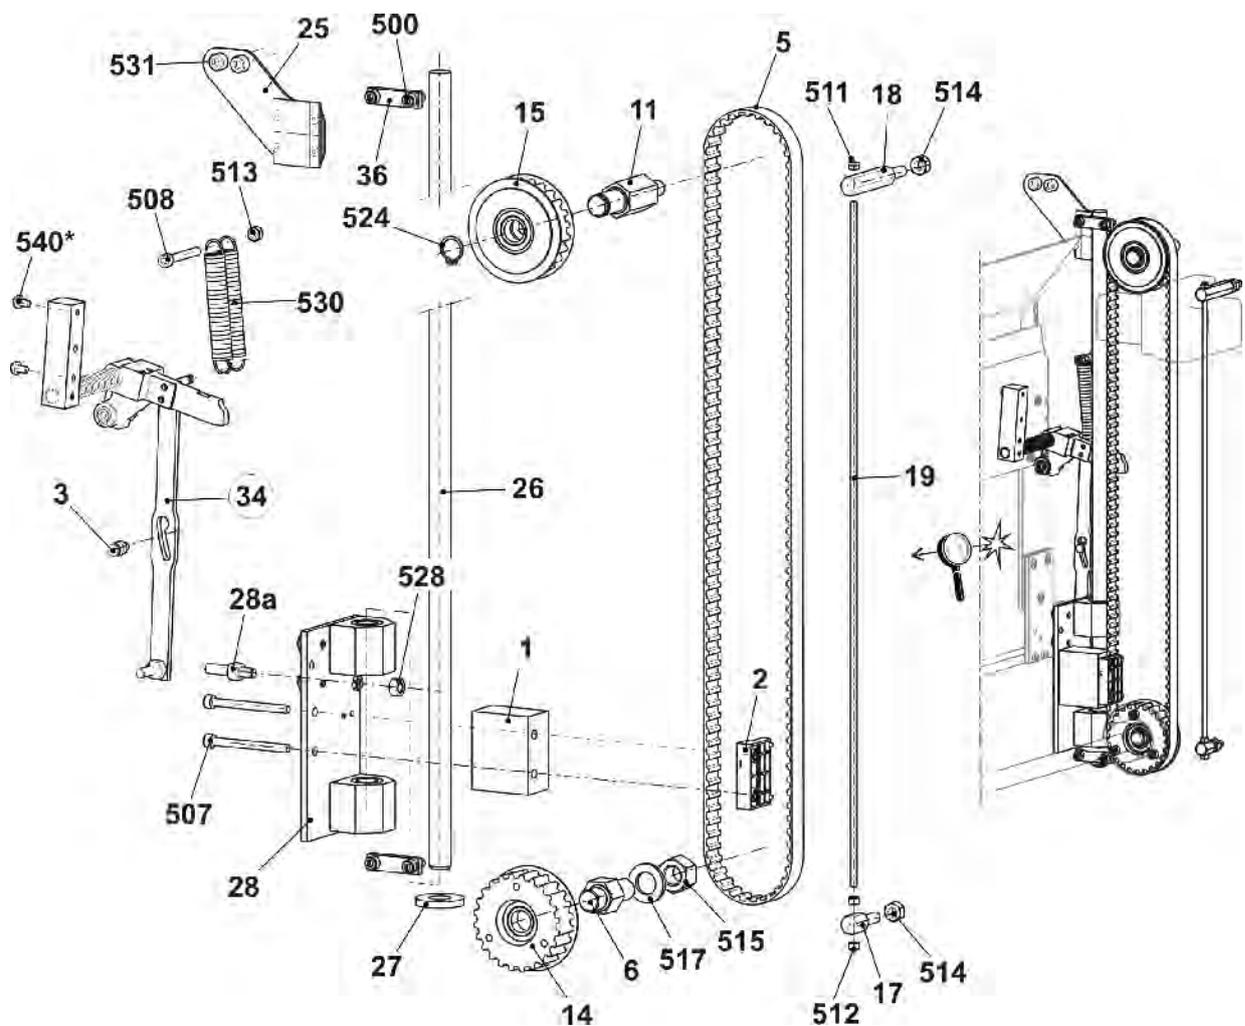


8.1.2 Comb take-down on the right

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|------|------------------------------|---------|
| Σ | Comb take-down on the right | 256 839 | | | |
| 1 | Clamping piece | 209 379 | 529 | Hexagon nut M8-6 | 020 838 |
| 2 | Pressure plate | 241 967 | 33 | Swivel lever on the right | 252 858 |
| 3 | Bolts | 222 152 | 36 | Clamping plate | 227 159 |
| 5 | Toothed belt 16T10/1300 | 240 065 | 500 | Cap screw M6x16 | 020 135 |
| 6 | Eccentric pin | 222 320 | 507 | Cap screw M6x65 | 240 162 |
| 12 | Drive shaft comb complete | 214 583 | 508 | Cap screw M6x45 | 022 689 |
| 14 | Toothed lock washer at the bottom complete | 211 822 | 511 | Hexagon nut M5-8 | 023 541 |
| 17 | Stay bolt | 222 315 | 512 | Hexagon nut M5-6 | 020 835 |
| 18 | Stay bolt | 240 056 | 513 | Hexagon nut M6-6 | 020 836 |
| 19 | Threaded rod M5 | 240 057 | 514 | Hexagon nut M8-6 | 020 838 |
| 22 | Proximity switch inductive at the top | 231 516 | 515 | Hexagon nut M16-6 | 020 845 |
| 23 | Proximity switch inductive at the bottom | 231 520 | 517 | Washer 16 | 020 876 |
| 24 | Holding angle light barrier | 257 409 | 530 | Tension spring 15x1,50x70,94 | 251 614 |
| 26 | Guide bar C35 | 206 560 | 531 | Cap screw M6x12 | 020 134 |
| 27 | Rubber buffer | 206 561 | 532 | Washer 6 | 020 872 |
| 29 | Comb guide on the right | 255 424 | 533* | Shim0,2x12x27 | 023 735 |
| 29a | Driving bolt | 255 427 | 534* | Shim0,5x12x27 | 023 736 |
| 29b | Angle | 240 112 | 540* | Pan-head screw M5x10 | 023 247 |

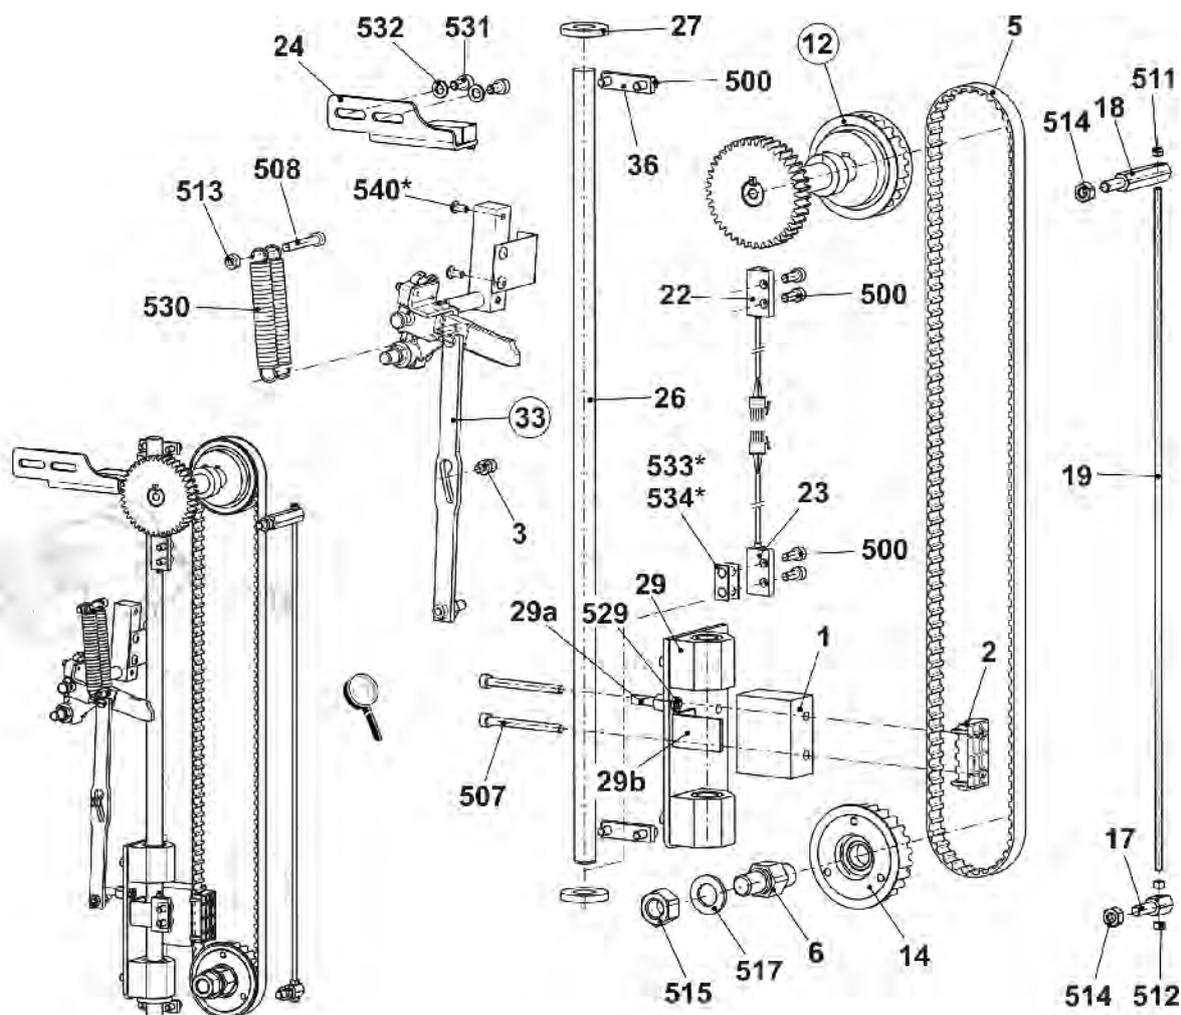


8.1.2.1 Drive shaft of comb

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|----------------------|---------|
| Σ | Drive shaft comb complete | 214 583 | | | |
| 1 | Shaft | 213 969 | 500 | Feather key A 6x6x25 | 023 017 |
| 2 | Gear wheel Z=40, M=2 Always order position 502 additionally | 213 744 | 502 | Setscrew M6x8 | 022 684 |
| 3 | Toothed belt pulley at the top Always order position 503 additionally | 206 394 | 503 | Setscrew M6x12 | 023 898 |
| | | | 504 | Set collar | 020 938 |

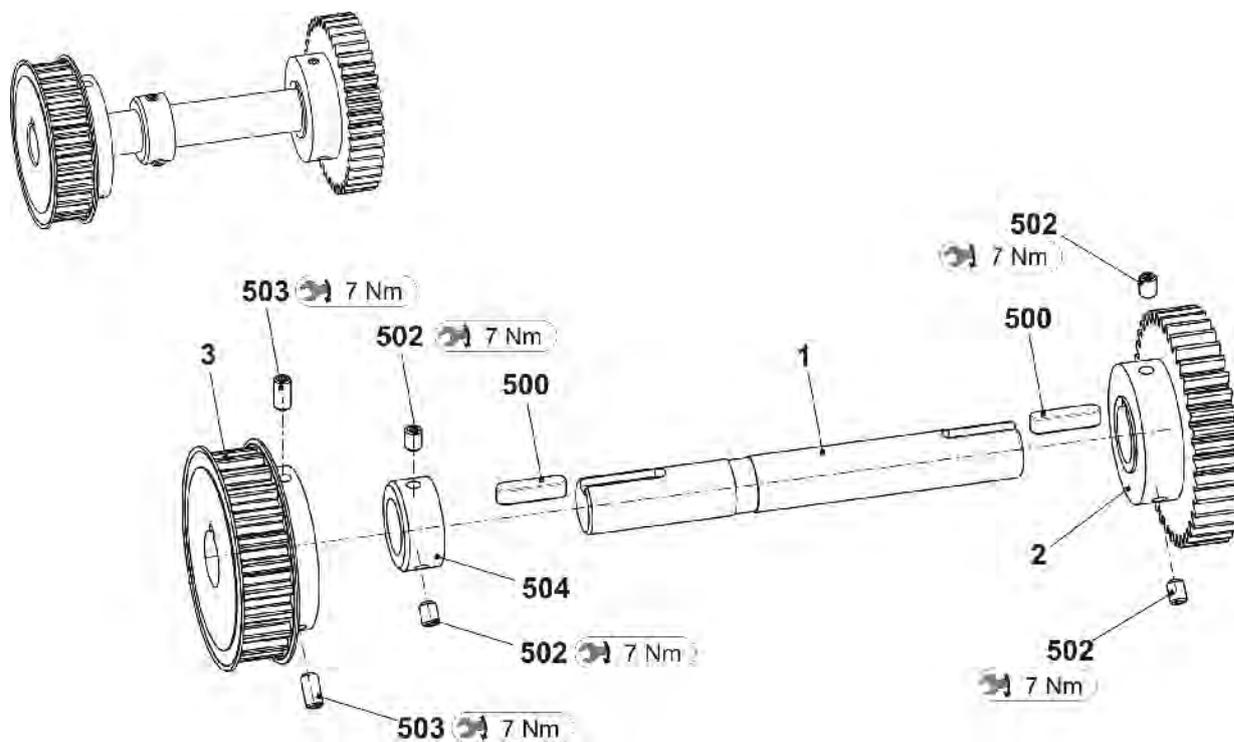


8.1.2.2 Swivel lever comb take-down

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|------------|----------------------------------|----------------|-----|---------------------------|---------|
| Σ L | Swivel lever on the left | 252 859 | 3 | Microswitch | 026 259 |
| 1 | Support | 252 780 | 4 | Plunger | 255 650 |
| 2 | Shaft | 223 994 | 5 | Swivel lever | 239 248 |
| 4 | Plunger | 255 650 | 6 | Bolts | 214 053 |
| 5 | Swivel lever | 239 248 | 7 | Angle | 224 009 |
| 6 | Bolts | 214 053 | 8 | Angle | 238 304 |
| 7 | Eccentric bolt | 255 651 | 9 | Eccentric bolt | 255 651 |
| 500 | Compression spring 1,4x13,6x93 | 023 572 | 500 | Pan-head screw M5x10 | 023 247 |
| 501 | Spring dowel sleeve Iso8752-5x20 | 020 794 | 501 | Spring dowel sleeve 5x20 | 020 794 |
| 502 | Dowel pin5x22 | 023 716 | 502 | Dowel pin5x22 | 023 716 |
| 504 | Shoulder screwM5x29x35 | 251 618 | 503 | Spring dowel sleeve 5x12 | 020 793 |
| 505 | Shoulder screw M5x5,8x6,2 | 023 365 | 504 | Shoulder screwM5x29x35 | 251 618 |
| 507 | Washer 10 | 020 884 | 505 | Shoulder screw M5X5,8X6,2 | 023 365 |
| 508 | Retaining ring | 020 950 | 506 | Cap screw M4x8 | 022 501 |
| 509 | Shoulder screw M5x12x18 | 020 539 | 507 | Washer 10 | 020 884 |
| 511 | Hexagon nut M8-6 | 020 838 | 508 | Retaining ring10x1 | 020 950 |
| Σ R | Swivel lever on the right | 252 858 | 509 | Shoulder screwM5X12X18 | 020 539 |
| 1 | Support | 252 780 | 510 | Cap screw M3x16 | 022 583 |
| 2 | Shaft | 238 339 | 511 | Washer 3 | 020 877 |
| | | | 513 | Hexagon nut M8-6 | 020 838 |

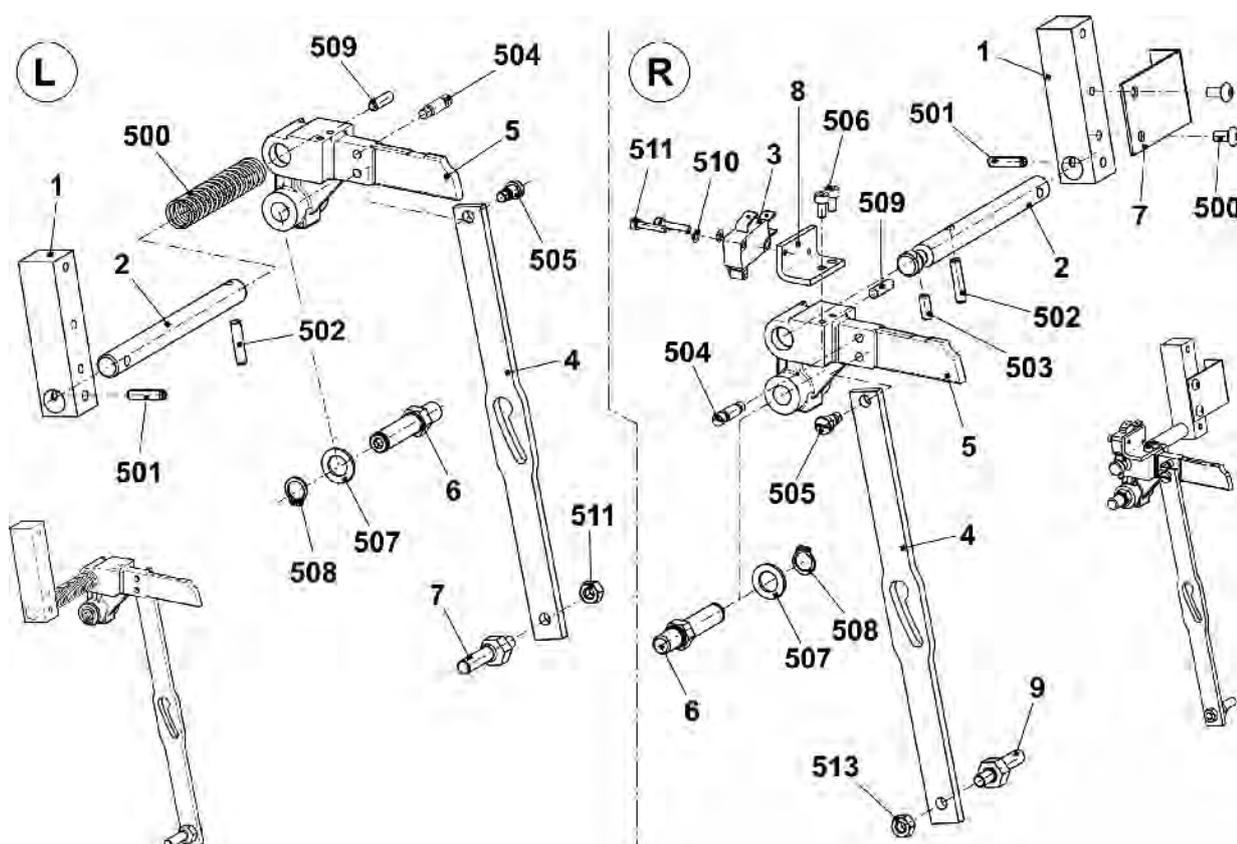


8.1.3 Comb take-down in the middle

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|-------------------------------|---------|
| Σ | Comb take-down in the middle E2,5.2 | 255 289 | | Comb unit E2,5.2 | 244 329 |
| 8 | Flange | 207 695 | 32 | Motor take-down unit complete | 253 803 |
| 9 | Shaft long | 236 875 | 35 | Marking plate | 252 830 |
| 500 | Cap screw M6x16 | 020 135 | 502 | Cap screw M8x25 | 020 142 |
| 501 | Pan-head screw M5x10 | 023 247 | 525 | Serrated lock washer J5,3 | 022 489 |

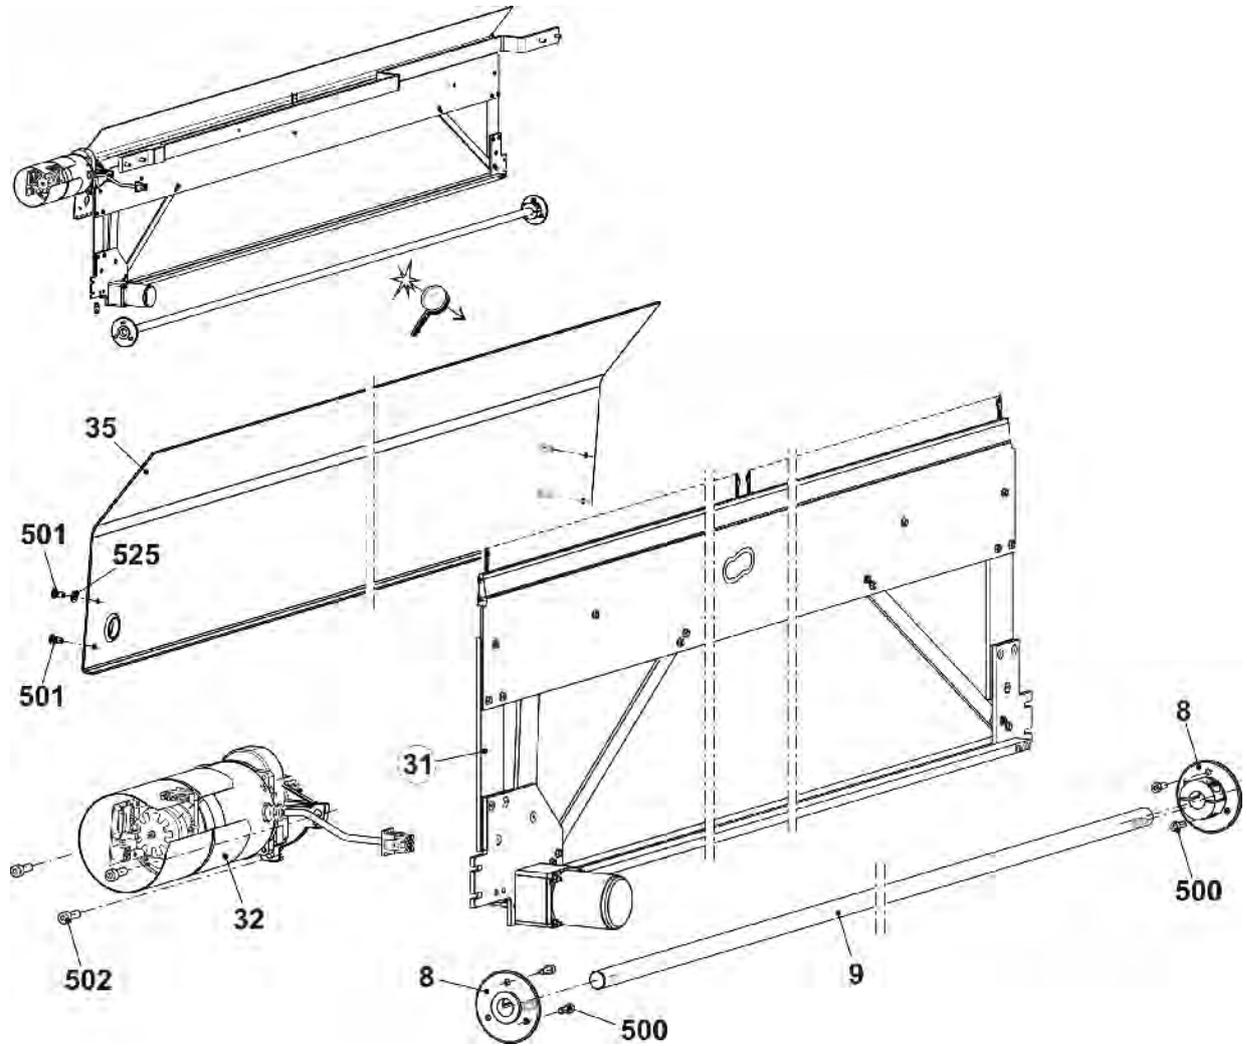


8.1.3.1 Comb unit

| Pos | Designation | ID | Pos | Designation | ID |
|----------|------------------------|----------------|-----|------------------------------|---------|
| Σ | Comb unitE2,5.2 | 244 329 | 11 | Switching lever complete | 240 060 |
| 1 | Hook bedE5 | 237 468 | 12 | Intermediate plate | 218 742 |
| 2 | CloserE3-8 | 230 105 | 13 | Stabilizer | 237 056 |
| 3 | BodyE2,5.2 | 230 093 | 500 | Cap screw M4x50 | 023 102 |
| 4 | Cover rail | 237 065 | 502 | Countersunk head screw M5x12 | 023 340 |
| 5 | Hook sliderE5 | 237 463 | 504 | Hexagon nut M4-8 | 023 046 |
| 6 | Strut | 218 740 | 505 | Hexagon nut M5-04 | 020 854 |
| 7 | Collar bolt complete | 211 036 | 508 | Washer 5-200 | 020 871 |
| 8 | Cross slider | 237 069 | 510 | Cap screw M4x30 | 023 290 |
| 9 | Cover rail | 237 074 | 511 | Circlip | 022 774 |
| 10 | Plunger | 205 678 | 512 | Countersunk screw M5x16 | 023 417 |

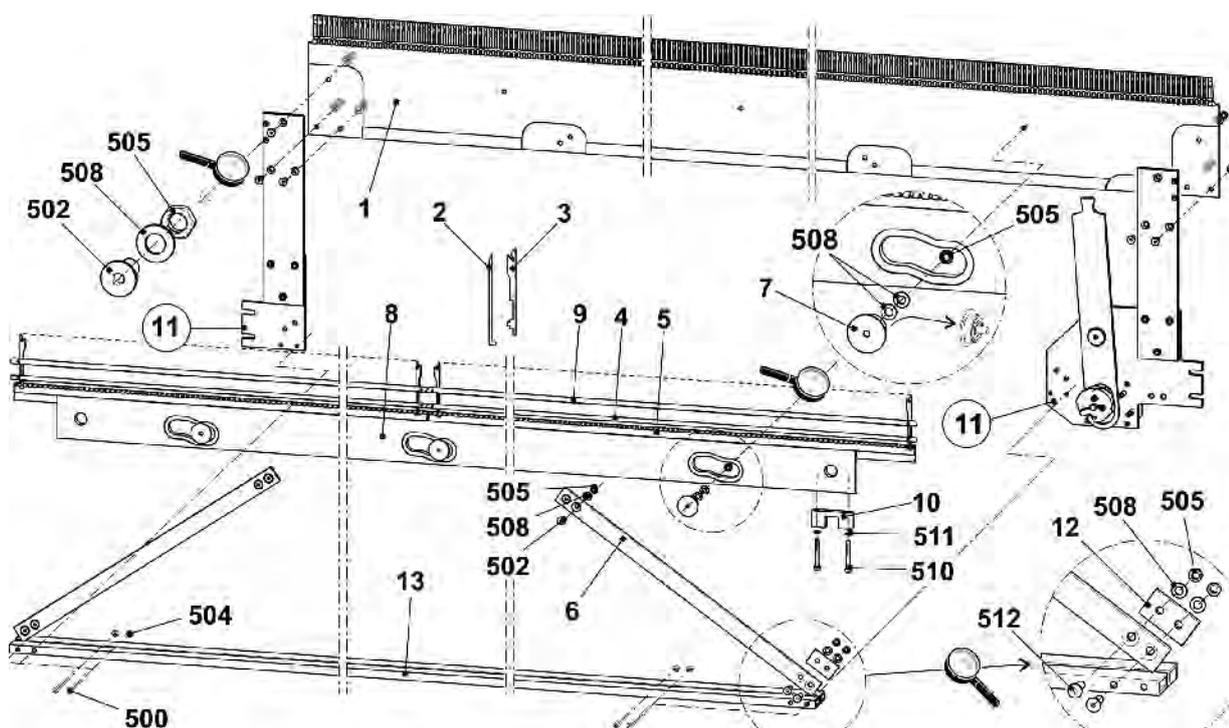


8.1.3.1.1 Switching lever comb take-down

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---------------------------------|----------------|-----|-------------------------|---------|
| Σ | Switching lever complete | 240 060 | 500 | Cap screw M3x25 | 023 093 |
| 1 | Screw-on plate on the right | 240 058 | 501 | Cap screw M4x20 | 023 171 |
| 2 | Screw-on plate on the left | 240 059 | 502 | Cap screw M4x16 | 023 123 |
| 3 | Lever | 215 228 | 504 | Pan-head screw M6x12 | 023 435 |
| 4 | Bearing bolt | 215 675 | 505 | Pan-head screw M5x16 | 023 417 |
| 5 | Eccentric | 205 681 | 506 | Shim ring 16x22x2 | 023 449 |
| 6 | Tension cam | 215 287 | 507 | Shim ring 10x16x1 | 023 260 |
| 13 | Intermediate plate | 213 980 | 510 | Hexagon nut M5 | 020 854 |
| 14 | Holding plate | 218 977 | 511 | Collar bearing 10x16x22 | 022 841 |
| 15 | Motor comb hook with 2 phases | 244 635 | 515 | Threaded spacer | 210 488 |

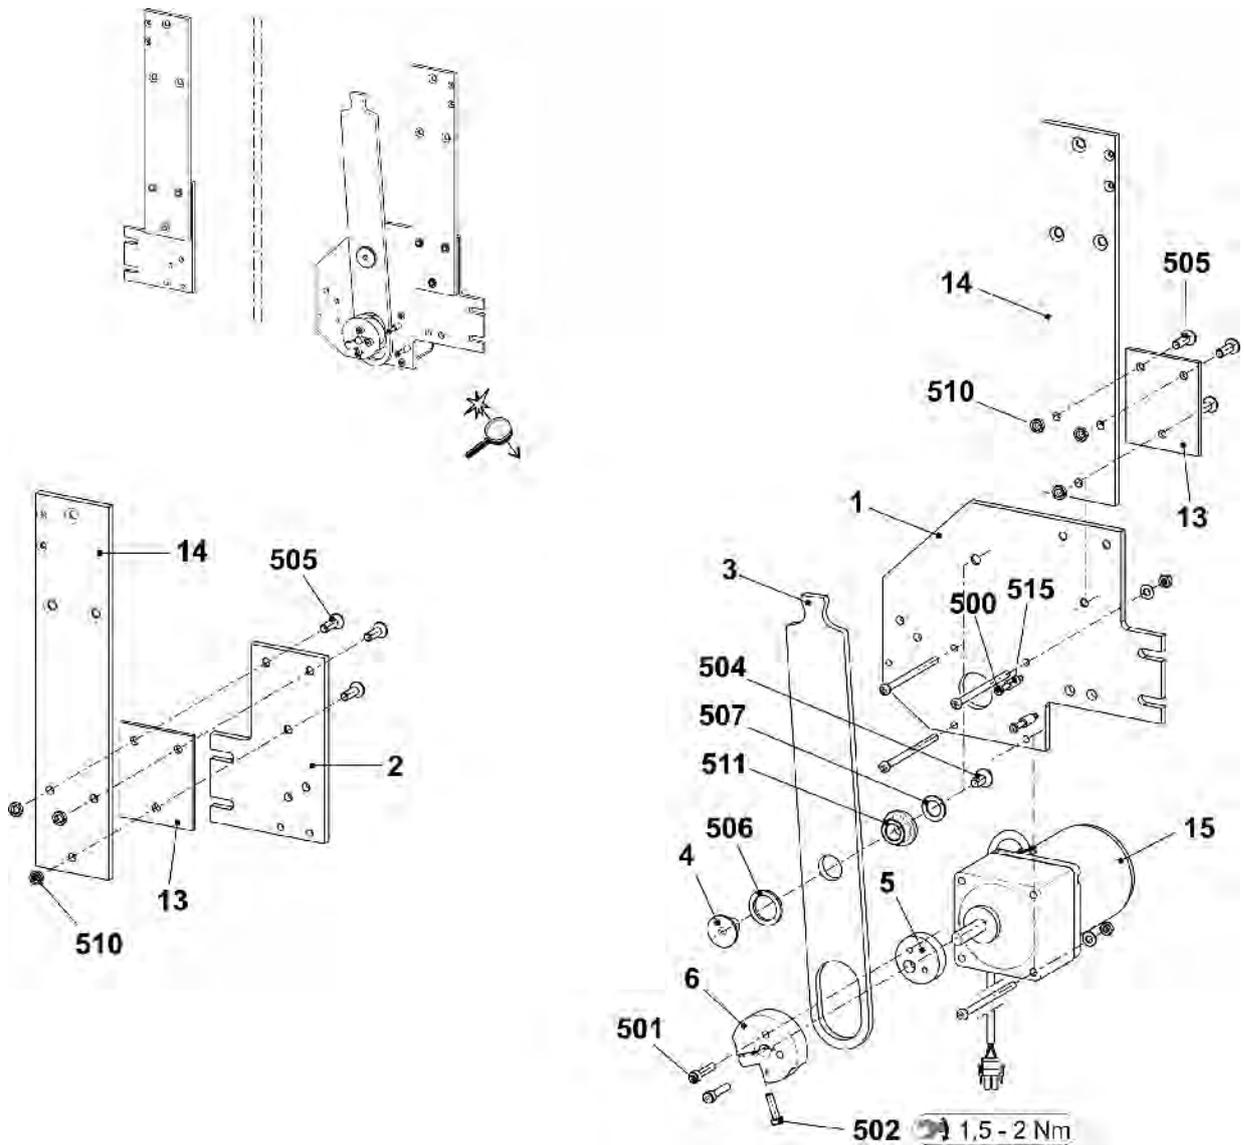


8.1.3.2 Impulse sensor and motor

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--------------------------------------|----------------|------|-----------------|---------|
| Σ | Motor take-down unit complete | 253 803 | | | |
| 1 | Asynchronous torque motor (complete) | 257 438 | 500 | Cap screw M4x8 | 022 501 |
| 2 | Impulse disc | 208 716 | 501 | Washer 4-200 | 020 879 |
| 3 | Light barrier take-down + comb | 300 744 | 502 | Circlip | 022 774 |
| 4 | Cover | 212 262 | 503 | Shim ring 4x8x1 | 023 369 |
| 5 | Gear wheel | 241 668 | 510* | Cap screw M8x25 | 020 142 |

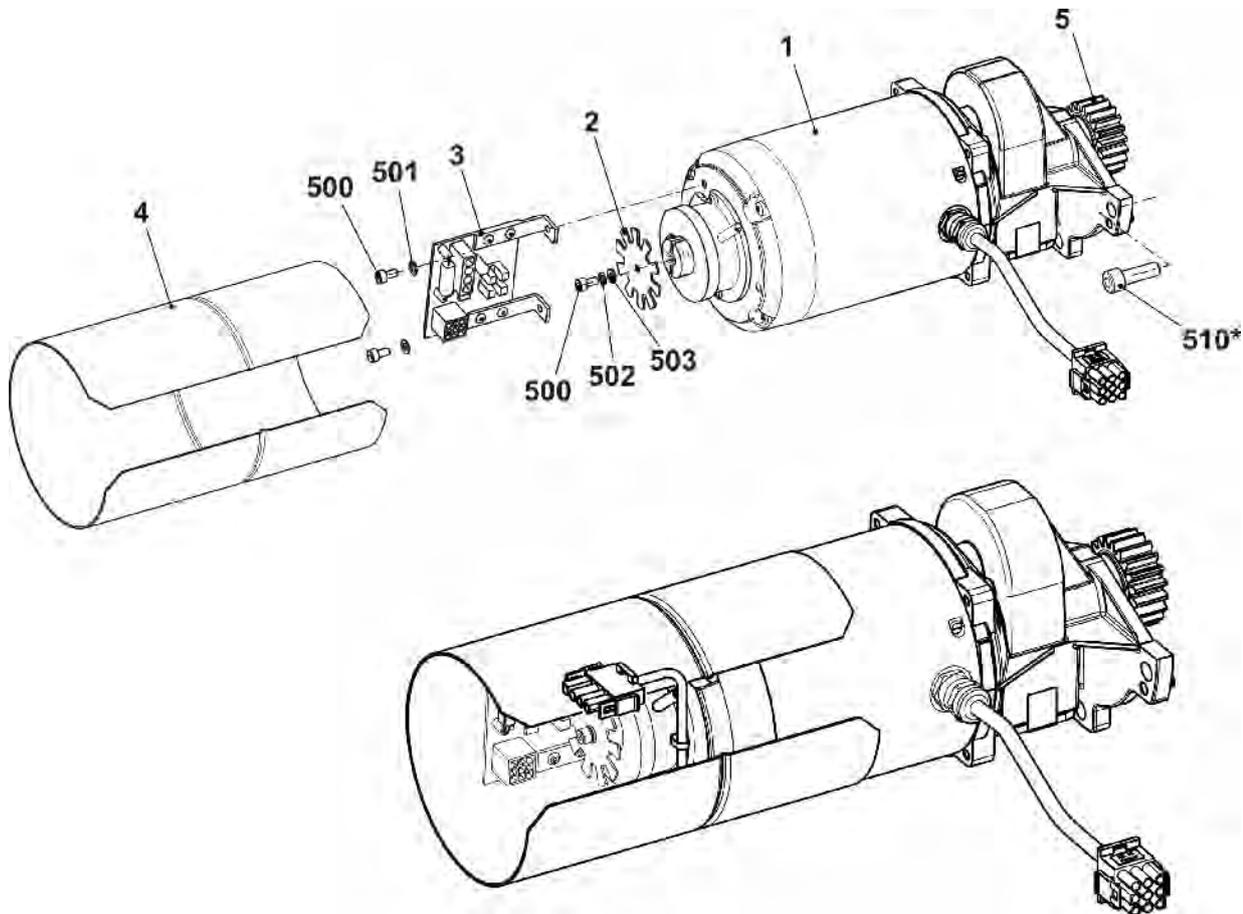


9 Yarn delivery device

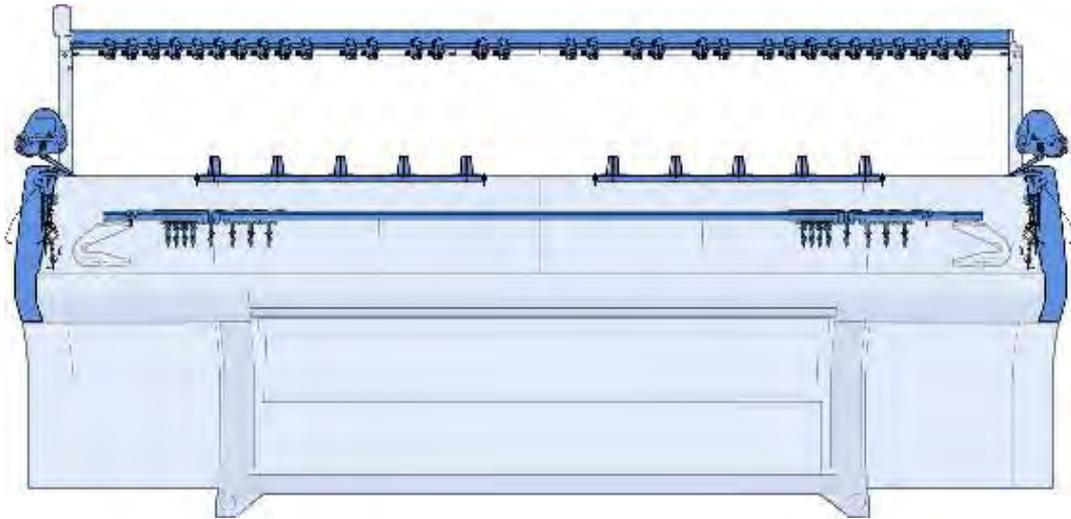


9.1 Yarn guide system with 32 FKE

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|------------------------------|----------------|-----|--------------------------|---------|
| Σ | Yarn guide device 32 FKE 84" | 242 991 | | | |
| 1 | Straps | 243 112 | 13 | Support on the left | 243 602 |
| 2 | Yarn control device(FKE) | 237 124 | 14 | Support on the right | 243 603 |
| 3 | Connection cable FKE-3 84" | 240 349 | 500 | Serrated lock washer | 023 388 |
| 4 | Yarn guide bar | 236 932 | 501 | Self-locking screw M6x12 | 023 415 |
| 5 | Support on the right | 243 601 | 502 | Screw M6x20 | 023 721 |
| 6 | Support on the left | 243 600 | 503 | Serrated nut M6-10 | 023 414 |
| 7 | Straps | 239 295 | 505 | Washer 6 | 022 431 |
| 8 | Yarn guide bracket complete | 241 581 | 506 | Pan-head screw M8x16 | 023 113 |
| 9 | Slot nut | 228 851 | 507 | Square nut M8 | 023 269 |

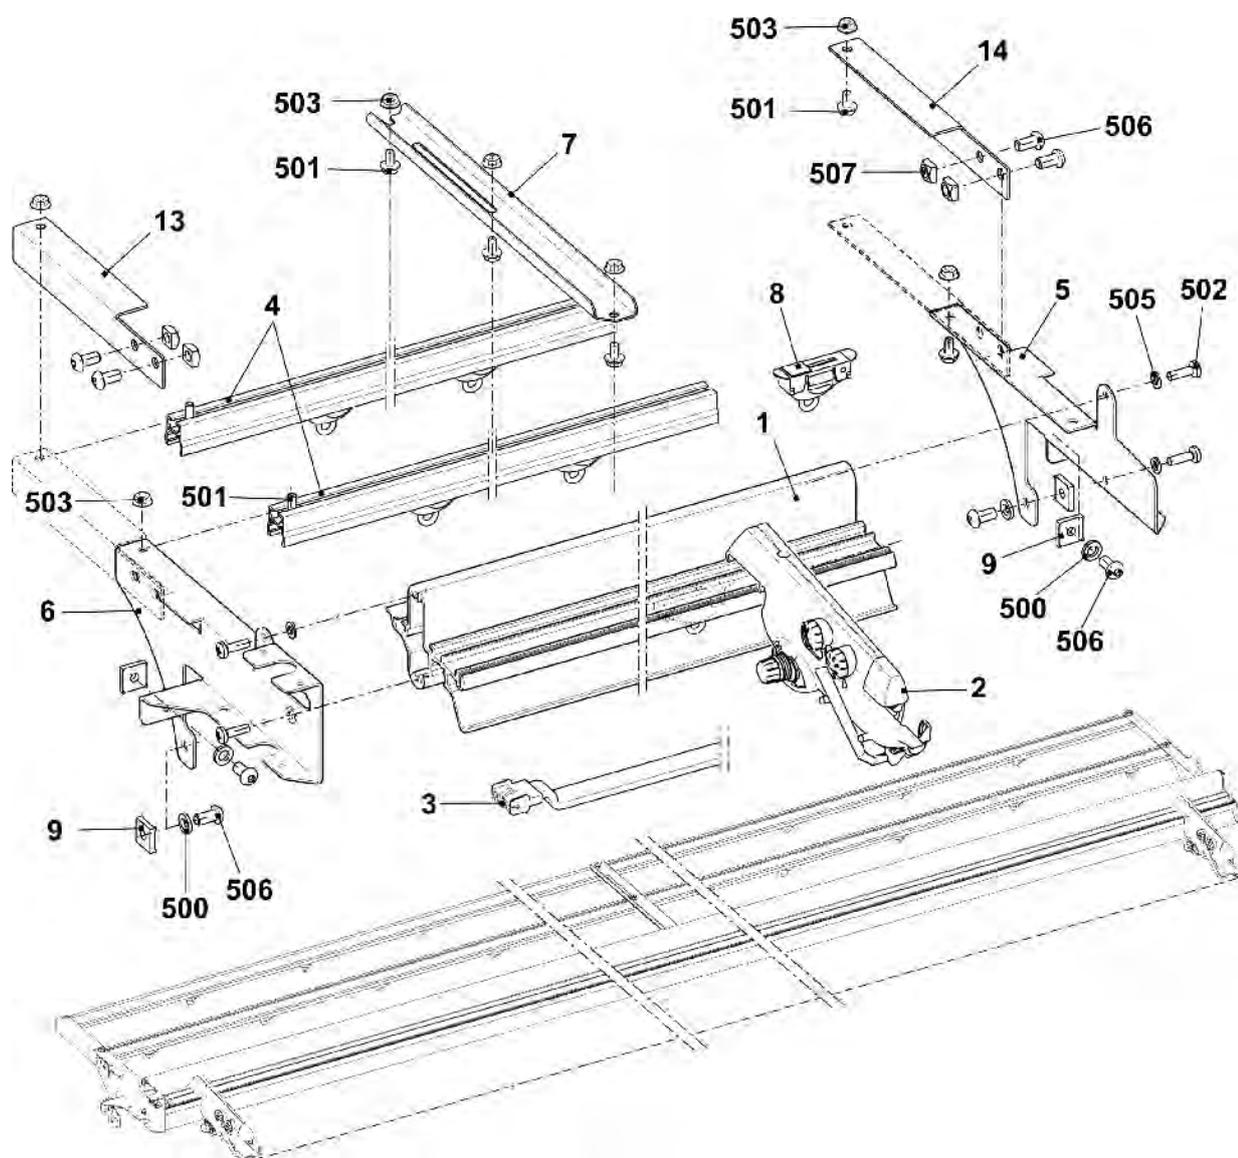


9.2 Left yarn guide

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|-------------------------|---------|
| Σ | Safety door on the left complete E3-4 | 267 342 | | | |
| 4 | Shaft | 241 318 | 500 | Ceramic eyelet | 240 640 |
| 5 | Yarn tensioner on the left complete E3-4 | 265 386 | 504 | Pan head screw M5x16 | 265 377 |
| 6 | Wire bow on the left | 265 052 | 505 | Washer 5,3x18x1,5 | 020 909 |
| 7 | Yarn deflector on the left complete | 267 340 | 506 | Screw 6x20 | 265 379 |
| 8 | Connection cable yarn tensioner okc | 240 808 | 507 | Flat connector 2x45° M6 | 243 117 |

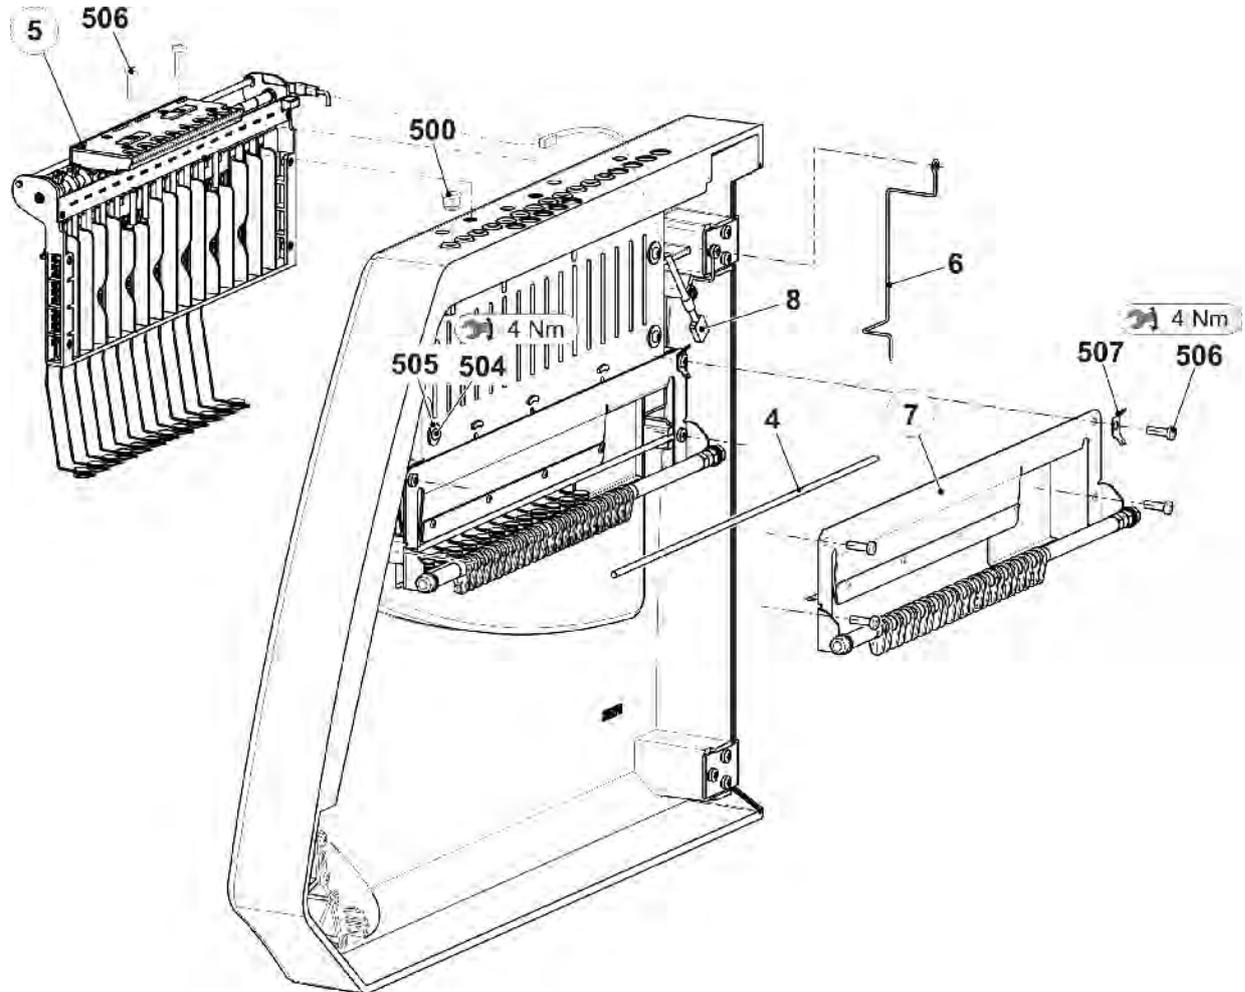


9.2.1 Left yarn tensioner

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|---------------------------------|---------|
| Σ | Yarn tensioner on the left complete E3-4 | 265 386 | | | |
| 1 | Card yarn tensioner 16-fold on the left | 241 345 | 8 | Grounding plate of tension axle | 243 121 |
| 2 | Tension axle on the left complete E3-4 | 265 388 | 9 | Ground cable yarn tensioner okc | 243 105 |
| 3 | Housing | 241 367 | 500 | Screw KB 30x8 | 236 228 |
| 4 | Slider | 241 694 | 501 | Circlip | 021 022 |
| 5 | Stop point | 241 368 | 502 | Tension spring 5,6x0,63x53,7 | 023 722 |
| 6 | Border | 242 268 | 503 | Circlip | 021 020 |
| 7 | Spacer | 242 048 | 504 | Countersunk screw M4x10 | 241 914 |

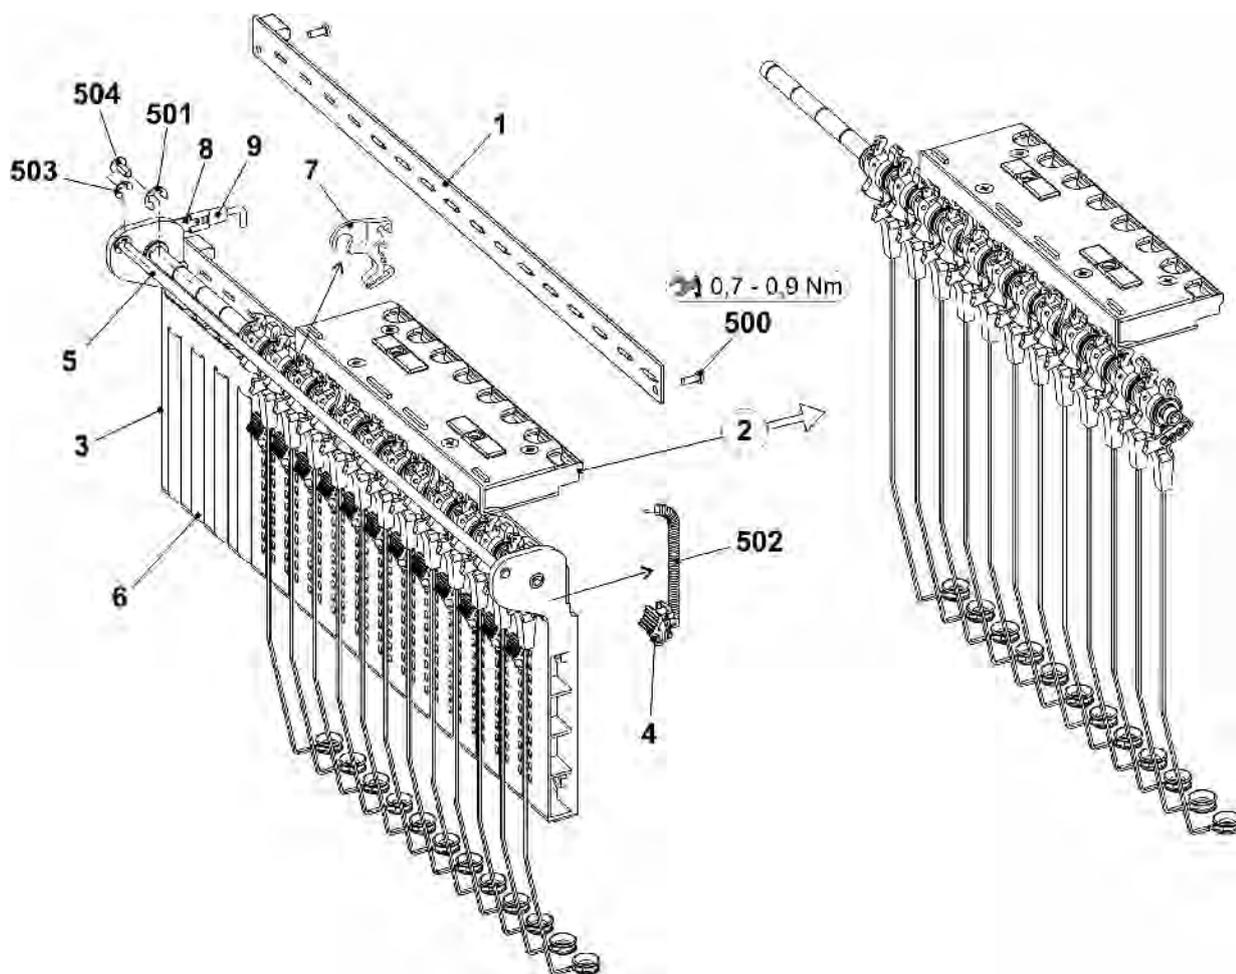


9.2.2 Left tension axle

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|-----|---|---------|
| Σ | Tension axle on the left complete E3-4 | 265 388 | 53 | Sheet metal at the bottom (housing AKF) | 240 719 |
| 1 | Axle | 243 107 | 54 | Lever AKF | 238 692 |
| 2 | Tension arm pre-assembled E3-8 | 242 770 | 55 | Pressure piece AKF | 238 690 |
| 6 | Wire bow | 238 694 | 56 | Slider AKF | 238 691 |
| 500 | Shim ring 8x14x0,5 | 023 501 | 57 | Wire bow | 238 694 |
| 501 | Circlip | 021 022 | 58 | Wire | 237 940 |
| 502 | Grooved pin 2x6 | 243 172 | 551 | Screw KB 35x12 | 237 681 |
| 5 | Thread clamp AKF | 238 695 | 552 | Screw KB 40x8 | 236 227 |
| 51 | Housing AKF | 238 689 | 553 | Compression spring 0,30x4,50x18,50 | 241 437 |
| 52 | Cover AKF | 237 926 | 554 | Grooved pin 2x6 | 243 172 |

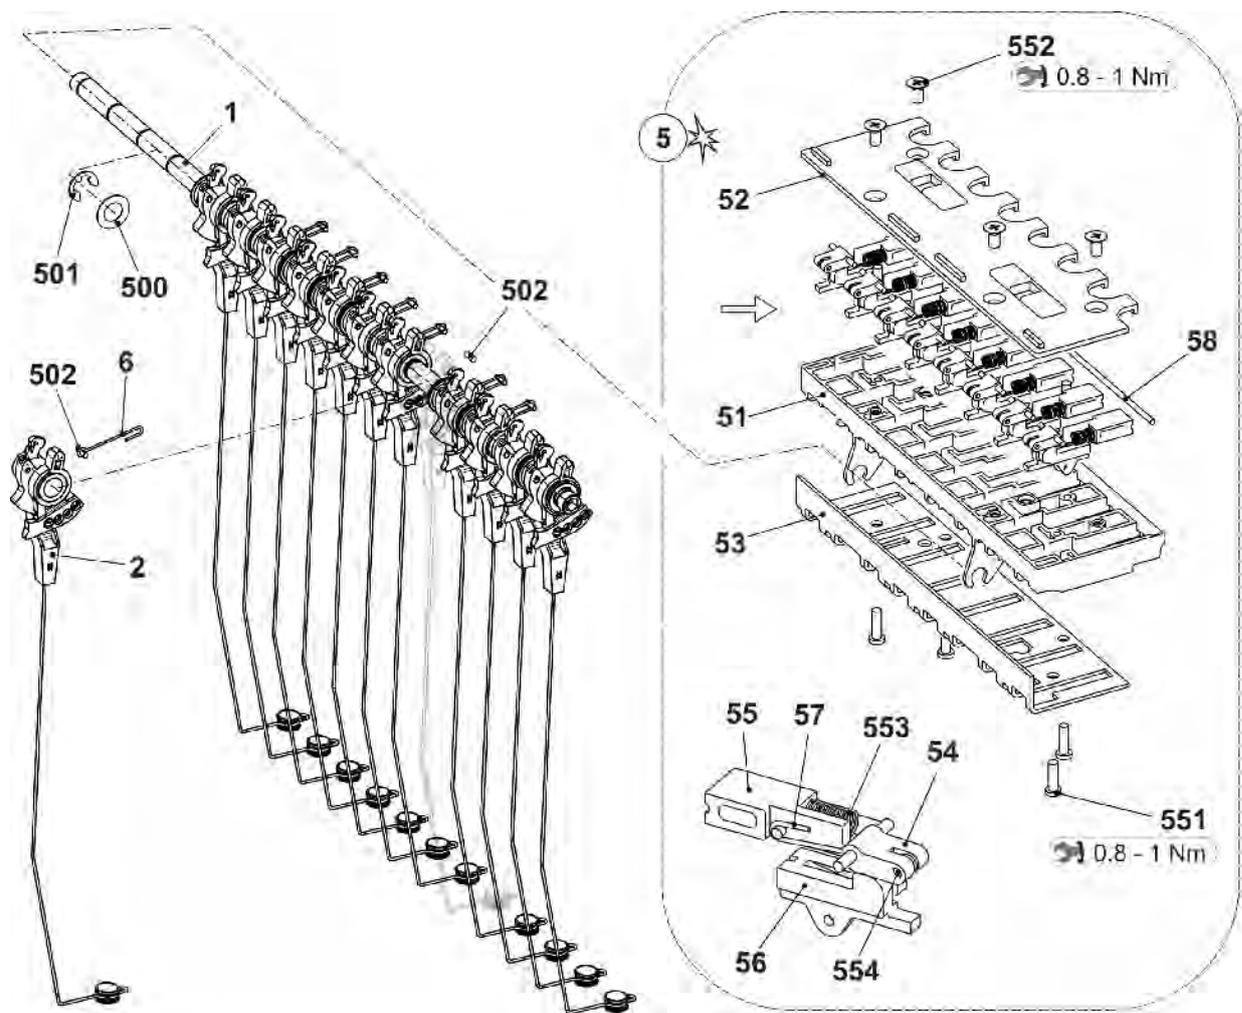


9.2.3 Yarn deflector on the left

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|--------------------------|---------|
| Σ | Yarn deflector on the left complete | 267 340 | 5 | Stop sleeve | 266 433 |
| 1 | Axle | 265 284 | 6 | Distance bushing | 264 997 |
| 2 | Threaded spacer | 267 346 | 7 | Stop plate left complete | 265 276 |
| 3 | Threaded spacer | 267 347 | 500 | Washer 8 | 022 854 |
| 4 | Yarn Carriers MH10 E3-4 | 265 606 | 501 | Hexagon nut M8-6 | 261 011 |

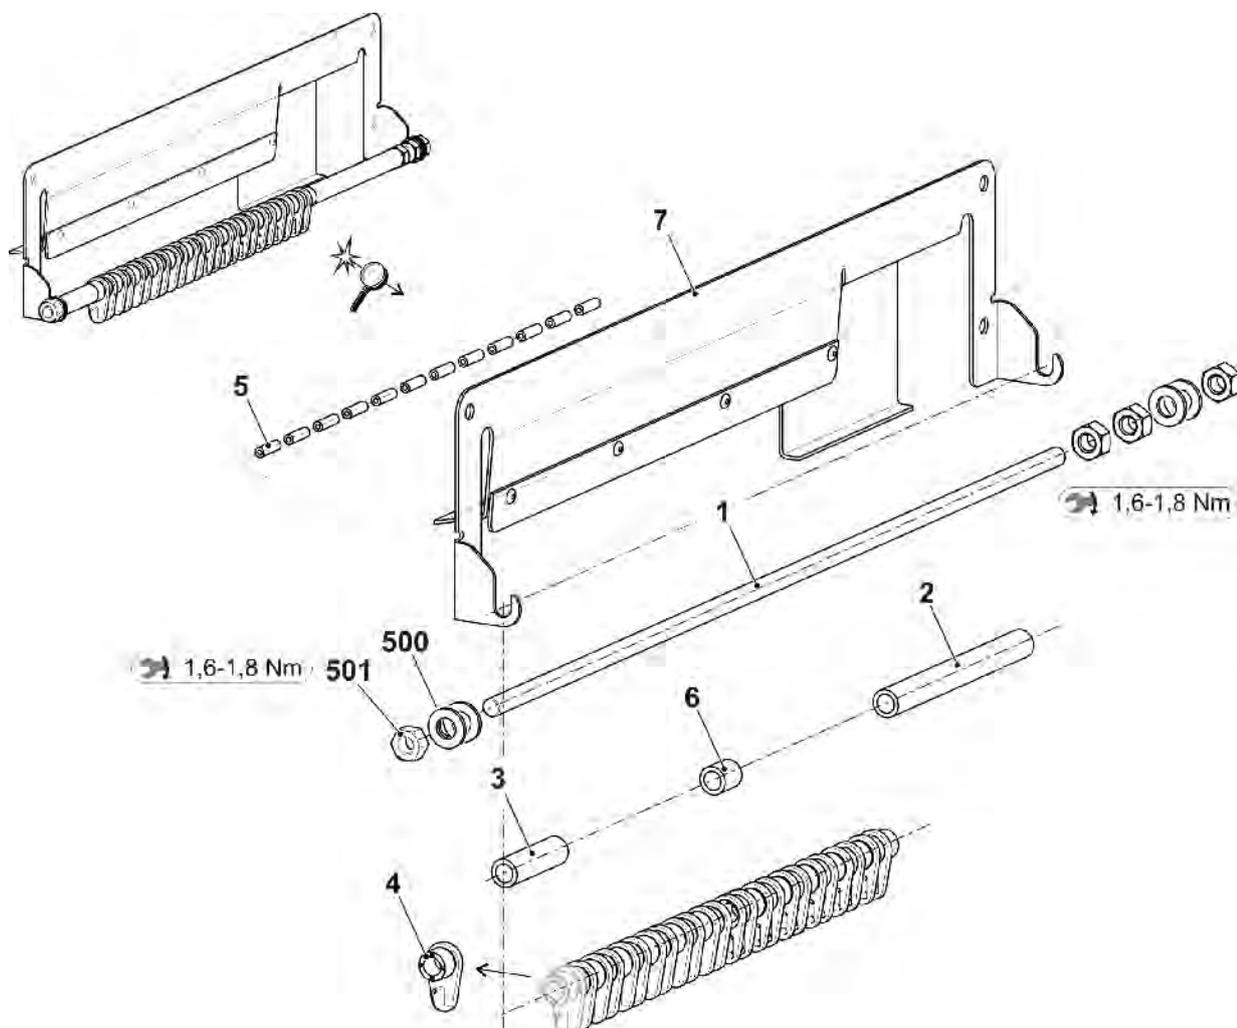


9.3 Right yarn guide

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---|----------------|-----|-------------------------|---------|
| Σ | Safety door on the right complete E3-5 | 267 343 | | | |
| 4 | Shaft | 241 318 | 500 | Ceramic eyelet | 240 640 |
| 5 | Yarn tensioner on the right complete E3-5 | 265 387 | 504 | Pan head screw M5x16 | 265 377 |
| 6 | Wire bow on the right | 265 053 | 505 | Washer 5,3x18x1,5 | 020 909 |
| 7 | Yarn deflector on the right complete E3-5 | 267 341 | 506 | Screw 6x20 | 265 379 |
| 8 | Connection cable yarn tensioner okc | 240 808 | 507 | Flat connector 2x45° M6 | 243 117 |

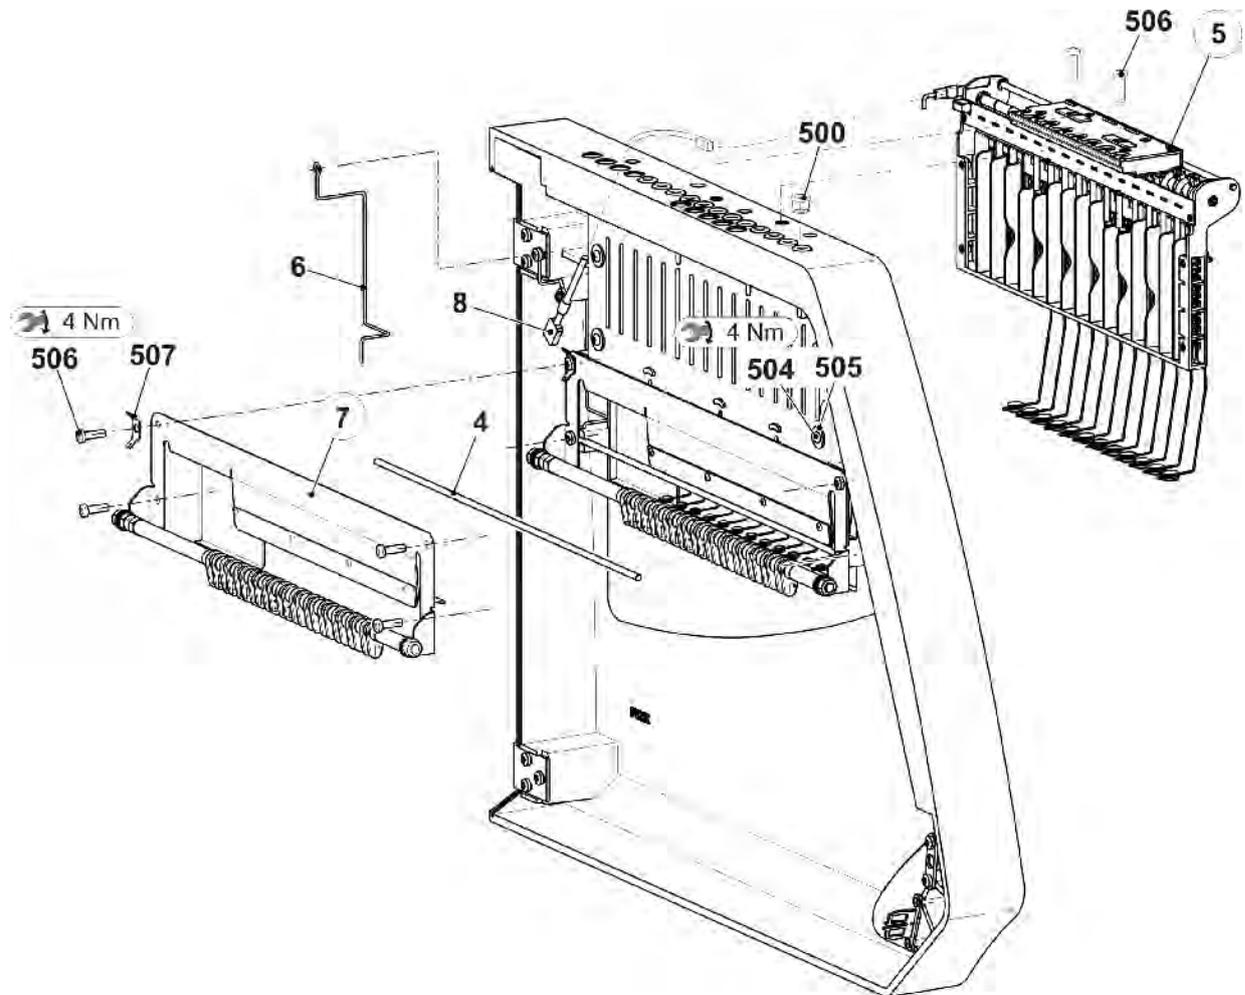


9.3.1 Right yarn tensioner

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|---------------------------------|---------|
| Σ | Yarn tensioner on the right E3-4 | 265 387 | | | |
| 1 | Card yarn tensioner 16-fold on the right | 241 346 | 8 | Grounding plate of tension axle | 243 121 |
| 2 | Tension axle on the right completeE3-4 | 265 389 | 9 | Ground cable yarn tensioner OKC | 243 105 |
| 3 | Housing | 241 367 | 500 | Screw KB 30x8 | 236 228 |
| 4 | Slider | 241 694 | 501 | Circlip | 021 022 |
| 5 | Stop point | 241 368 | 502 | Tension spring 5,6x0,63x53,7 | 023 722 |
| 6 | Border | 242 268 | 503 | Circlip | 021 020 |
| 7 | Spacer | 242 048 | 504 | Countersunk screw M4x10 | 241 914 |

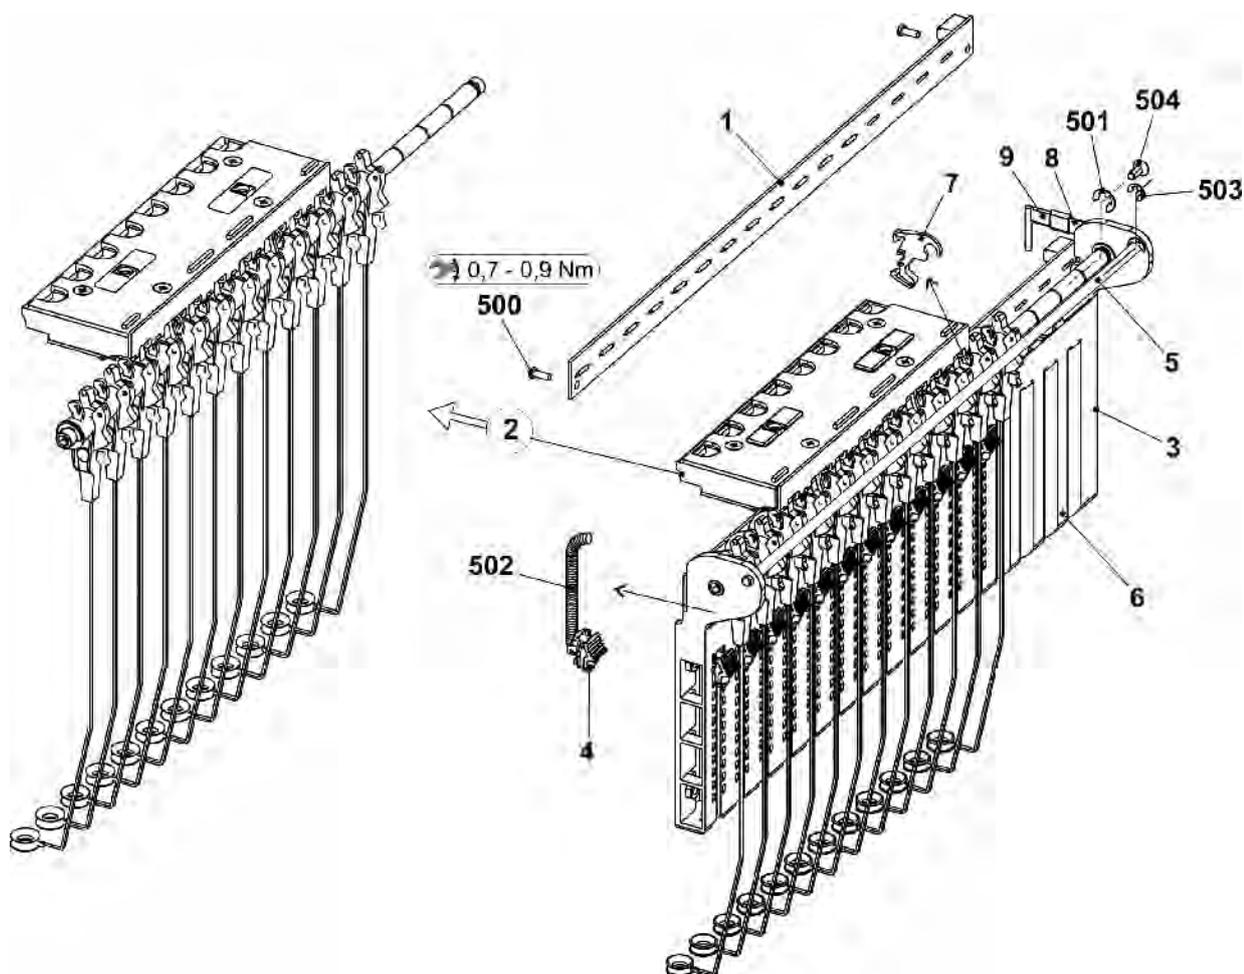


9.3.2 Right tension axle

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|-----|---|---------|
| Σ | Tension axle on the right complete E3-4 | 265 389 | 53 | Sheet metal at the bottom (housing AKF) | 240 719 |
| 1 | Axle | 243 107 | 54 | Lever AKF | 238 692 |
| 2 | Tension arm pre-assembled | 242 770 | 55 | Pressure piece AKF | 238 690 |
| 6 | Wire bow | 238 694 | 56 | SliderAKF | 238 691 |
| 500 | Shim ring 8x14x0,5 | 023 501 | 57 | Wire bow | 238 694 |
| 501 | Circlip | 021 022 | 58 | Wire | 237 940 |
| 502 | Grooved pin 2x6 | 243 172 | 551 | Screw KB 35x12 | 237 681 |
| 5 | Thread clamp AKF | 238 695 | 552 | Screw KB 40x8 | 236 227 |
| 51 | HousingAKF | 238 689 | 553 | Compression spring 0,30x4,50x18,50 | 241 437 |
| 52 | Cover AKF | 237 926 | 554 | Grooved pin 2x6 | 243 172 |

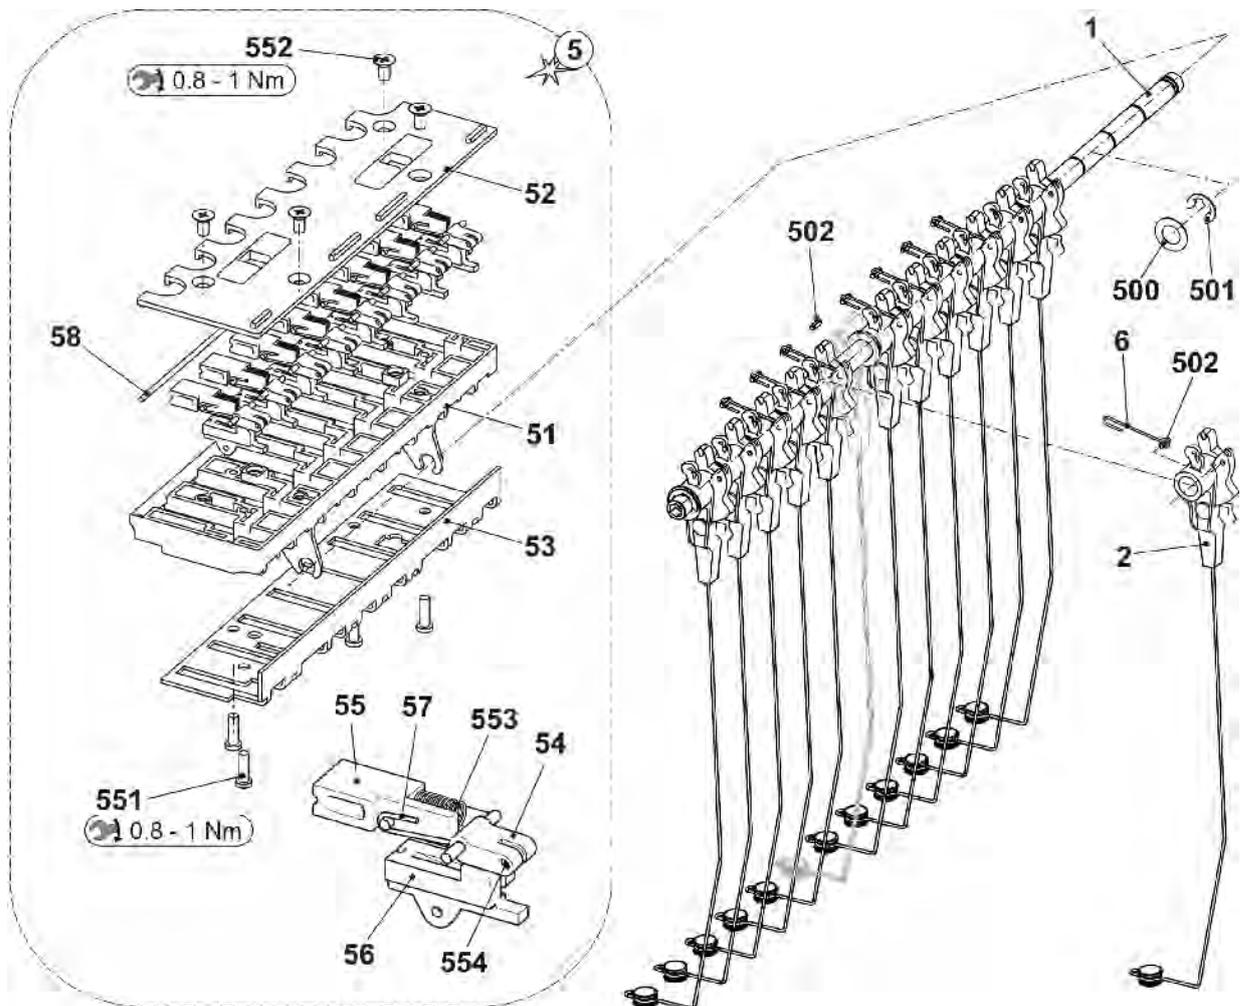


9.3.3 Yarn deflector on the right complete

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|----------------|-----|---------------------------|---------|
| Σ | Yarn deflector on the right complete E3-4 | 267 341 | 5 | Stop sleeve | 266 433 |
| 1 | Axle | 265 284 | 6 | Distance bushing | 264 997 |
| 2 | Threaded spacer E3-4 | 267 346 | 7 | Stop plate right complete | 265 277 |
| 3 | Threaded spacer E3-4 | 267 347 | 500 | Washer 8 | 022 854 |
| 4 | Yarn Carriers E3-4 | 265 606 | 501 | Hexagon nut M8-6 | 261 011 |

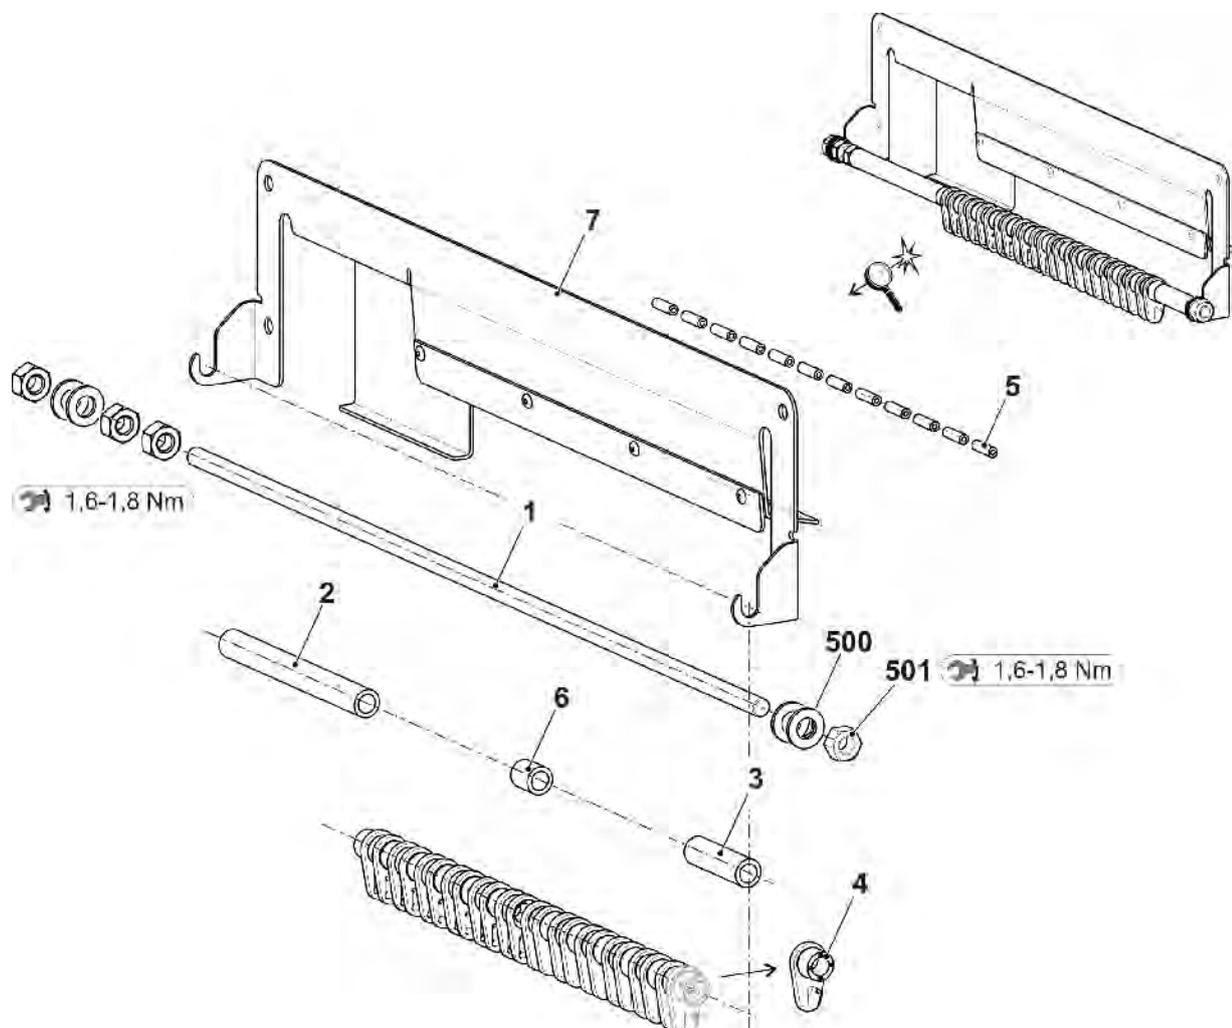


9.4 Carriage of yarn carrier

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------------|----------------|-------|------------------------------|---------|
| Σ | Yarn guide complete | 262 423 | 1-4/a | FF carriage complete | 241 887 |
| 1 | FF carriage 1+8 complete E3-4m.3L | 217 486 | 1b | FF bow 1+8 complete E3-4 | 216 266 |
| 2 | FF carriage 2+7 complete E3-4m.3L | 262 386 | 2b | FF bow 2+7 complete E3-4m.3L | 262 383 |
| 3 | FF carriage 3+6 complete E3-4m.3L | 262 387 | 3b | FF bow 3+6 complete E3-4m.3L | 262 384 |
| 4 | FF carriage 4+5 complete E3-4m.3L | 262 388 | 4b | FF bow 4+5 complete E3-4m.3L | 262 385 |
| 5 | Limiter on the left | 244 099 | 2-4/c | Shim | 213 035 |
| 6 | Limiter on the right | 244 098 | A | Yarn guide star | 202 146 |
| 7 | Slider with eyelet | 230 709 | B | Yarn guide star complete | 262 036 |
| 500 | Hexagon screw M5x10 | 020 351 | 510 | Pan-head screw M3x12 | 023 033 |
| 501 | Washer 8 | 259 666 | 520 | Pan-head screw M3x10 | 023 032 |

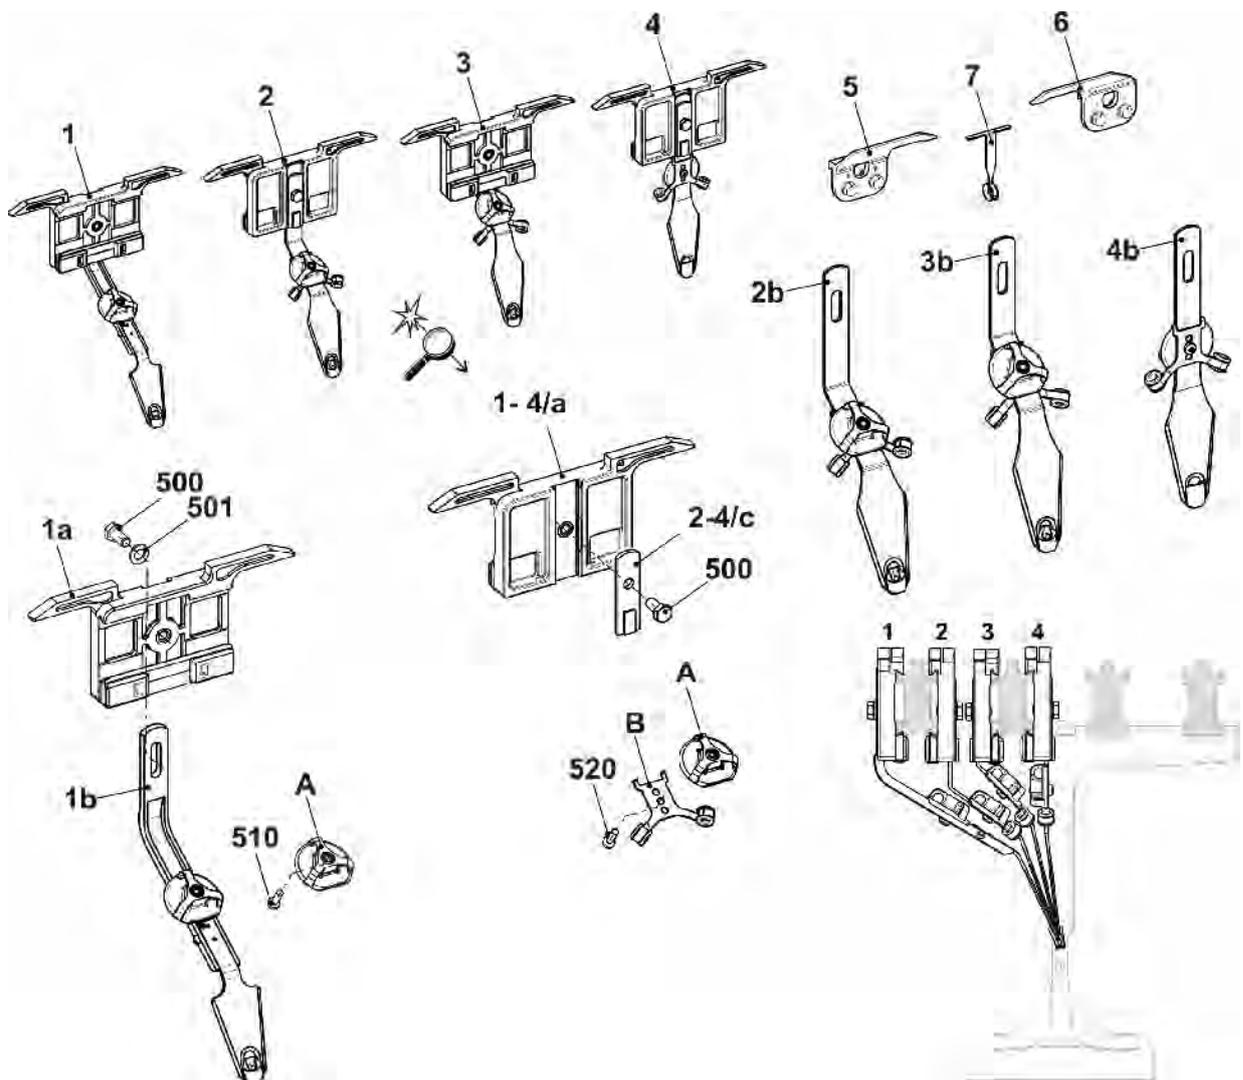


9.5 Bar unit

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-------------------------|----------------|-----|----------------------|---------|
| Σ | Bar unit | 267 419 | 540 | Pan head screw M6x10 | 023 183 |
| 1 | Yarn carrier rail | 255 467 | 541 | Cap screw M8x90 | 022 698 |
| 3 | FF support | 253 674 | 542 | Washer 8 | 022 854 |
| 4 | Yarn deflector complete | 267 378 | 543 | O-ring 8x3 | 022 858 |
| 4a | Holding angle | 262 463 | 500 | Cap screw M6x35 | 020 139 |
| 4b | Bolts | 262 462 | 501 | Pan head screw M6x10 | 023 183 |
| 4c | Yarn carrier MH 10 | 265 606 | 900 | Cap screw M8x25 | 020 142 |

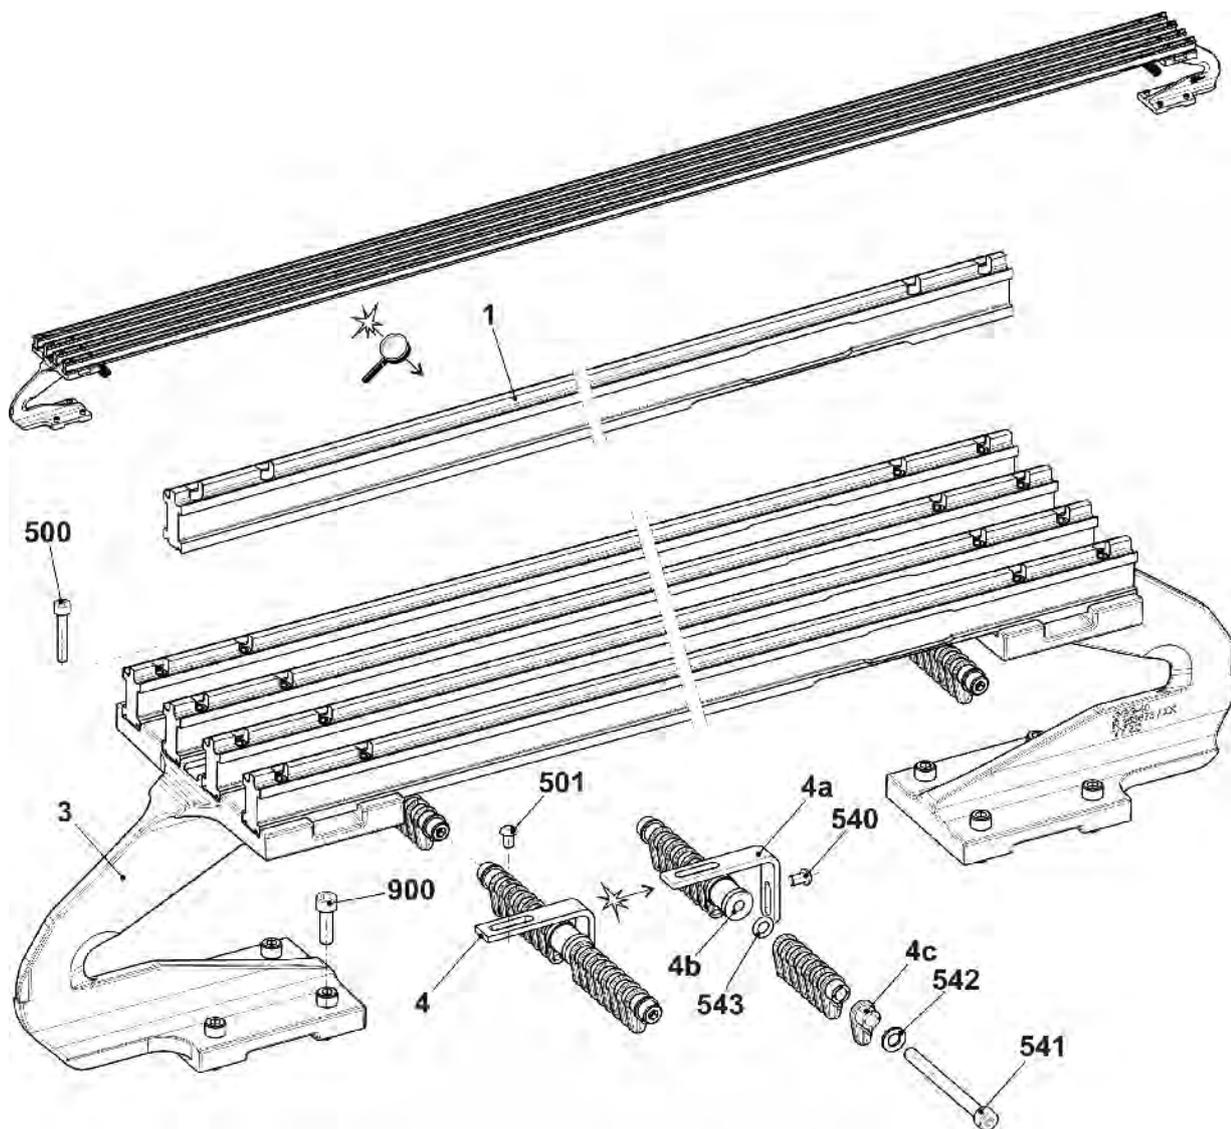


9.6 Bobbin board

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--------------------------------|----------------|-----|-----------------------------|---------|
| Σ | Table complete 84" | 240 681 | | | |
| 1 | Table | 251 246 | 37 | Cable USB extension 84 okc | 243 070 |
| 4 | Support element | 228 594 | 40 | Slot nut | 228 851 |
| 7 | Magnet switch safety door | 219 983 | 42 | Support of left feed wheel | 264 453 |
| 8 | Magnet switch safety door | 220 159 | 43 | Support of right feed wheel | 264 454 |
| 10 | Guide rail at the top complete | 264 894 | 504 | Pan head screw M8x16 | 023 113 |
| 14 | Lamp LED complete | 264 767 | 516 | Pan head screw M3x8 | 023 251 |
| 15 | Positioning pin | 204 819 | 518 | Pan head screw M8x18 | 251 331 |
| 20 | Energy chain display 38 links | 253 888 | 519 | Washer | 020 901 |

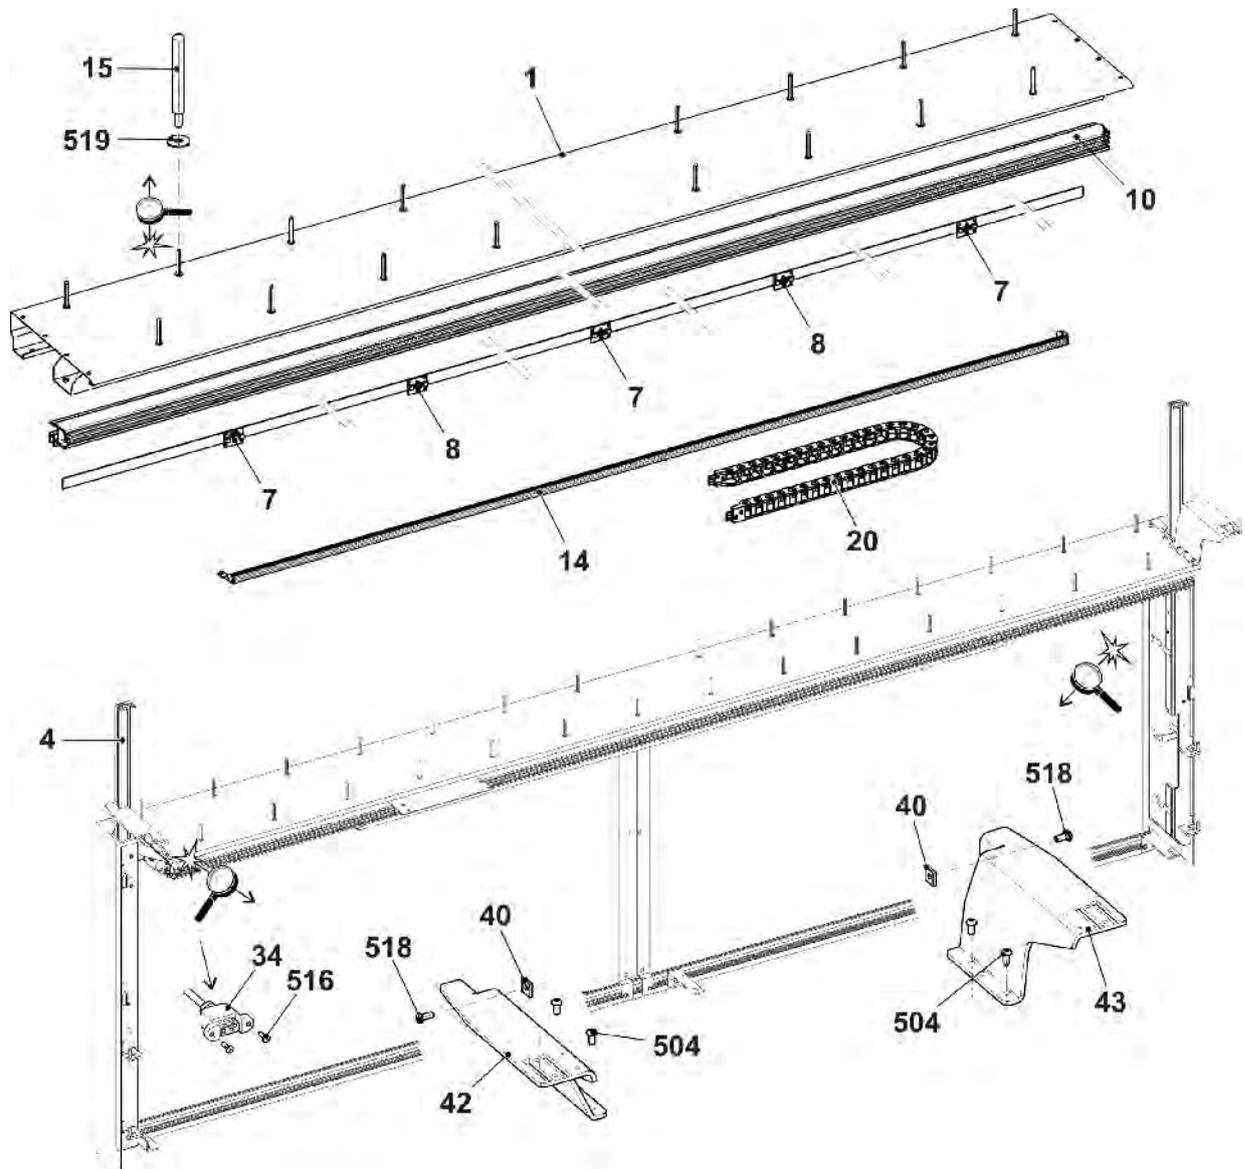


9.7 Left friction feed wheel

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|-----------------------|---------|
| Σ | Friction feed wheel on the left | 264 324 | 13 | Bush | 221 391 |
| 1 | Housing | 240 368 | 14 | V-ribbed belt pulley | 221 268 |
| 2 | Friction roller complete | 231 704 | 15 | Ribbed V-belt V3J 406 | 206 927 |
| 3 | Three-phase AC motor complete | 219 800 | 16 | Rod | 221 319 |
| 3a | Microswitch | 008 664 | 18 | Cover | 230 758 |
| 4 | Deflector complete 8-fold | 250 089 | 19 | Knurled screw | 223 361 |
| 4a | Support rail | 250 055 | 20 | Rod | 230 658 |
| 4b | Eyelet holder complete | 250 077 | 21 | Grounding plate | 256 622 |
| 540 | Spring dowel sleeve 4x16 | 020 783 | 500 | Screw KB30x8 | 236 228 |
| 541 | Hexagon nut M8-8 | 022 843 | 501 | Screw 20x10 | 265 445 |
| 7 | Yarn guide rod complete | 239 431 | 503 | Cap screw M5x12 | 020 132 |
| 570 | Eyelet 8 | 021 504 | 504 | Cap screw M5x16 | 022 726 |
| 8 | Stop motion rail on the right complete | 230 690 | 506 | Screw KB 40x14 | 241 358 |
| 9 | Stop motion rail on the left complete with eyelets | 230 683 | 508 | Dowel pin3M6x40 | 023 528 |
| 9b | Eyelet | 230 662 | 509 | Washer 5,3x22x2,5 | 023 219 |
| 590 | Slide bearing | 023 627 | 510 | Washer 5 | 020 901 |
| 591 | Guide piece | 259 453 | 512 | Shim ring 15x21x1 | 023 216 |
| 11 | Bracket | 221 316 | 514 | Washer 4,3x18x1,5 | 020 908 |
| 12 | Cover | 251 098 | 517 | Pan-head screw M4x8 | 023 579 |

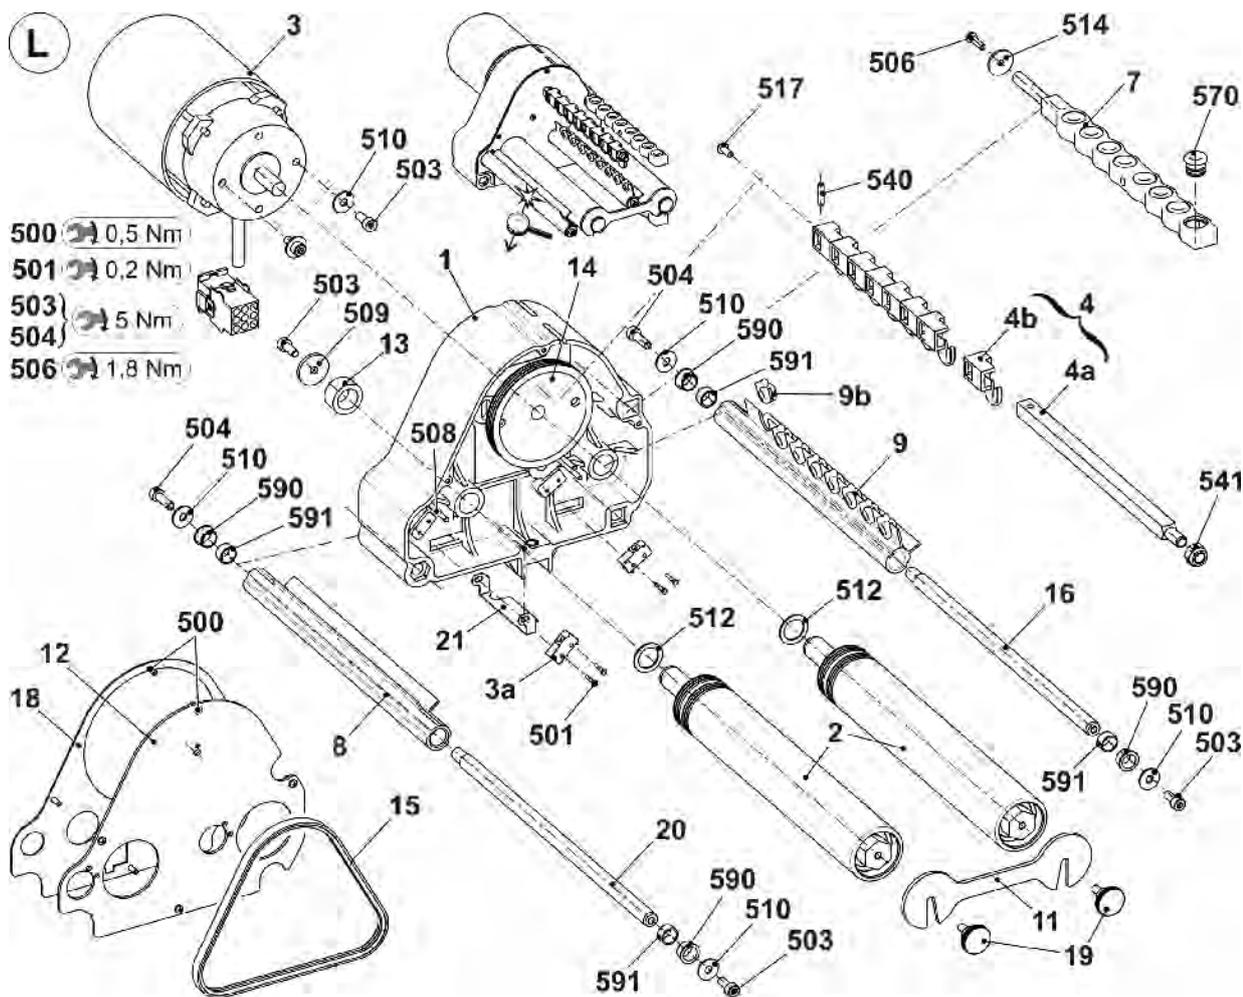


9.8 Right friction feed wheel

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|-----------------------|---------|
| Σ | Friction feed wheel on the right | 264 325 | 13 | Bush | 221 391 |
| 1 | Housing | 240 368 | 14 | V-ribbed belt pulley | 221 268 |
| 2 | Friction roller complete | 231 704 | 15 | Ribbed V-belt V3J 406 | 206 927 |
| 3 | Three-phase AC motor complete | 219 800 | 16 | Rod | 221 319 |
| 3a | Microswitch | 008 664 | 18 | Cover | 230 758 |
| 4 | Deflector complete 8-fold | 250 089 | 19 | Knurled screw | 223 361 |
| 4a | Support rail | 250 055 | 20 | Rod | 230 658 |
| 4b | Eyelet holder complete | 250 077 | 21 | Grounding plate | 256 622 |
| 540 | Spring dowel sleeve 4x16 | 020 783 | 500 | Screw KB30x8 | 236 228 |
| 541 | Hexagon nut M8-8 | 022 843 | 501 | Screw 20x10 | 265 445 |
| 7 | Yarn guide rod complete | 239 431 | 503 | Cap screw M5x12 | 020 132 |
| 570 | Eyelet 8 | 021 504 | 504 | Cap screw M5x16 | 022 726 |
| 8 | Stop motion rail on the right complete | 230 690 | 506 | Screw KB 40x14 | 241 358 |
| 9 | Stop motion rail on the right complete with eyelets | 230 682 | 508 | Dowel pin3M6x40 | 023 528 |
| 9b | Eyelet | 230 662 | 509 | Washer 5,3x22x2,5 | 023 219 |
| 590 | Slide bearing | 023 627 | 510 | Washer 5 | 020 901 |
| 591 | Guide piece | 259 453 | 512 | Shim ring 15x21x1 | 023 216 |
| 11 | Bracket | 221 316 | 514 | Washer 4,3x18x1,5 | 020 908 |
| 12 | Cover | 251 098 | 517 | Pan-head screw M4x8 | 023 579 |

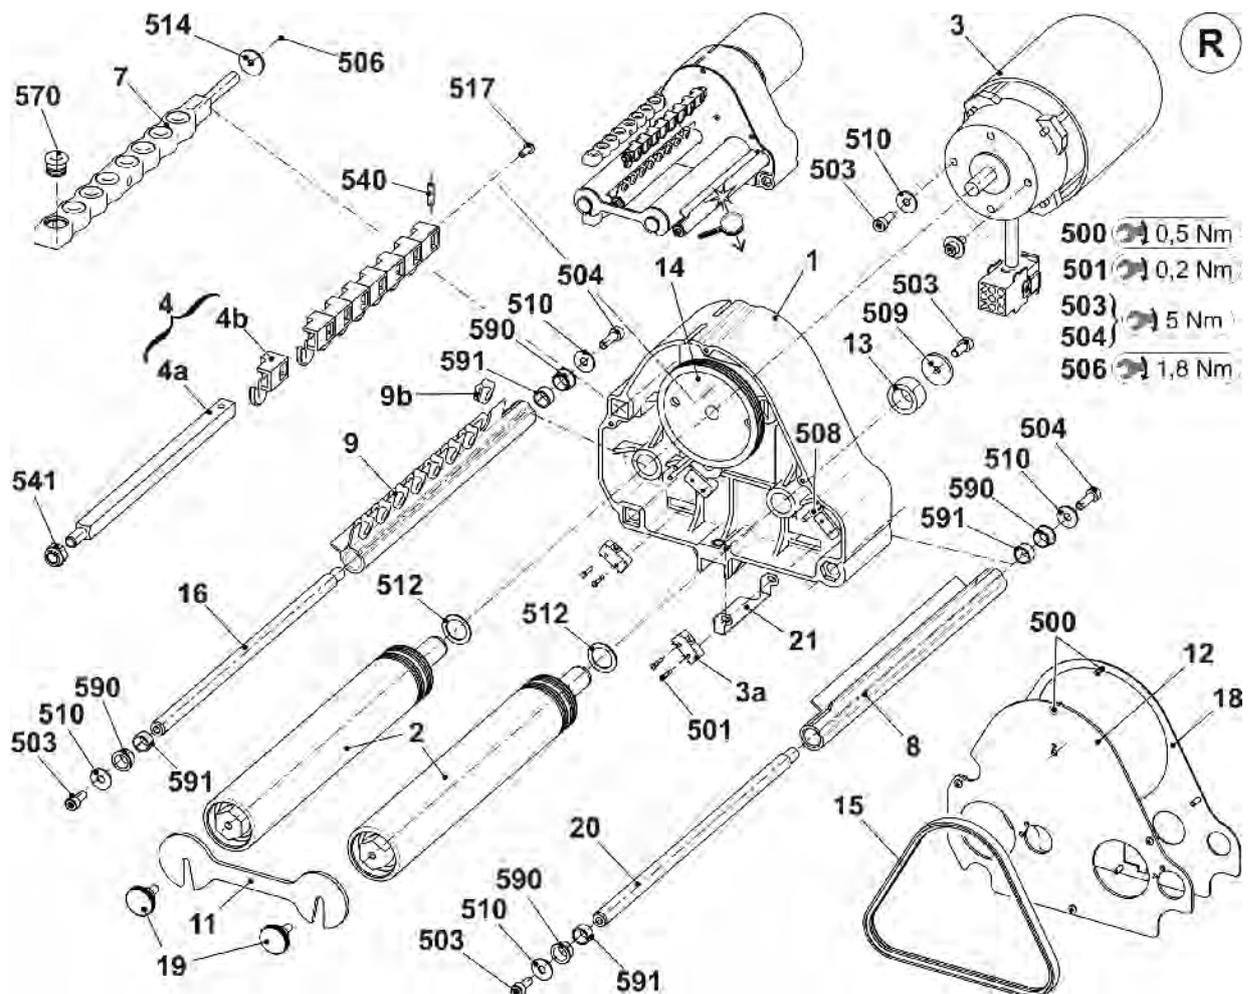


9.9 Stopping device on the left

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|---------------------|---------|
| Σ | Stopping device on the left E3-4 | 267 345 | 2 | Yarn brakeE3-4 | 264 352 |
| 1 | Stopping device on the left E3-8 | 264 993 | 500 | Ceramic eyelet open | 240 733 |

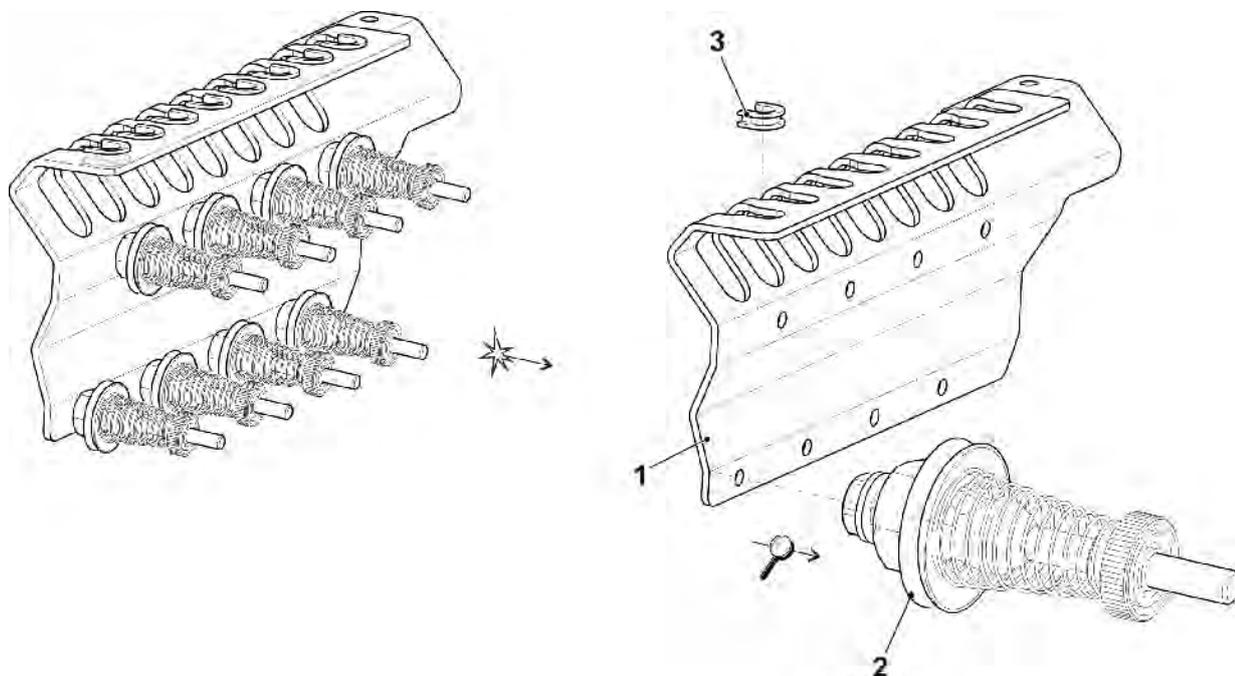


9.10 Stopping device on the right

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|---------------------|---------|
| Σ | Stopping device on the right E3-4 | 267 344 | 2 | Yarn brakeE3-4 | 264 352 |
| 1 | Stopping device on the right E3-8 | 264 992 | 500 | Ceramic eyelet open | 240 733 |

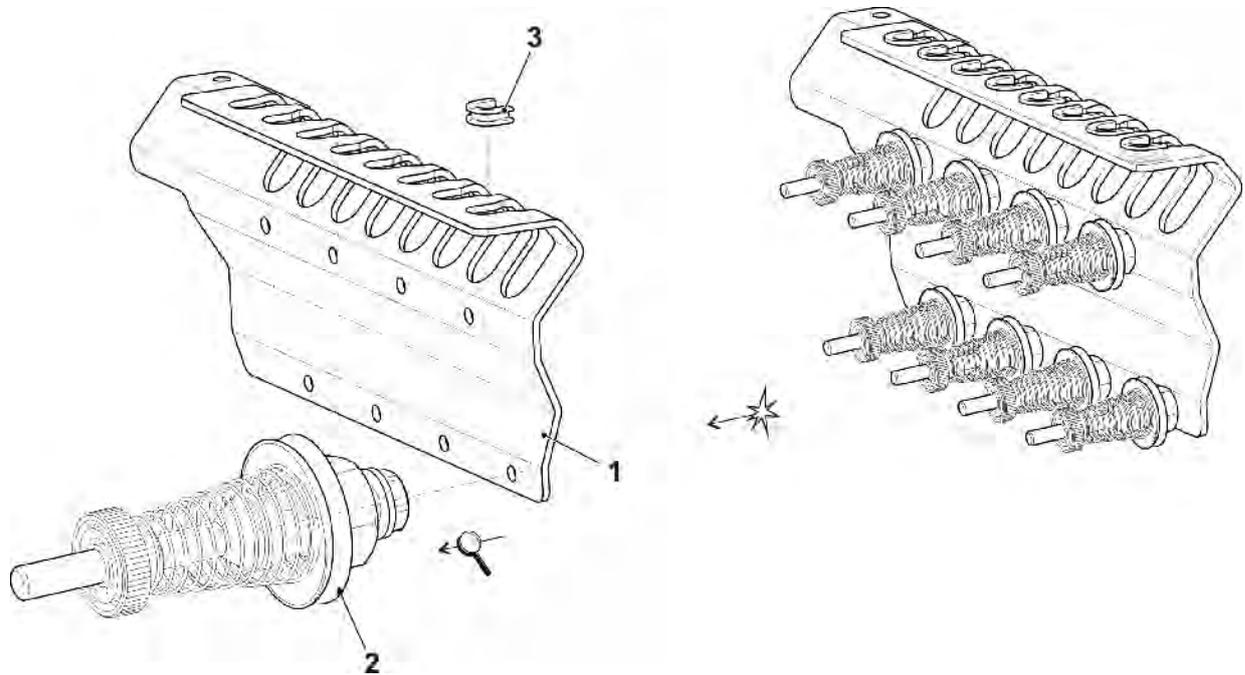


10 Fluff absorption

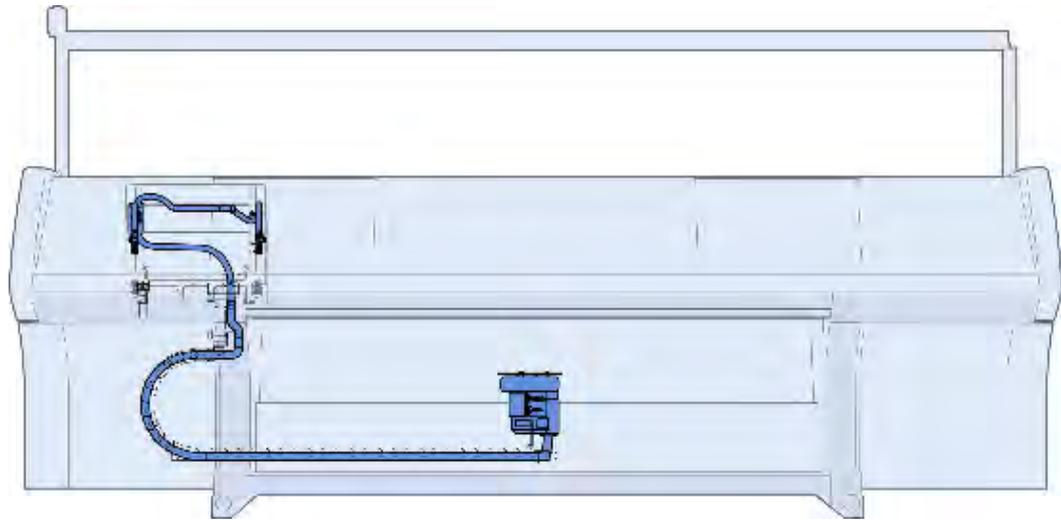


10.1 Fluff absorption

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-------------------------|---------|-----|-------------------------------|---------|
| Σ | Fluff absorption | | 4 | Lint container | 245 024 |
| 1 | Suction fan complete | 251 332 | 5 | Set of hose complete 730/830C | 251 341 |
| 2 | Suction hose 29x25x3750 | 251 336 | 550 | Countersunk head screw M4x8 | 251 011 |
| 3 | Hose clip | 214 653 | 551 | Cap screw M4x8 | 022 501 |

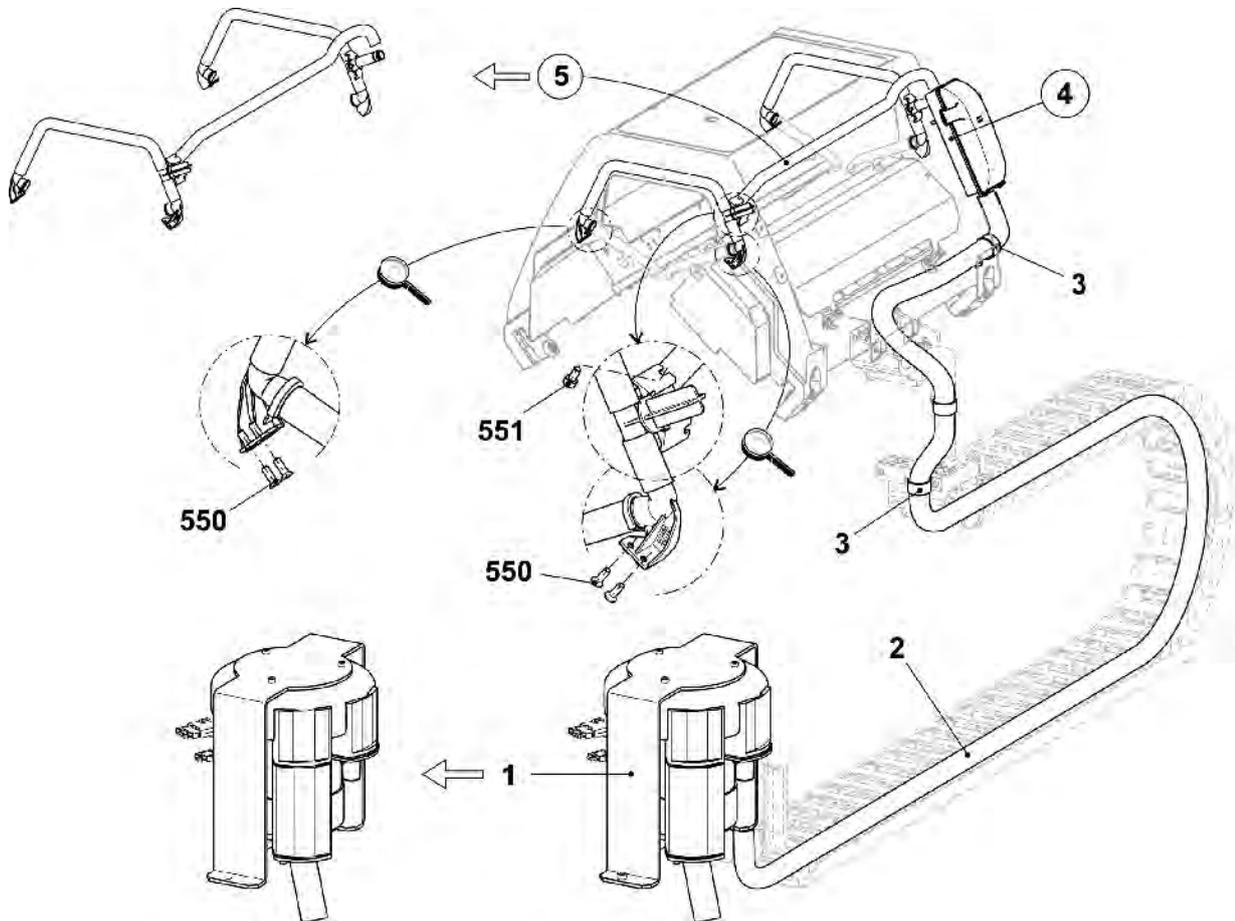


10.2 Lint container

| Pos | Designation | Id | Pos | Designation | Id |
|----------|-----------------------|---------|------|-------------------|---------|
| Σ | Lint container | | 6* | Sealing plug | 245 029 |
| 1 | Lint container | 245 024 | 10* | Cover with filter | 251 335 |
| 5* | Sealing plug | 245 028 | 501* | Cap screw M6x10 | 023 690 |

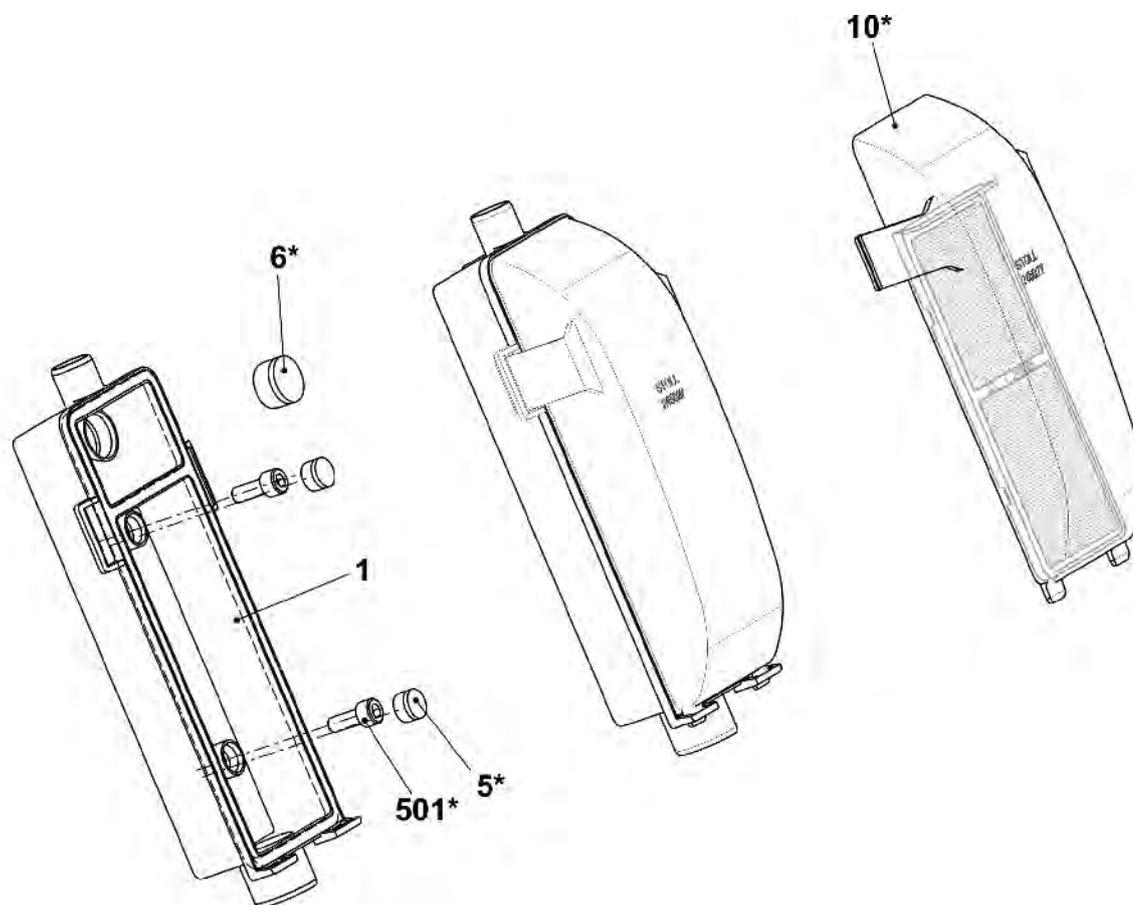


10.4 Suction tube

| Pos | Designation | Id | Pos | Designation | Id |
|----------|-----------------------|----------------|-----|-------------|----|
| Σ | Suction tube complete | 251 314 | | | |
| 1 | Suction tube | 255 606 | | | |
| 2 | Bracket | 255 628 | | | |
| 500 | Screw KB30x6 | 241 424 | | | |

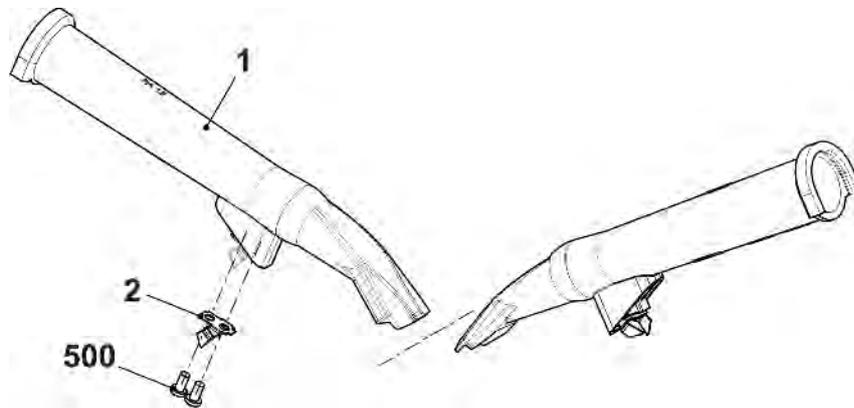


11 Operation and control

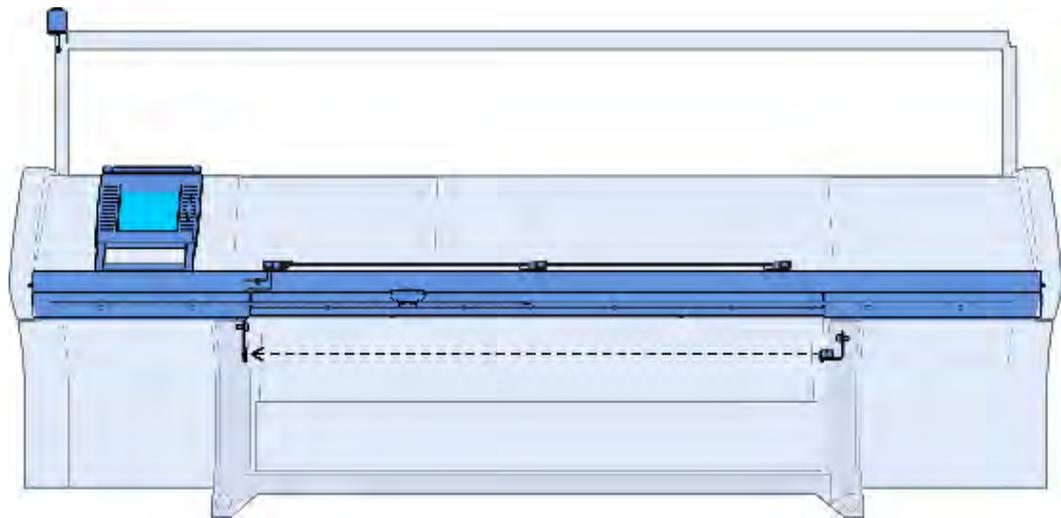


11.1 Input unit

| Pos | Designation | Id | Pos | Designation | Id |
|----------|----------------------------|----------------|-----|---------------------------------|---------|
| Σ | Input unit complete | 240 194 | | | |
| 1 | Base frame | 240 195 | 10* | Touch panel spare parts package | 244 554 |
| 3 | Bearing strip complete | 240 198 | 502 | Washer | 020 901 |
| 4 | Display touch complete | 250 298 | 503 | Screw KB 50x12 | 240 359 |
| 6 | Touch pen | 242 812 | 507 | Screw KB 50x15 | 251 728 |

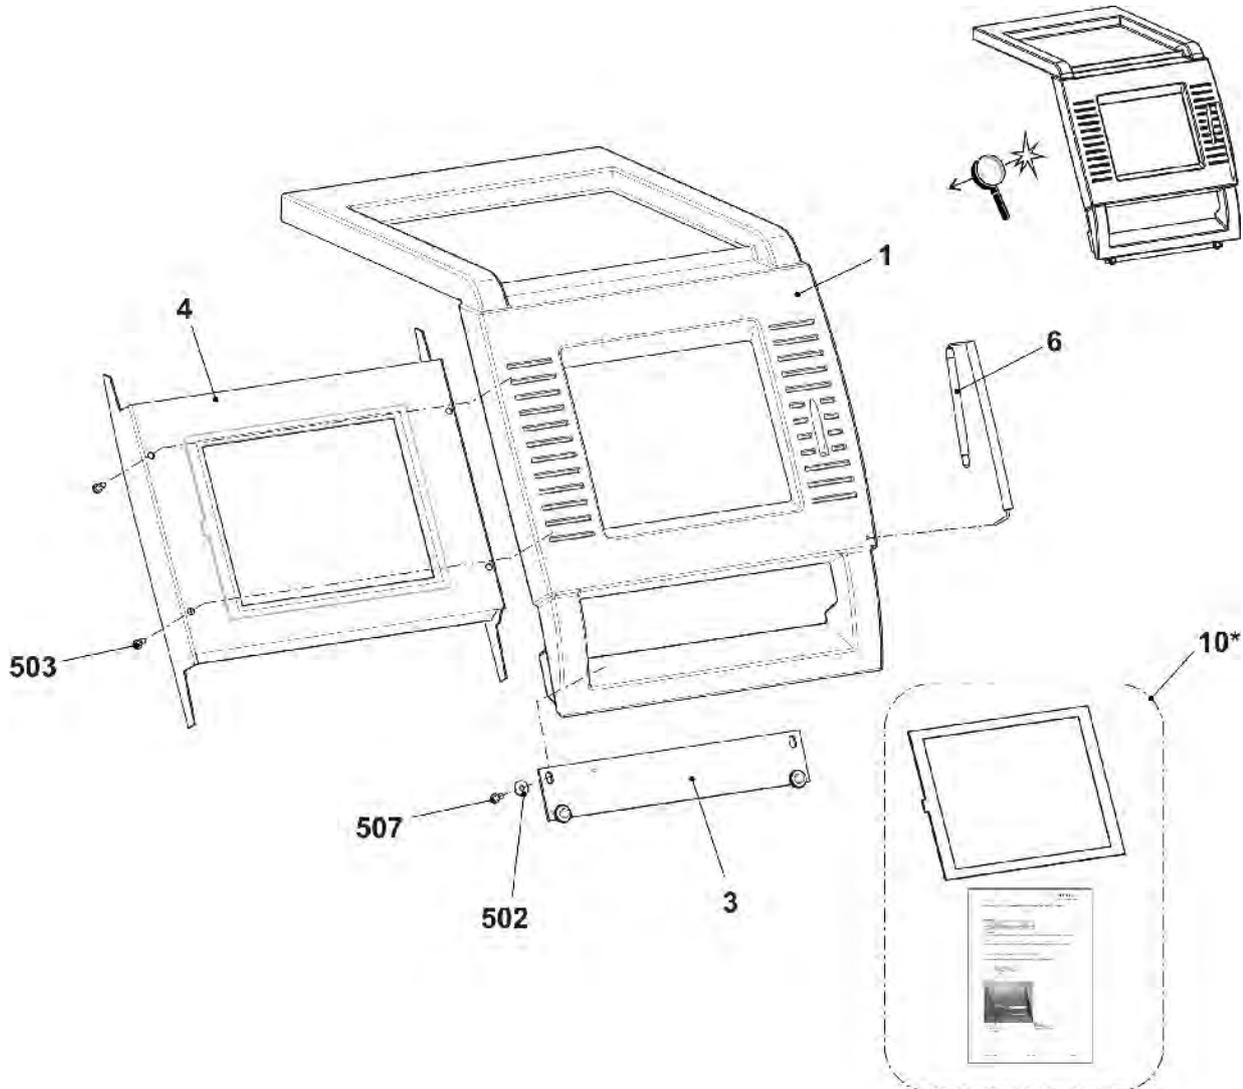


11.2 Starting device

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------------|----------------|-----|----------------------|---------|
| Σ | Starting device complete | 241 039 | 12 | Bearing on the right | 264 800 |
| 1 | Engaging rod | 241 030 | 502 | Cap screw M6x16 | 020 135 |
| 2 | Bearing on the left complete | 250 071 | 503 | Pan head screw M5x14 | 023 588 |
| 3 | Guide rail at the bottom complete | 257 540 | 504 | Cap screw M6x20-12.9 | 020 136 |
| 8 | Locating bolt | 219 107 | 507 | Washer | 020 872 |
| 9 | Switch with cable to safety doors | 223 350 | 509 | Screw M6x25 | 023 510 |
| 10 | Sliding nut (slot nut) | 225 099 | 511 | Cable holder | 262 037 |
| 11 | Bearing on the right complete | 265 444 | 512 | Cap screw M6x10 | 023 690 |

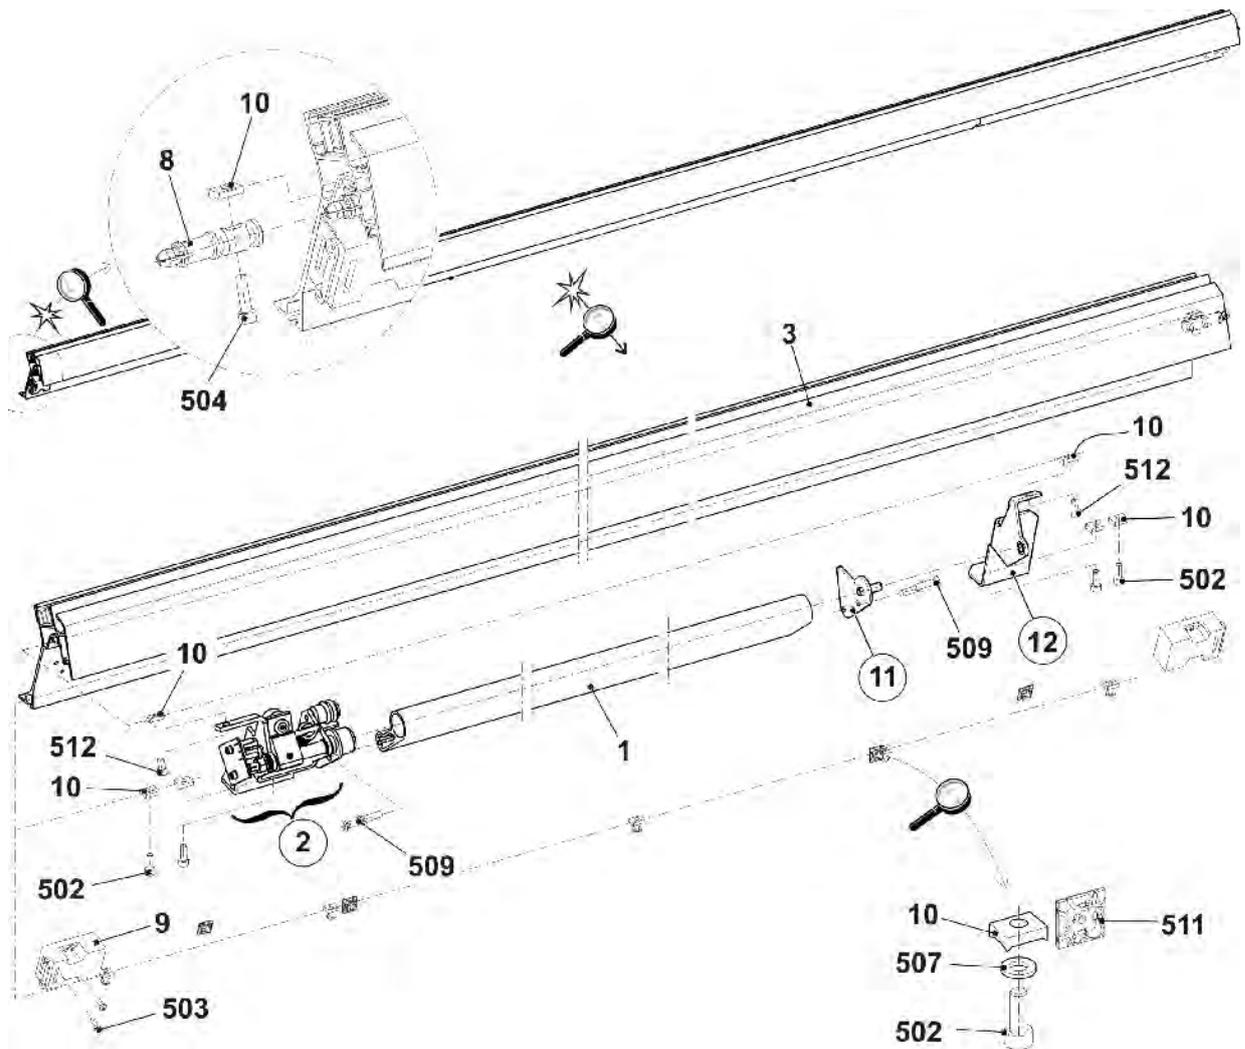


11.2.1 Bearing of the engaging rod

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|-------------------------------------|----------------|----------|---------------------------------|---------|
| L | Bearing on the left complete | 250 071 | | | |
| 1 | Bearing on the left | 245 218 | 505 | Hexagon nut M8-6 | 020 838 |
| 1a | Clip bearing MCM 12-04 | 023 639 | 506 | Dowel pin 1,5x8 | 236 923 |
| 2 | Support of buffer | 220 561 | 507 | Spring dowel sleeve 6x20 | 023 719 |
| 2a | O-ring 14x4 | 023 237 | 508 | Shoulder screw M4x24,8x7,7 | 240 299 |
| 3 | Shaft on the left | 245 219 | 509 | Shoulder screw | 251 316 |
| 4 | Rotor | 253 776 | 510 | Shim ring 12x18x1 | 023 315 |
| 5 | Switch flag | 245 220 | 511 | Retaining ring 12x1 | 020 951 |
| 6 | Spring mandrel | 251 340 | 512 | Compression spring 1,25x15x98,2 | 023 609 |
| 7 | Disk | 245 222 | 513 | Compression spring 0,5x11x20,21 | 265 082 |
| 8 | Shoulder screw | 254 528 | | | |
| 9 | Distance bolt | 240 287 | R | Bearing on the right | |
| 500 | Cap screw M4x6 | 023 067 | 1 | Bearing on the right | 264 800 |
| 501 | Cap screw M4x8 | 022 501 | 1a | Clip bearing MCM 18-03 | 253 072 |
| 502 | Shim ring 4x8x1 | 023 369 | 2 | Bearing on the right complete | 265 444 |
| 503 | Card engaging | 259 000 | 520 | Hexagon nut M8-4 | 020 856 |
| 504 | Adhesive magnet direct current | 026 233 | 521 | Shoulder screw M8x25 | 265 091 |

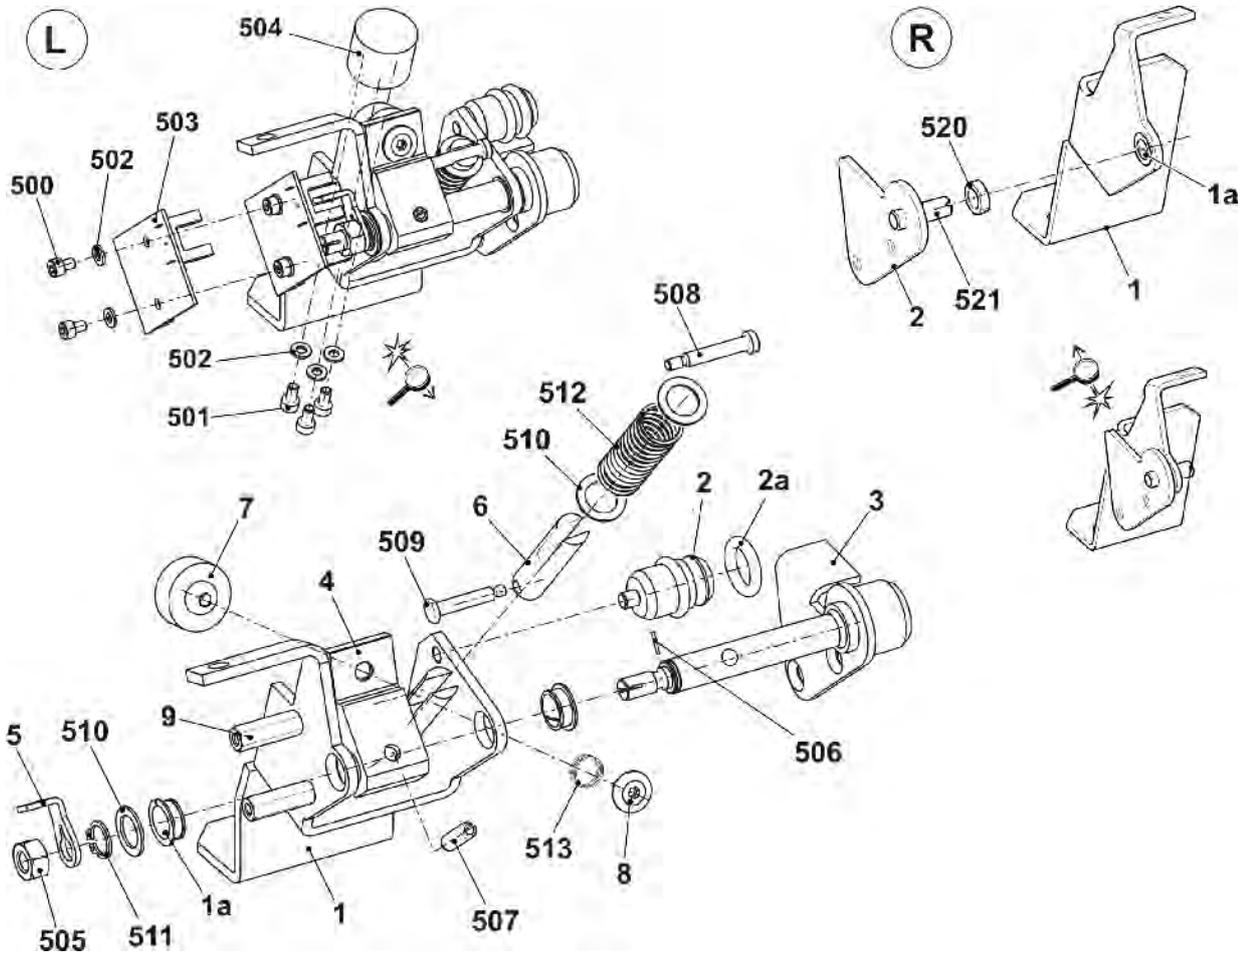


11.3 Signal light

| Pos | Designation | Id | Pos | Designation | Id |
|----------|------------------------------|----------------|-----|-------------|----|
| Σ | Signal light LED | 240 395 | | | |
| 500 | Pan head screw M4x14 | 023 037 | | | |
| 501 | Serrated lock washer A4,3-FS | 022 482 | | | |

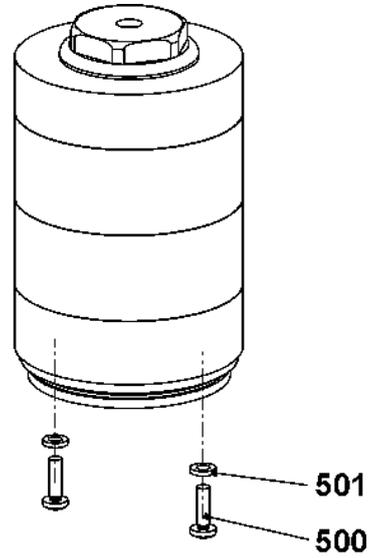


11.4 Control of Collecting Area

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---------------------------|----------------|----------|------------------------------------|----------------|
| A | Reflector complete | 261 374 | B | Holding angle light barrier | 257 409 |
| 900* | Cap screw M6x12 | 020 134 | 1 | Holding angle | 256 806 |
| | | | 2 | Light barrier | 243 355 |
| | | | 500 | Cap screw M4x10 | 023 136 |
| | | | 501 | Cap screw M3x10 | 022 991 |
| | | | 900* | Cap screw M6x12 | 020 134 |
| | | | 901* | Washer | 020 872 |

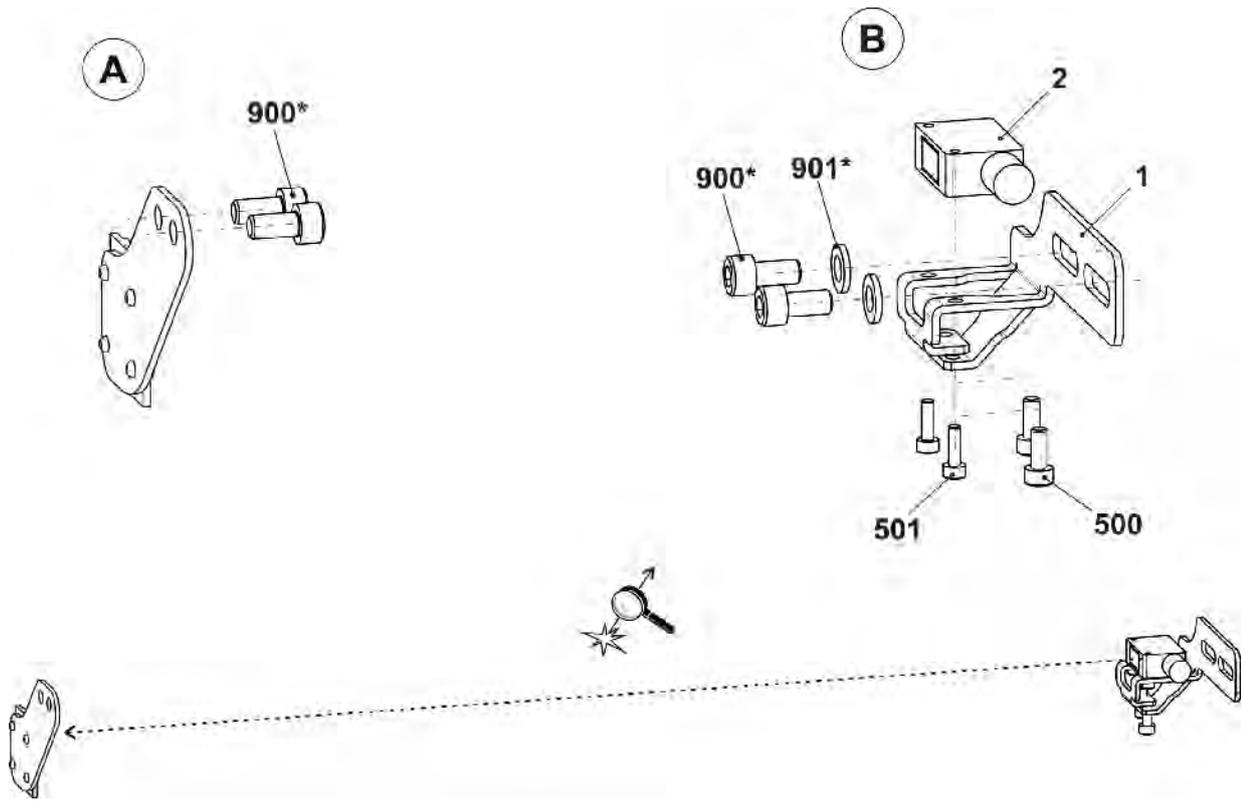


11.5 Shock stop motion

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------------|----------------|------|-----------------------|---------|
| Σ | Shock stop motion complete | 237 280 | 3 | End plug piezo sensor | 220 062 |
| 1 | Shock stop motion (Piezo) | 220 011 | 500* | Pan-head screw M4x8 | 023 036 |
| 2 | Cable connection piezo | 220 061 | 502* | Cable clip N-3B 5 mm | 210 729 |

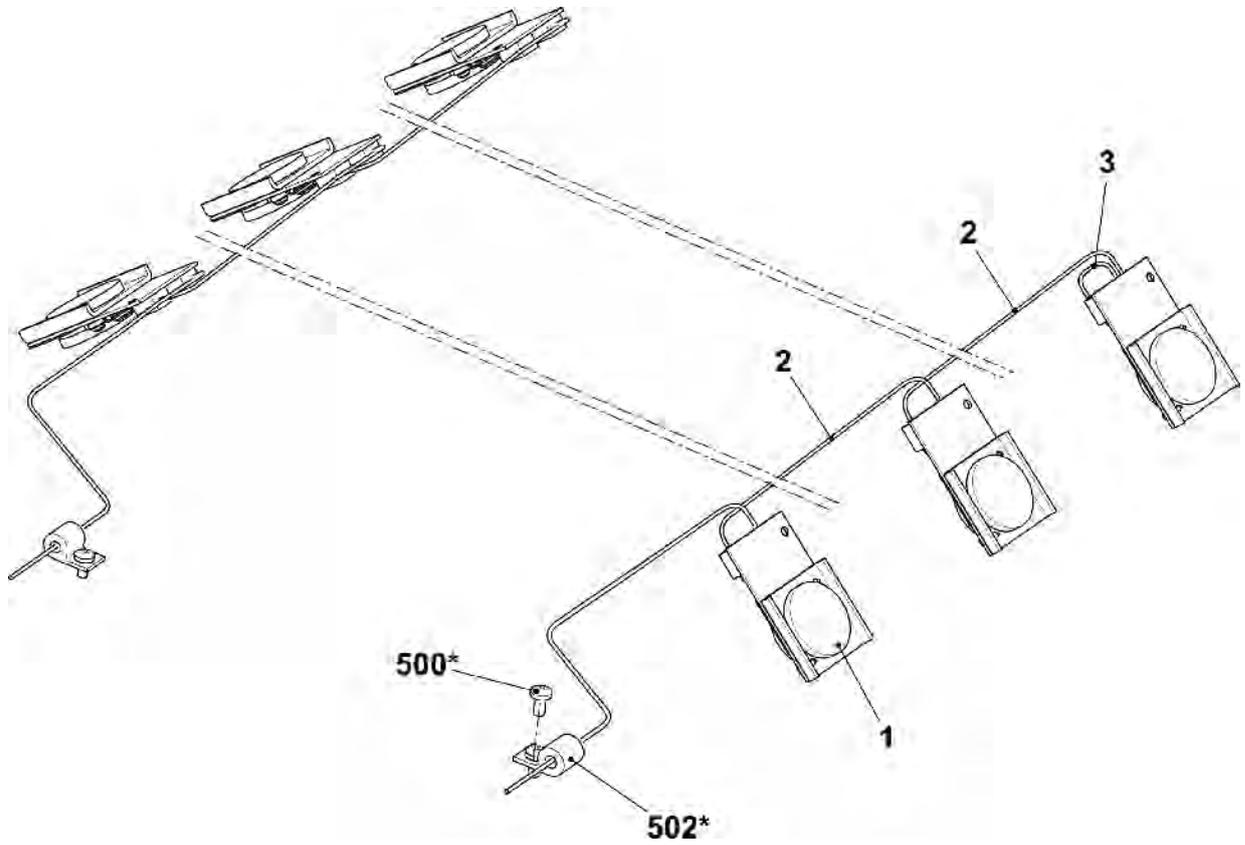


11.6 Measuring device

| Pos | Designation | Id | Pos | Designation | Id |
|----------|-------------------------|---------|-----|--|---------|
| Σ | Measuring device | | 4 | Guide | 240 672 |
| 1 | Measuring bar | 258 308 | 10* | Spare parts package impulse sensor GLM OH | 266 961 |
| 2 | Guide | 212 210 | 500 | Pan head screw M6x20 | 241 603 |

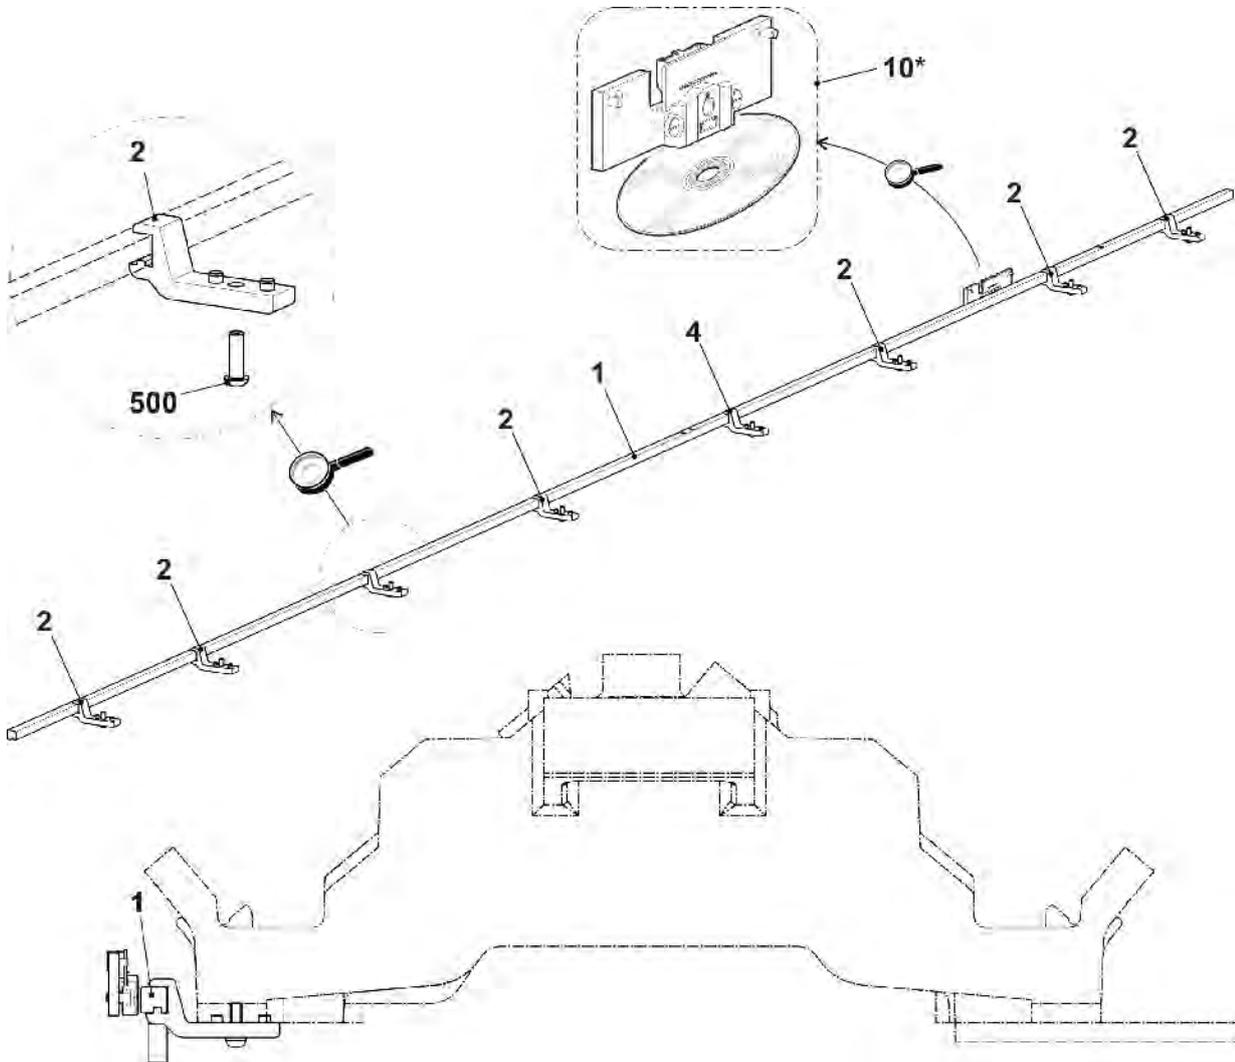


12 Protective devices

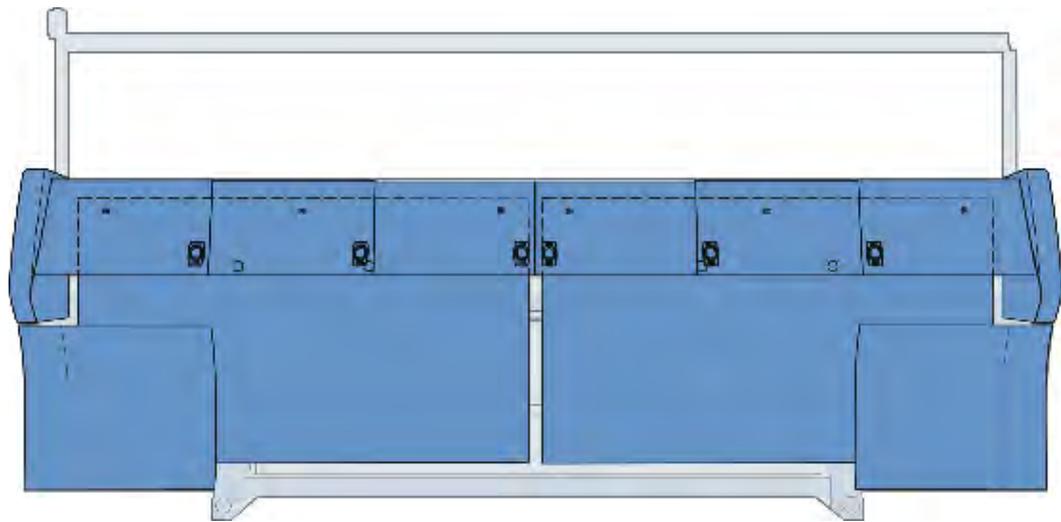


12.1 Lateral safety doors

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--------------------------------|---------|----------|---------------------------------|---------|
| Σ | Safety door on the left | | Σ | Safety door on the right | |
| 1 | Safety door on the left | 265 278 | 1 | Safety door on the right | 265 279 |
| 2 | Hinge | 263 939 | 2 | Hinge | 263 939 |
| 4 | Locking plate | 219 748 | 4 | Locking plate | 219 748 |
| 10 | ActuatorAZ 15/16 | 255 492 | 10 | ActuatorAZ 15/16 | 255 492 |
| 501 | Screw 6x30 | 265 380 | 501 | Screw 6x30 | 265 380 |
| 502 | Screw 4x16 | 263 995 | 502 | Screw 4x16 | 263 995 |
| 506 | Screw 6x20 | 265 379 | 506 | Screw 6x20 | 265 379 |

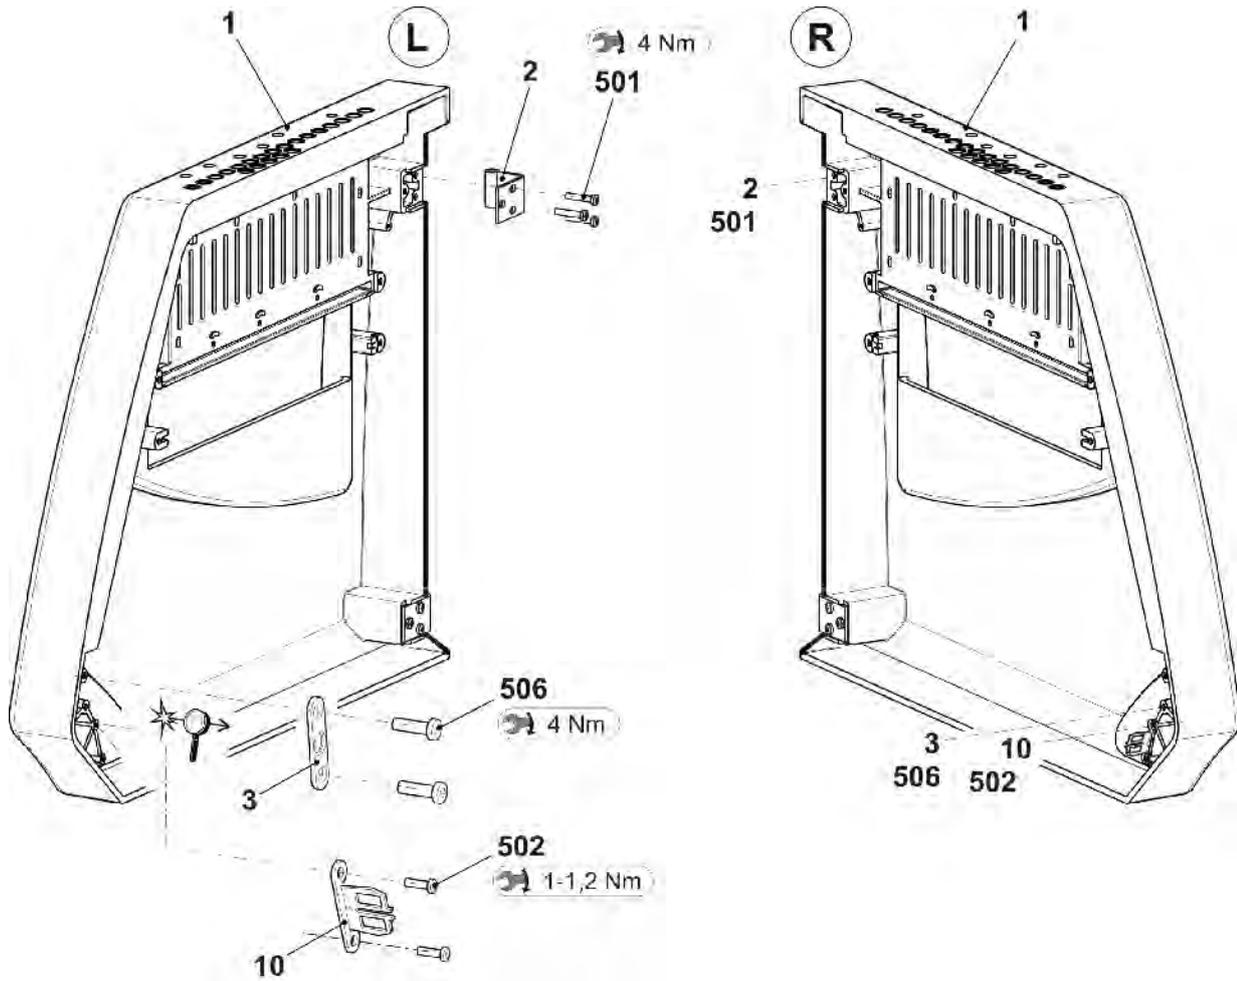


12.2 Panelling

| Pos | Designation | Id. no. | Pos | Designation | Id. no. | | |
|-----|--------------------|---------|---------|-------------|--|----------------|---------|
| 1 | Cover 1 (complete) | 257 532 | 1-5 | b | Inlet type handle | 251 376 | |
| | 1a | Cover | | 257 527 | c | Stripper | 219 393 |
| 2 | Cover 2 (complete) | 257 533 | | d | Magnet | 255 129 | |
| | 2a | Cover 2 | 257 528 | 7 | Control unit panelling on the left complete | 251 237 | |
| 3 | Cover 3 (complete) | 257 534 | 7a | | Control unit panelling on the left | 251 190 | |
| | 3a | Cover 3 | 257 529 | 8 | Control unit panelling on the right complete | 251 238 | |
| 4 | Cover 4 (complete) | 257 535 | 8a | | Control unit panelling on the right | 251 191 | |
| | 4a | Cover 4 | 257 530 | 7-8 | x | Side part | 244 989 |
| 5 | Cover 5 (complete) | 257 536 | y | | Hinge | 250 273 | |
| | 5a | Cover 5 | 257 531 | | z | Bracket | 240 412 |
| | | | | | 500 | Screw KB 50x12 | 240 359 |
| | | | 501 | | Cap screw M6x16 | 020 135 | |

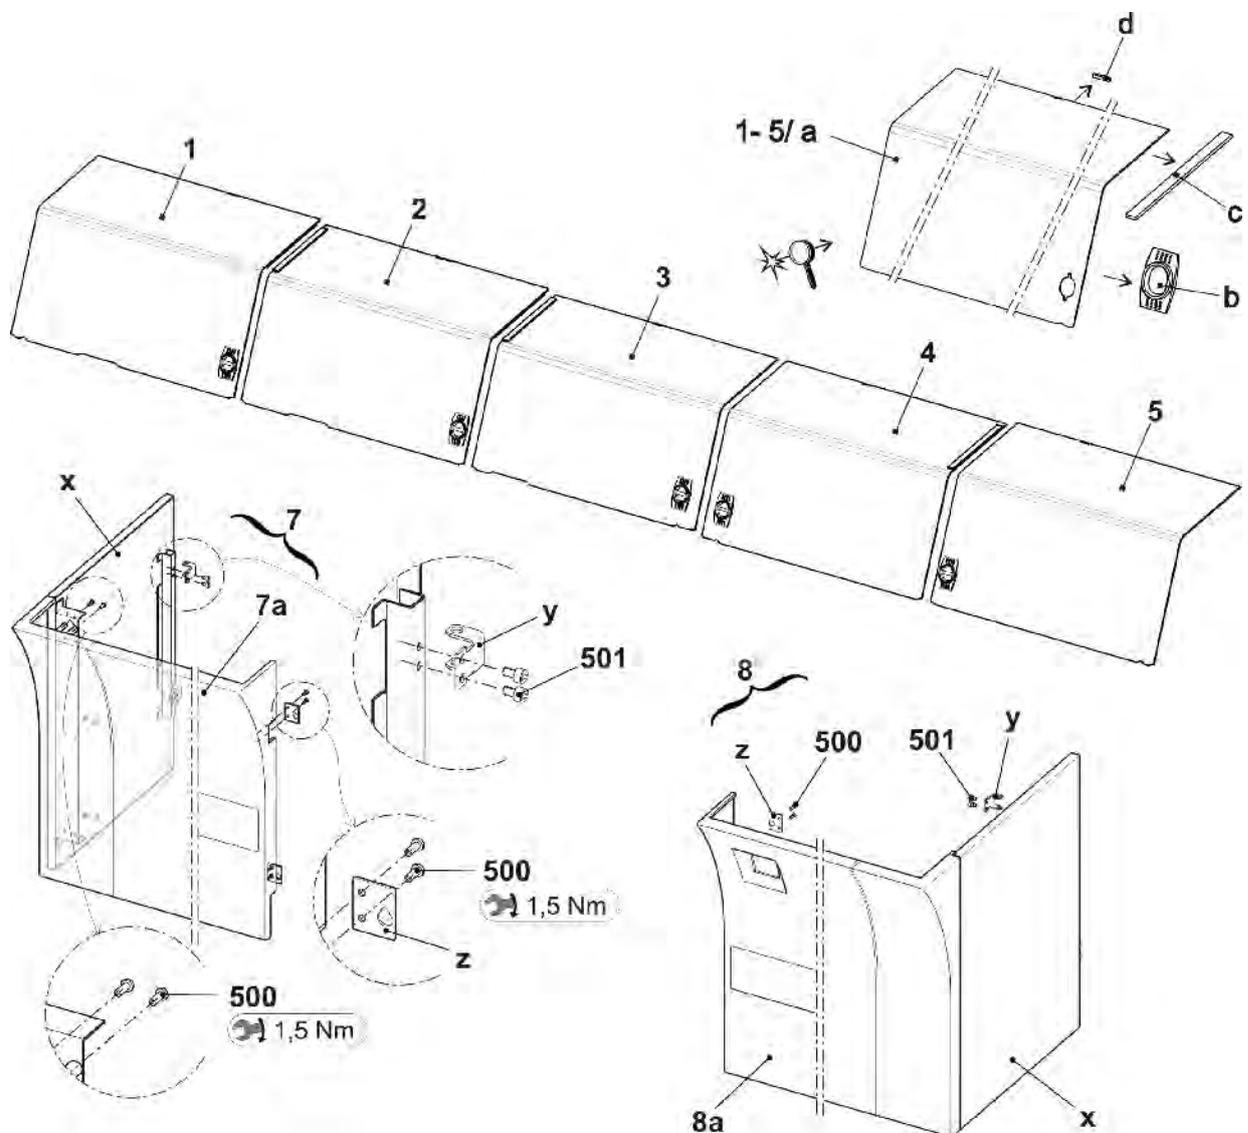


12.3 Rear panel

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|-----|---------------------------------------|----------------|-----|----------------------|---------|
| 1 | Panelling at the rear complete | 257 670 | 11 | Panelling | 257 664 |
| | | | 12 | Safety sash fastener | 243 052 |

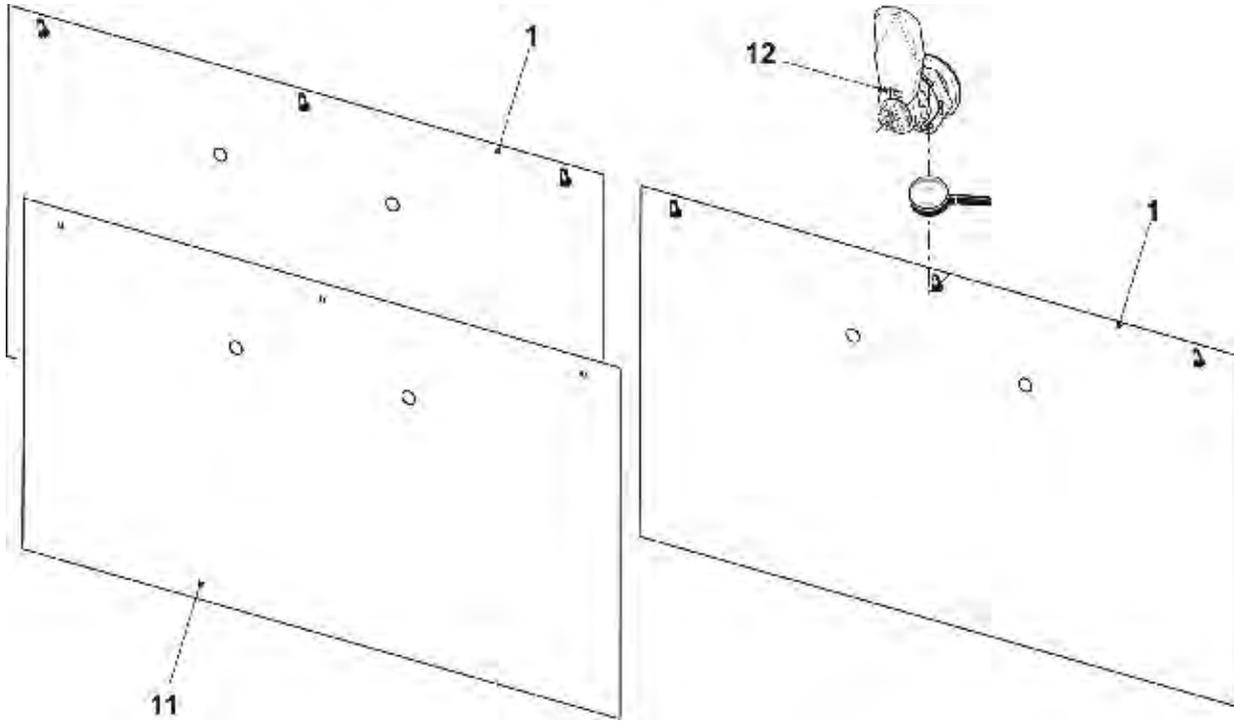


13 Electrical equipment

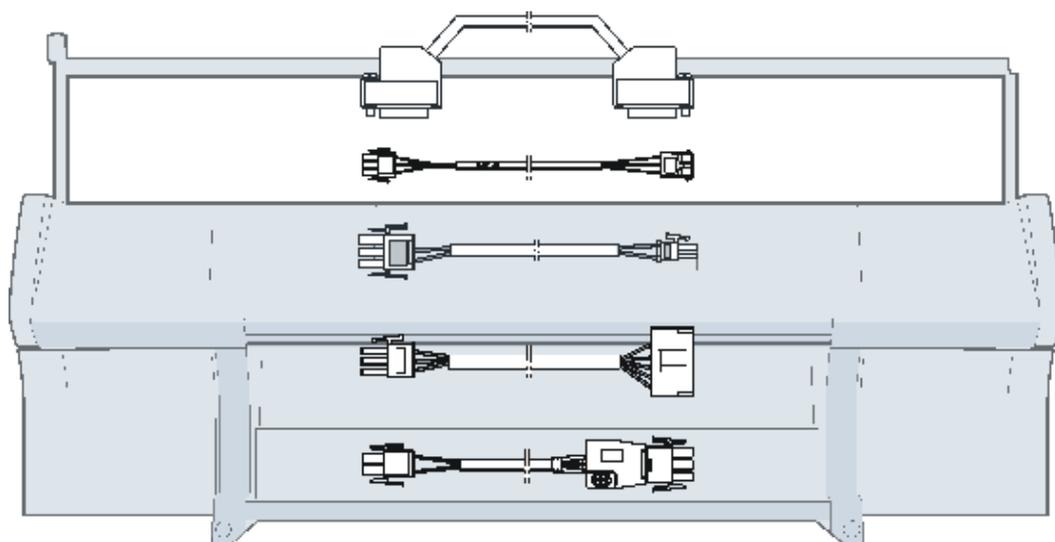






13.1 Circuit diagram (221) as PDF

| Designation | ID | Marking |
|-----------------------------|---------|---------|
| Circuit diagram 221 German | 257 279 | _DE |
| Circuit diagram 221 English | 257 279 | _GB |
| Circuit diagram 221 Chinese | 257 279 | _CN |


You will find the circuit diagram 221 on the CMS documentation DVD with the ID no.: 257 157

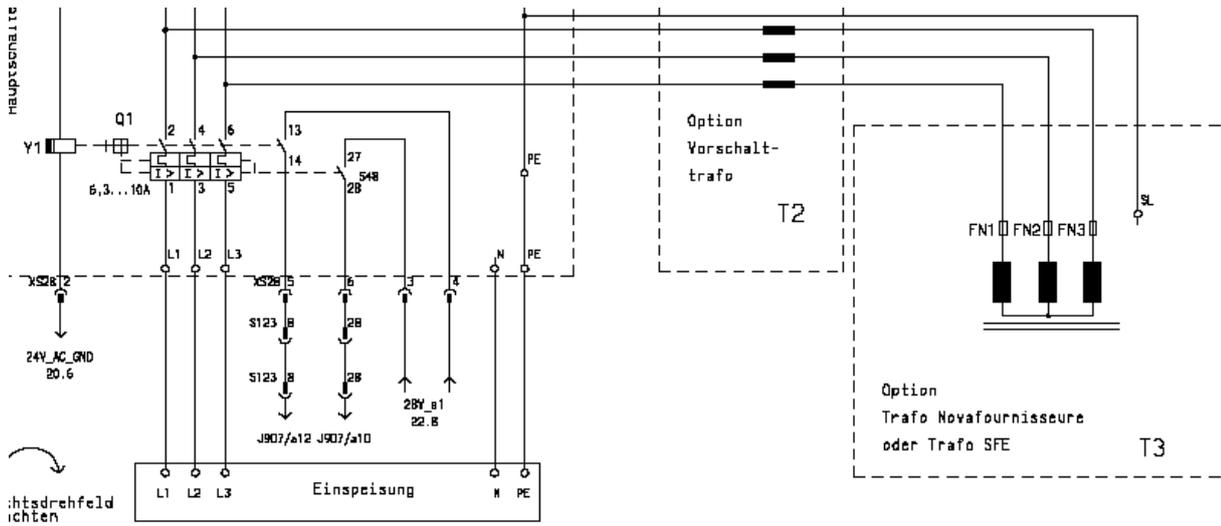




13.2 Trailing cable
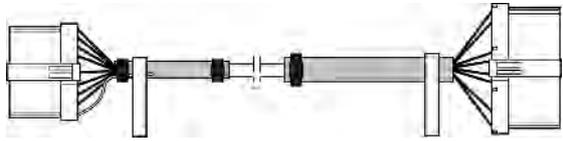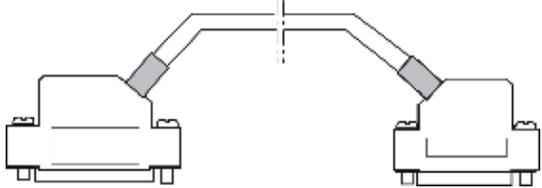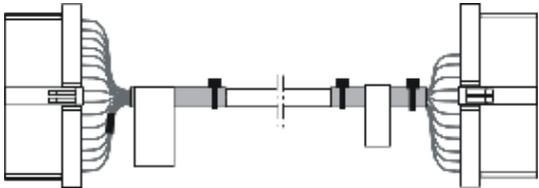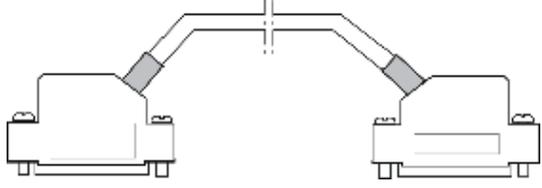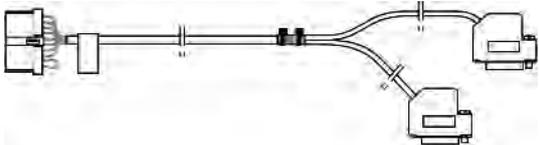
| Designation | ID | Designation | ID |
|---|----------------|--|---------|
| Trailing cable set 830C OKC 1IMP-2 | 259 297 | | |
| Cable impulse sensor 2 at the rear on the right XL136 822 OKC3 | 259 369 | Cable SM at the rear XL325 830C OKC | 244 225 |
|  | | Cable SM at the front XL327 830C OKC | 244 229 |
| | |  | |
| Cable yarn carrier 830C OKC | 244 224 | Cable signal at the rear XL326 830C OKC | 244 226 |
|  | | Cable signal at the front XL328 830C OKC | 244 230 |
| | |  | |
| Cable holding-down jack control 830C OKC | 244 231 | | |
|  | | | |






13.3 Cable set installation
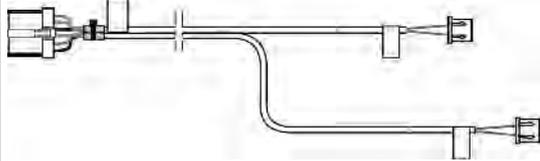
| Designation | | ID | Designation | | ID |
|-------------|---------------------------------------|----------------|--|----------------------------|---------|
| Σ | Cable set installation 8XX OKC | 242 224 | | | |
| 1 | Loom of cables base 1 OKC | 240 256 | 4 | Loom of cables comb OKC | 240 259 |
| 2 | Loom of cables base 2OKC | 240 257 | 8 | Cable Piezo needle bed OKC | 240 518 |
| 3 | Loom of cables 84" OKC | 242 225 |  | | |












13.3.1 Loom of cables base 1
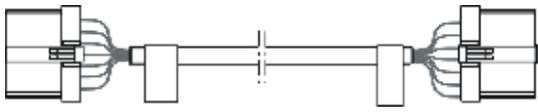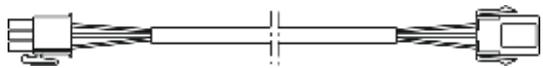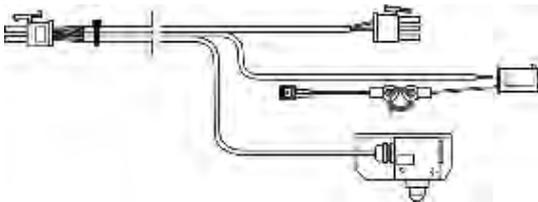
| Designation | ID | Designation | ID |
|---|----------------|--|---------|
| Loom of cables base 1 OKC | 240 256 | | |
| Cable Engaging rod OKC 3XX | 240 289 | Cable supply FKE lamp OKC | 240 290 |
|  | |  | |
| Cable protective device on the left OKC | 253 442 | | |
|  | | | |






13.3.2 Loom of cables base 2
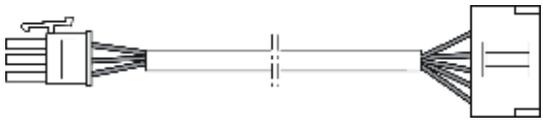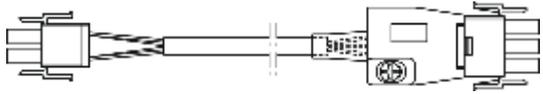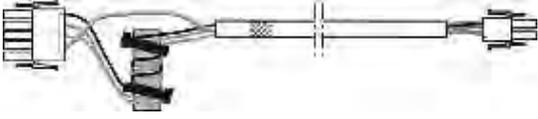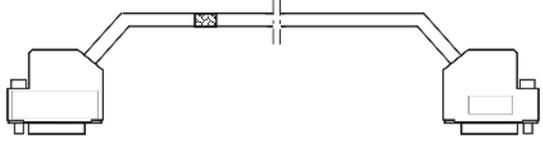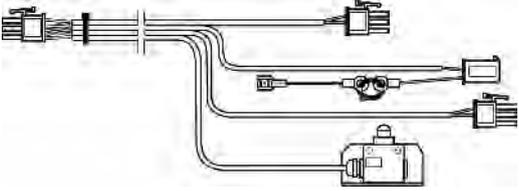
| Designation | ID | Designation | ID |
|---|----------------|--|---------|
| Loom of cables base 2OKC | 240 257 | | |
| Cable motor HAAB OKC | 240 291 | Cable racking limit switch OKC | 240 292 |
|  | |  | |
| Cable fan drive OKC | 240 293 | Cable Feed wheel on the right OKC | 240 294 |
|  | |  | |
| Cable drive motor OKC | 240 295 | Cable resolver drive OKC | 240 296 |
| Cable racking motor OKC | 240 297 | Cable resolver racking OKC | 240 298 |
|  | |  | |
| Cable protective device on the right OKC | 253 441 | | |
|  | | | |

13.3.3 Loom of cables 84"
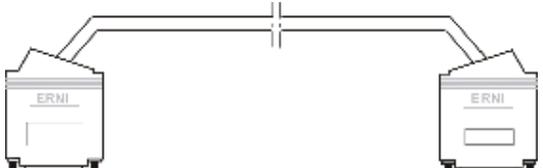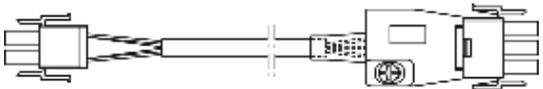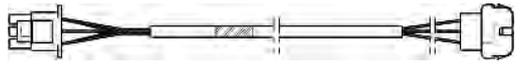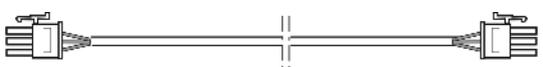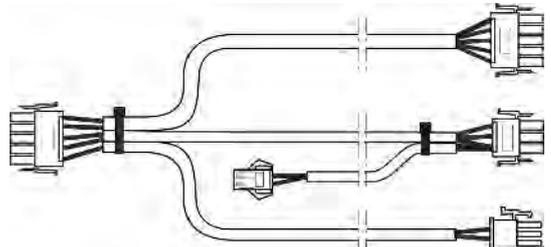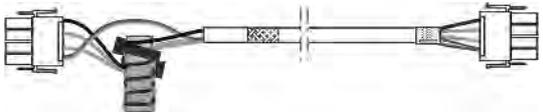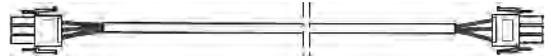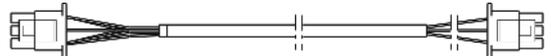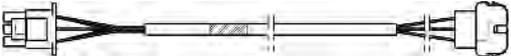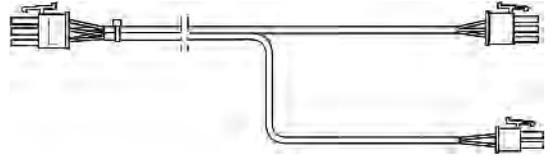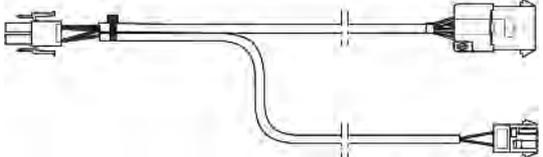
| Designation | ID | Designation | ID |
|---|----------------|--|---------|
| Loom of cables 84" OKC | 242 225 | | |
| Cable CAN 84" | 240 461 | Cable Electro 84" OKC | 240 463 |
|  | |  | |
| Cable feed wheel on the left 84" OKC | 240 466 | Cable motor HIAB84" OKC | 242 226 |
|  | |  | |
| Cable switch HIAB 84" OKC | 242 227 | Cable power supply WAZ/F 84" OKC | 263 688 |
|  | |  | |
| Cable power supply servo 84" | 240 504 | Cable power supply unit of mains supply OKC | 240 505 |
|  | |  | |
| Cable switch HAOS 84" OKC | 242 229 | Cable motor HAABOEF/S 84" OKC | 242 228 |
|  | |  | |
| Cable motor HIAB Anpress OKC | 240 592 | Cable switch HIAB Anpr. OKC | 240 593 |
|  | |  | |
| Cable power supply FLENT 84" OKC | 251 243 | | |
|  | | | |

13.3.4 Loom of cables COMB

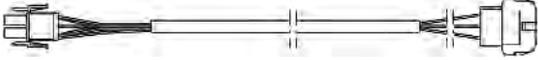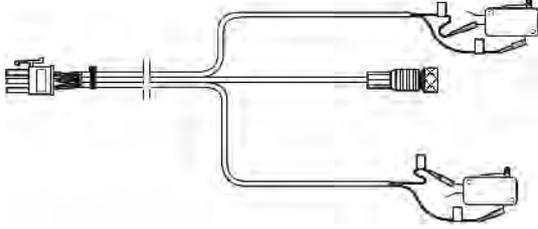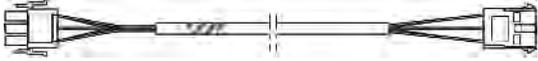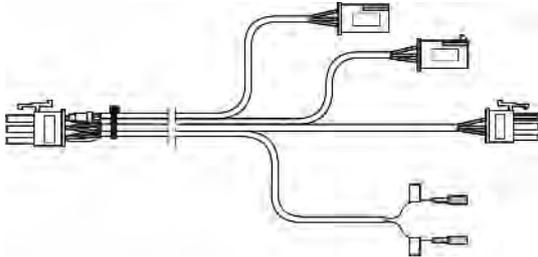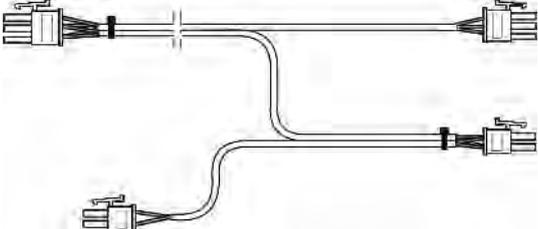
| Designation | Id | Designation | Id |
|---|----------------|--|---------|
| Loom of cables COMBOKC | 240 259 | | |
| Cable motor comb hookOKC | 240 308 | Cable switch KAHA OKC | 240 309 |
|  | |  | |
| Cable motor combOKC | 240 310 | Cable switch comb OKC | 240 311 |
|  | |  | |
| Cable switch HAAB OKC | 240 312 | | |
|  | | | |

14 Control electronics




14.1 Left control cabinet

| Pos | Designation | ID | Pos | Designation | ID |
|----------|--|------------------|----------------|--|---------|
| Σ | Control unit on the left complete | 830C OKC3 | 255 954 | | |
| 1 | Control unit on the left without any equipment | 254 868 | 5 | Card YC final stages short circuit proof | 300 939 |
| 2 | Battery plug-in unit | 300 924 | 6 | Card final stages 4SM 7TE | 300 943 |
| 3 | Power supply unit CG54 | 300 923 | 7 | Card N-CPU 432 | 300 965 |
| 31 | Fan power supply unit | 239 305 | 8 | Card Power CPU1 | 301 009 |
| 32 | Filter pad CG54 | 239 350 | 9 | Card IPC P9X S 01 | 264 480 |
| 4 | Card battery OKC | 300 951 | 10 | Adhesive label of card equipment | 255 955 |

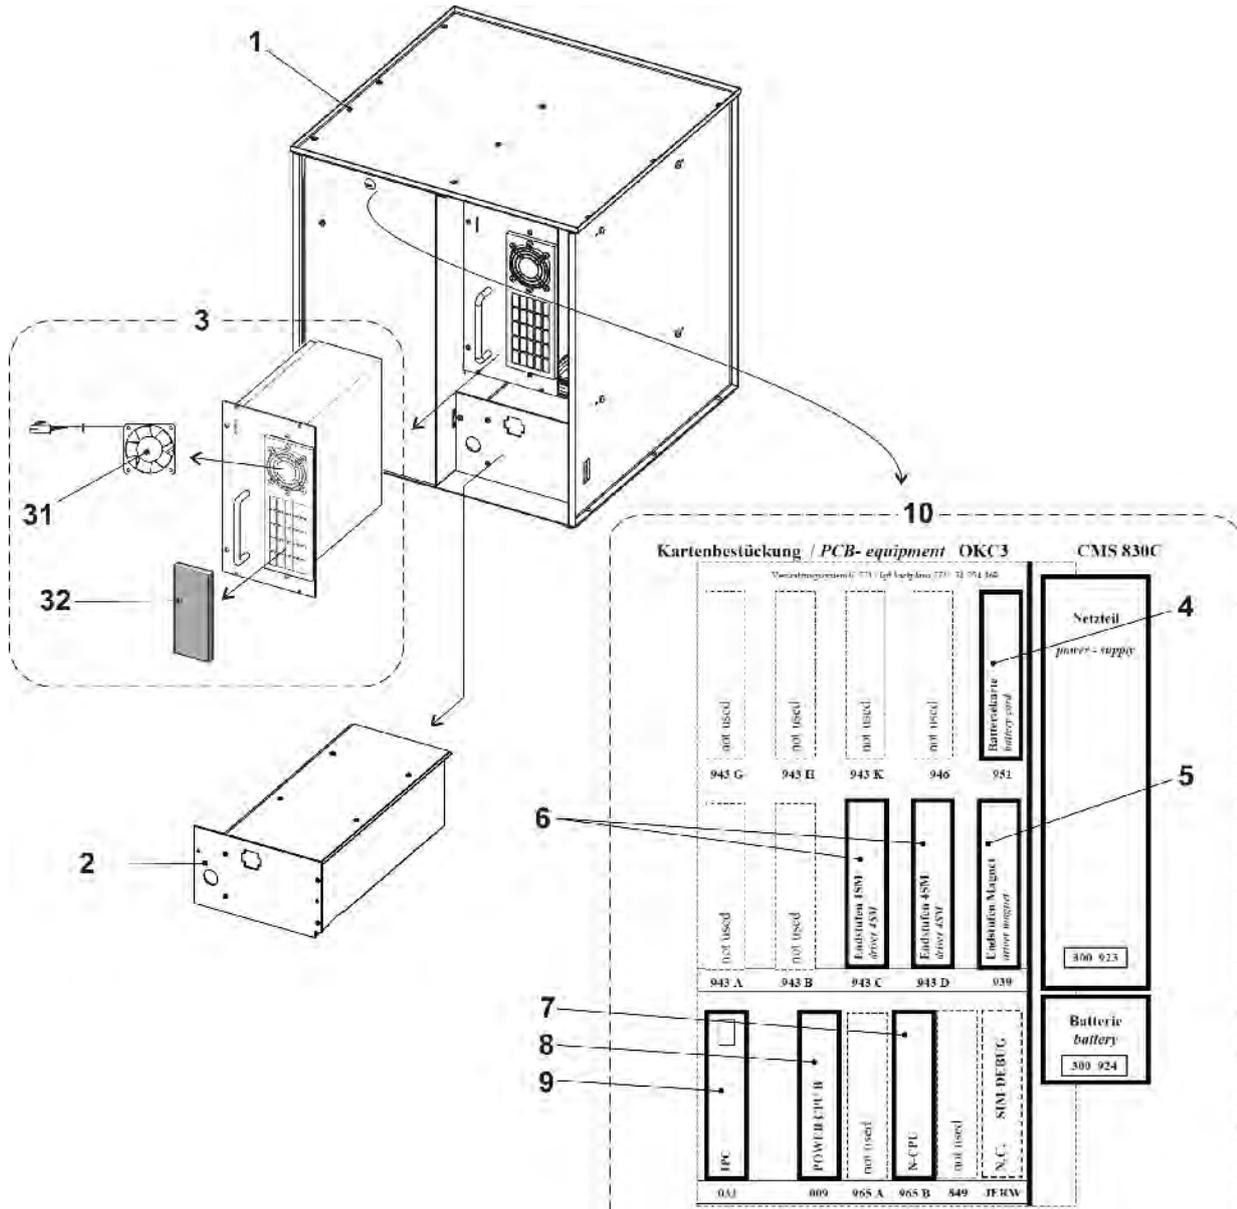


14.2 Right control cabinet

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|---------------------|---------|
| Σ | Control unit on the right complete 2A 72" okc | 238 738 | | | |
| 1 | Control unit on the right without equipment | 238 737 | 3 | Card relay okc | 300 953 |
| 1a | Axial flow fan Servo 05 | 229 059 | 4 | Card CWAZ | 300 929 |
| 2 | Card Servo6 okc | 301 000 | 5 | Capacitor card CWAZ | 300 936 |

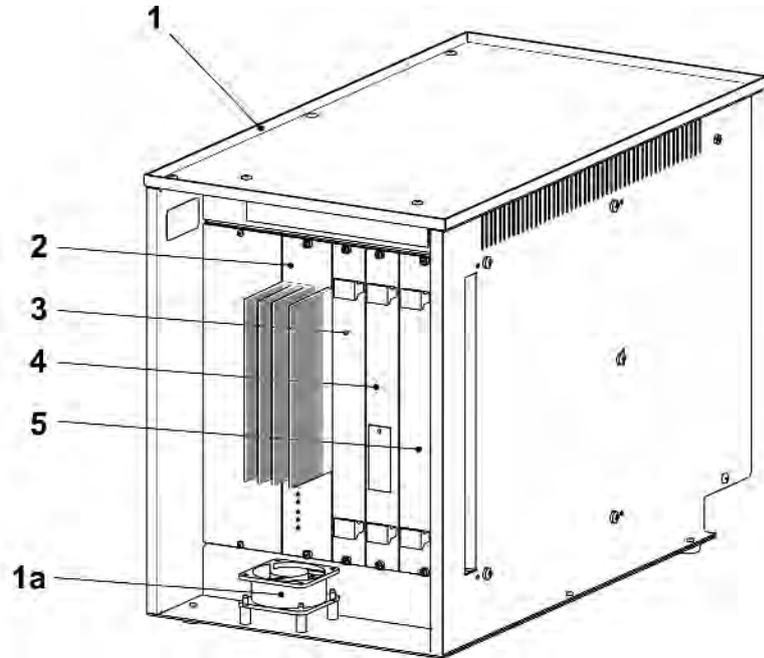

15 Deliverable accessories

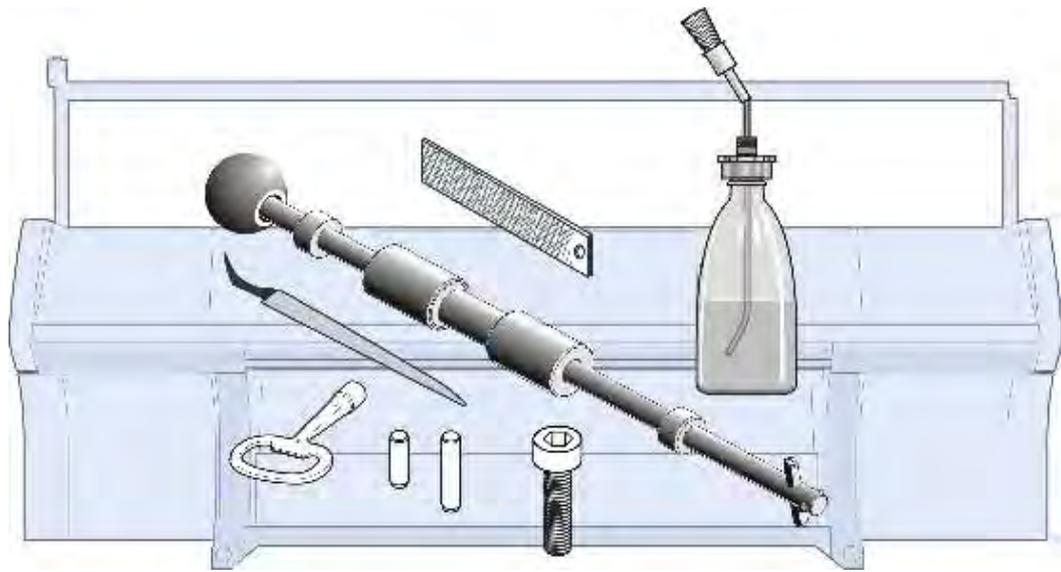


You can order the following tools, lubricants and expendables.

The following list does not correspond to the scope of delivery of the knitting machine.


15.1 Accessories part 1

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---------------------------------------|----------------|-----|--------------------------|---------|
| Σ | Accessories standard part 1 | 265 182 | | | |
| 2 | Extraction hook | 232 027 | 8 | Working hook | 227 249 |
| 2a | Small pin | 202 843 | 9 | Fuse 3,15A T/440V 6,3x32 | 025 261 |
| 2b | Pencil | 232 022 | 10 | Fuse 6,3A T/440V 6,3x32 | 026 809 |
| 3 | Grease Stoll Grease 0475, 150g | 270 721 | 11 | Fuse 10A T/440V 6,3x32 | 025 258 |
| 4 | Textile machine oil Stolltex T 46, 1l | 268 621 | 12 | Fuse 2,5A T/440V 6,3x32 | 217 465 |
| 5 | Oil combifix | 216 732 | 13 | Fuse 1A T/440V 6,3x32 | 209 321 |
| 6 | Measuring tape L=150cm | 228 180 | 14 | Fuse 1,6A T 5x20 | 008 715 |
| 7 | Key of switch cabinet | 009 346 | 15 | Micro fuse F1,0A | 008 748 |

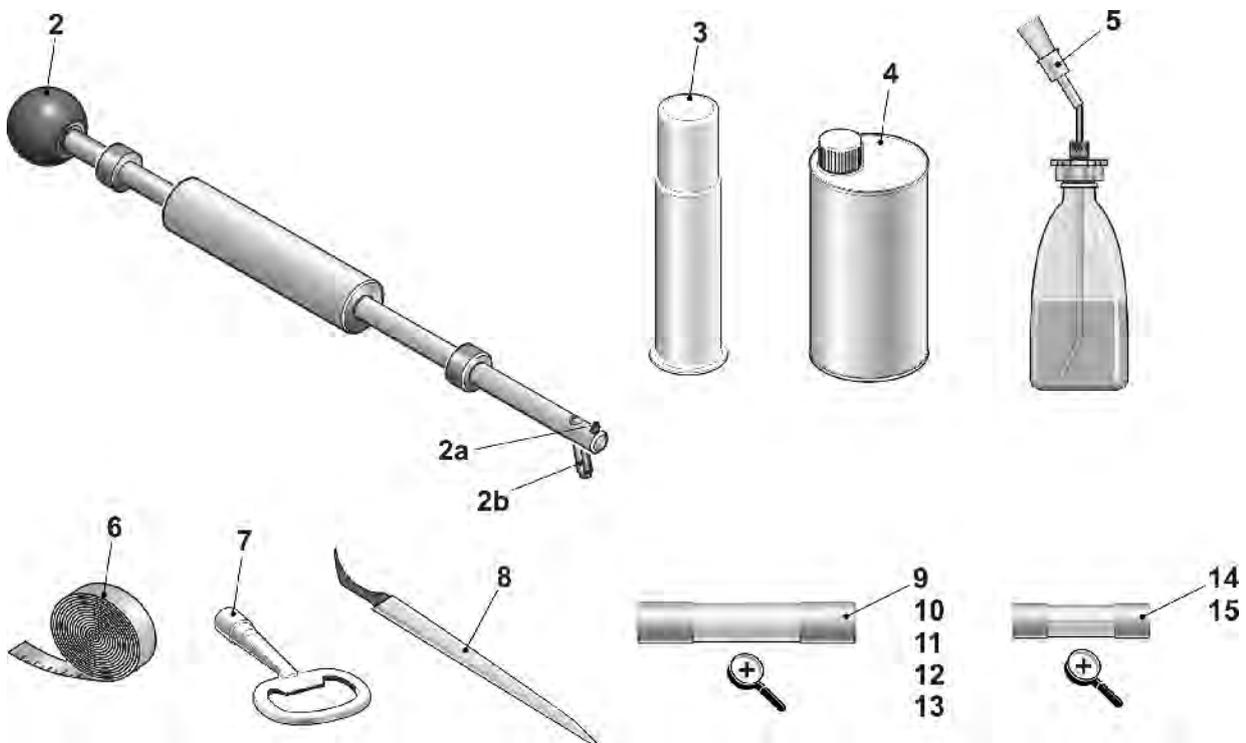


15.2 Accessories part 2

| Pos | Designation | Id | Pos | Designation | Id |
|----------|------------------------------------|----------------|-----|-----------------|---------|
| Σ | Accessories standard part 2 | 265 183 | 3 | Signal lightLED | 240 395 |
| 2 | Shim | 056 569 | 500 | Setscrew M16x40 | 244 061 |

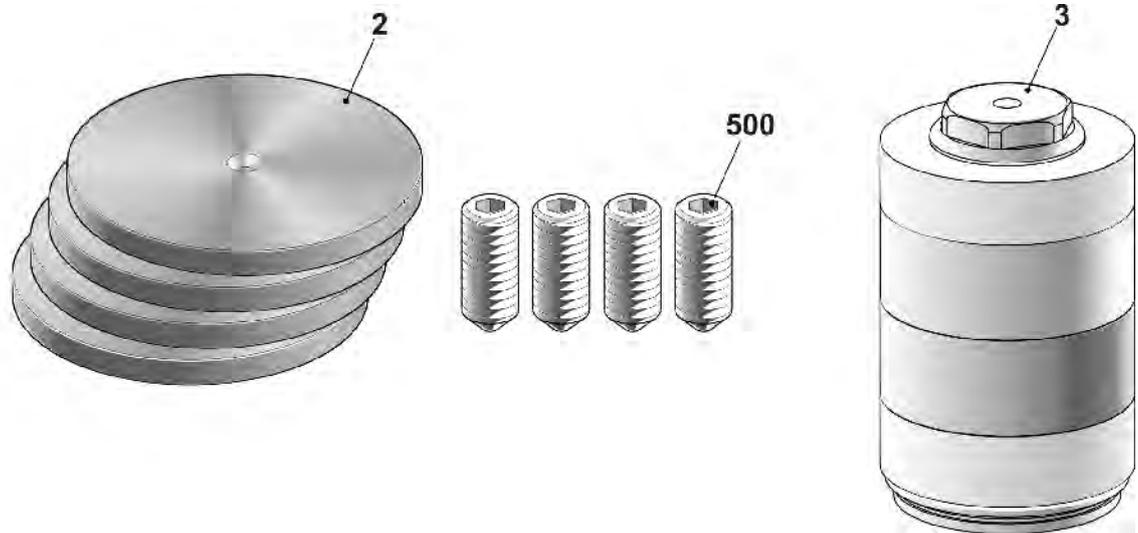


16 Special attachments

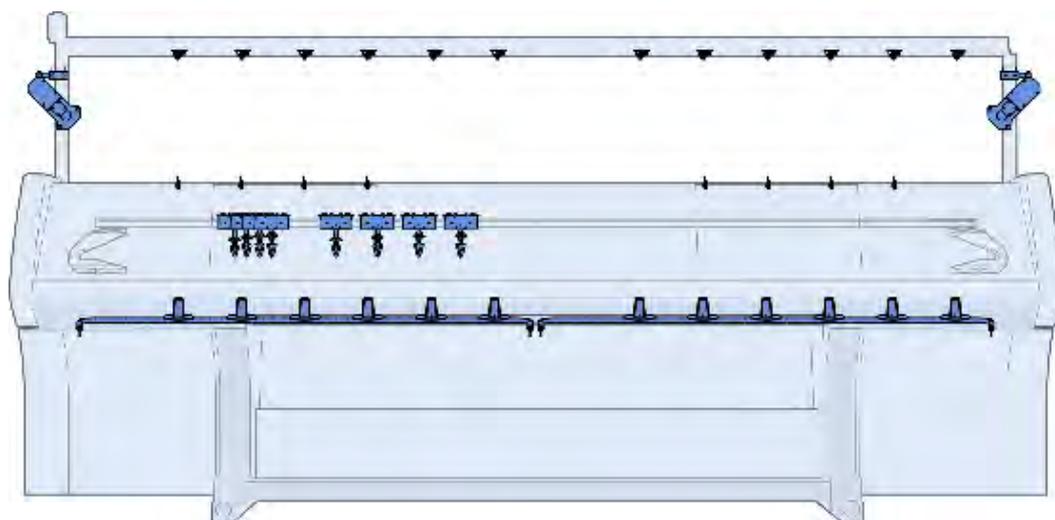


16.1 Complete intarsia yarn carriers

| Pos | Designation | ID | Pos | Designation | ID |
|-----|---------------------------|---------|-----|---------------------------|---------|
| 1 | IFF carriage 1+8 complete | 213 773 | 3 | IFF carriage 3+6 complete | 213 775 |
| 2 | IFF carriage 2+7 complete | 213 774 | 4 | IFF carriage 4+5 complete | 213 776 |

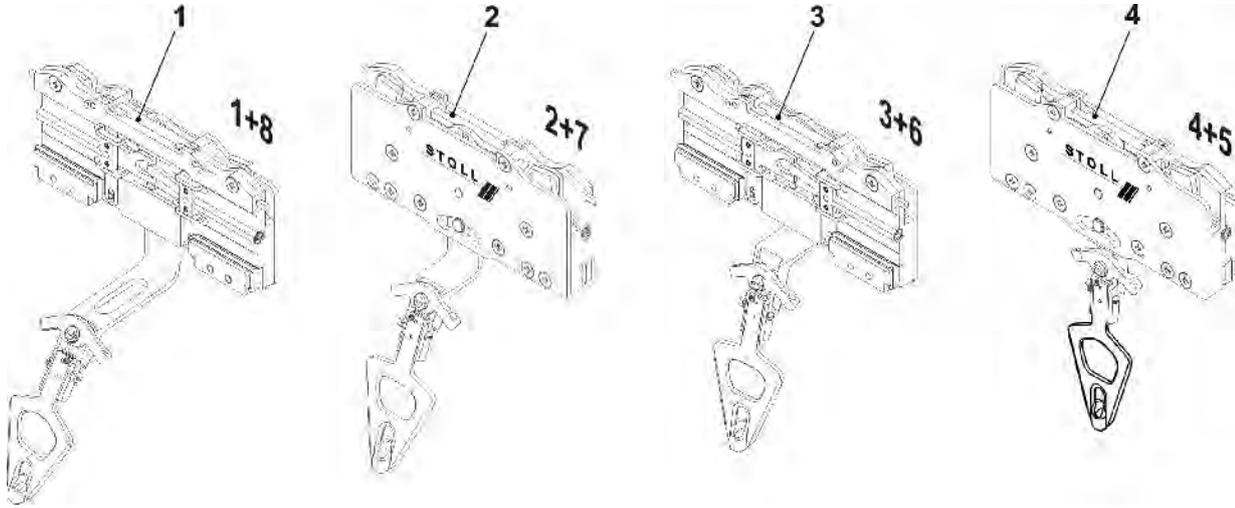


16.1.1 Carriage IFF

| Pos | Designation | ID | Pos | Designation | ID |
|----------|------------------------------------|----------------|-----|--------------------------------|---------|
| Σ | IFF carriage 1+8 complete | 213 773 | | | |
| | IFF carriage 2+7 complete | 213 774 | 11 | Cover | 213 392 |
| | IFF carriage 3+6 complete | 213 775 | 12 | Clamping lever on the right | 216 100 |
| | IFF carriage 4+5 complete | 213 776 | 13 | Clamping lever on the left | 216 101 |
| 1 | Basic plate complete | 213 408 | 14 | Pressure plate 2,04 | 201 654 |
| 2 | Slider | 217 188 | | Pressure plate 2,06 | 208 924 |
| 3 | Locking bar | 212 508 | 16 | Spring pin | 201 677 |
| 4 | Sliding block | 213 807 | 17 | Lifter | 212 547 |
| 7 | Locating pin 3,3 (2+7/3+6) | 212 504 | 18 | Sliding part | 213 391 |
| | Locating pin 3,4 (1+8/2+7/3+6/4+5) | 212 505 | 21 | Threaded bolt | 213 399 |
| 8 | Locating pin 3,3 (2+7/3+6/4+5) | 212 504 | 500 | Countersunk head screw M4x6 | 022 994 |
| | Locating pin 3,4 (2+7/3+6/4+5) | 212 505 | 502 | Countersunk head screw M4x12,5 | 022 979 |
| | Locating pin 3,5 (1+8) | 212 506 | 506 | Compression spring 4,0x0,7x25 | 022 969 |
| 9 | Thrust piece | 212 773 | 508 | Compression spring 2,8x0,35x19 | 023 394 |
| 10 | Pressure roller | 212 774 | | | |

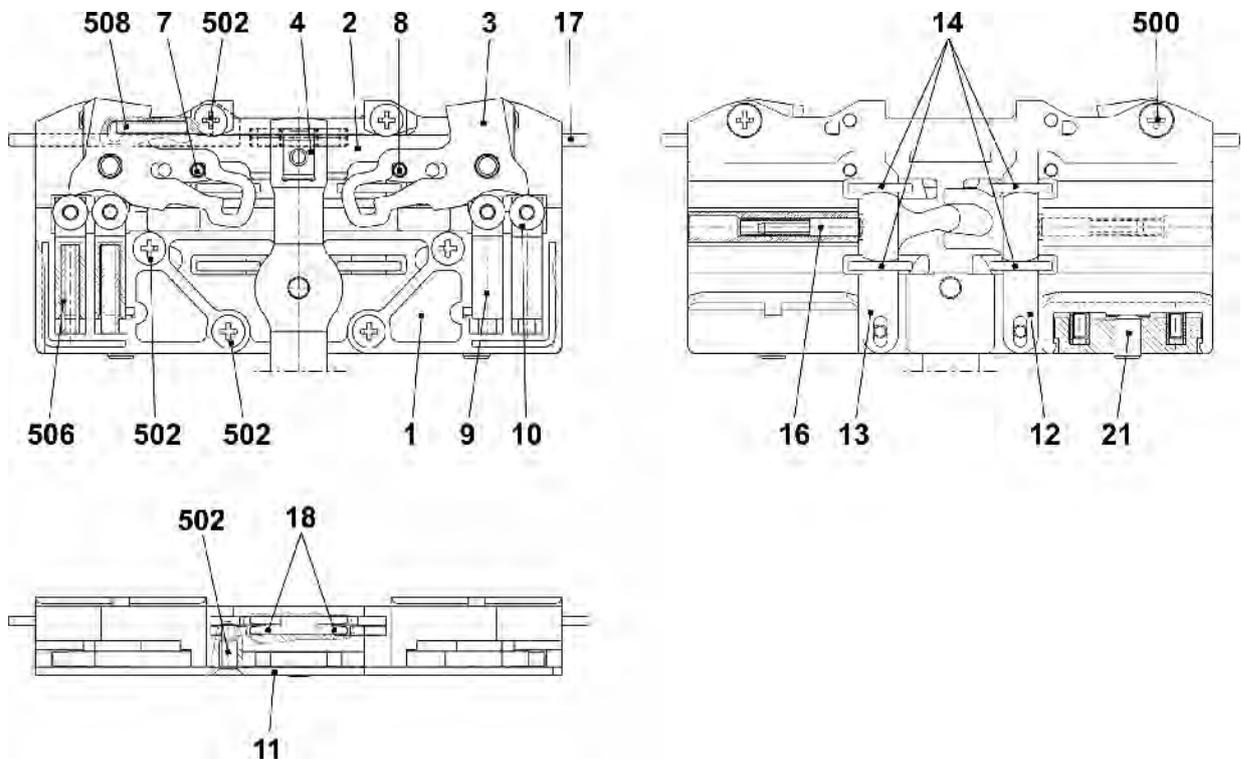


16.1.2 Bow and head IFF

| Pos | Designation | ID | Pos | Designation | ID | |
|----------|---------------------------|---------|-----|----------------------|----------------------|---------|
| Σ | IFF carriage 1+8 complete | 213 773 | 5 | YC head 1+8 complete | 216 352 | |
| | IFF carriage 2+7 complete | 213 774 | | 6 | YC head 2+7 complete | 216 353 |
| | IFF carriage 3+6 complete | 213 775 | | 7 | YC head 3+6 complete | 216 354 |
| | IFF carriage 4+5 complete | 213 776 | | 8 | YC head 4+5 complete | 216 355 |
| 1 | FF bow 1+8 complete | 213 768 | a | Yarn guide angle | 201 672 | |
| 2 | FF bow 2+7 complete | 213 769 | 500 | Cap screw M4x8 | 022 977 | |
| 3 | FF bow 3+6 complete | 213 770 | 501 | CirclipS4-FST | 022 774 | |
| 4 | FF bow 4+5 complete | 213 771 | | | | |

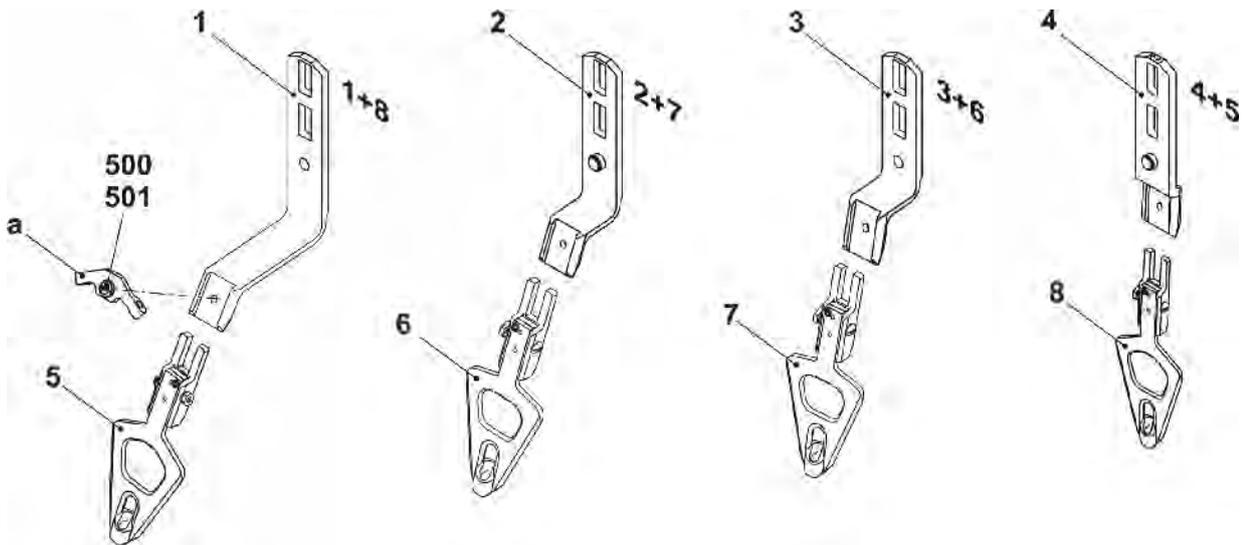


16.2 Complete intarsia yarn carriers (for ultra coarse yarns)

| Pos | Designation | ID | Pos | Designation | ID |
|-----------|------------------------------------|----------------|-----|--------------------------------|---------|
| ΣA | IFF carriage 1+8 complete | 268 051 | 10 | Pressure roller | 212 774 |
| ΣB | IFF carriage 2+7 complete | 268 052 | 11 | Cover | 213 392 |
| ΣC | IFF carriage 3+6 complete | 268 053 | 12 | Clamping lever on the right | 216 100 |
| ΣD | IFF carriage 4+5 complete | 268 054 | 13 | Clamping lever on the left | 216 101 |
| 1 | Basic plate complete | 213 408 | 14 | Pressure plate 2,04 | 201 654 |
| 2 | Slider | 217 188 | | Pressure plate 2,06 | 208 924 |
| 3 | Locking bar | 212 508 | 16 | Spring pin | 201 677 |
| 4 | Sliding block | 213 807 | 17 | Lifter | 212 547 |
| 5 | FF bow x+y complete | | 18 | Sliding part | 213 391 |
| 7 | Locating pin 3,3 (2+7/3+6) | 212 504 | 21 | Threaded bolt | 213 399 |
| | Locating pin 3,4 (1+8/2+7/3+6/4+5) | 212 505 | 500 | Countersunk head screw M4x6 | 022 994 |
| 8 | Locating pin 3,3 (2+7/3+6/4+5) | 212 504 | 502 | Countersunk head screw M4x12,5 | 022 979 |
| | Locating pin 3,4 (2+7/3+6/4+5) | 212 505 | 506 | Compression spring 4,0x0,7x25 | 022 969 |
| | Locating pin 3,5 (1+8) | 212 506 | 508 | Compression spring 2,8x0,35x19 | 023 394 |
| 9 | Thrust piece | 212 773 | | | |

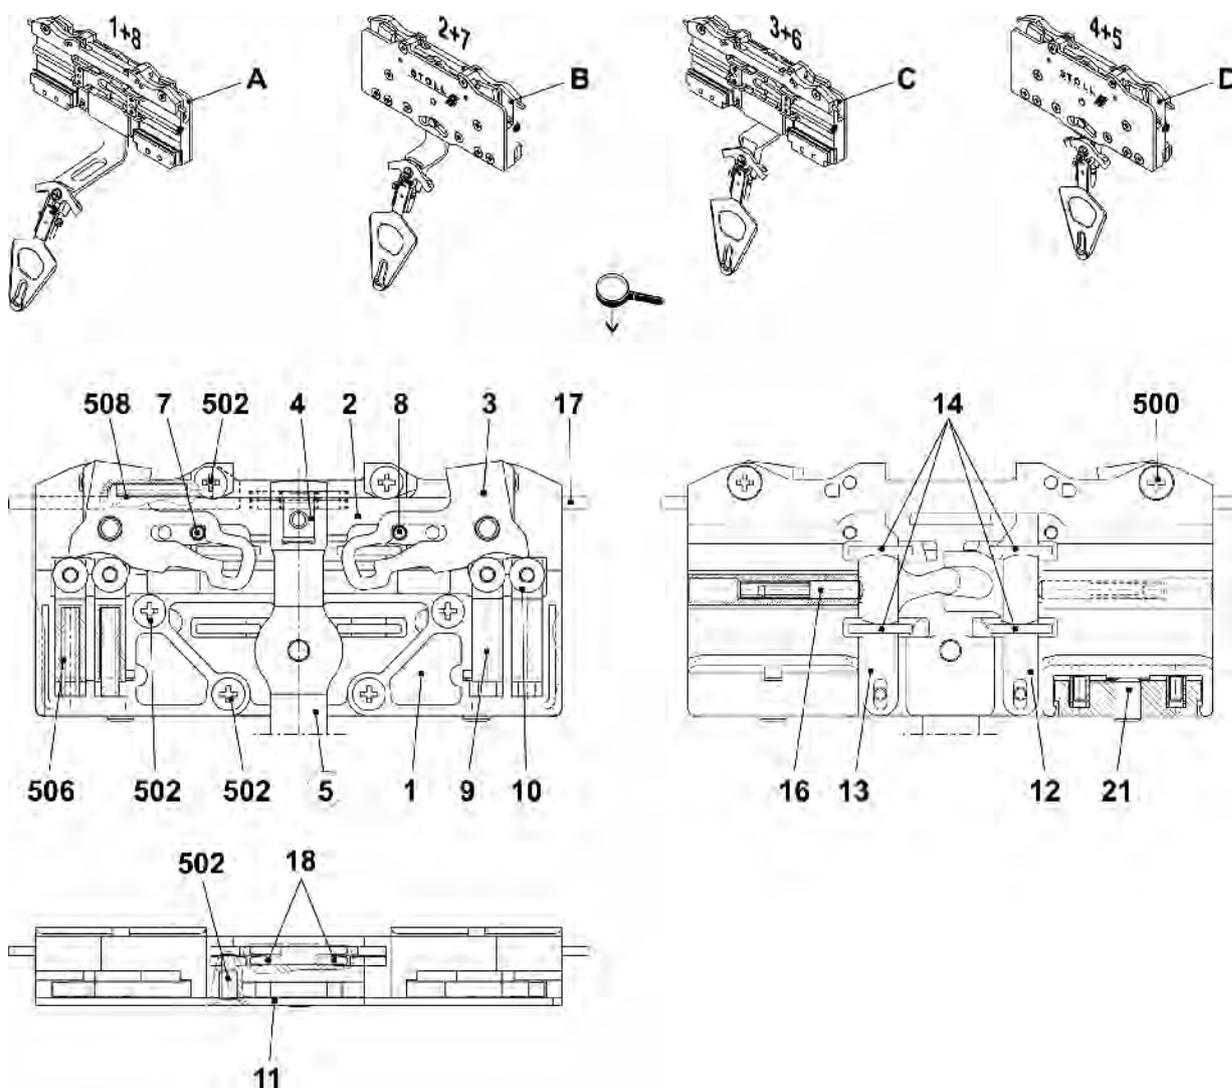


16.2.1 Bow and head IFF (for ultra coarse yarns)

| Pos | Designation | ID | Pos | Designation | ID |
|----------|---------------------------|----------------|-----|----------------------|---------|
| Σ | IFF carriage 1+8 complete | 268 051 | 5 | YC head 1+8 complete | 268 048 |
| | IFF carriage 2+7 complete | 268 052 | 6 | YC head 2+7 complete | 268 049 |
| | IFF carriage 3+6 complete | 268 053 | 7 | YC head 3+6 complete | 268 050 |
| | IFF carriage 4+5 complete | 268 054 | 8 | YC head 4+5 complete | 268 049 |
| 1 | FF bow 1+8 complete | 213 768 | a | Yarn guide angle | 266 997 |
| 2 | FF bow 2+7 complete | 213 769 | 500 | Pan head screw M4x8 | 023 579 |
| 3 | FF bow 3+6 complete | 213 770 | 501 | Circlip S4-FST | 022 774 |
| 4 | FF bow 4+5 complete | 213 771 | | | |

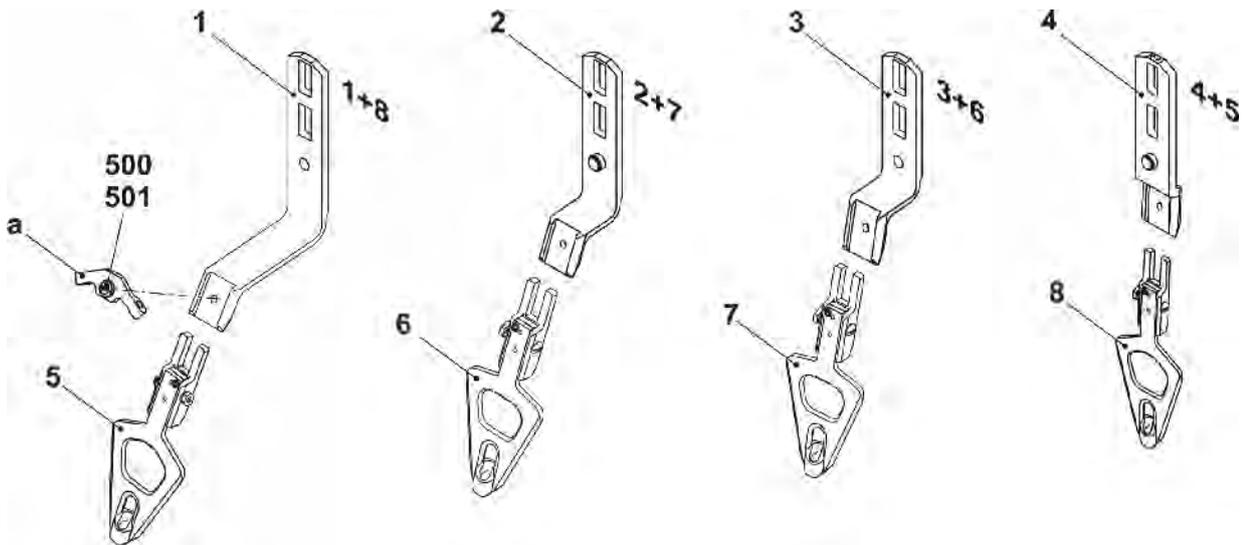


16.3 Yarn carrier carriage (for ultra coarse yarns)

| Pos | Designation | ID | Pos | Designation | ID |
|-----|------------------------------------|---------|-----|------------------------------------|---------|
| 1 | Yarn carrier carriage 1+8 complete | 268 903 | 3 | Yarn carrier carriage 3+6 complete | 268 901 |
| 2 | Yarn carrier carriage 2+7 complete | 268 902 | 4 | Yarn carrier carriage 4+5 complete | 268 900 |

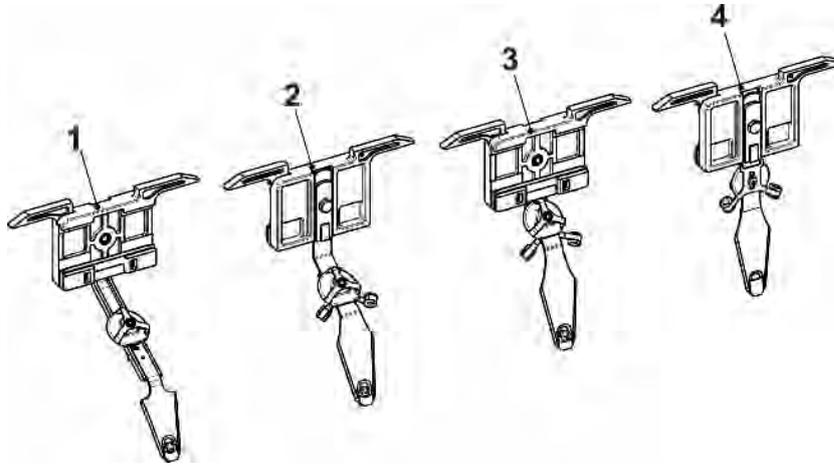


16.4 Carriage of plating yarn carrier

| Pos | Designation | ID | Pos | Designation | ID |
|--------------|--|---------|--------------|--|---------|
| Σ 2+7 | Carriage set of plating YC2+7 | 258 600 | Σ 2+7 | Carriage set of plating YC2+7 | 258 603 |
| 1 | Yarn carrier carriage 2+7 completeE7-8 | 257 642 | 1 | Yarn carrier carriage 2+7 completeE10-14 | 257 646 |
| 2 | Yarn carrier carriage complete EW 35 | 257 610 | 2 | Yarn carrier carriage complete EW 35 | 257 610 |
| 3 | Shim | 213 035 | 3 | Shim | 213 035 |
| 500 | Hexagon screw M5x10 | 020 351 | 500 | Hexagon screw M5x10 | 020 351 |
| Σ 3+6 | Carriage set of plating YC3+6 | 258 601 | Σ 3+6 | Carriage set of plating YC3+6 | 258 604 |
| 1 | Yarn carrier carriage 2+7 completeE7-8 | 257 643 | 1 | Yarn carrier carriage 2+7 completeE10-14 | 257 647 |
| 2 | Yarn carrier carriage complete EW 35 | 257 610 | 2 | Yarn carrier carriage complete EW 35 | 257 610 |
| 3 | Shim | 213 035 | 3 | Shim | 213 035 |
| 500 | Hexagon screw M5x10 | 020 351 | 500 | Hexagon screw M5x10 | 020 351 |
| Σ 4+5 | Carriage set of plating YC4+5 | 258 602 | Σ 4+5 | Carriage set of plating YC4+5 | 258 605 |
| 1 | Yarn carrier carriage 2+7 completeE7-8 | 257 644 | 1 | Yarn carrier carriage 2+7 completeE10-14 | 257 648 |
| 2 | Yarn carrier carriage complete EW 35 | 257 610 | 2 | Yarn carrier carriage complete EW 35 | 257 610 |
| 3 | Shim | 213 035 | 3 | Shim | 213 035 |
| 500 | Hexagon screw M5x10 | 020 351 | 500 | Hexagon screw M5x10 | 020 351 |

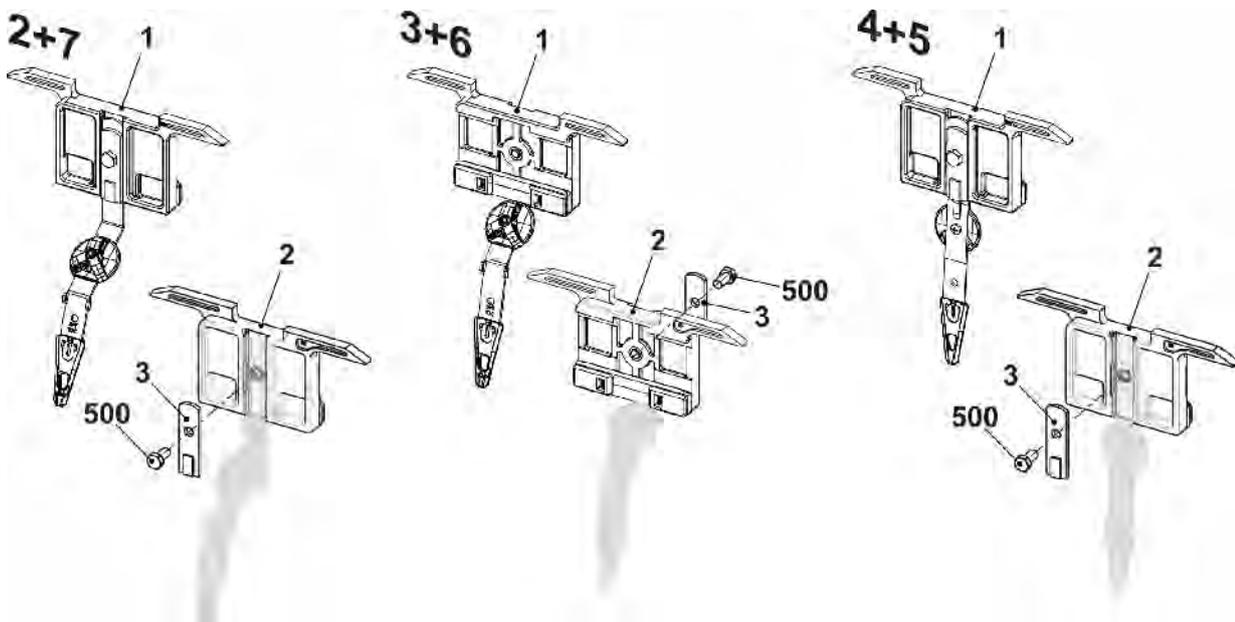


16.5 Additional board at the bottom

| Pos | Designation | Id. no. | Pos | Designation | Id. no. |
|----------|--|----------------|-----|----------------------|---------|
| Σ | Additional board8XX at the bottom | 253 646 | | | |
| 1 | Additional bobbin board welded | 253 472 | 8 | Yarn guide | 243 765 |
| 2 | Positioning pin | 202 777 | 9 | Yarn guide bracket | 241 581 |
| 3 | DiskD=130 | 062 385 | 500 | Pan-head screw M4x30 | 023 681 |
| 4 | Bobbin support | 200 363 | 501 | Washer 5,3x30x1,25 | 023 556 |

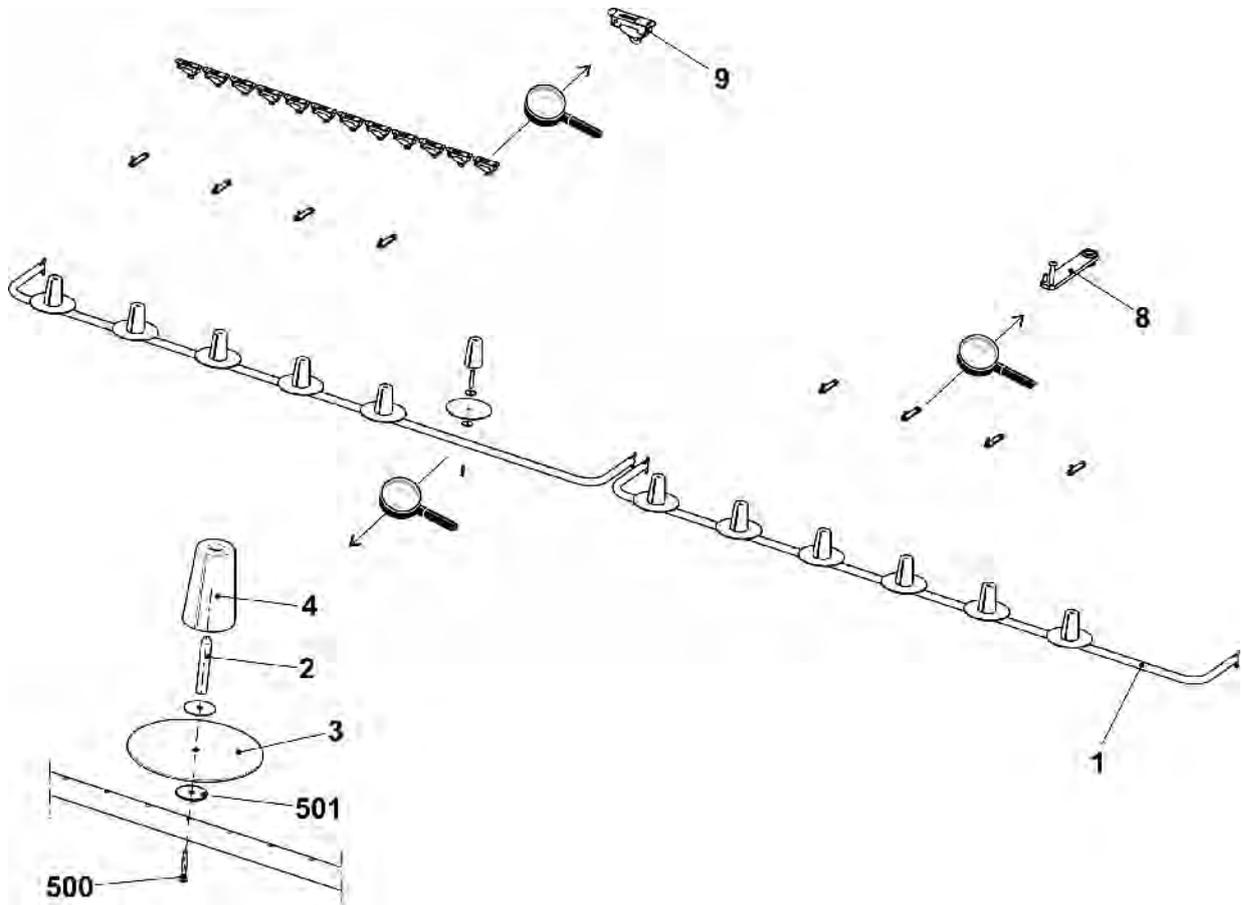


16.6 Additional board retrofit kit

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|-----------------------------|---------|
| Σ | Additional board retrofit kit 8XX | 243 776 | | | |
| 1 | Additional bobbin board 7XX/8XX | 241 928 | 3 | Support on the left | 243 602 |
| 1a | Additional bobbin board welded | 241 927 | 4 | Support on the right | 243 603 |
| 1b | Positioning pin | 202 777 | 5 | Straps | 239 295 |
| 1c | Disk D=130 | 062 385 | 6 | Yarn guide bracket complete | 241 581 |
| 1d | Bobbin support | 200 363 | 500 | Self-locking screw M6x12 | 023 415 |
| 510 | Pan-head screw M4x30 | 023 681 | 501 | Pan-head screw M8x16 | 023 113 |
| 511 | Washer 5,3x30x1,25 | 023 556 | 502 | Serrated nut M6-10 | 023 414 |
| 2 | Yarn guide bar84" | 236 932 | 503 | Square nut M8 | 023 269 |

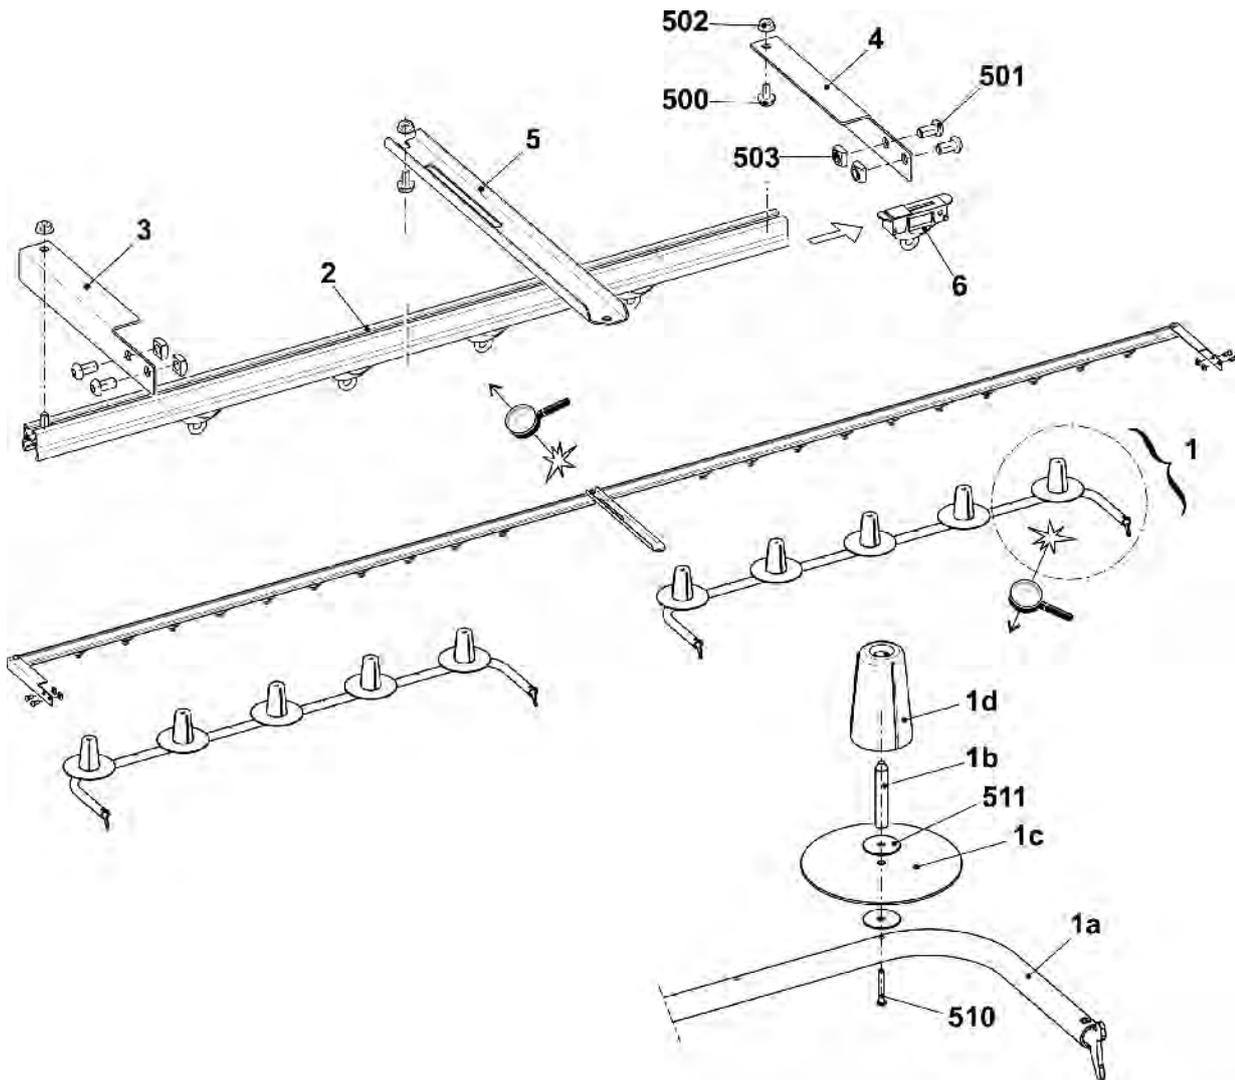


16.7 Bobbin holder on the left

| Pos | Designation | ID | Pos | Designation | ID |
|----------|----------------------------------|----------------|-----|---------------------------|---------|
| Σ | Bobbin holder on the left | 253 965 | 501 | Pan-head screw M4x25 | 023 511 |
| 1 | Support | 253 969 | 502 | Washer 4 | 022 481 |
| 2 | Support | 252 769 | 503 | Hexagon nut M4-6 | 022 536 |
| 3 | Leaf spring | 253 350 | 505 | Washer 6 | 022 431 |
| 4 | Support on the left | 253 347 | 506 | Hexagon nut M6-6 | 022 899 |
| 5 | Spacer | 253 349 | 507 | Pan-head screw M4x16 | 023 412 |
| 6 | Yarn detector Massardi | 226 964 | 508 | Pan-head screw M4x12 | 023 062 |
| 7 | Clamp | 228 583 | 509 | Pan-head screw M8x16 | 023 113 |
| 8 | Slot nut | 228 851 | 510 | Pan-head screw M8x18 | 251 331 |
| 10 | Cover | 253 968 | 511 | Pan-head screw M6x30 | 023 451 |
| 11 | Holding angle | 253 964 | 512 | Serrated lock washer A4,3 | 022 482 |
| 12 | Holding angle | 253 963 | 513 | Pan-head screw M4x6 | 022 946 |
| 13 | Holding angle | 253 967 | 514 | Pan-head screw M4x10 | 023 450 |
| 14 | Cable plating | 253 468 | 515 | Cap nut M4-6 | 253 805 |

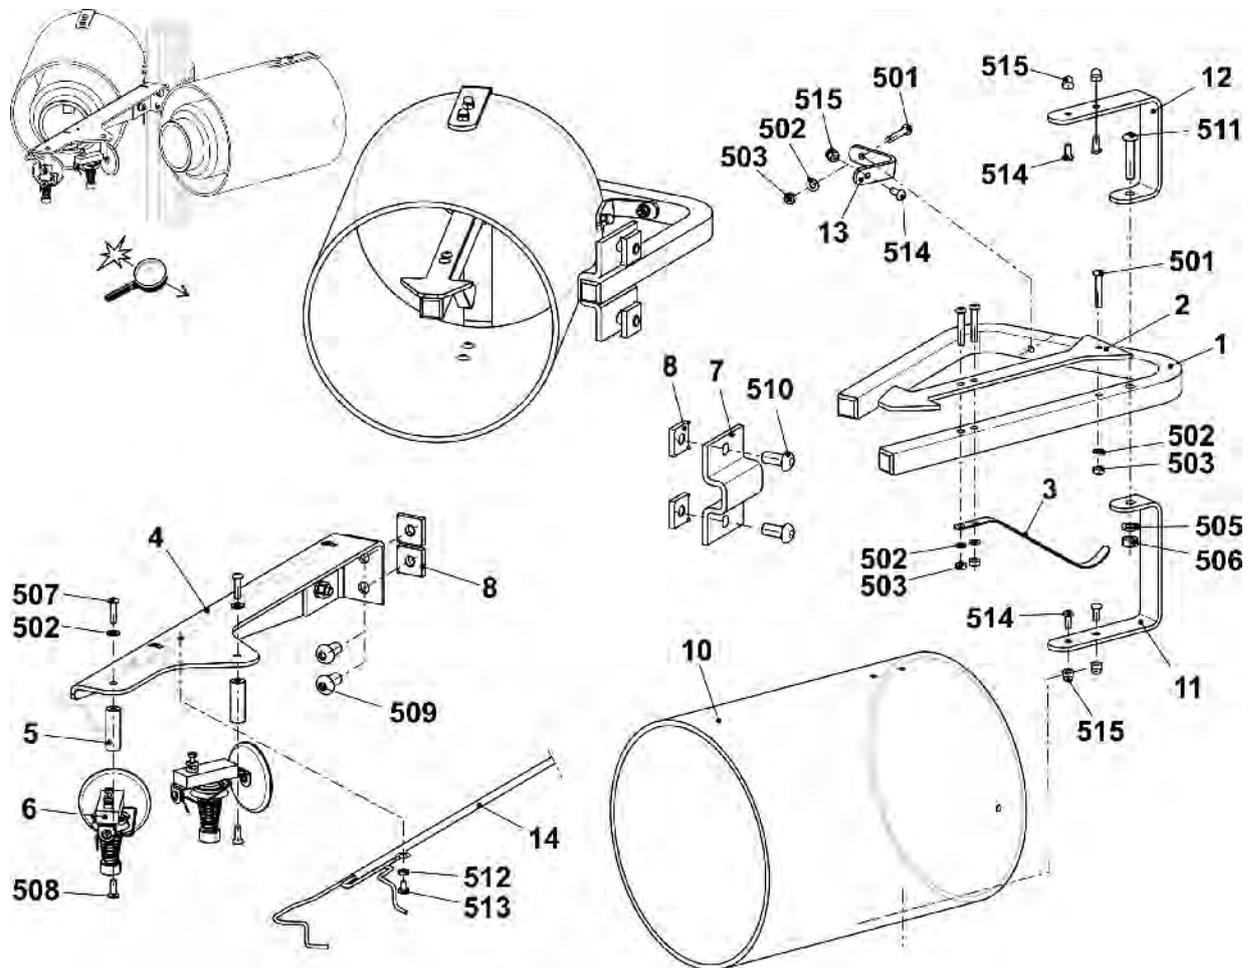


16.8 Bobbin holder on the right

| Pos | Designation | ID | Pos | Designation | ID |
|----------|-----------------------------------|----------------|-----|---------------------------|---------|
| Σ | Bobbin holder on the right | 253 966 | 501 | Pan-head screw M4x25 | 023 511 |
| 1 | Support | 253 969 | 502 | Washer 4 | 022 481 |
| 2 | Support | 252 769 | 503 | Hexagon nut M4-6 | 022 536 |
| 3 | Leaf spring | 253 350 | 505 | Washer 6 | 022 431 |
| 4 | Support right | 253 348 | 506 | Hexagon nut M6-6 | 022 899 |
| 5 | Spacer | 253 349 | 507 | Pan-head screw M4x16 | 023 412 |
| 6 | Yarn detector Massardi | 226 964 | 508 | Pan-head screw M4x12 | 023 062 |
| 7 | Clamp | 228 583 | 509 | Pan-head screw M8x16 | 023 113 |
| 8 | Slot nut | 228 851 | 510 | Pan-head screw M8x18 | 251 331 |
| 10 | Cover | 253 968 | 511 | Pan-head screw M6x30 | 023 451 |
| 11 | Holding angle | 253 964 | 512 | Serrated lock washer A4,3 | 022 482 |
| 12 | Holding angle | 253 963 | 513 | Pan-head screw M4x6 | 022 946 |
| 13 | Holding angle | 253 967 | 514 | Pan-head screw M4x10 | 023 450 |
| 14 | Cable plating | 253 468 | 515 | Cap nut M4-6 | 253 805 |

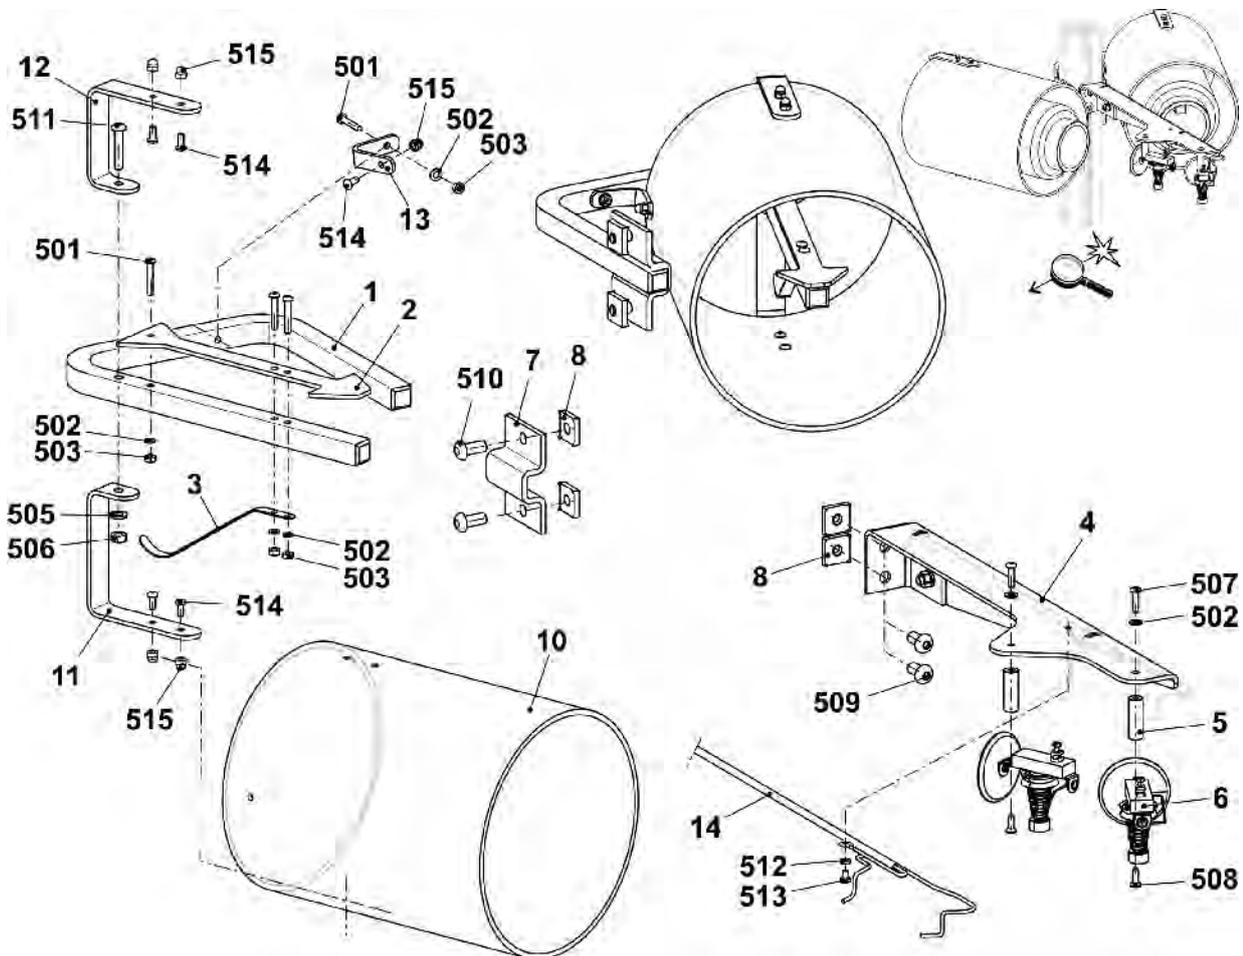


16.9 Yarn length measuring device on the right complete

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|--|---------|
| Σ | Yarn length measuring device on the right complete | 265 392 | | | |
| 1 | Yarn length measuring device on the right complete | 257 282 | 10 | Operating instructions of ASCON assembly | 266 069 |
| 2 | Cable ASCON | 257 239 | 500 | T-head bolt M8x25 | 022 866 |
| 3 | Support right | 265 045 | 501 | Serrated nut M8-10 | 023 026 |
| 5 | Adjustment weight | 212 241 | 503 | Cable tape 302x4,8 | 008 642 |
| 8 | DVD with operating instructions | 258 391 | 504 | Cap screw M5x12 | 020 132 |
| 9 | Holding plate | 258 386 | 505 | Washer 5 | 020 871 |

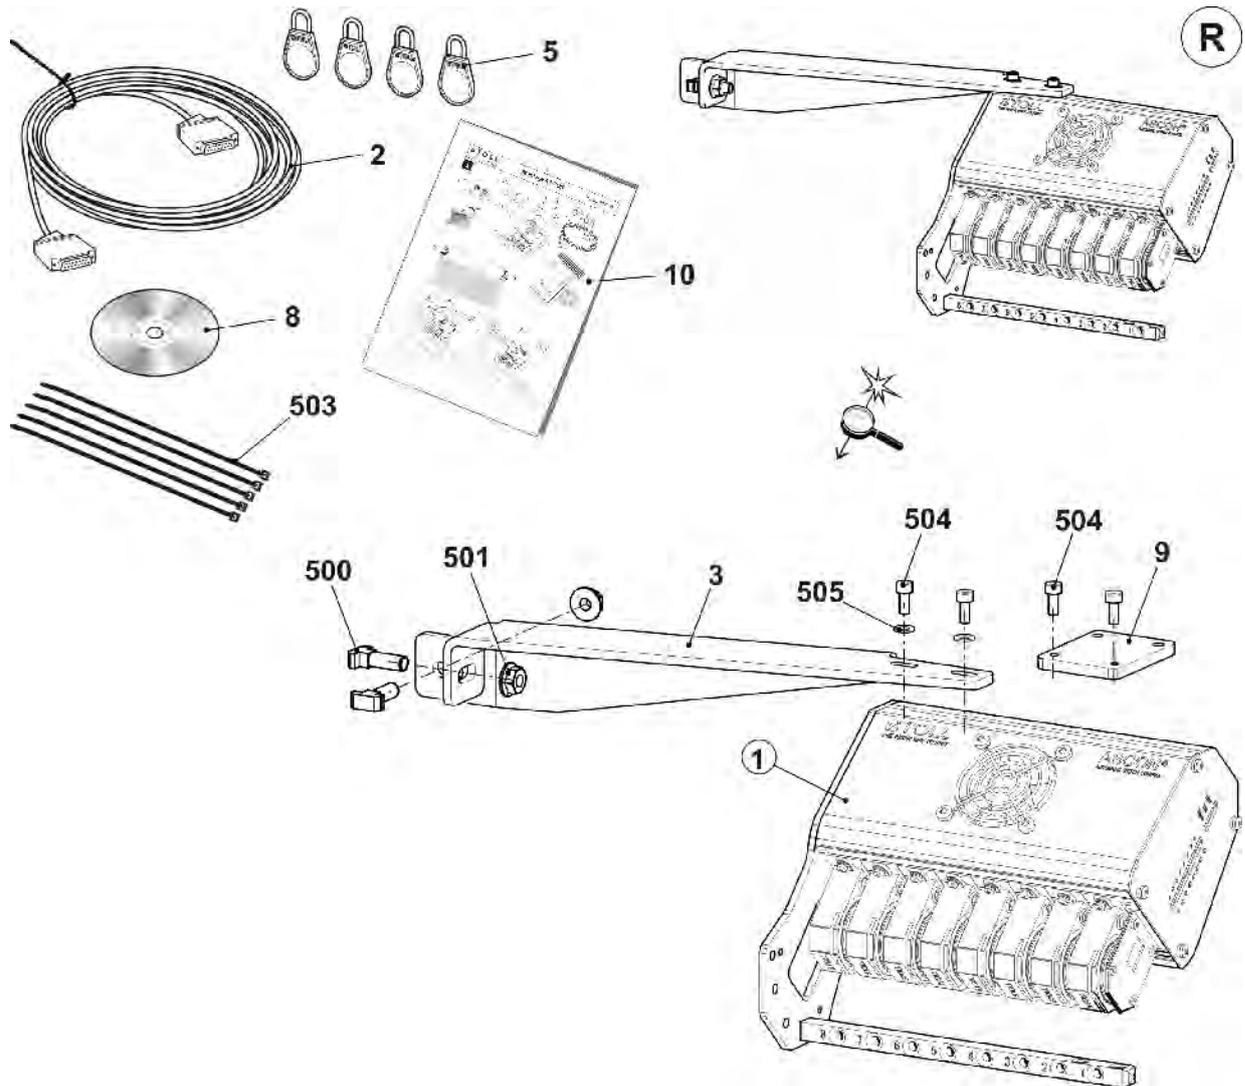


16.9.1 Yarn length measuring device on the right

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|-----------------------------------|---------|
| Σ | Yarn length measuring device on the right complete | 257 282 | 8 | Yarn guide rod | 257 139 |
| 1 | Housing | 257 281 | 9 | Card Ascon | 255 000 |
| 2 | Support | 257 278 | 10 | Threaded strip | 257 138 |
| 3 | Cover | 257 273 | 500 | Pan-head screw M5x10 | 023 247 |
| 4 | Fan with plug | 257 048 | 501 | Screw 50x15 | 251 728 |
| 5 | Protective grid fan Servo5 | 229 142 | 502 | Sheet metal screw ST3,5x13 | 022 940 |
| 6 | Sensor | 211 354 | 503 | Oval head screw with washer M3x10 | 023 380 |
| 6a | Rubber running ring | 258 582 | 504 | Spring nut M5 | 022 873 |
| 7 | Sensor complete | 212 406 | 505 | Serrated lock washer J3,7 | 022 554 |

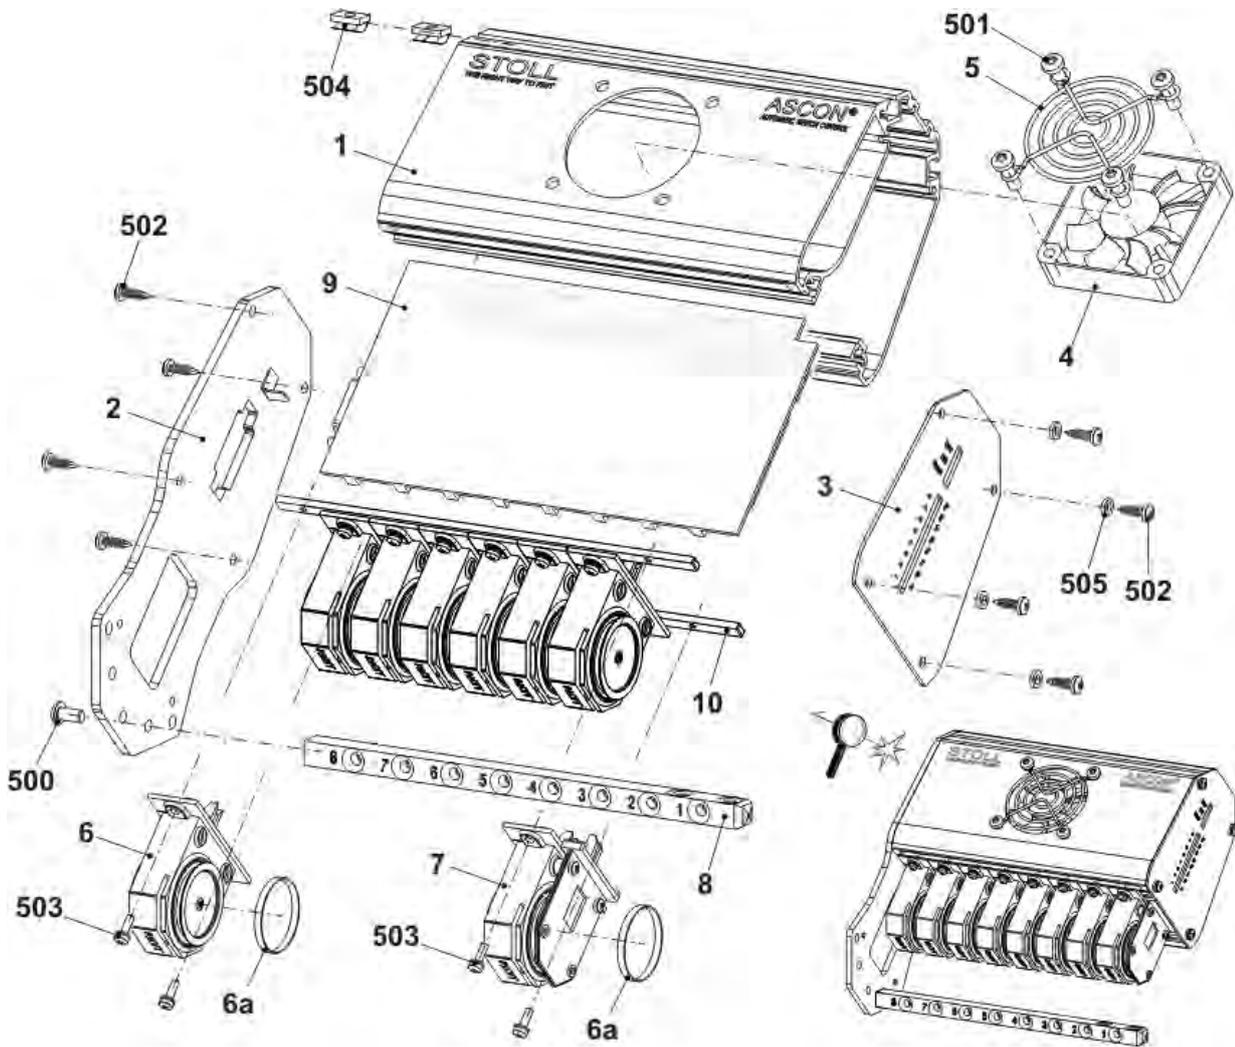


16.10 Yarn length measuring device on the left complete

| Pos | Designation | Id | Pos | Designation | Id |
|----------|--|----------------|-----|--|---------|
| Σ | Yarn length measuring device on the left complete | 265 391 | | | |
| 1 | Yarn length measuring device on the left complete | 257 283 | 10 | Operating instructions of ASCON assembly | 266 069 |
| 2 | Cable ASCON | 257 239 | 500 | T-head bolt M8x25 | 022 866 |
| 3 | Support on the left | 265 046 | 501 | Serrated nut M8-10 | 023 026 |
| 5 | Adjustment weight | 212 241 | 503 | Cable tape 302x4,8 | 008 642 |
| 8 | DVD with operating instructions | 258 391 | 504 | Cap screw M5x12 | 020 132 |
| 9 | Holding plate | 258 386 | 505 | Washer 5 | 020 871 |

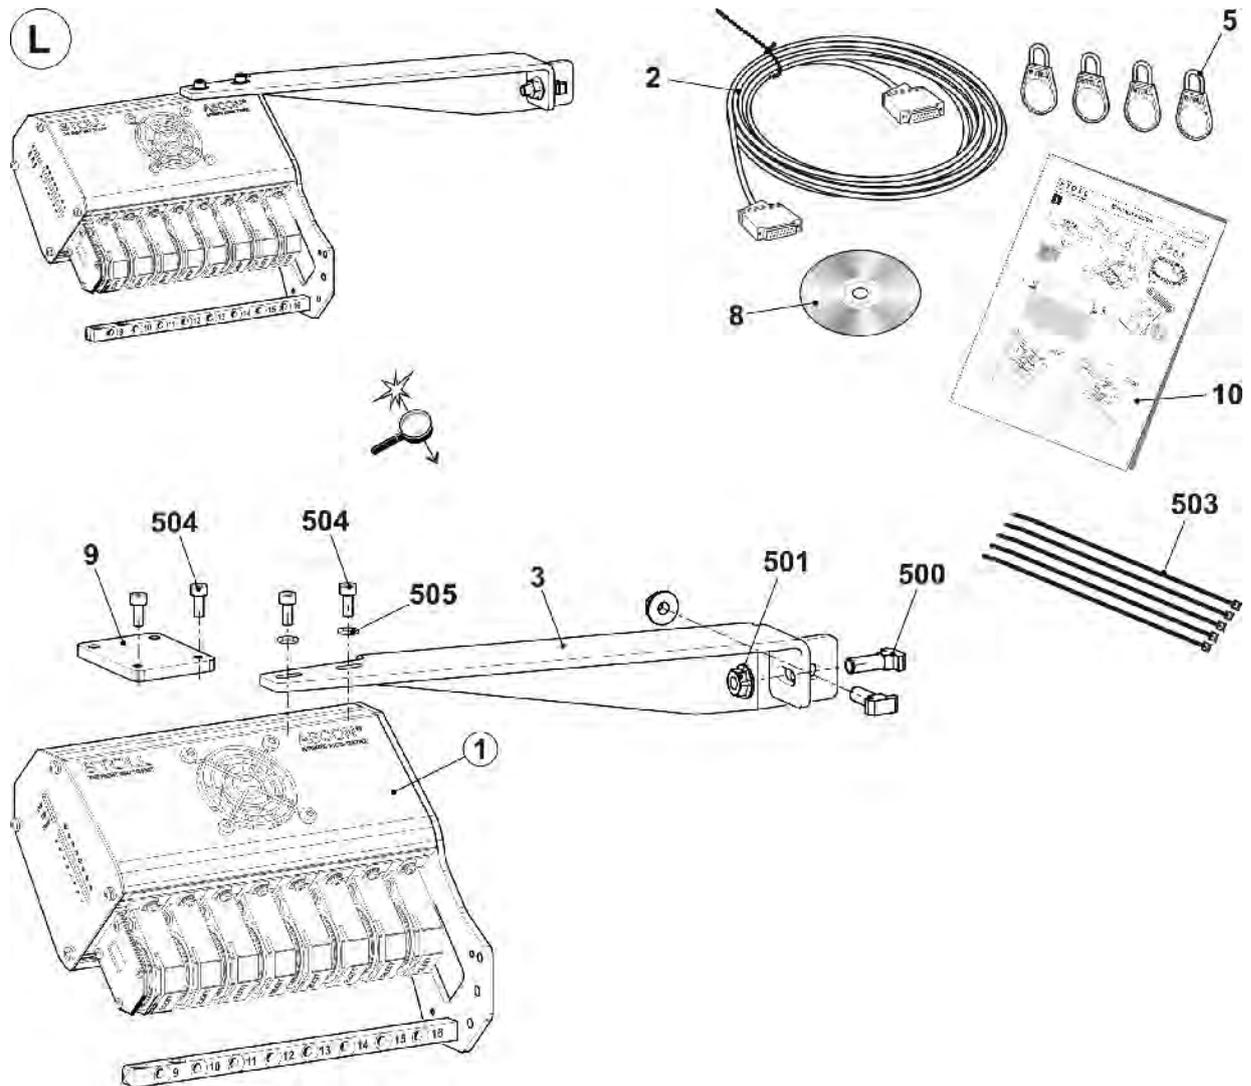

16.10.1 Yarn length measuring device on the right

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|-----|-----------------------------------|---------|
| Σ | Yarn length measuring device on the right complete | 257 282 | 8 | Yarn guide rod | 257 139 |
| 1 | Housing | 257 281 | 9 | Card Ascon | 255 000 |
| 2 | Support | 257 278 | 10 | Threaded strip | 257 138 |
| 3 | Cover | 257 273 | 500 | Pan-head screw M5x10 | 023 247 |
| 4 | Fan with plug | 257 048 | 501 | Screw 50x15 | 251 728 |
| 5 | Protective grid fan Servo5 | 229 142 | 502 | Sheet metal screw ST3,5x13 | 022 940 |
| 6 | Sensor | 211 354 | 503 | Oval head screw with washer M3x10 | 023 380 |
| 6a | Rubber running ring | 258 582 | 504 | Spring nut M5 | 022 873 |
| 7 | Sensor complete | 212 406 | 505 | Serrated lock washer J3,7 | 022 554 |

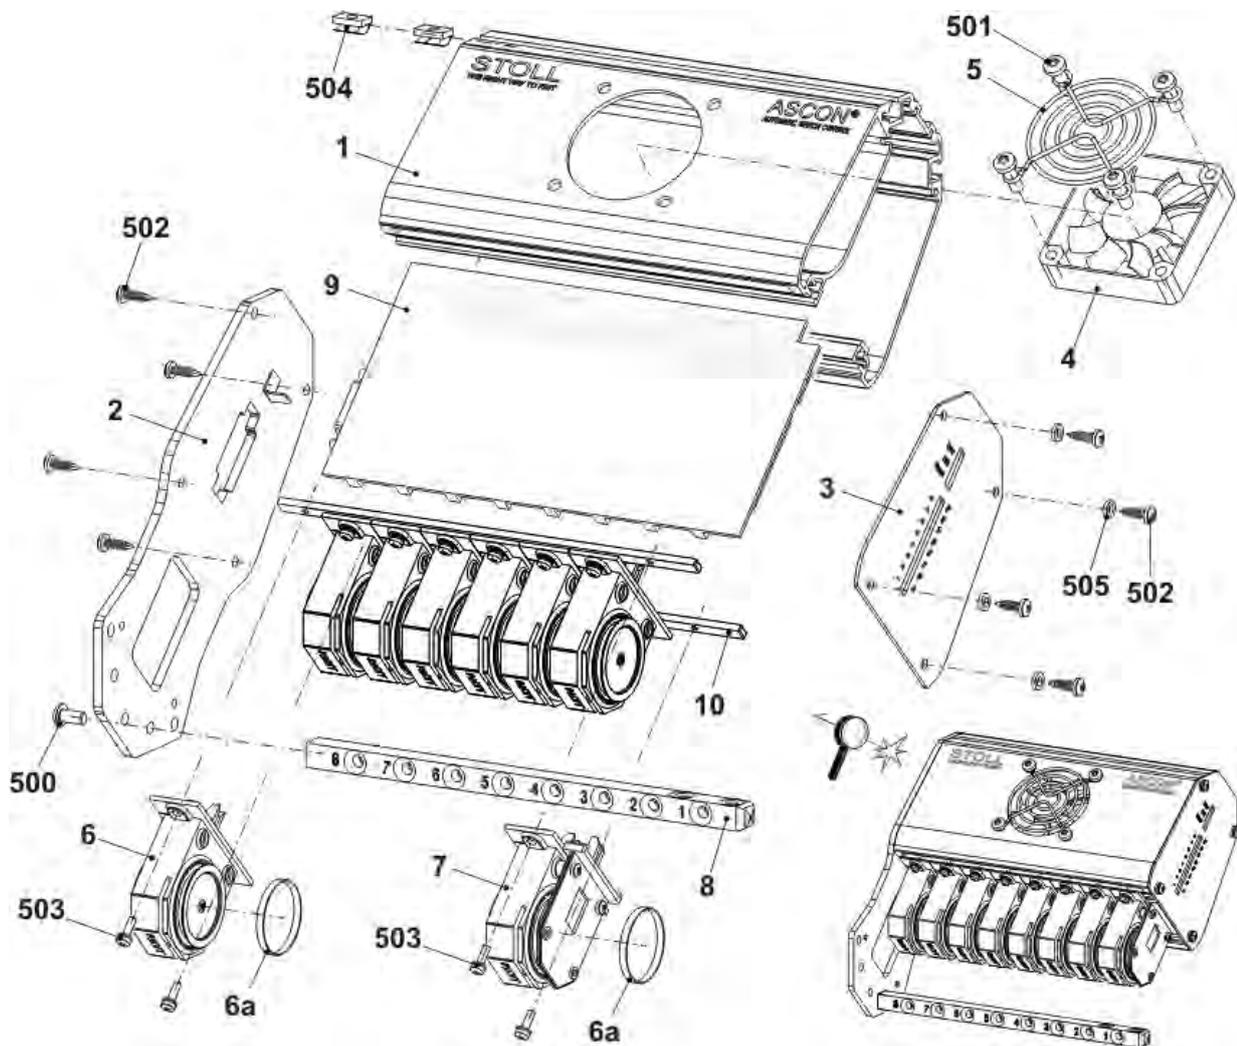

16.11 Adjusting plates, Devices needle bed

| Pos | Designation | Id | Pos | Designation | Id |
|----------|---|----------------|----------|------------------------------|----------------|
| A | Yarn carrier adjusting plate set | 266 736 | | | |
| 2 | Adjusting plate | 265 064 | 7 | Adjusting plate V 0,25 | 267 253 |
| 3 | Adjusting plate | 265 061 | 8 | Adjusting plate V 0,5 | 258 199 |
| 4 | Adjusting plate | 265 063 | 9 | Adjusting plate V 1 | 258 200 |
| 5 | Adjusting plate | 265 062 | 10 | Adjusting plate V 1,5 | 258 201 |
| B | Device needle bed complete | 263 625 | C | Support of needle bed | 268 961 |

