


STOLL

Spare parts catalog

CMS 520 C+ (Type 652)

Component type 001

E1,5.2 | E2.2

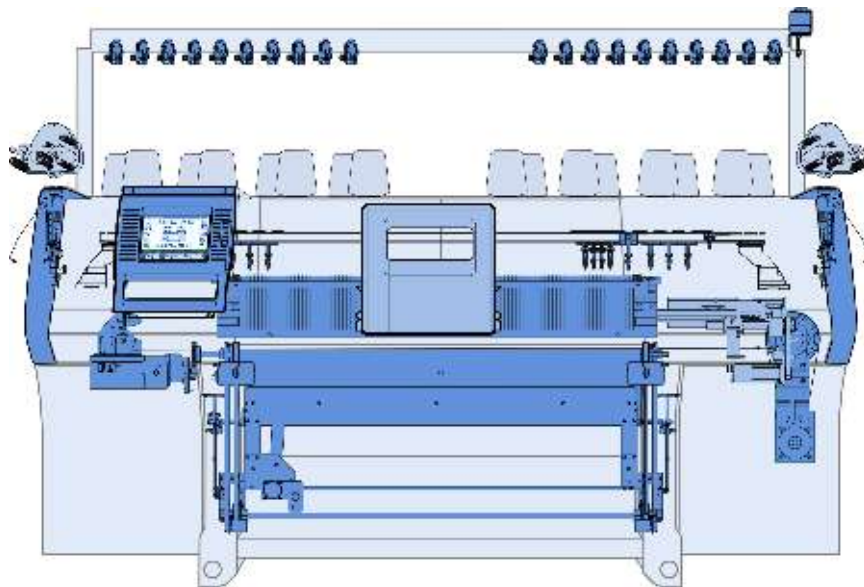

Document No. 269891_01_EN

Release 2017/02

1 Introduction

Imprint

All rights reserved.

The utilisation of texts and pictures, also in extracts, without our agreement is unfavourable to the copyright.

Our products are being developed further continuously. They are therefore subject to technical modifications.

The indications of this catalog are without liability.

©

H. Stoll AG & Co.KG

Stollweg 1

D-72760 Reutlingen, Germany

Phone: +49 (07121) 313-289

Fax: +49 (07121) 313-347

e-mail: spareparts@stoll.com

Notes for the order

This catalog serves to order spare parts.

It can only be applied to the machine type recorded on the title page.





When ordering spare parts we imperatively ask for the following indications as otherwise a delivery of spare parts is not possible:

1. Type of machine, gauge, no. of machine.
2. Page no., designation, ID, quantity.

Only genuine STOLL spare parts may be used for repairs.

1.1 Search help

In order to make the search of the spare parts easier, the following elements will be used in the spare parts catalog:

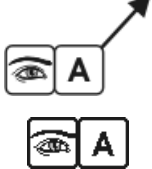Symbol	Meaning
	Indicates an assembly
	Position indicator with the position number (X).
	Indicates an element of another assembly.
	Indicates an assembly which is represented more detailed beside.
	Indicates an assembly which is represented on another page more detailed.
	Screw torques (z) deviating from the preferential row.
	Detail, represented enlarged in the direction of the arrow.
	Explosion representation, single elements enlarged.
	Indicates a group of parts.
	Indicates the left side or view.
	Indicates the right-hand side or view.
	Indicates a sectional drawing or a view in the viewing direction.

1.2 Torques

Preferential row of screw torques

- Torques are **valid** for:
Connection steel-steel, black, phosphatized, galvanized, rolled or cut thread as well as only for plain (head) supports.
- Torques are **not valid** for:
protected screws with: lock washers, rib heads, coated and clamping screws and nuts. They are also not used for self-cutting threads.
- Torques differing from this preferential row of torques must be taken from the corresponding location in the drawings.

Drehmomente Torques Couples Coppias Momentos de rotación [Nm] $\pm 10\%$ (für $\mu_{\text{ges}} = 0,12$)		Festigkeitsklassen Property class Classes de résistance Classi di resistenza Clases de resistencia		
		4,8	8,8	12,9
Regelgewinde Coarse-pitch thread Filetage à pas gros Filetto regolatore Filete regulador	M3	0,6	1,2	2,5
	M4	1,2	2,5	5
	M5	2,5	5	9
	M6	5	9	18
	M8		18	40
	M10		40	
	M12		80	


Table of Contents

1	Introduction	3
1.1	Search help	4
1.2	Torques	5
2	Carriage drive	11
2.1	Drive	12
2.1.1	Motor and belt drive	13
2.1.2	Tension bearing	14
2.2	Energy chain and carriage driver	15
3	Racking	17
3.1	Racking	18
4	Needle beds	19
4.1	Needle bed E1,5,2	20
4.1.1	Continuation needle bed E1,5,2	21
4.2	Needle bed E2.2	22
4.2.1	Continuation needle bed E2.2	23
4.3	Needle beds, fixing elements	24
4.4	Left clamping/cutting bed	25
4.5	Clamping/cutting bed on the right	26
5	Carriage	27
5.1	Overview of carriage	28
5.2	Carriage assembly	29
5.3	Carriage guide	30
5.4	Carriage cover	31
5.5	Needle cam E1,5,2 E2.2	32
5.5.1	Continuation cam box E1,5,2 E2.2	33
5.6	Jack cam box	34
5.7	Holding-down jack cam box	35
5.8	Yarn carrier driving without guide part	36
5.9	Yarn carrier driving with guide part	37
5.10	Needle detector	38
5.11	Brush holder	39
6	Main take-down	41
6.1	Main Take-down	42
6.1.1	Main take-down on the left	43
6.1.2	Main take-down on the right	45
6.1.3	Main take-down in the middle	48
7	Auxiliary Take-down	53
7.1	Auxiliary Take-down	54
7.2	Auxiliary take-down pre-assembled	55
7.2.1	Right bearing of the auxiliary take-down	56
7.2.2	Left bearing of the auxiliary take-down	57
7.3	Motor	58
7.4	Yarn brake at clamping and cutting bed	59
8	Comb Take-down	61
8.1	Comb Take-down	62
8.2	Comb take-down on the left	63
8.3	Comb take-down on the right	64
8.3.1	Drive shaft of comb	65
8.3.2	Swivel lever comb take-down	66
8.4	Comb take-down in the middle	67
8.4.1	Comb unit	68
8.4.2	Switching lever comb take-down	69
9	Yarn delivery device	71

9.1	Yarn guide device	72
9.2	Left yarn guide	73
9.2.1	Left yarn tensioner	74
9.2.2	Left tension axle	75
9.2.3	Yarn deflector on the left	76
9.3	Right yarn guide	77
9.3.1	Right yarn tensioner	78
9.3.2	Right tension axle	79
9.3.3	Yarn deflector on the right complete	80
9.4	Bobbin board	81
9.5	Carriage of yarn carrier	82
9.6	Bar unit	83
9.7	Left friction feed wheel	84
9.8	Right friction feed wheel	85
9.9	Stopping device on the left	86
9.10	Stopping device on the right	87
10	Fluff absorption	89
10.1	Fluff absorption	90
10.1.1	Lint container	91
10.1.2	Set of hose	92
10.1.3	Suction tube	93
11	Operation and control	95
11.1	Input unit	96
11.2	Starting device	97
11.3	Signal light	98
11.4	Control of Collecting Area	99
11.5	Shock stop motion E3-4	100
11.6	Measuring device	101
12	Protective devices	103
12.1	Lateral safety doors	104
12.2	Panelling	105
12.3	Rear panel	106
13	Electrical equipment	107
13.1	Circuit diagram (223) as PDF	108
13.2	Trailing cable	110
13.3	Cable set installation part 1	111
13.4	Cable set installation part 2	112
14	Control electronics	113
14.1	Control cabinet	114
15	Deliverable accessories	115
15.1	Accessories part 1	116
15.2	Accessories part 2	117
16	Special attachments	119
16.1	Additional bobbin board	120
16.2	Additional bobbin board (top, bottom)	121
16.3	Yarn carrier carriage (for ultra coarse yarns)	122
16.4	Complete intarsia yarn carriers	123
16.4.1	Bow and head IFF	124
16.5	Complete intarsia yarn carriers (for ultra coarse yarns)	125
16.5.1	Bow and head IFF (for ultra coarse yarns)	126
16.6	Bobbin holder on the left	127
16.7	Bobbin holder on the right	128
16.8	Yarn length measuring device on the right complete	129
16.8.1	Yarn length measuring device on the right	130
16.9	Yarn length measuring device on the left complete	131
16.9.1	Yarn length measuring device on the right	132


16.10 Adjusting plates, Devices needle bed	133
--	-----

2 Carriage drive

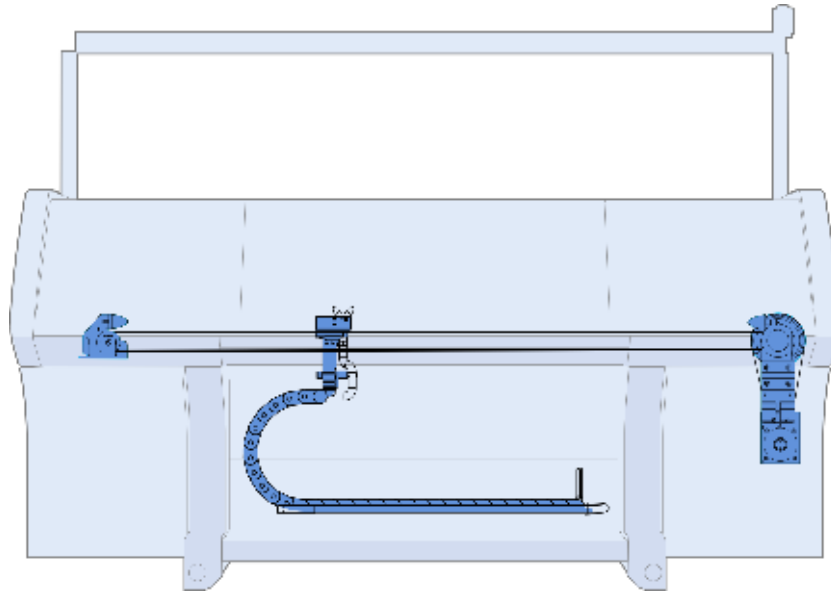


2.1 Drive

Pos	Designation	Id	Pos	Designation	Id
Σ	Drive unit		17	Parabolic spring	200 661
11	Drive unit complete	253 877	23	Fan complete	253 692
12	Tension bearing complete	251 581	523	Cap screw M8x12	023 138
14	Toothed belt50AT10/4670	253 890	905	NutM10x12	023 471
16	Spacer pipe	222 099	907	Cap screw M10x25	020 157

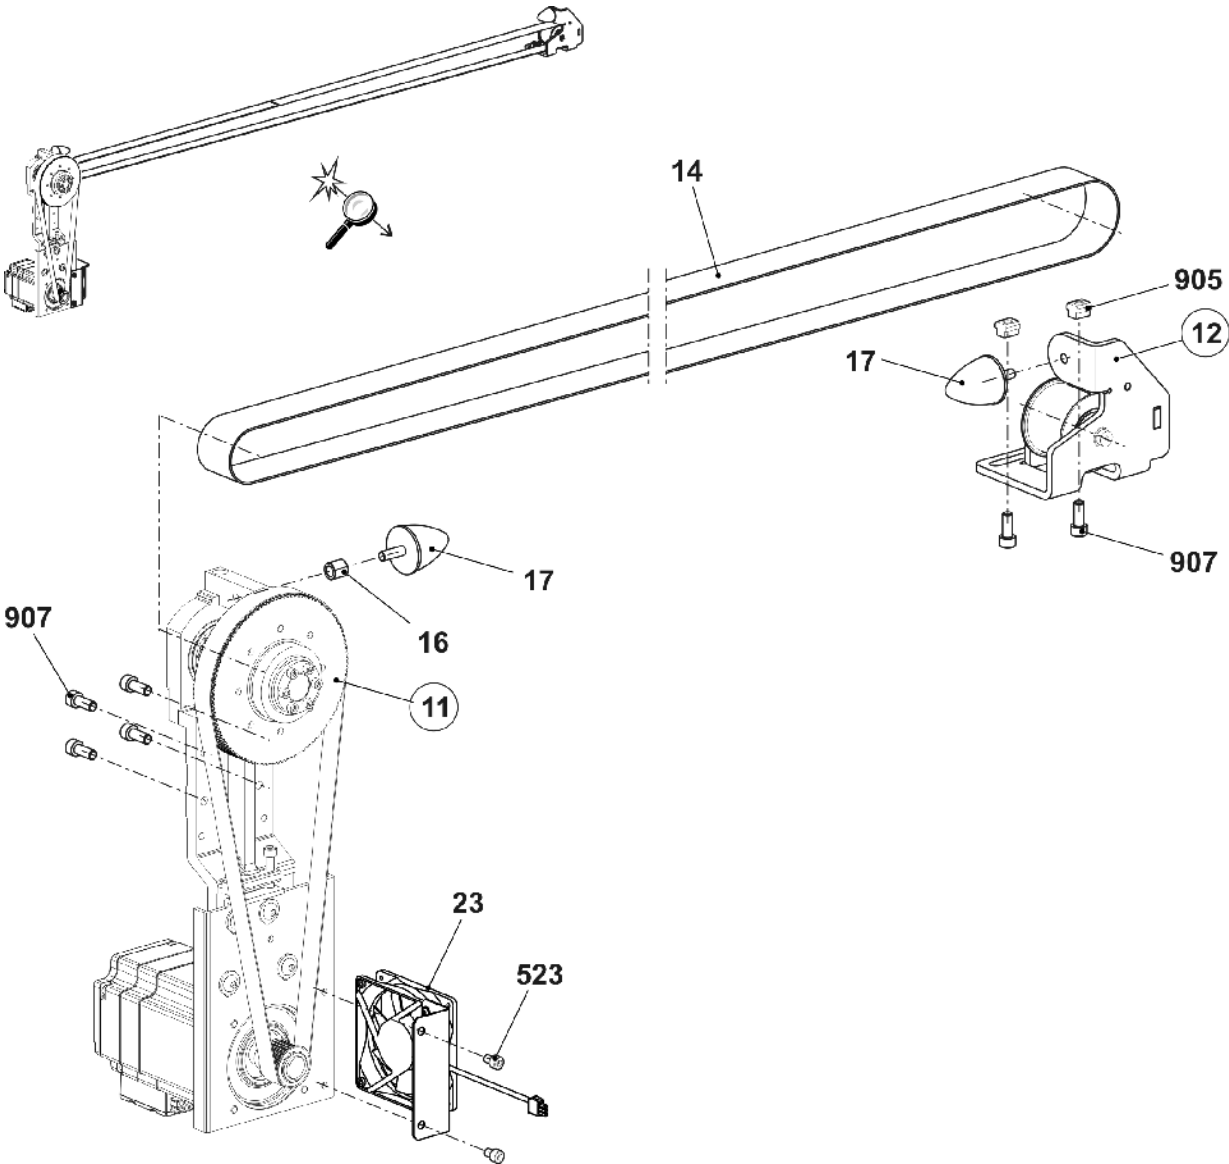


2.1.1 Motor and belt drive

Pos	Designation	Id	Pos	Designation	Id
Σ	Drive unit complete	253 877			
1	Drive unit	258 188	521	Retaining ring 68x2.5	022 914
2	Drive bearing complete	264 764	522	Grooved ball bearing 6207-2RS	022 915
2a	Drive bearing	264 758	523	Tension set 30X55	023 208
2b	Toothed belt pulley	240 616	524	Cap screw M8X25 12.9	020 142
2c	Pinion 57 AT10 18	242 039	3	Toothed belt	252 594
2d	Support of buffer	222 100	500	Pan head screw M10X25	023 684
520	Cap screw M8X35	020 144	501	Disk 10,5X25X2,5	022 178

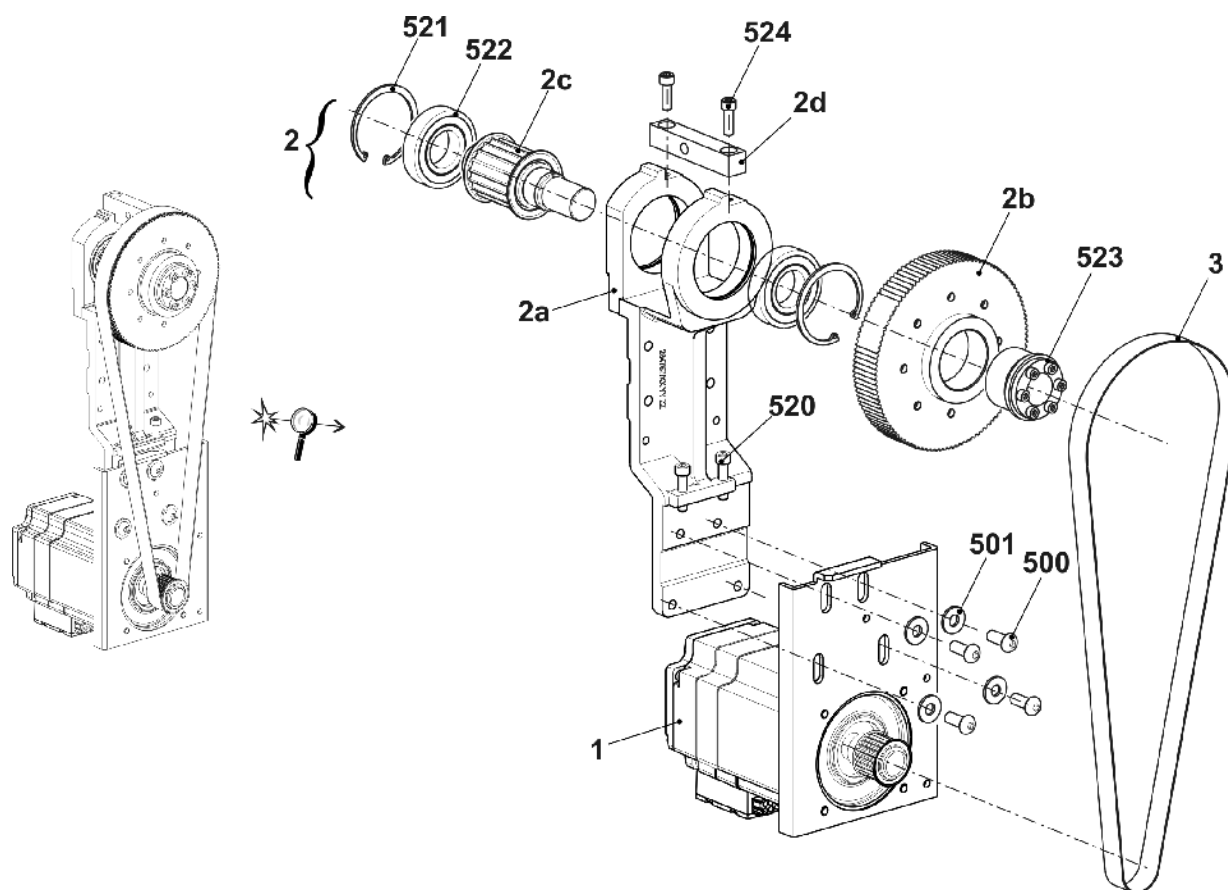


2.1.2 Tension bearing

Pos	Designation	Id	Pos	Designation	Id
Σ	Tension bearing complete	251 581	2	500 Grooved ball bearing 625-6305-2RS	255 686
1	Tension bearing	251 560	504	Retaining ring 471-25x1,2	251 617
2	Tension roller complete	256 640	501	Cap screw M10x25	023 751
2a	Tension roller	255 684	502	Washer	020 874
2b	Axle	251 579	510*	Eccentric	255 499

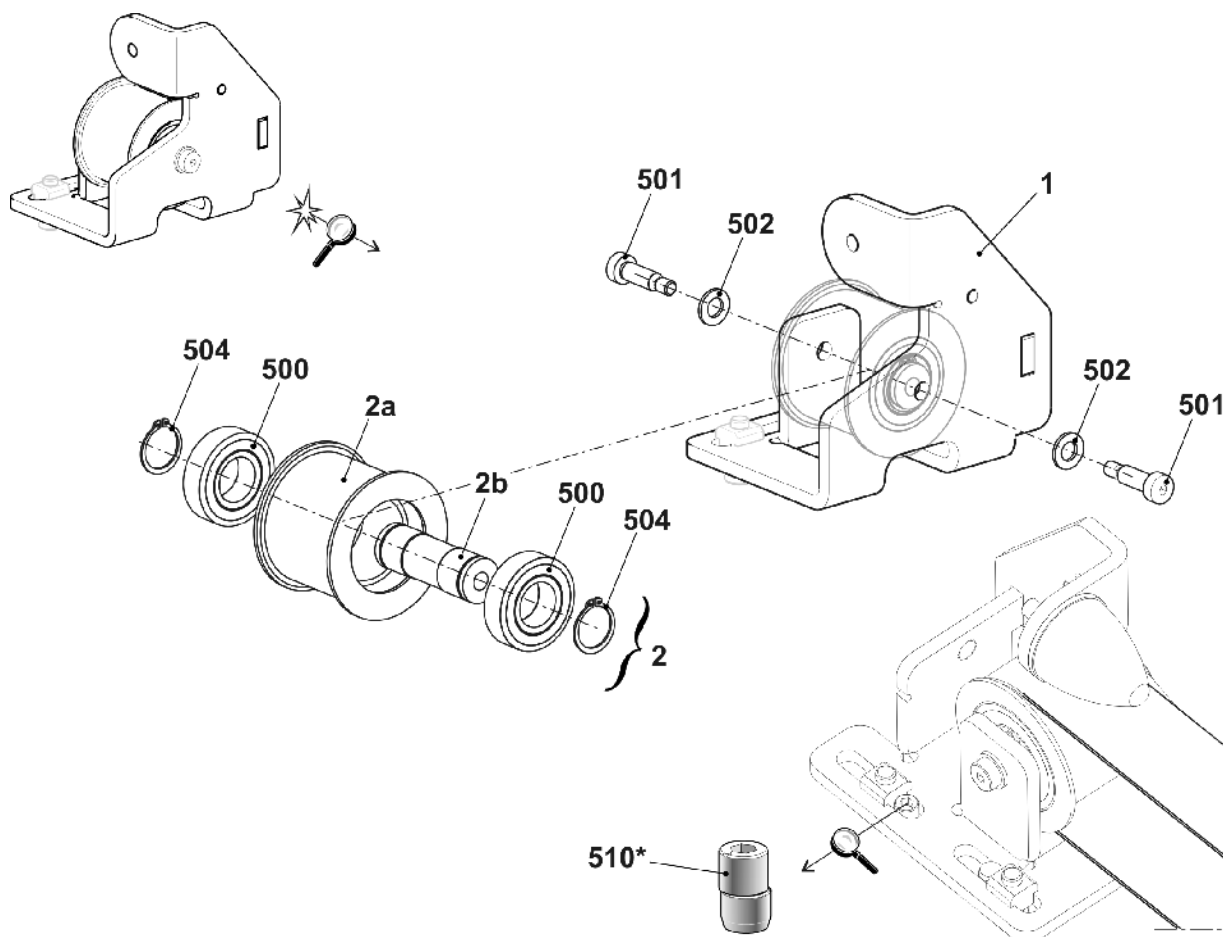


2.2 Energy chain and carriage driver

Pos	Designation	ID	Pos	Designation	ID
1	Energy chain 30 links	259 234	5	Carriage driver complete	265 268
3	Depositing gutter	263 983	51	Carriage driver	258 380
4	Threaded spacer	214 584	53	Cable driver carriage driver	266 400
8	Hose clip	214 653	54	Clamping plate	252 592
501	Cap screw M6x8	023 411	557	Cap screw M8x30	020 143
502	Cap screw M6x16	020 135	559	Fixing element	026 489
503	Cap screw M6x20	020 136	560	Cap screw M6x8	023 411

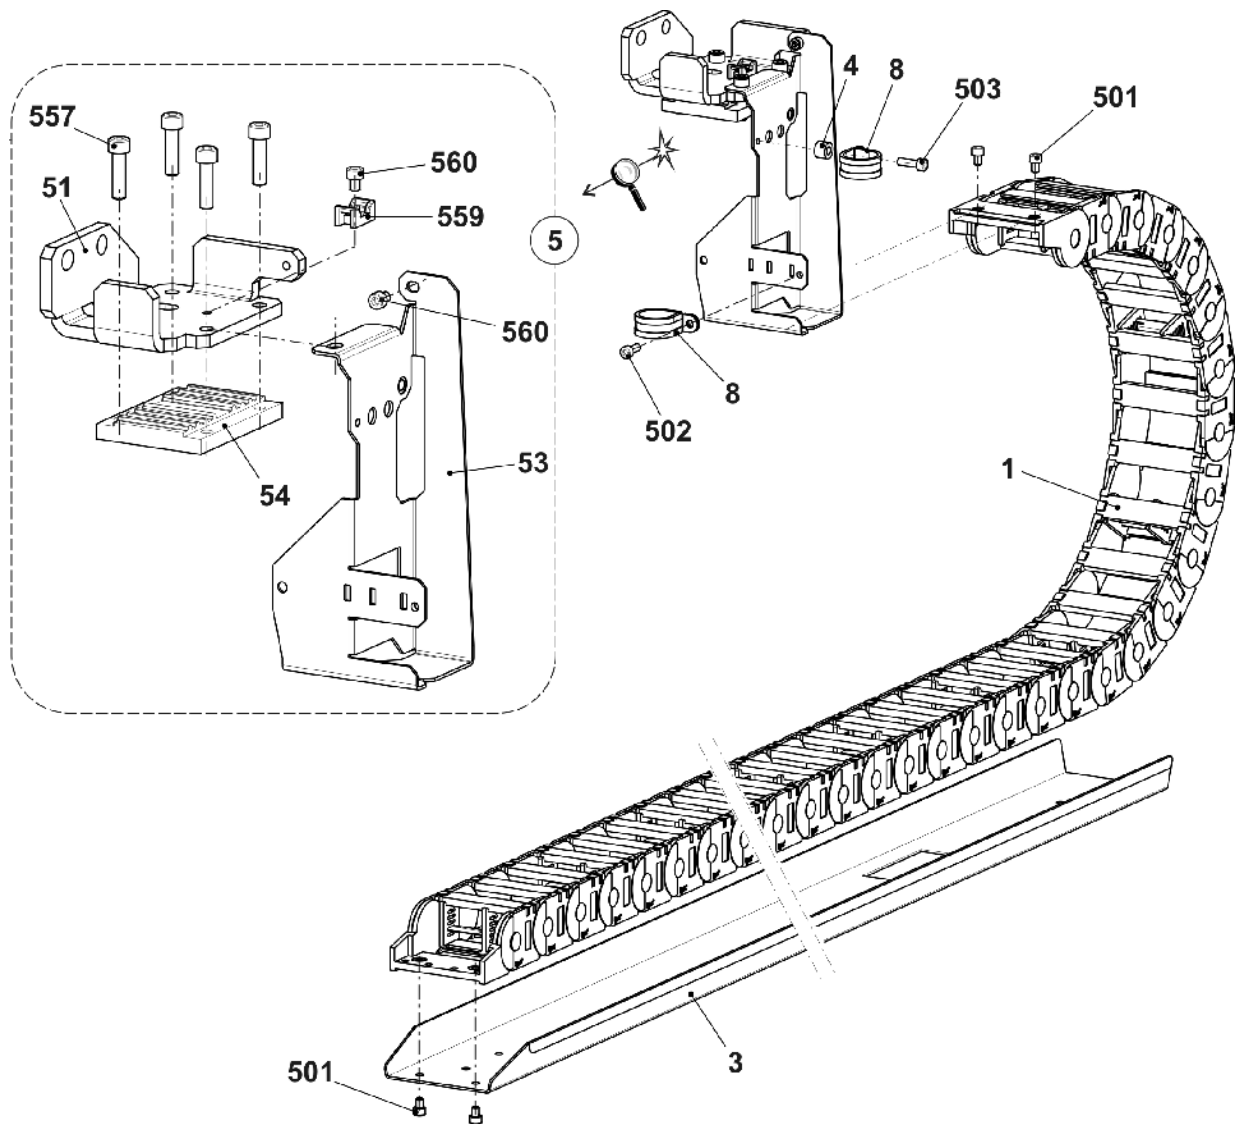


3 Racking

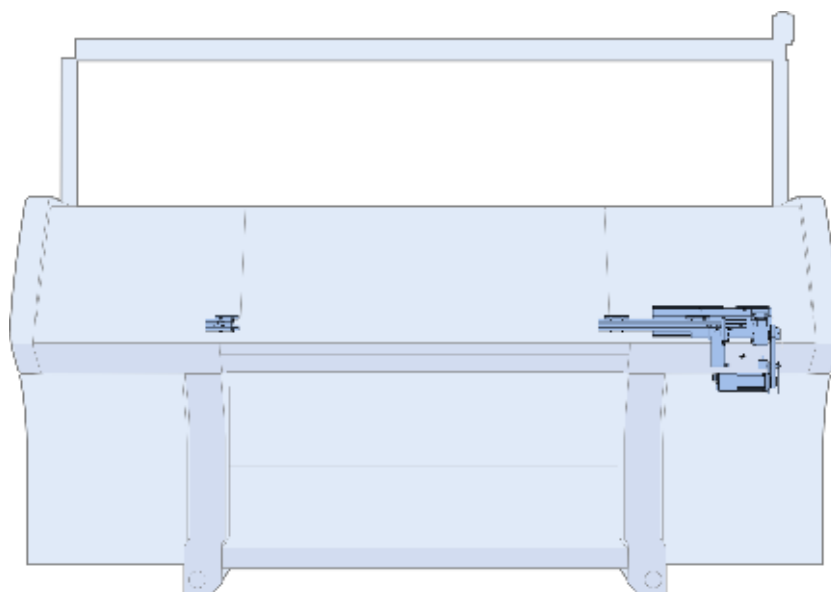


3.1 Racking

Pos	Designation	Id	Pos	Designation	Id
Σ	Racking				
1	Racking motor EKC complete	270 086	504	Cap screw M8x25	020 142
2	Bearing racking motor	264 630	505	Washer 8,4X20X3	022 175
3	Spindle bearing	253 262	509	Shim 0,03x15x85	023 162
4	Card racking limit switch	229 396	510	Shim 0,05x15x85	023 163
5	Racking cover plate	240 721	511	Shim 0,1x15x85	023 164
6	Racking strip on the left	240 696	512	Shim 0,2x15x85	023 170
7	Racking strip	240 690	518	Shim 0,03x15x75	023 395
8	Guide strip	206 382	519	Shim 0,05x15x75	023 396
9	Toothed belt 150 S 5M 490	229 281	520	Shim 0,1x15x75	023 397
13	Switch plate	240 722	521	Shim 0,2x15x75	023 398
19	Stop screw	221 386	900	Cap screw M6x12	022 795
501	Cap screw M6x16	271 322	901	Pan head screw M6x10	023 183
503	Pan head screw M6x10	023 183	902	Cap screw M8x30	020 143

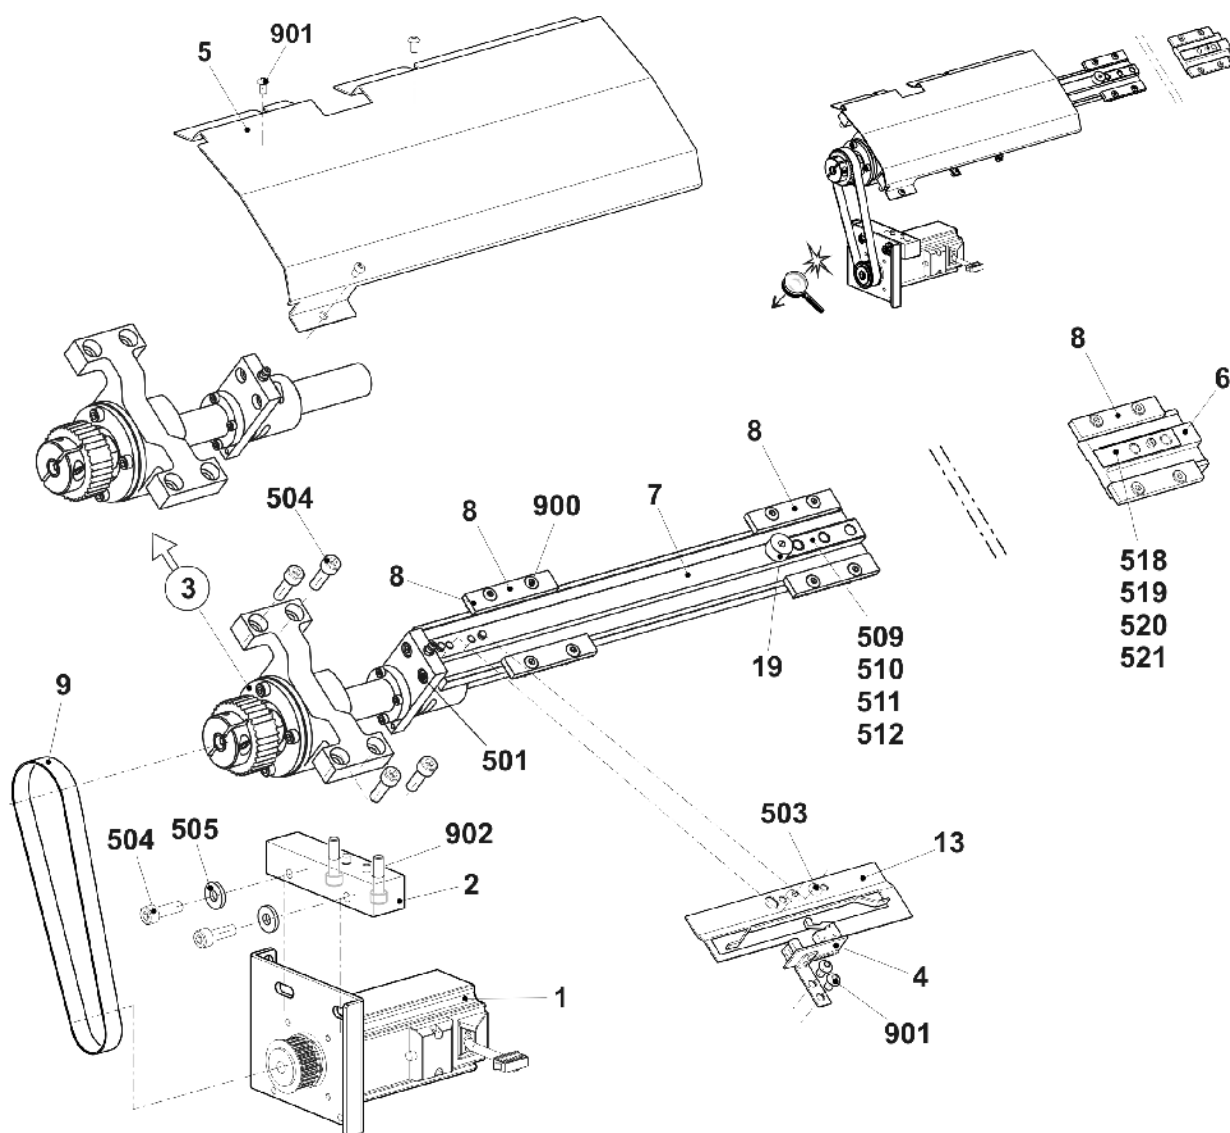


4 Needle beds

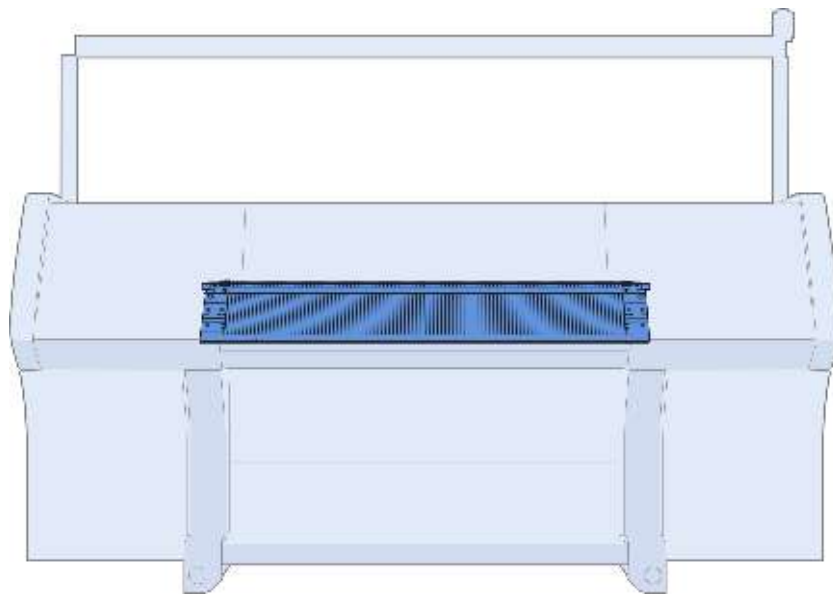


4.1 Needle bed E1,5.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle bed complete at the front and rear E1,5.2	267 262	18	Locating wire D=1,6 LG=1294	265 869
1	Needle bed at the front + rear	265 861	20	Needle	265 803
2	Holding-down jack bed front	265 871	21	Coupling part	270 197
3	Holding-down jack bed rear	265 874	22	Intermediate slider	218 799
4	Selection jack bed at the front	243 155	23a	Selection jack	213 372
5	Selection jack bed at the rear	243 158	23b	Selector spring	200 690
8	Holding-down jack slide	213 712	24	Holding-down jack	265 860
9	Needle bar on the left	213 998	25	Support	265 846
10	Needle bar on the right	213 999	26	Spring	265 864
11	Cover rail at the front	213 724	27	Locating wire D=1,0 LG=1294	213 717
12	Cover rail at the rear	213 981	28	Locating wire D=1,5 LG=1292	268 472
13	Spring slide	243 153	31*	Adjusting bolt	230 742
14	Cover rail	213 762	40*	Disk brush	235 612
15	Cover rail	213 763	540*	Cap screw M5x12	020 032

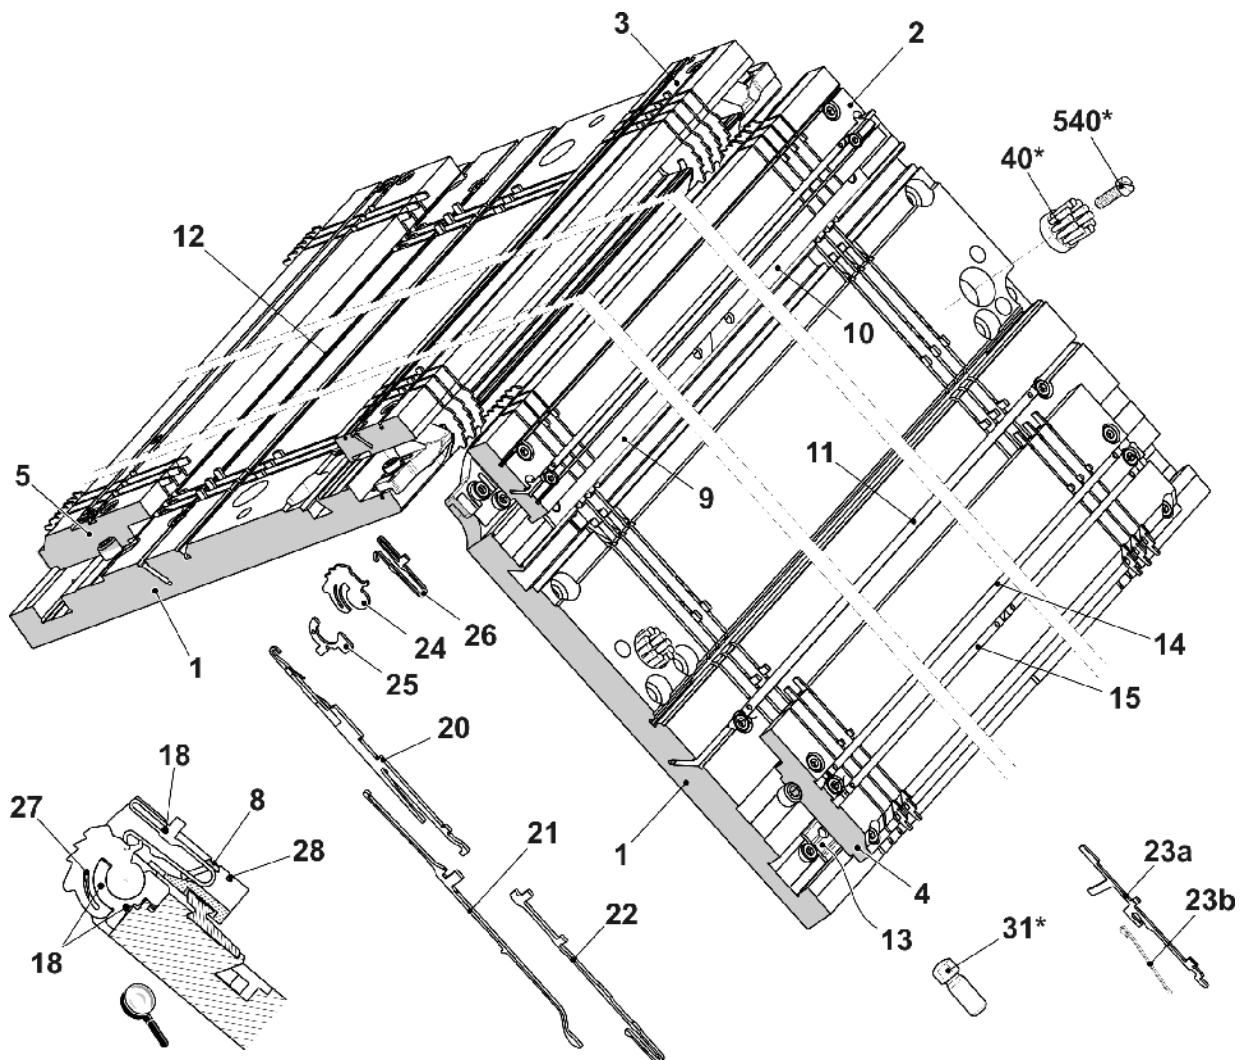


4.1.1 Continuation needle bed E1,5.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle bed at the front + rear, continuation				
6	Limiter on the left	205 343	503	Cap screw M5x30	022 396
7	Limiter on the right	205 344	504	Cap screw M5x12-8.8	022 943
8	Holding-down jack slide	213 712	505	Springy thrust piece B-M10	023 177
16	Locating wire D=2,8 LG=1290	213 983	506	Shim 0,05x18,5x34	023 196
19	Eccentric	204 603	507	Shim 0,1x18,5x34	023 197
500	Cap screw M5x10	022 918	508	Shim 0,2x18,5x34	023 253
501	Cap screw M5x20	020 133	509	Countersunk head screw M3x25-10.9	023 447
502	Cap screw M5x8-8.8	023 154	510	Cap screw M4x6	023 067

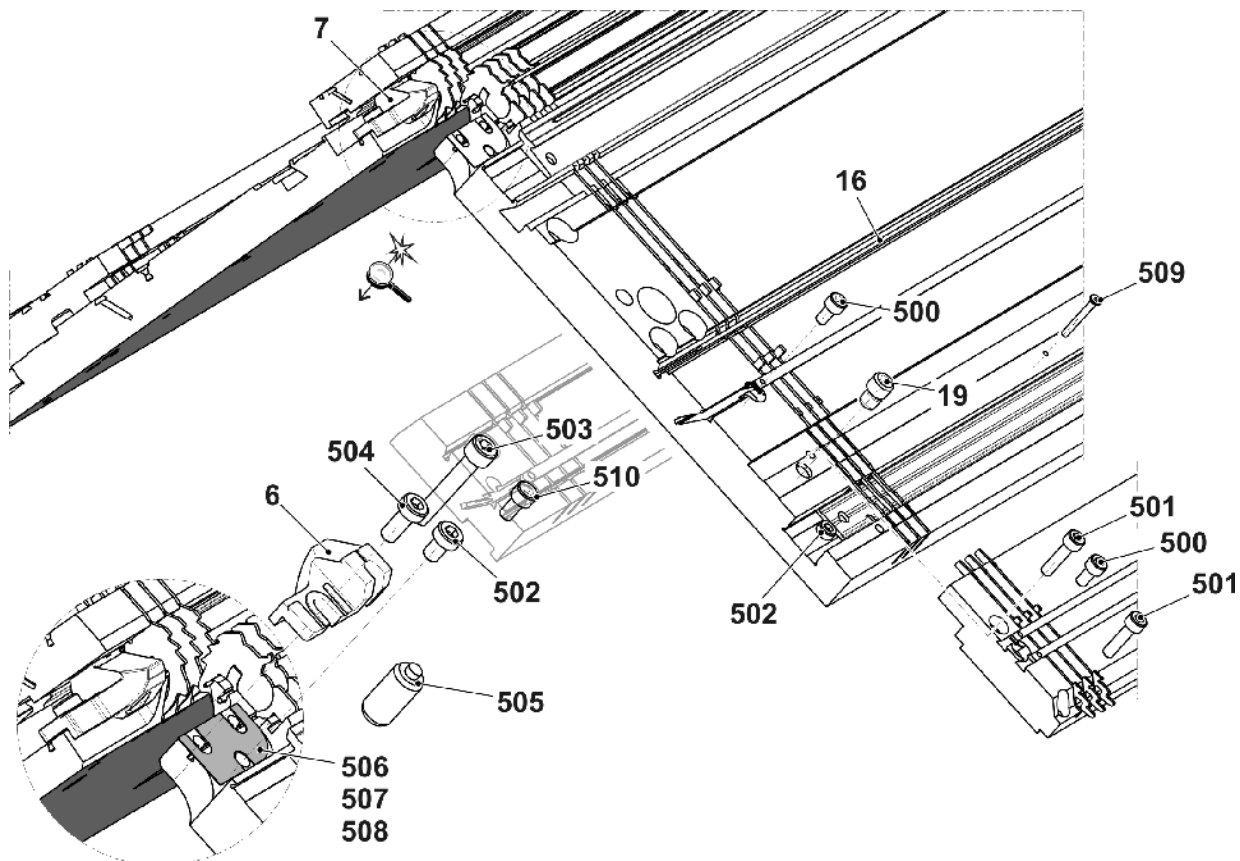


4.2 Needle bed E2.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle bed complete at the front and rear E2.2	267 263	18	Locating wire D=1,6 LG=1294	265 869
1	Needle bed at the front + rear	265 863	20	Needle	265 803
2	Holding-down jack bed front	265 873	21	Coupling part	270 197
3	Holding-down jack bed rear	265 876	22	Intermediate slider	218 799
4	Selection jack bed at the front	243 157	23a	Selection jack	213 372
5	Selection jack bed at the rear	243 160	23b	Selector spring	200 690
8	Holding-down jack slide	213 712	24	Holding-down jack	266 514
9	Needle bar on the left	213 998	25	Support	266 515
10	Needle bar on the right	213 999	26	Spring	265 864
11	Cover rail at the front	213 726	27	Locating wire D=1,0 LG=1294	213 717
12	Cover rail at the rear	213 981	28	Locating wire D=1,5 LG=1292	268 472
13	Spring slide	243 153	31*	Adjusting bolt	230 742
14	Cover rail	213 762	40*	Disk brush	235 612
15	Cover rail	213 763	540*	Cap screw M5x12	020 032

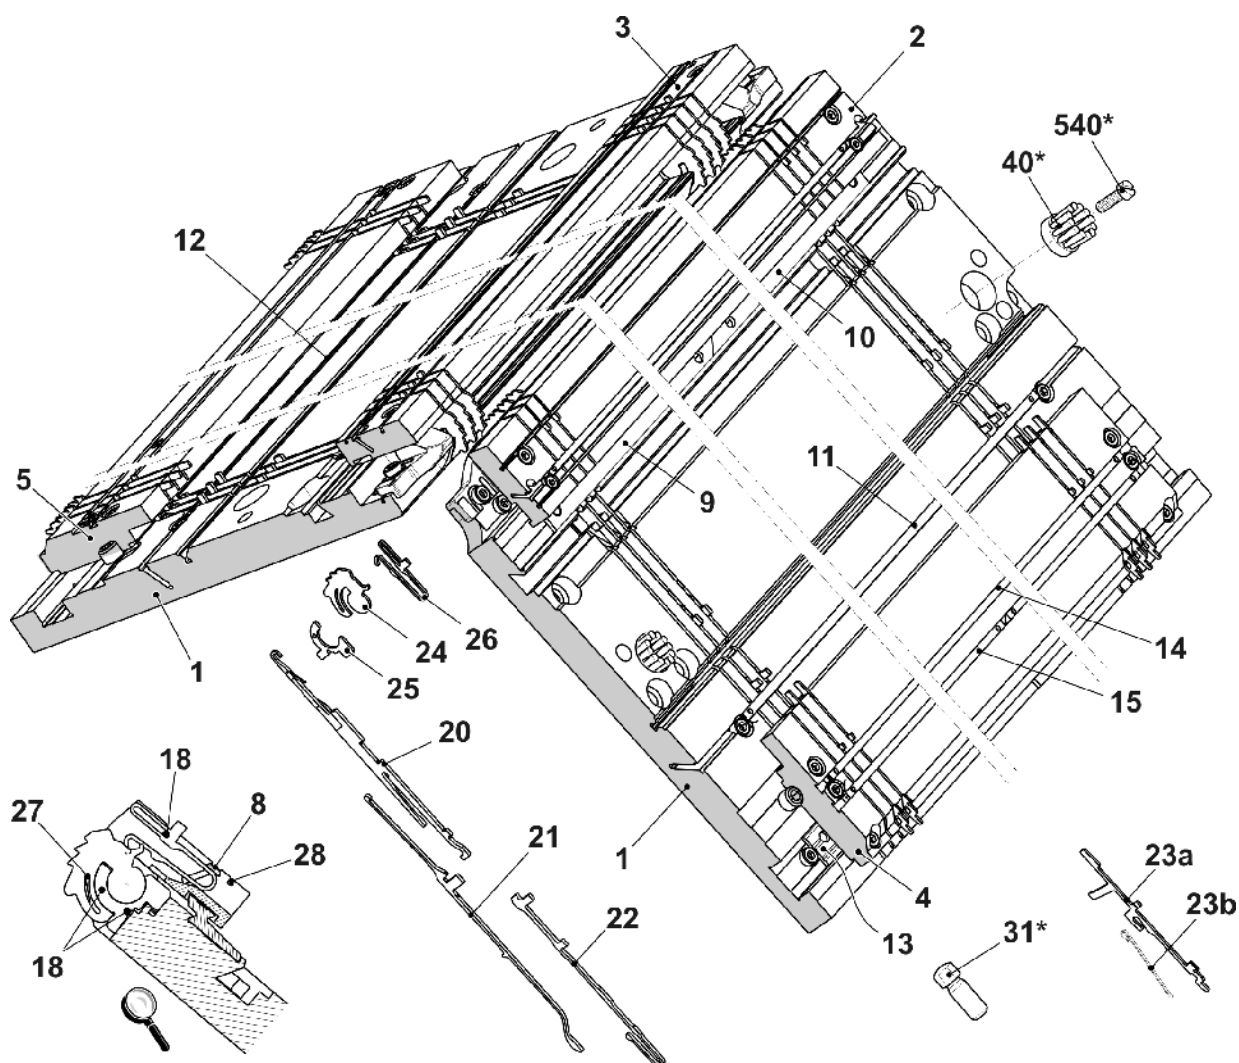


4.2.1 Continuation needle bed E2.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle bed at the front + rear, continuation				
6	Limiter on the left	205 343	503	Cap screw M5x30	022 396
7	Limiter on the right	205 344	504	Cap screw M5x12-8.8	022 943
8	Holding-down jack slide	213 712	505	Springy thrust piece B-M10	023 177
16	Locating wire D=2,8 LG=1290	213 983	506	Shim 0,05x18,5x34	023 196
19	Eccentric	204 603	507	Shim 0,1x18,5x34	023 197
500	Cap screw M5x10	022 918	508	Shim 0,2x18,5x34	023 253
501	Cap screw M5x20	020 133	509	Countersunk head screw M3x25-10.9	023 447
502	Cap screw M5x8-8.8	023 154	510	Cap screw M4x6	023 067

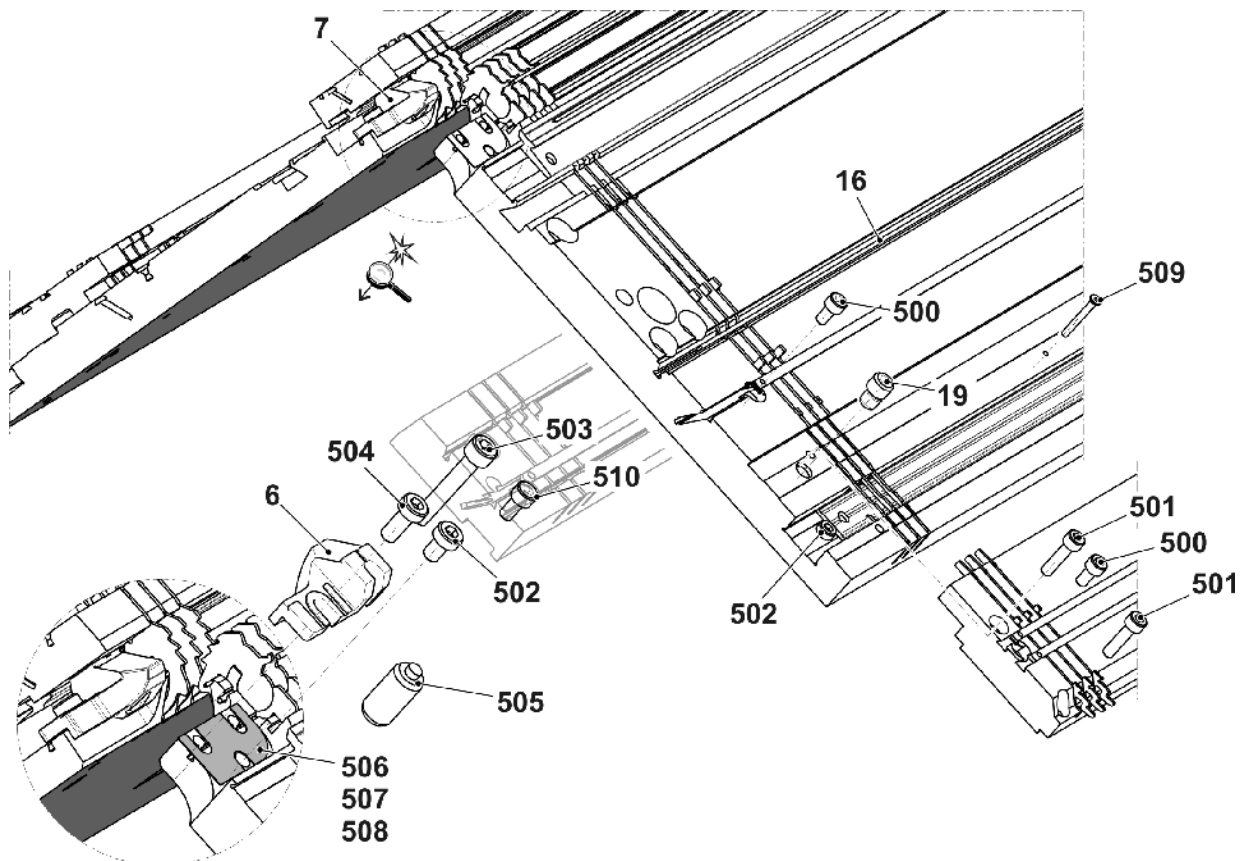


4.3 Needle beds, fixing elements

Pos	Designation	ID	Pos	Designation	ID
Σ	Fixing elements				
500	Cap screw M8x25	020 142			

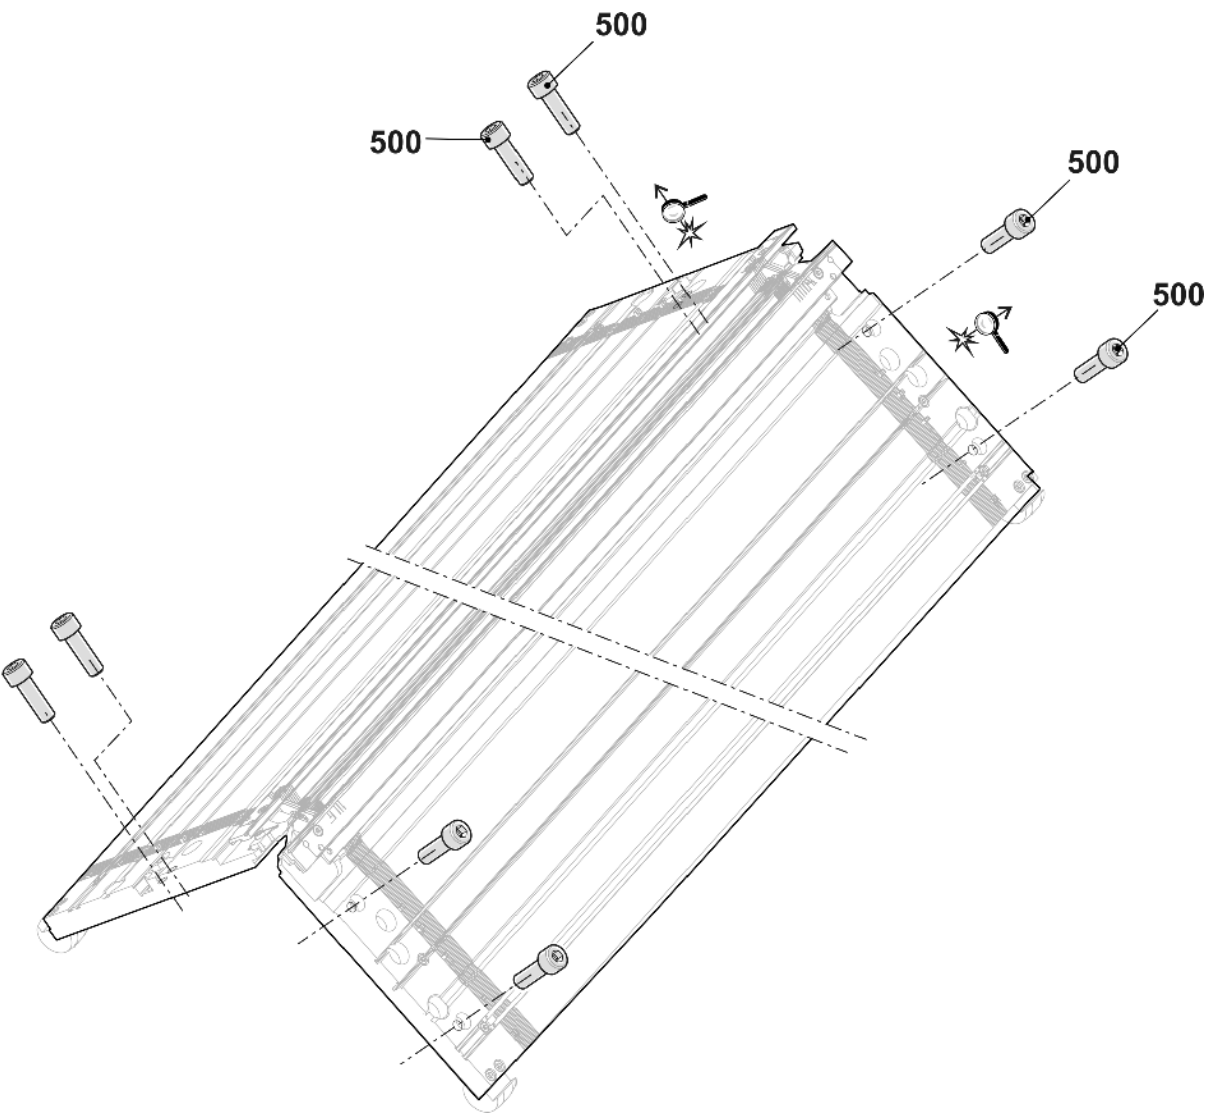


4.4 Left clamping/cutting bed

Pos	Designation	ID	Pos	Designation	ID
Σ	Clamping and cutting bed on the left	271 796			
1	Guide plate EPT on the left E3-4m.3L	261 805	11	Coupling part E3-4	270 197
1b	Cover rail	211 358	12	Intermediate slider E3-4	218 799
1c	Cover rail	216 105	13	Selection jack E3-4	213 372
1d	Cover rail	209 224	14	Selector spring E4-8	200 690
1e	Locating wire	215 927	15	Deflector plate on the left	262 359
1f	Bolts E3-4m.3L	261 786	500	Cap screw M4x10	023 136
1g	Axle	257 201	501	Cap screw M4x16	020 131
1h	Guide pin	211 351	503	Hexagon nut M4	023 046
1i	Selection jack bed on the left E3-4	215 906	504	Washer 4	020 870
1j	Spring slide	215 908	505	Washer 4,3x7x0,5	022 153
511	Dowel pin 5x12	021 988	507	Circlip 3,2	021 019
5	Cover on the left complete E3-4	215 925	508	Tension spring 4x0,55x18,9	023 392
6	Catch hook on the left E3-4	215 887	509	Compression spring 0,9x3,6x24,36	023 331
7	Slider	215 827	510	Ball 5	023 309
8	Catch needle on the left E3-4m.3L	261 544	511	Countersunk screw M3x6	020 286
9	Blade on the left E3-4m.3L	262 350	520*	Cap screw M6x25	023 335
10	Clamp on the left complete E3-4m.3L	262 293	521*	Washer 7,6x11,6x1,5	023 334

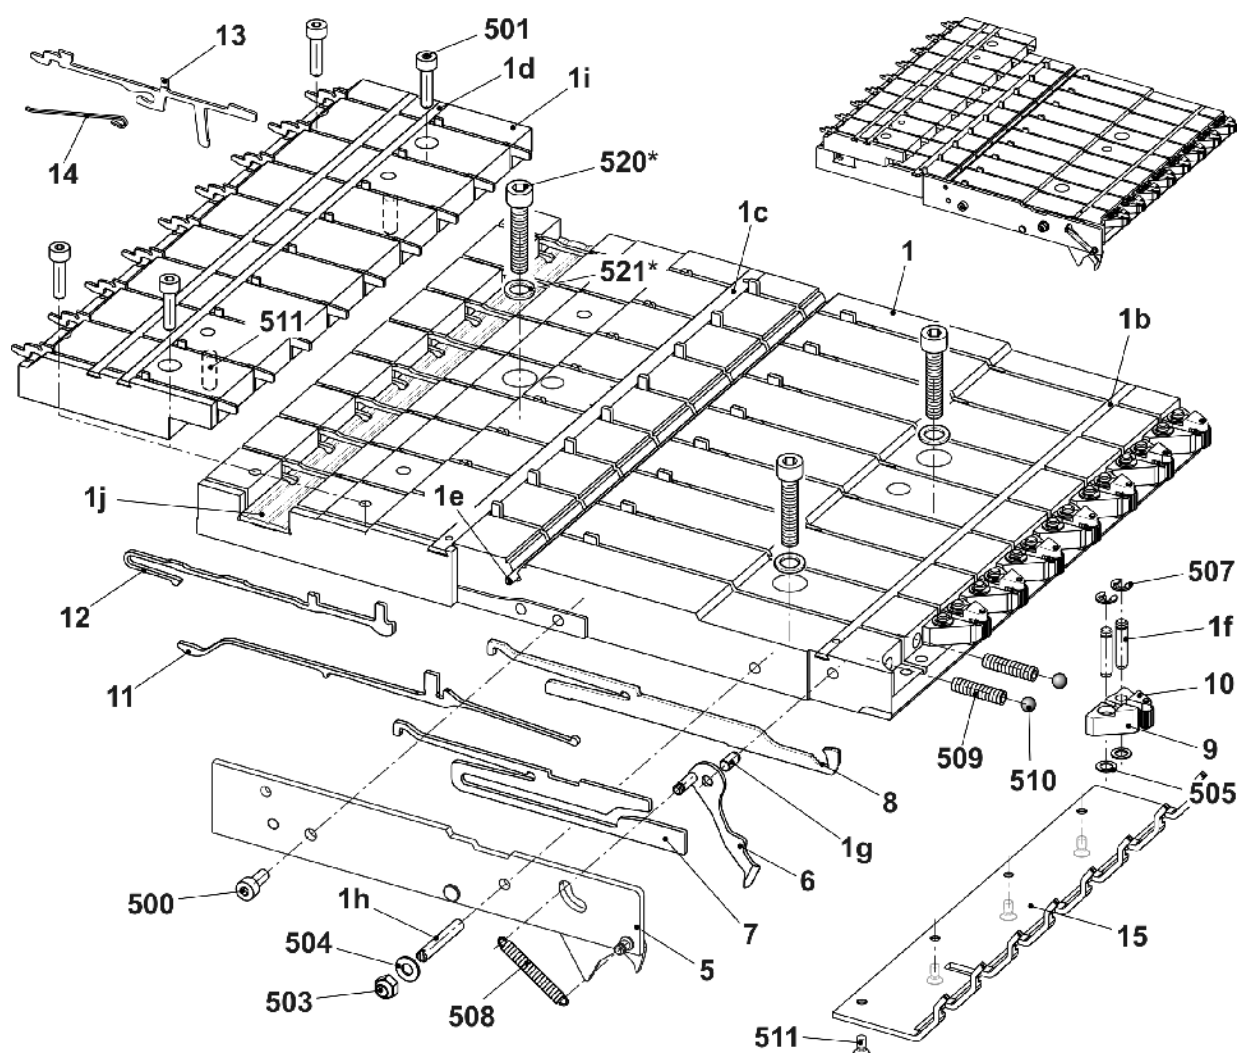


4.5 Clamping/cutting bed on the right

Pos	Designation	ID	Pos	Designation	ID
Σ	Clamping and cutting bed on the right	271 797			
1	Guide plate with EPT on the right E3-4m. 3L	261 784	11	Coupling part E3-4	270 197
1b	Cover rail	211 358	12	Intermediate slider E3-4	218 799
1c	Cover rail	216 105	13	Selection jack E3-4	213 372
1d	Cover rail	209 224	14	Selector spring E4-8	200 690
1e	Locating wire	215 927	15	Deflector plate on the right	262 360
1f	Bolts E3-4m.3L	261 786	500	Cap screw M4x10	023 136
1g	Axle	257 201	501	Cap screw M4x16	020 131
1h	Guide pin	211 351	503	Hexagon nut M4	023 046
1i	Selection jack bed on the right E3-4	215 907	504	Washer 4	020 870
1j	Spring slide	215 908	505	Washer 4,3x7x0,5	022 153
511	Dowel pin 5x12	021 988	507	Circlip 3,2	021 019
5	Cover on the left complete E3-4	215 926	508	Tension spring 4x0,55x18,9	023 392
6	Catch hook on the right E3-4	215 888	509	Compression spring 0,9x3,6x24,36261 786	023 331
7	Slider	215 827	510	Ball 5	023 309
8	Catch needle on the right E3-4m.3L	261 545	511	Countersunk screw M3x6	020 286
9	Blade on the right E3-4m.3L	262 351	520*	Cap screw M6x25	023 335
10	Clamp on the right complete E3-4m.3L	262 294	521*	Washer 7,6x11,6x1,5	023 334

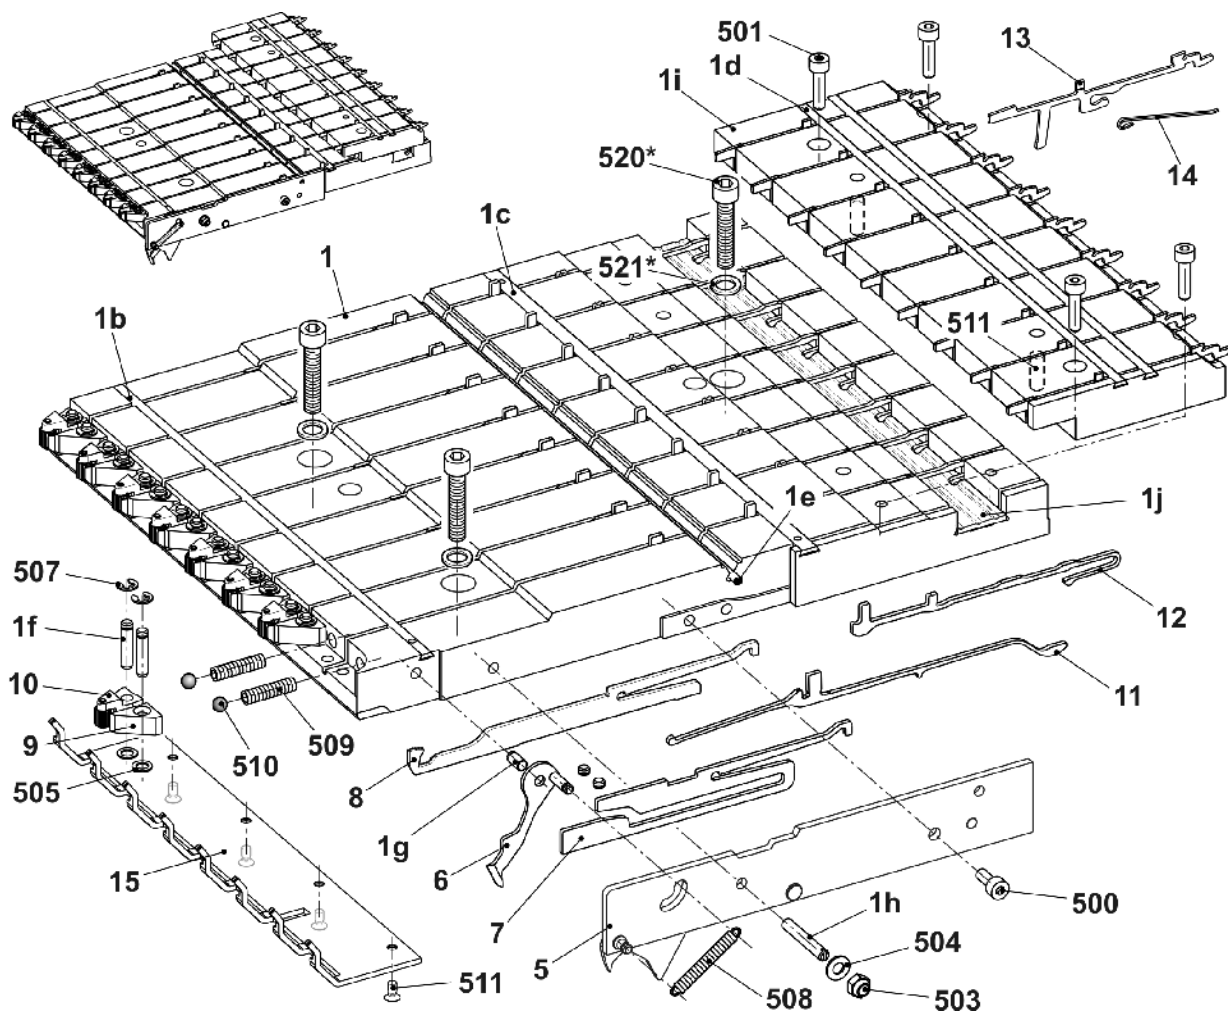


5 Carriage

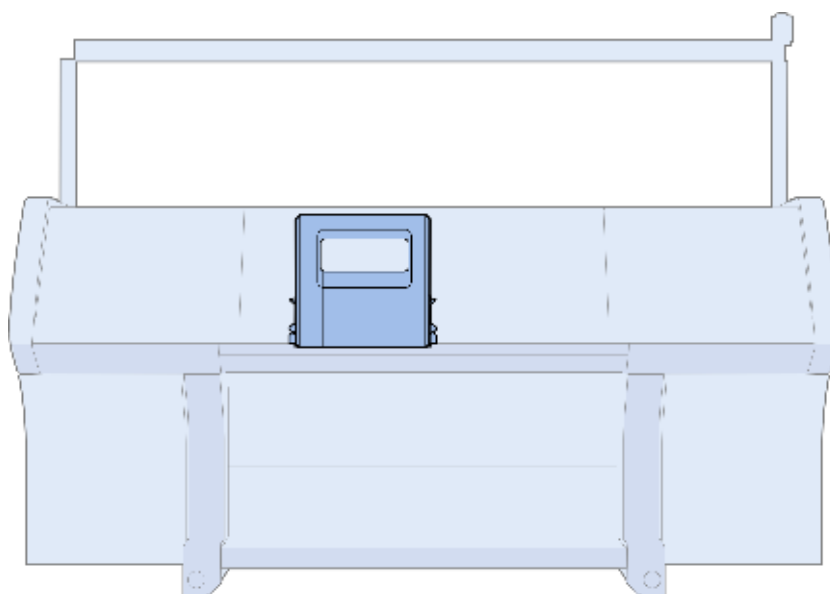


5.1 Overview of carriage

Pos	Designation	ID	Pos	Designation	ID
Σ	Carriage complete	267 533			
1	Needle cam complete	267 306	12	Yarn carrier driving unit in the middle complete	241 081
2	Jack cam box complete	267 367	15	Wiper felt	241 411
3	Holding-down jack cam box complete	267 576	14	Motor unit complete (AT=714946)	214 946
4	Carriage assembly complete	267 426	14a	Gear rack at the top	265 348
5	Selection system complete E2-8	216 218	14b	Gear rack in the middle	265 349
6	Brush holder complete	214 710	14c	Gear rack at the bottom	261 393
7	Needle detector	237 675	519	Screw M4x40	023 095
11	Yarn carrier driving unit outside complete	241 080	27	Distributor 520C NHP	267 057

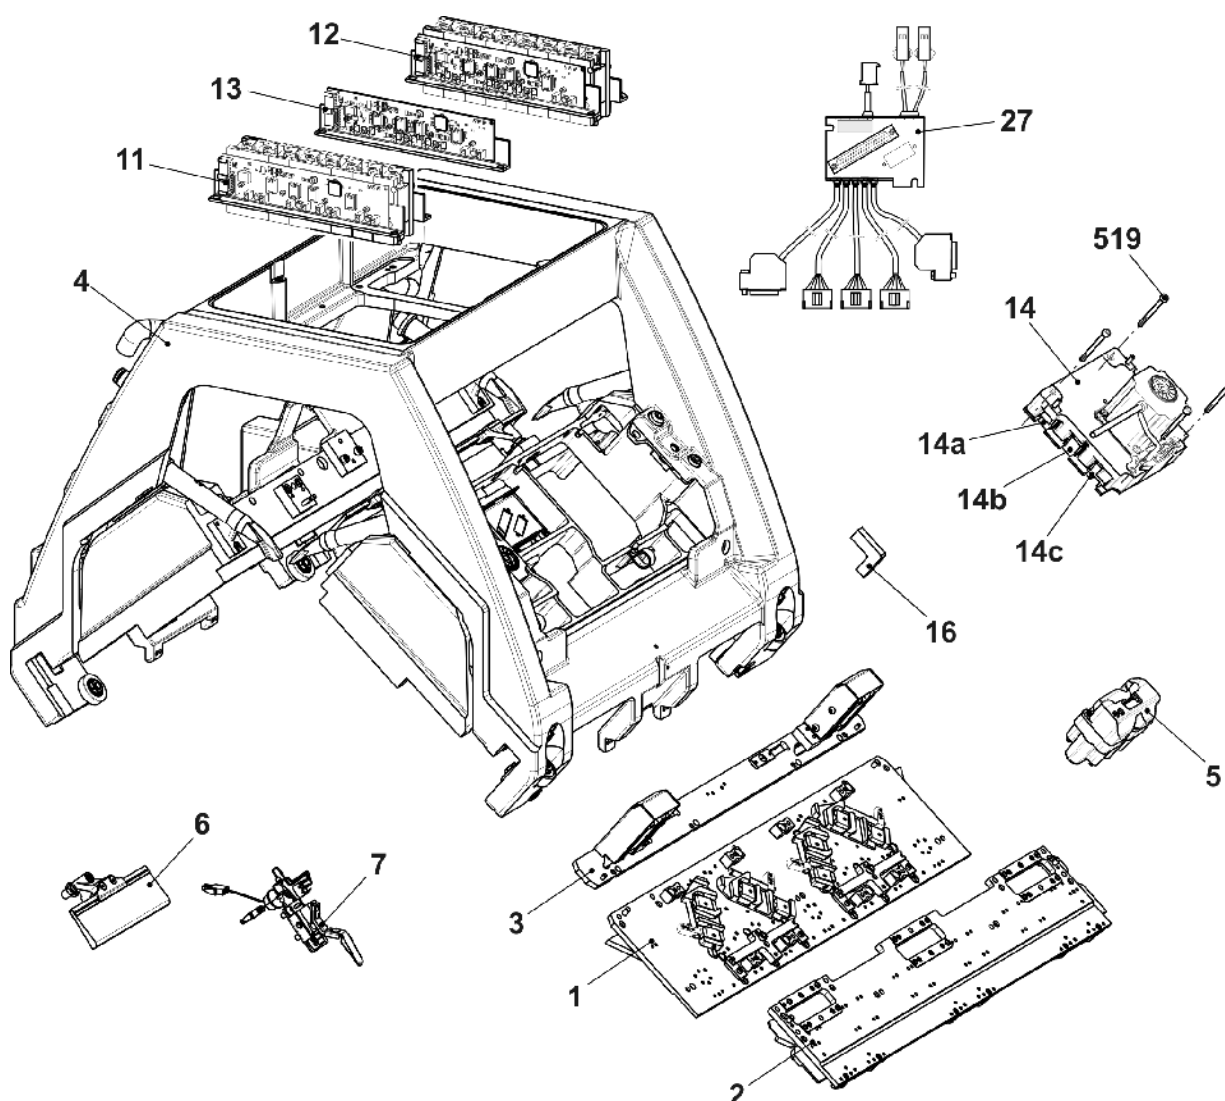


5.2 Carriage assembly

Pos	Designation	ID	Pos	Designation	ID
Σ	Carriage assembly complete	267 426	9	Bush	209 275
1	Carriage frame, 2 cam boxes	259 016	10	Bush	209 274
2	Carriage part complete	267 425	13	Locating bolt linking spot	244 179
4	Shim	225 312	500	Cap screw M8x30	020 143
5	Shoulder screw	211 750	520	Circlip	021 022
8	Bush	207 546			

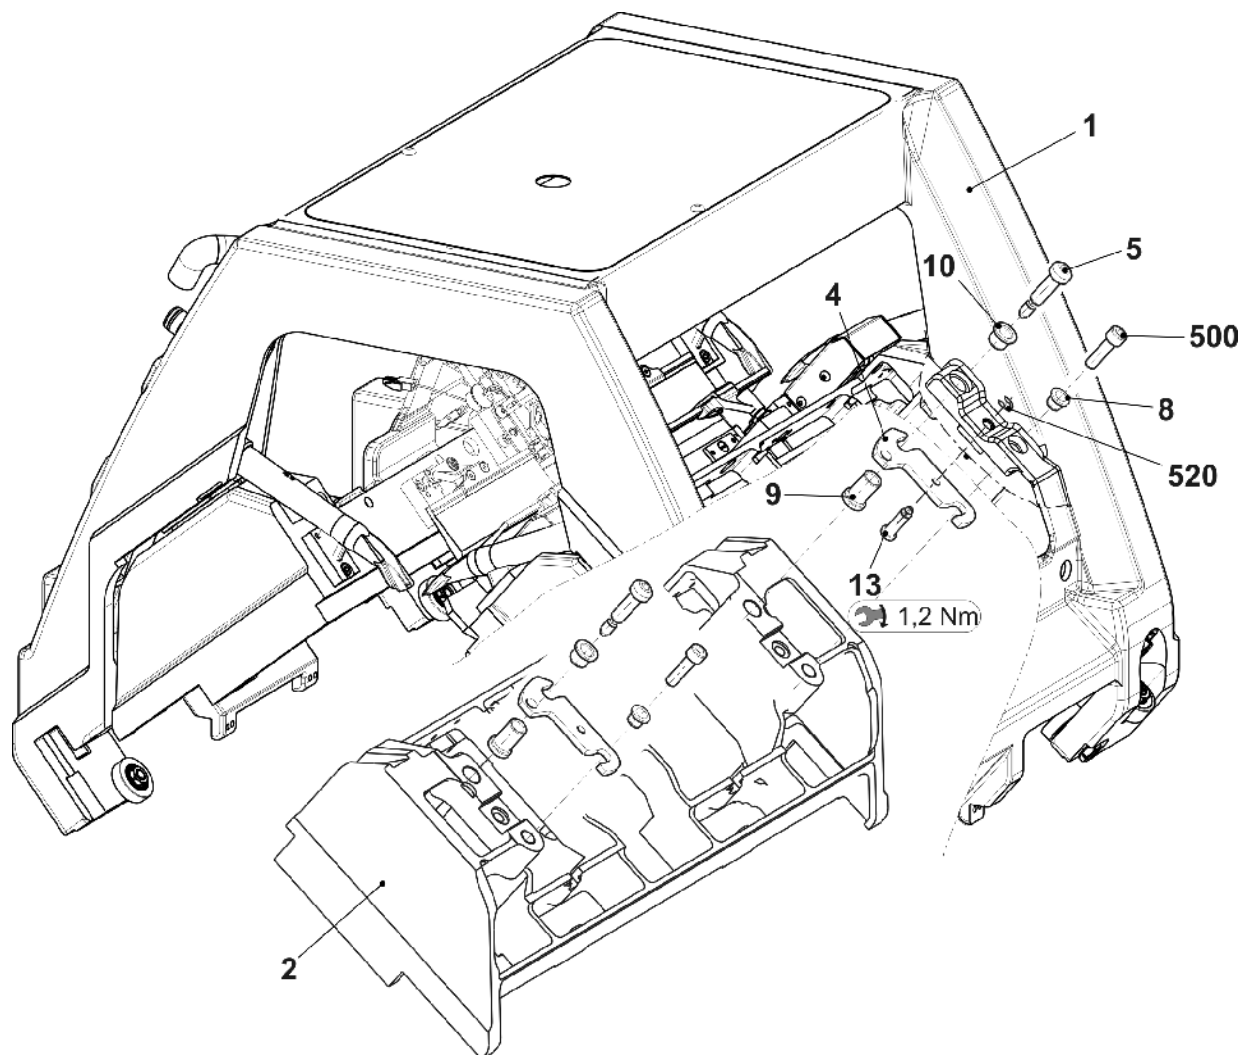


5.3 Carriage guide

Pos	Designation	ID	Pos	Designation	ID
7	Bearing bolt eccentric 0,5	240 624	510	Shim ring 12x18x1	023 315
12	Bolt complete with bearing	244 283	511	Shim ring 10x16x1	023 260
525	Roller10X32X9	242 071	518	Grooved ball bearing 62201-2RS	241 408
526	Shim ring 10x16x2	242 071	519	Grooved ball bearing 62300-2RS1	242 070
508	NutM10	023 316			

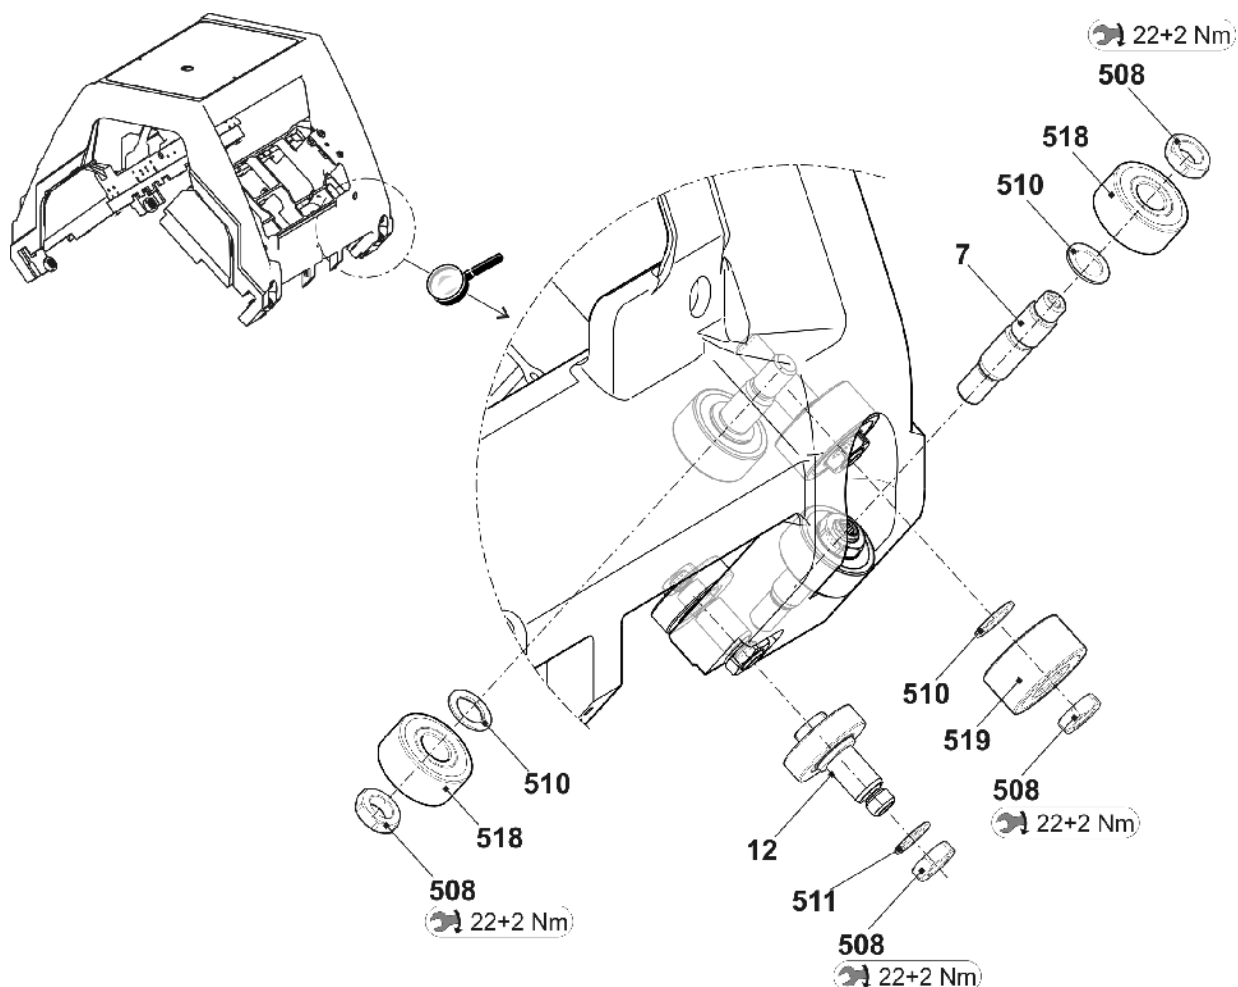


5.4 Carriage cover

Pos	Designation	ID	Pos	Designation	ID
1	Carriage cover at the top 3 cam boxes complete	257 100			
1a	Carriage cover at the top 2 cam boxes 6Z	256 510	501	Serrated lock washer 6,4	022 385
2	Carriage cover at the rear complete	257 171	502	Washer 6.1x9x0,5	023 554
2a	Carriage cover at the rear 520C	256 770	503	O-ring 3x2	242 420
3	Carriage cover at the front complete	257 170	16	Bolts	212 392
3a	Carriage cover at the front 520C	256 769	17	Bolt at the rear	243 171
1,2,3	10 Locating bolt	242 382	45	Cover plate at the top	265 390
500	Hexagon nut M6	257 088	504	Compression spring 0,48x7,02x17,29	023 654

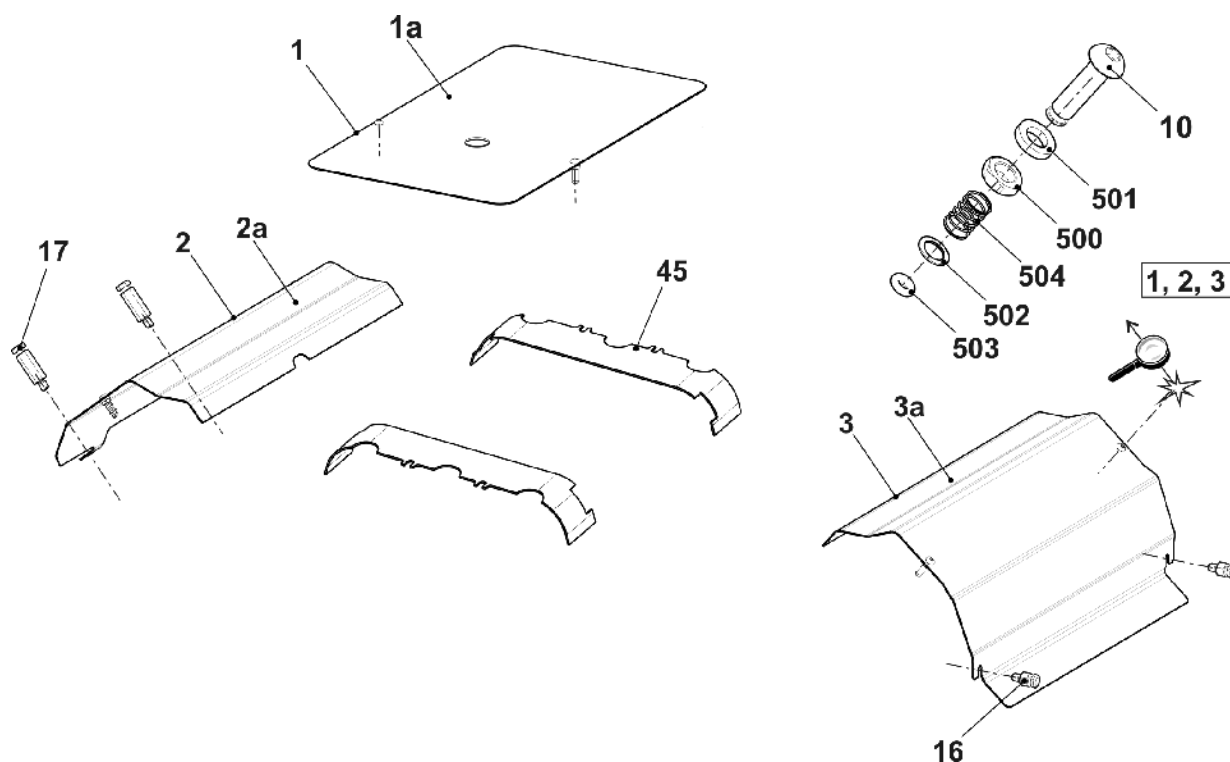


5.5 Needle cam E1,5.2 | E2.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle cam complete (at the top)	267 306	531	Washer 4,3x7x0,5	022 153
1	Cam plate	265 847	532	Circlip 3,2	021 019
21	Loop sinking cam on the left complete	214 657	533	Compression spring 0,55x4,95x74,8	023 344
22	Loop sinking cam on the right complete	214 656	24	Rod guide element on the right	214 478
23	Rod guide element on the left	214 477	24a	Rod guide element on the right	214 473
23a	Rod guide element on the left	214 475	25	Switching piece	214 322
23b	Spring rod	214 476	26	Slider	214 336
530	Cap screw M4x8	020 091	27	Spacer	214 603

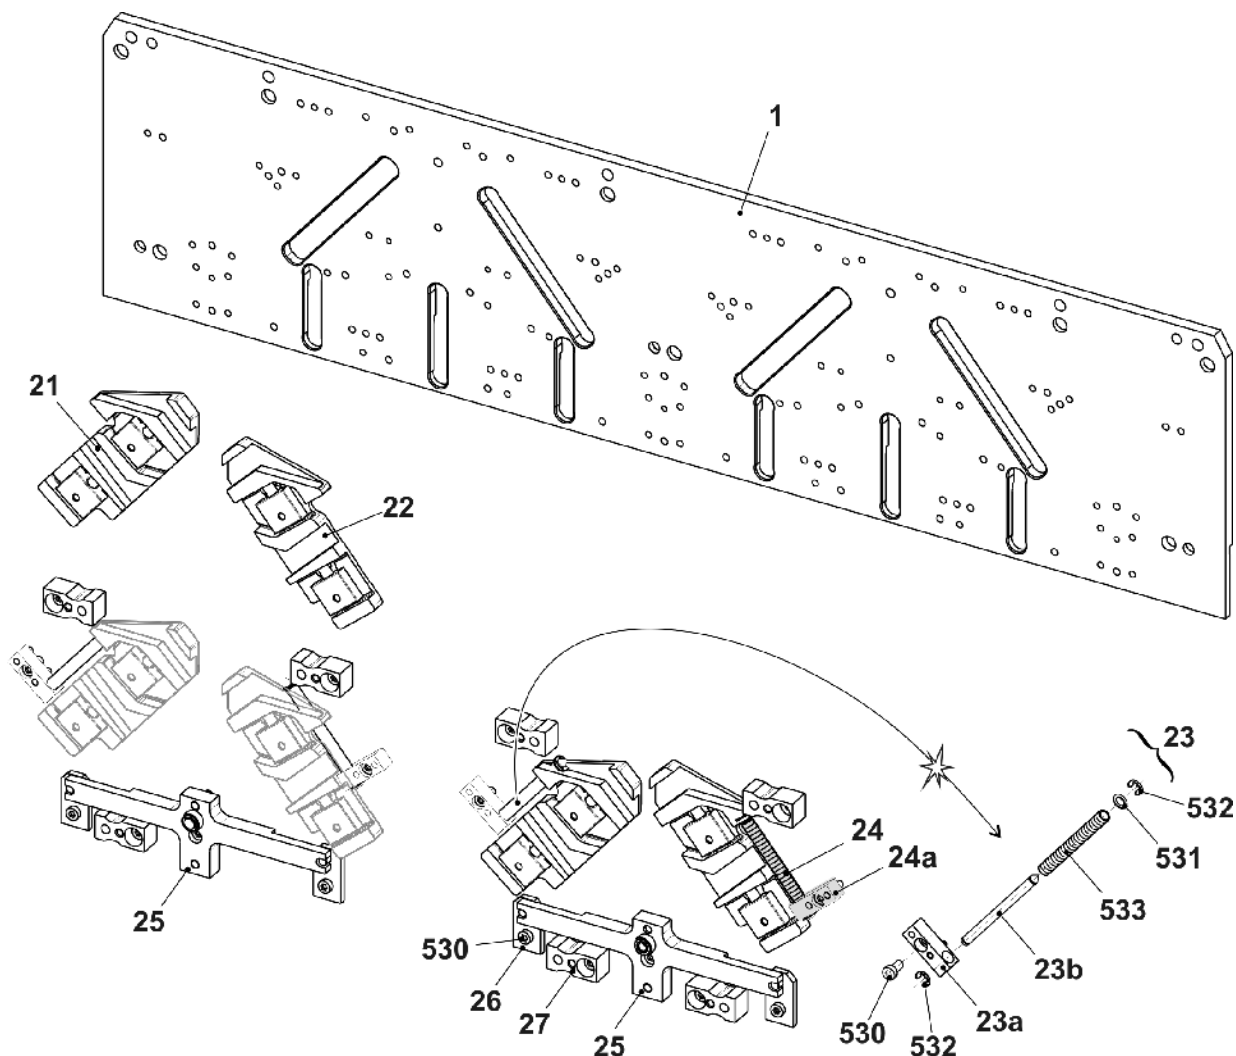


5.5.1 Continuation cam box E1,5.2 | E2.2

Pos	Designation	ID	Pos	Designation	ID
Σ	Needle cam box complete (at the bottom)	267 306	13	Raising cam plate	265 855
2	Entry cam on the left	265 848	14	Raising cam without split-stitch	265 854
3	Entry cam on the right	265 849		Raising cam with split-stitch (Accessories)	266 541
4	Entry cam in the middle	265 850	15	Receiving cam	265 854
5	Entry cam at the bottom	265 853	16	Tuck limiting cam	265 856
6	Knitting position cam	220 179	17	Limiting cam on the left	265 858
7	Pressure strip	214 663	18	Limiting cam on the right	265 859
8	Pressure cam receiving on the left	266 650	19	Pointer	218 050
9	Pressure cam receiving on the right	266 651	20	Screw	214 576
10	Tuck pressure cam	216 130	28	Limiting cam at the bottom	215 994
11	Stitch cam on the left	265 851	500	Cap screw M4x8	020 091
12	Stitch cam on the right	265 852	501	Countersunk screw M3x6-4.8	020 286

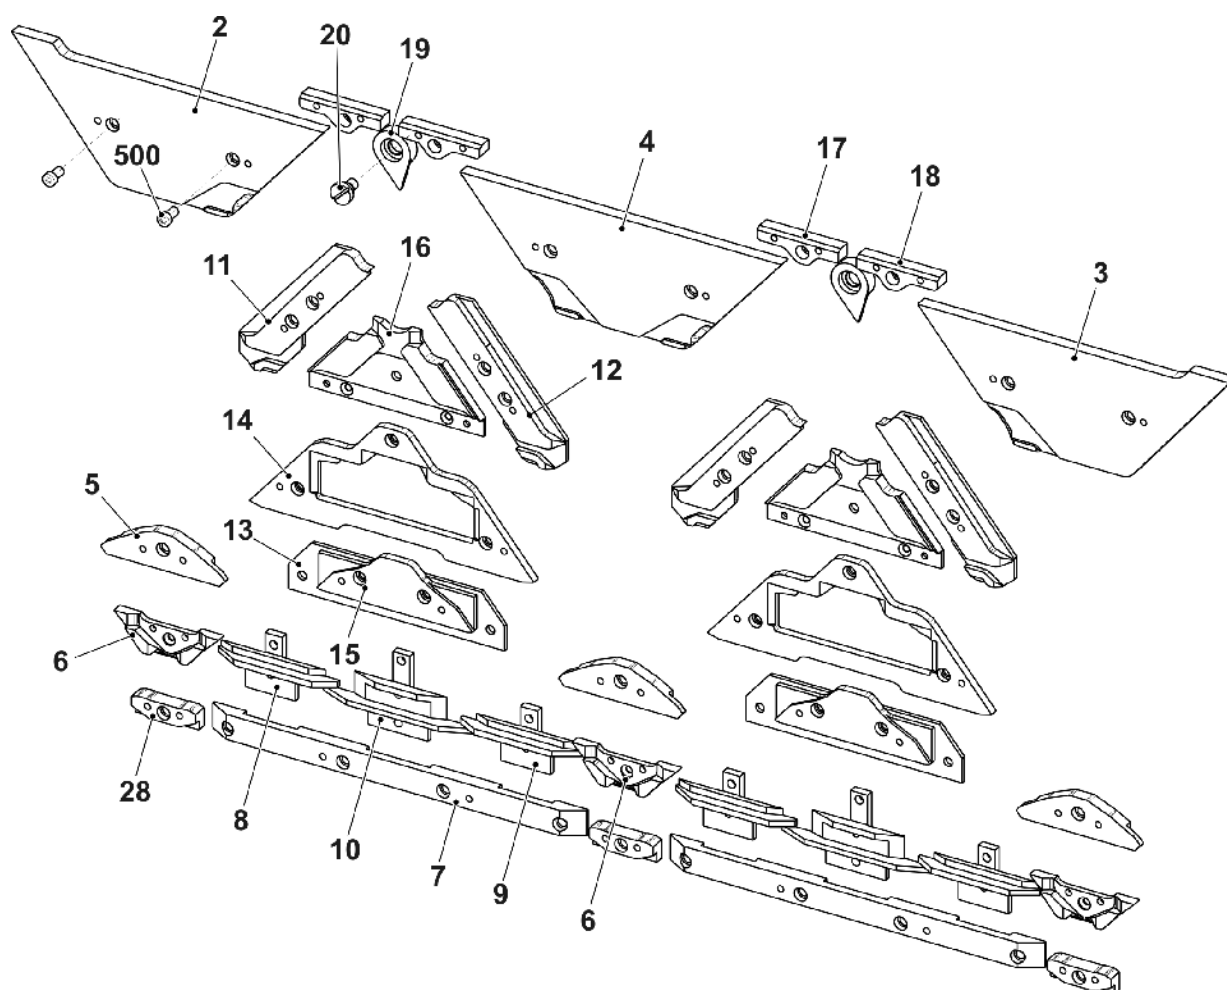


5.6 Jack cam box

Pos	Designation	ID	Pos	Designation	ID
Σ	Jack cam box complete	267 367	9	Cam part at the right	266 445
1	Jack cam box plate	214 900	12	Selection cam on the left	213 868
2	Cam on the left	214 594	13	Selection cam on the right	213 870
3	Cam part at the right	214 596	14	Selection cam	213 869
4	Cam on the left	214 586	15	Offering cam	210 185
5	Cam part at the right	214 587	500	Cap screw M4x8	020 091
6	Cam on the left	266 442	501	Pan head screw M3x4	023 142
7	Cam part at the right	266 443	502	Shim 0,1x12x75	022 830
8	Cam on the left	266 444	503	Shim 0,2x12x75	022 831

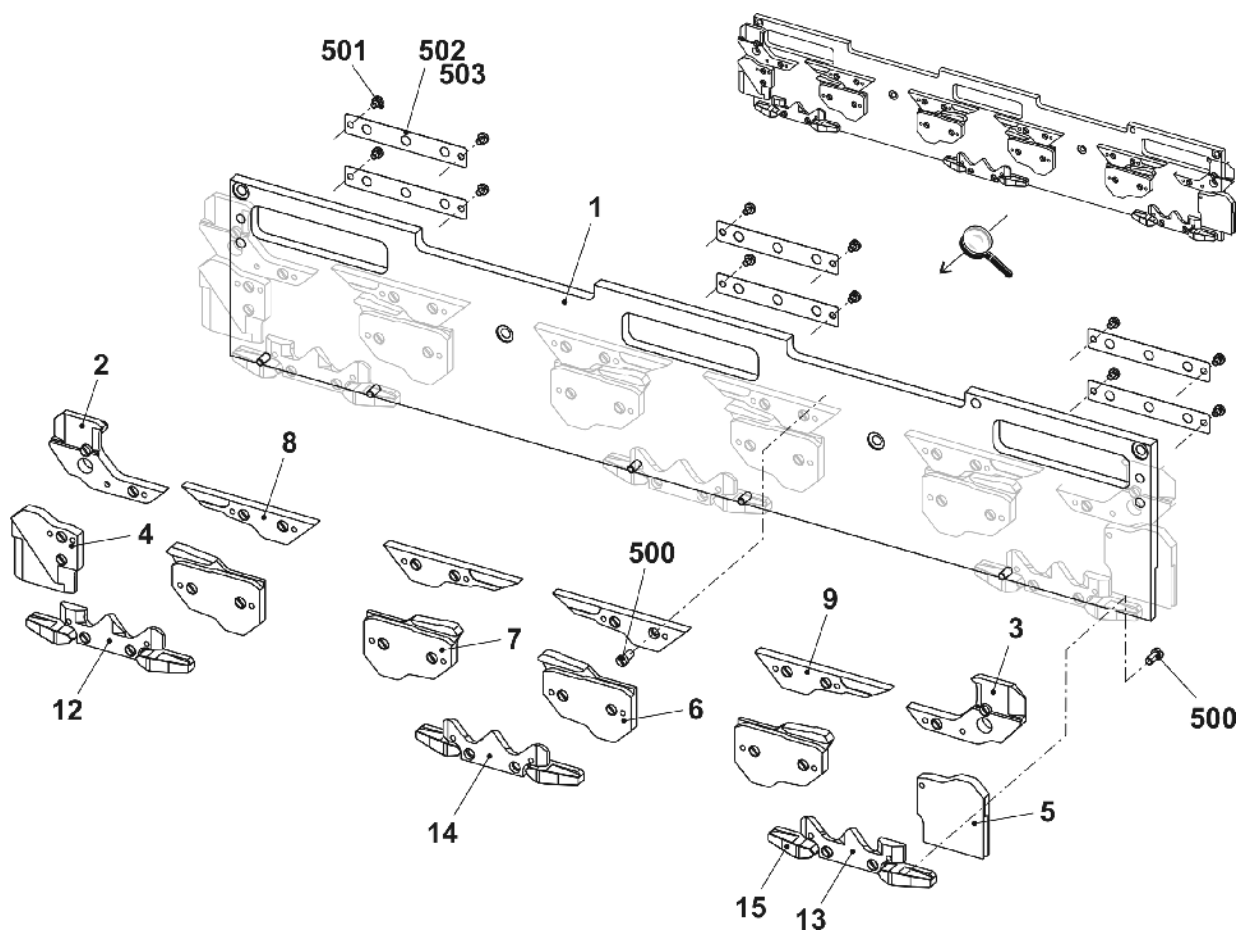


5.7 Holding-down jack cam box

Pos	Designation	ID	Pos	Designation	ID
Σ	Holding-down jack cam box complete	267 576	13	Cover on the left	267 384
1	Jack cam box plate	267 383	12	Magnet	231 651
2	Closer holding-down jack on the right	267 310	13	Yoke	237 343
3	Closer holding-down jack on the left	267 309	500	Cap screw M4x8	020 091
4	Closer holding-down jack	267 308	501	Cap screw M4x16	020 131
5	Jack opener	237 346	502	Cap screw M4x10	023 136
6	Slider	237 453	503	Pan-head screw M4x10	020 295
7	Magnet holder	267 382	504	Pan head screw M4x8	254 971
8	Guide on the left	267 381	505	Pan head screw M4x10	023 450
9	Guide on the right	267 380	506	Screw	236 228
10	Cover on the right	267 385	507	Compression spring 0,48x7,02x17,29	023 654

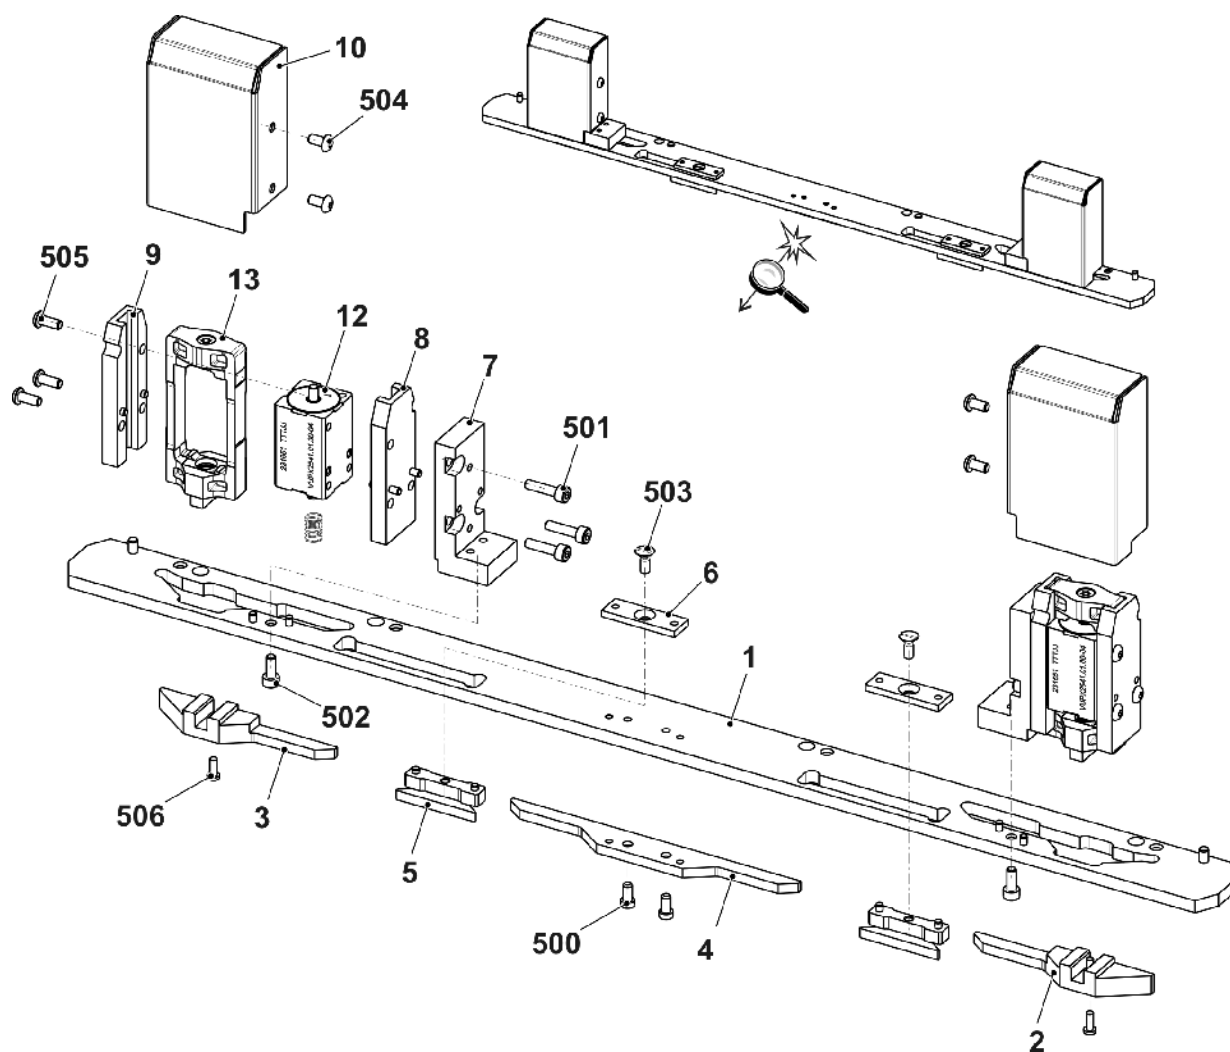


5.8 Yarn carrier driving without guide part

Pos	Designation	Id	Pos	Designation	Id
Σ	YC driving outside complete	241 080			
1	Yarn carrier plunger complete	242 214	500	Cap screw M4x14-I-Torx	242 279
2	Holding angle for jack	241 038	501	Cap screw M3x12-12.9	022 648
3	Card yarn carrier final stagesOKC	300 960	900	Cap screw M6x14	022 658
4	Holding angle for YC driving	242 903	901	Shoulder screw	231 899

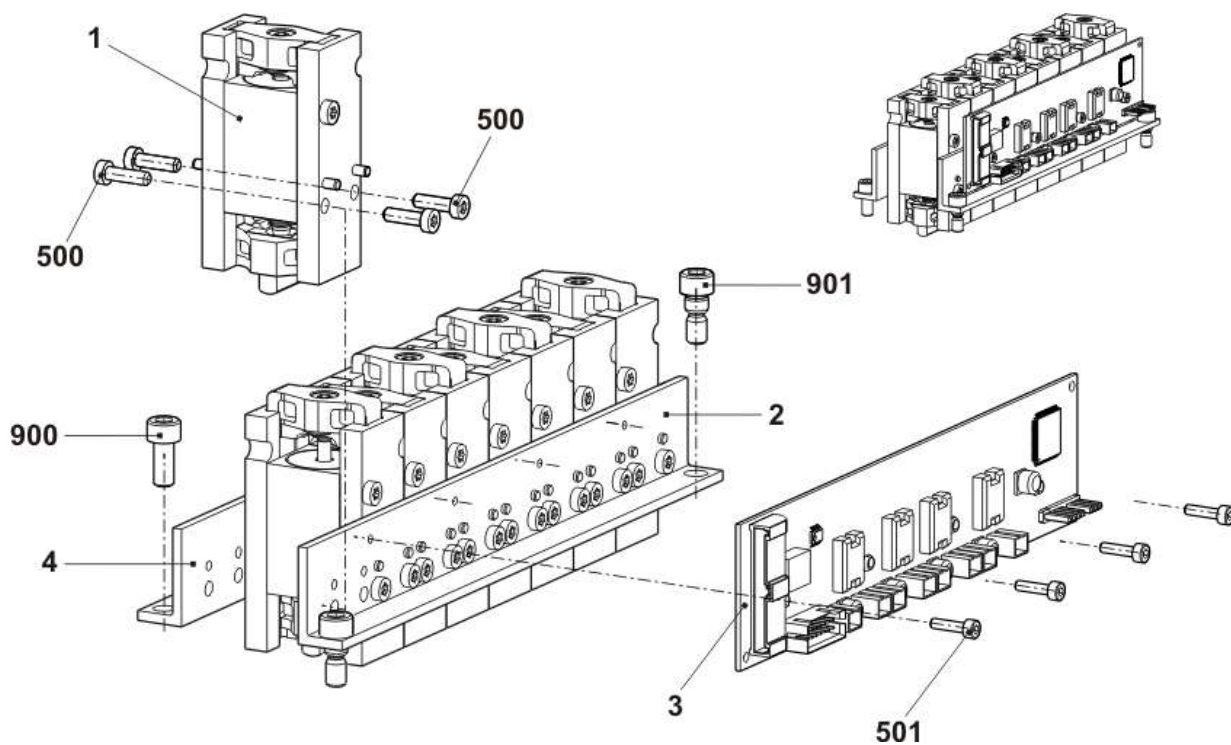


5.9 Yarn carrier driving with guide part

Pos	Designation	Id	Pos	Designation	Id
Σ	FF driving in the middle complete	241 081			
1	Yarn carrier plunger complete	242 214	500	Cap screw M4x14-I-Torx	242 279
2	Holding angle for jack	241 038	501	Cap screw M3x12-12.9	022 648
3	Holding angle for YC driving	241 044	502	Screw KB60X20	243 625
4	Card yarn carrier final stagesOKC	300 960	900	Cap screw M6x14	022 658
5	Guide part	239 972	901	Shoulder screw	231 899

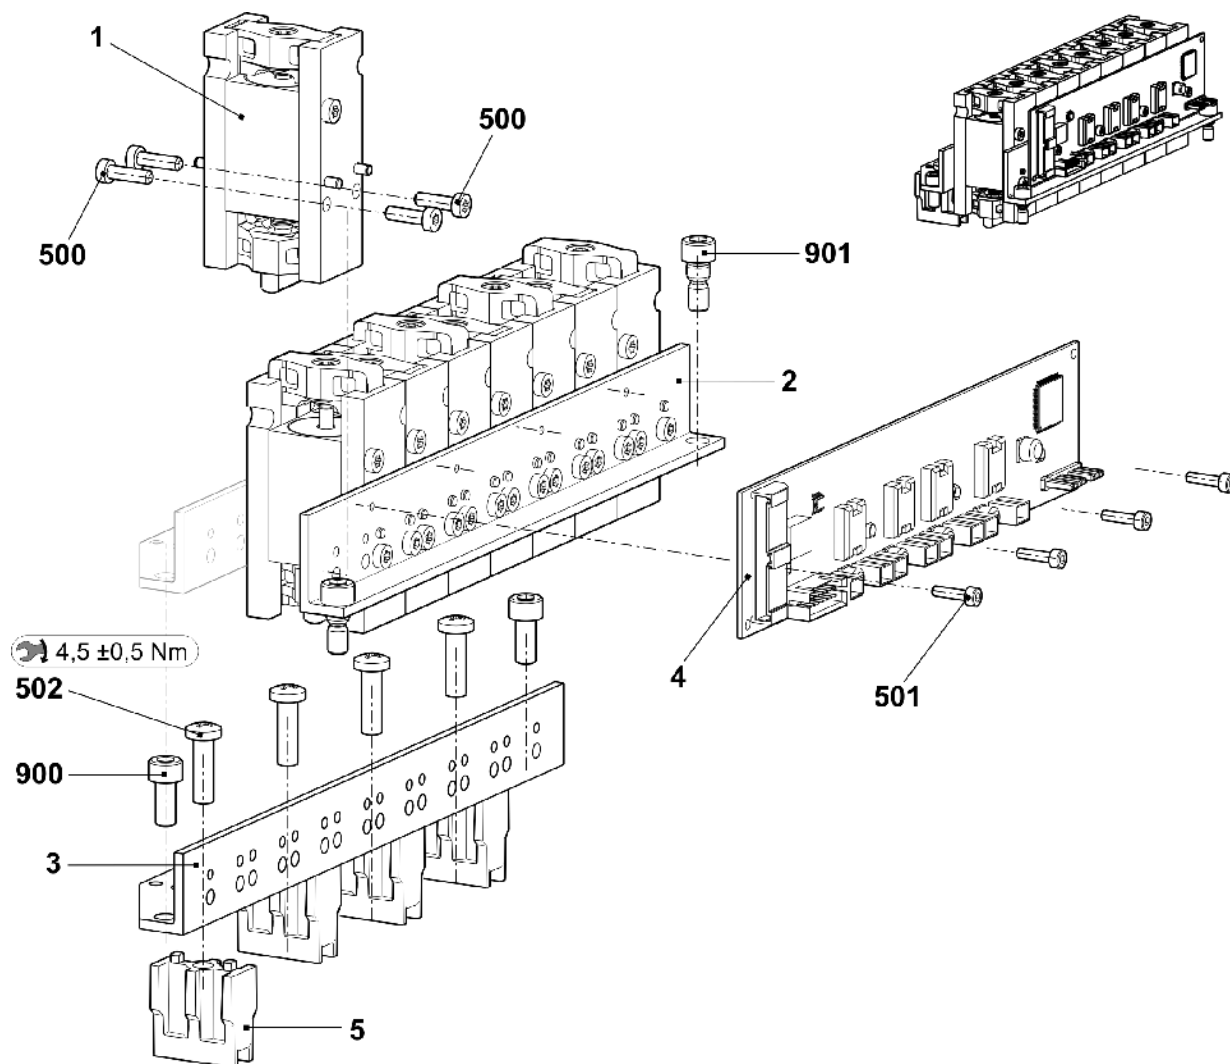


5.10 Needle detector

Pos	Designation		ID	Pos	Designation		ID
Σ	Needle detector		237 675		512	Pan-head screw M2x8	258 310
1	Needle detector pre-assembled		221 773		513	Setscrew M5x20	023 526
	11	Cable of needle detector complete	221 207		514	Compression spring 4,3x0,45x10	021 398
	12	Retainer	220 464	2	Sensor pre-assembled		237 674
	13	Bolts	258 390		21	Sensor	220 839
	14	Switch rocker	220 637		22	Angle	237 668
	510	Pan-head screw M5x10	023 247		500	Pan-head screw M4x6	023 427
	511	Circlip	021 018	500	Pan-head screw M4x6		023 427

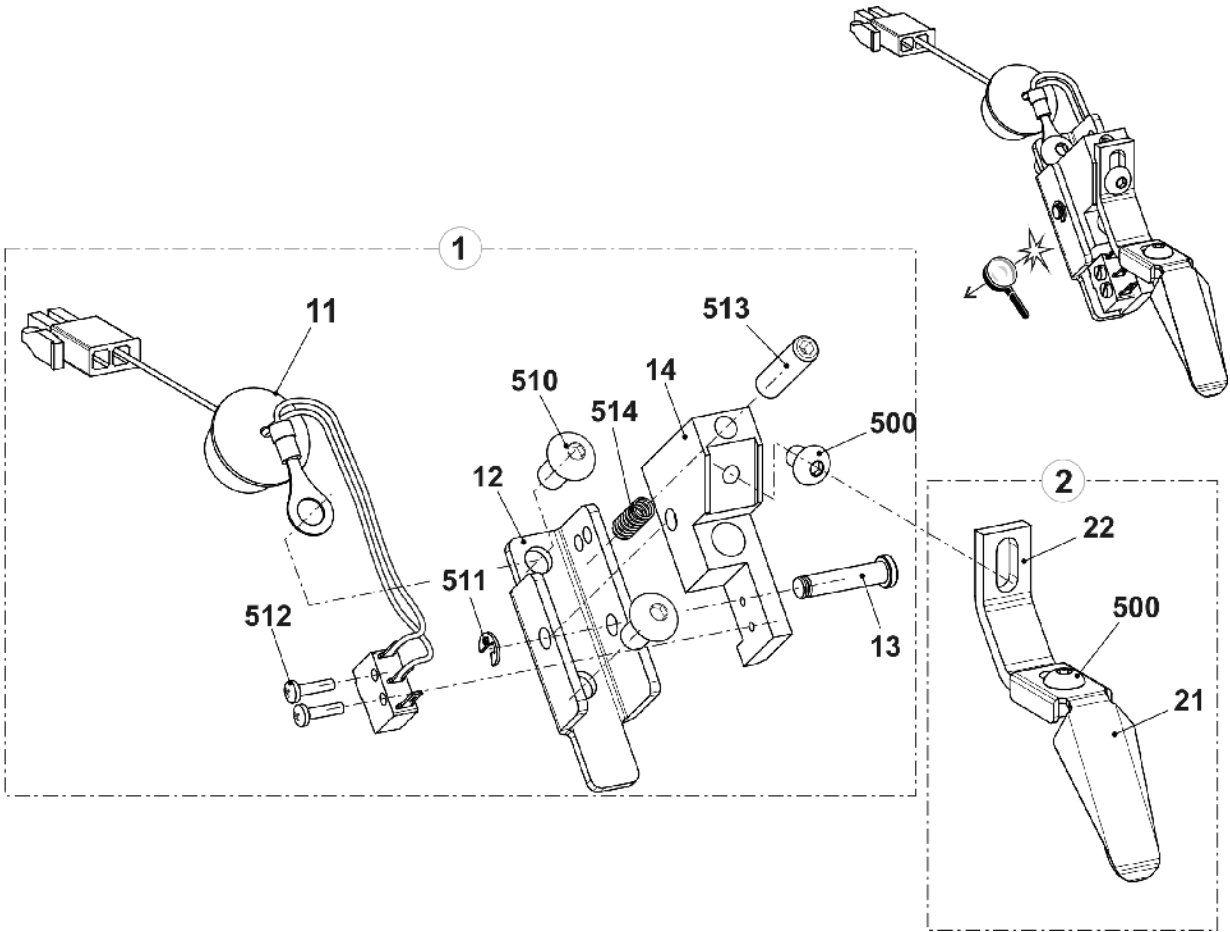


5.11 Brush holder

Pos	Designation	ID	Pos	Designation	ID
Σ	Brush holder complete	214 710			
1	Brush holder	213 009	500	Countersunk head screw M4x12	023 062
2	Brush clamp	213 010	501	Hexagon nut M8-4	020 856
3	Threaded rod	209 740	502	Shim ring 5x10x0,5	023 348
4	Needle brush E2-4	061 407	503	Retaining ring 5x0,6	023 347

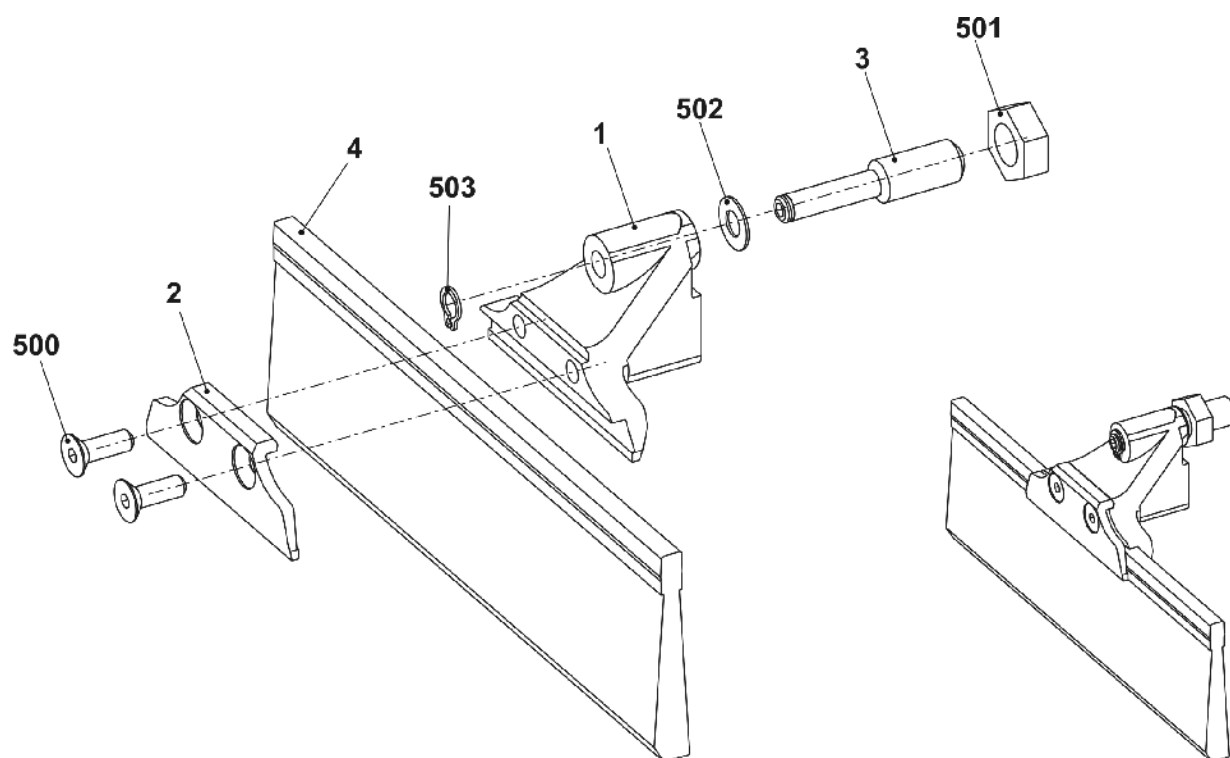


6 Main take-down

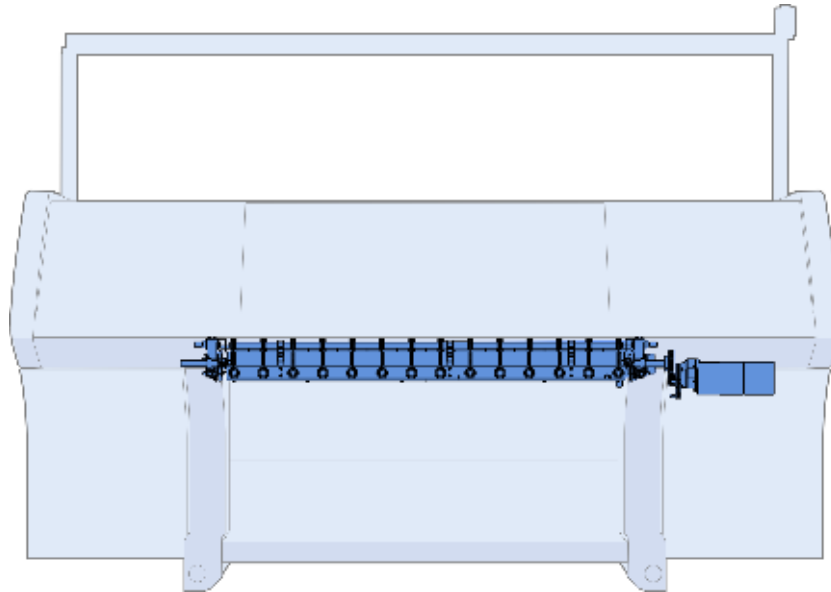


6.1 Main Take-down

Pos	Designation	ID	Pos	Designation	ID
Σ	Main take-down		2	Main take-down on the right	267 097
1	Main take-down on the left	267 098	3	Main take-down in the middle E5-14	265 823

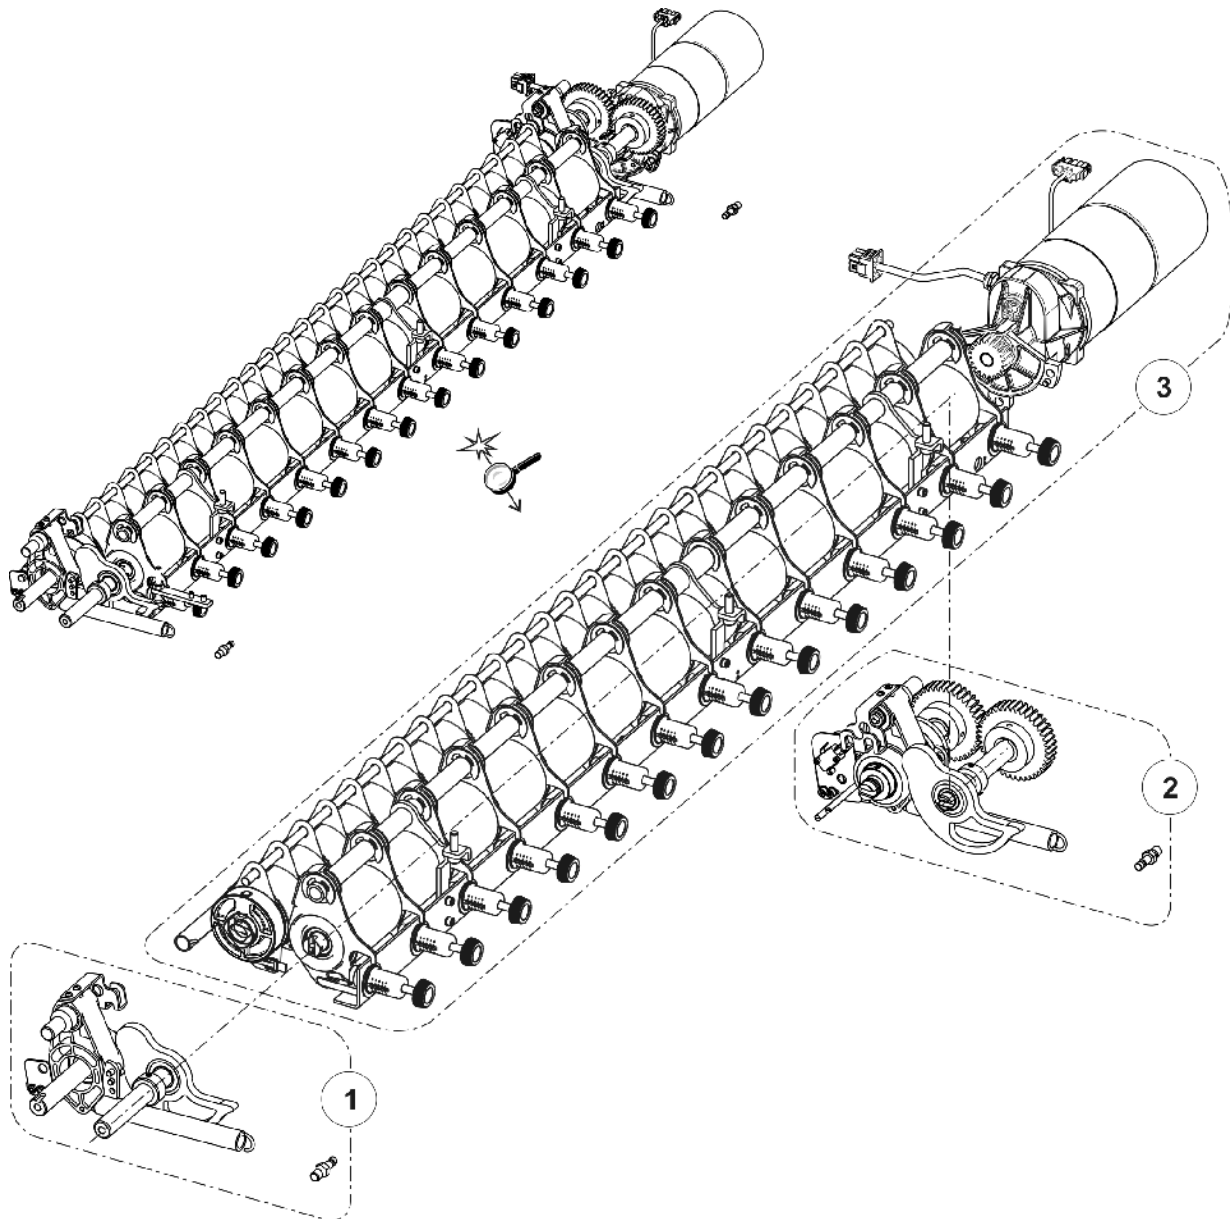


6.1.1 Main take-down on the left

Pos	Designation	Id	Pos	Designation	Id
Σ	Main take-down on the left	267 098			
2	Bearing race complete	244 459	17	Spring bolt	221 143
3	Shaft on the left at the rear	221 012	19	Stop point	252 503
5	Bolts	208 538	500	Screw 50x15	251 728
7	Mounting plate on the left complete	267 031	504	Washer	023 295
9	Swivel-mounted bearing on the left	273 231	505	Retaining ring 18x1,2	020 955
10	Full floating axle on the left	251 984	511	Cap screw M6x12	020 134

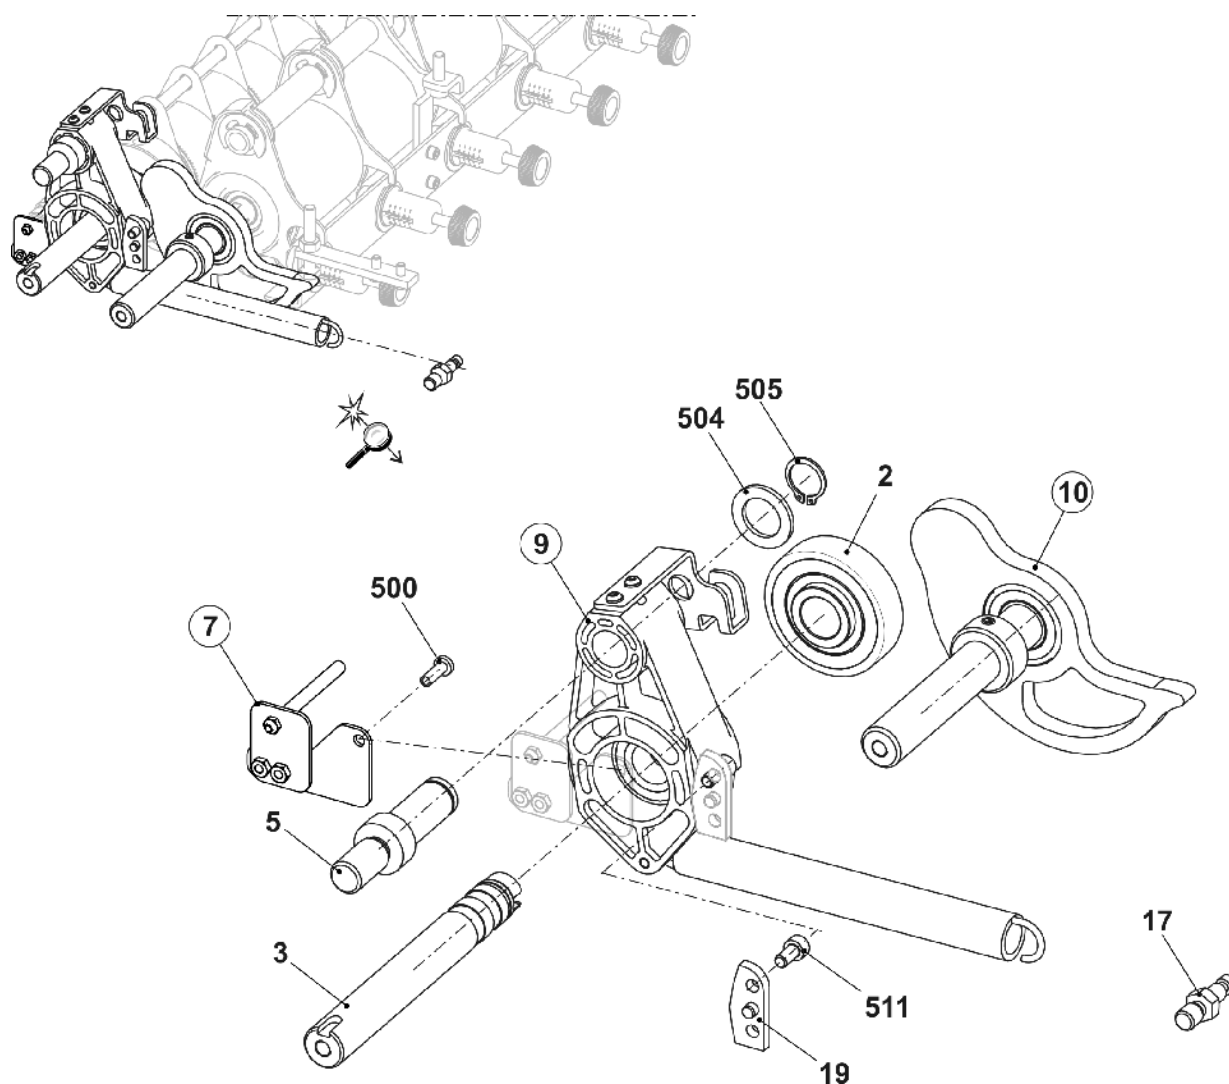


6.1.1.1 Swivel-mounted bearing

Pos	Designation	Id	Pos	Designation	Id
Σ	Swivel-mounted bearing	273 231			
1	Swivel-mounted bearing	241 996	500	Screw M35x10	259 102
2	Sheet metal support	251 749	504	Circlip 4	021 020
3	Axle	251 758	505	Tension spring 21x3,0x192	240 217

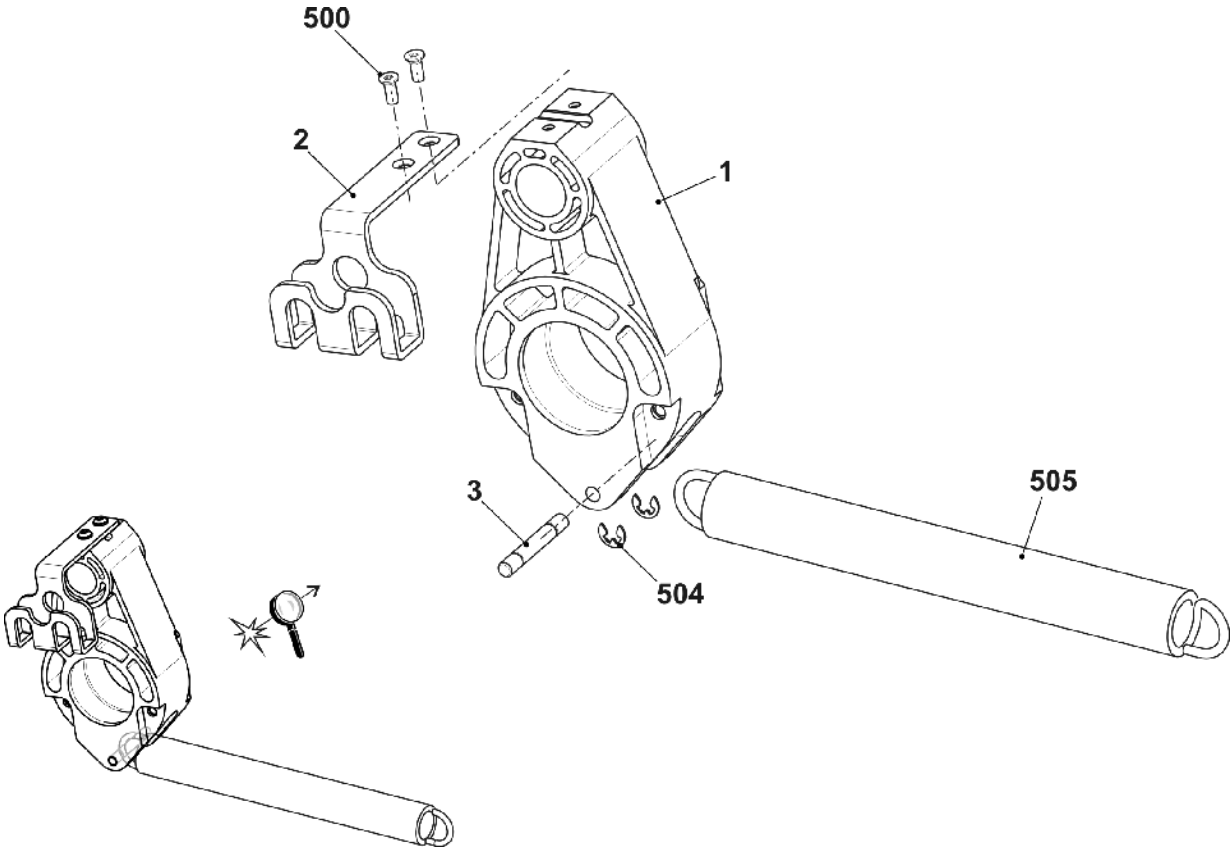



6.1.2 Main take-down on the right

Pos	Designation	Id	Pos	Designation	Id
Σ	Main take-down on the right	267 097			
1	Clutch set	251 677	7	Spring bolt	221 143
2	Bearing race complete	244 459	8	Stop point	252 503
3	Bolts	208 538	500	Screw 50x15	251 728
4	Mounting plate on the right complete	267 032	501	Washer	023 295
5	Swivel-mounted bearing on the right	251 761	502	Retaining ring 18x1,2	020 955
6	Full floating axle on the right	251 985	503	Cap screw M6x12	020 134

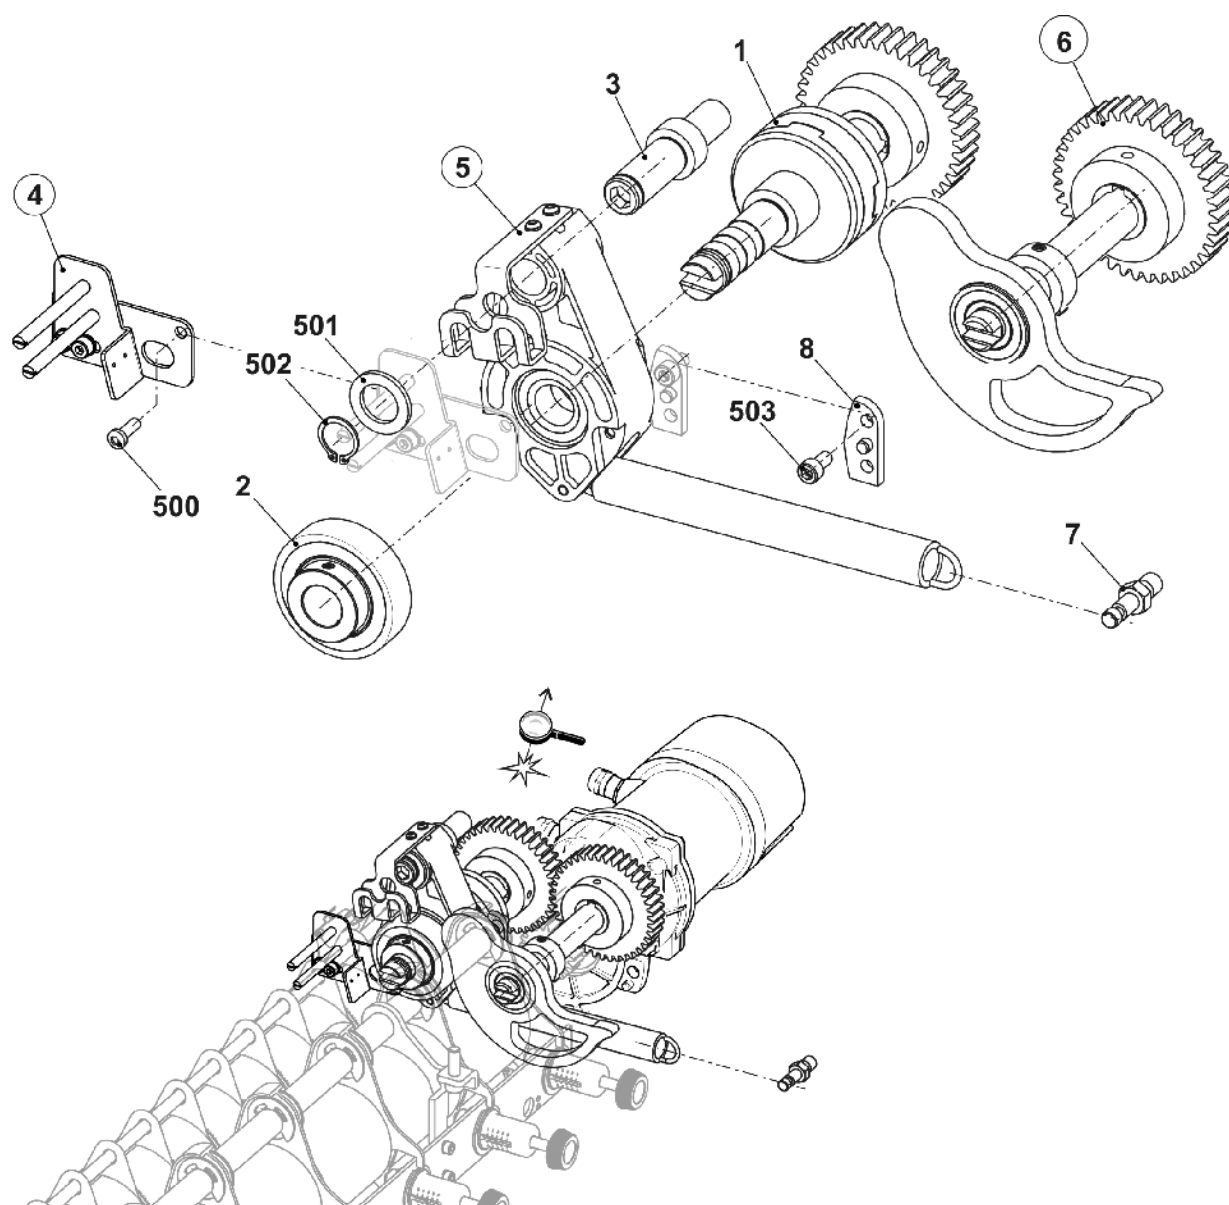



6.1.2.1 Mounting plate on the left and right

Pos	Designation	ID	Pos	Designation	ID
Σ L	Mounting plate on the left complete	267 031	Σ R	Mounting plate on the right complete	267 032
1	Mounting plate on the left	265 868	11	Mounting plate on the right	265 757
2	Retaining plate on the left	231 539	12	Shoulder screw	240 067
3	Shoulder screw	240 067	13	Retaining plate on the right	265 867
500	Cap screw M5x8	244 278	513	Cap screw M5x8	244 278
501	Washer 5-200	020 871	514	Washer 5-200	020 871

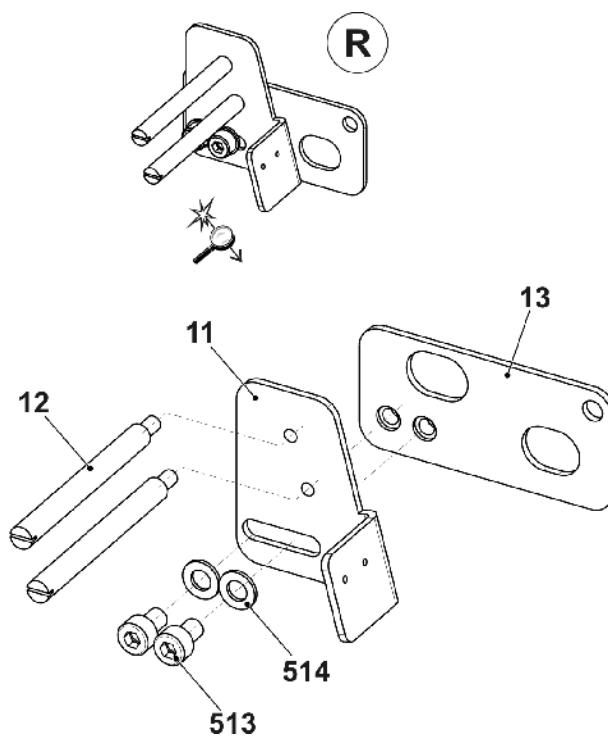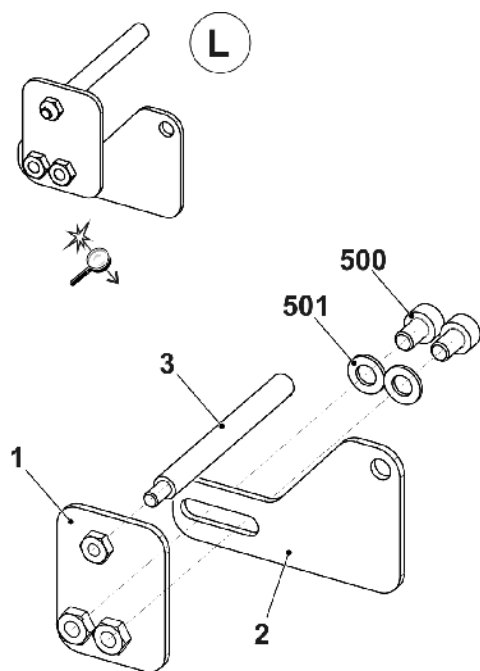


6.1.2.2 Full floating axle

Pos	Designation	ID	Pos	Designation	ID
Σ L	Full floating axle on the left	251 984	Σ R	Full floating axle on the right	251 985
1	Shaft on the left at the front	221 013	1	Eccentric	251 959
2	Eccentric	251 959	2	Shaft on the right	223 393
500	Set collar	020 938	3	Gear wheel Z=40, M=2	213 744
502	Fitting freewheel ZZ6203L	023 294	500	Fitting freewheel ZZ6203L	023 294
900	Setscrew M6x8	022 684	501	Set collar	020 938
			502	Setscrew M6x8	022 684
			503	Feather key A 6x6x25	023 017

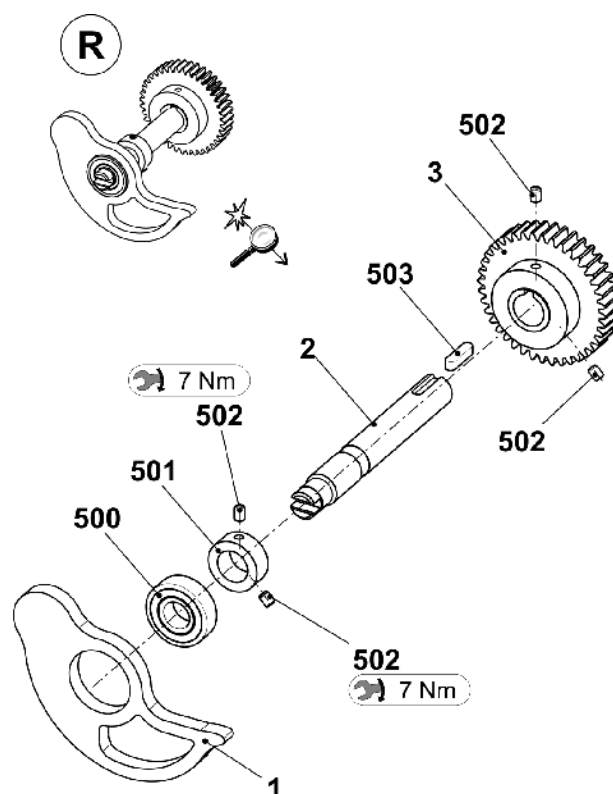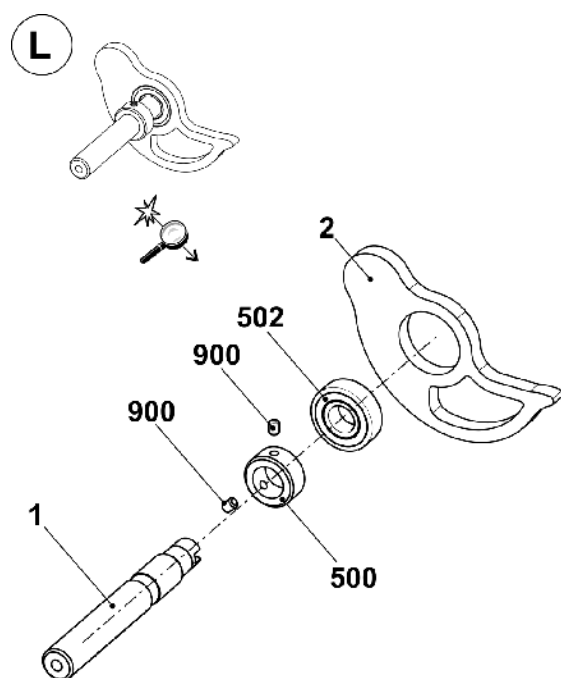


6.1.3 Main take-down in the middle

Pos	Designation	ID	Pos	Designation	ID
Σ	Main take-down in the middle	265 823			
4	Stripping angle	266 995	13	Take-down roller at the rear complete	253 853
12	Three phase servo motor	259 655	509	Cap screw M8x25	020 142
15	Take-down roller at the front complete	241 426	18*	Stop point	253 432
20	Connection cable winding plate OKC5	267 012	513*	Pan head screw M6x16	023 124

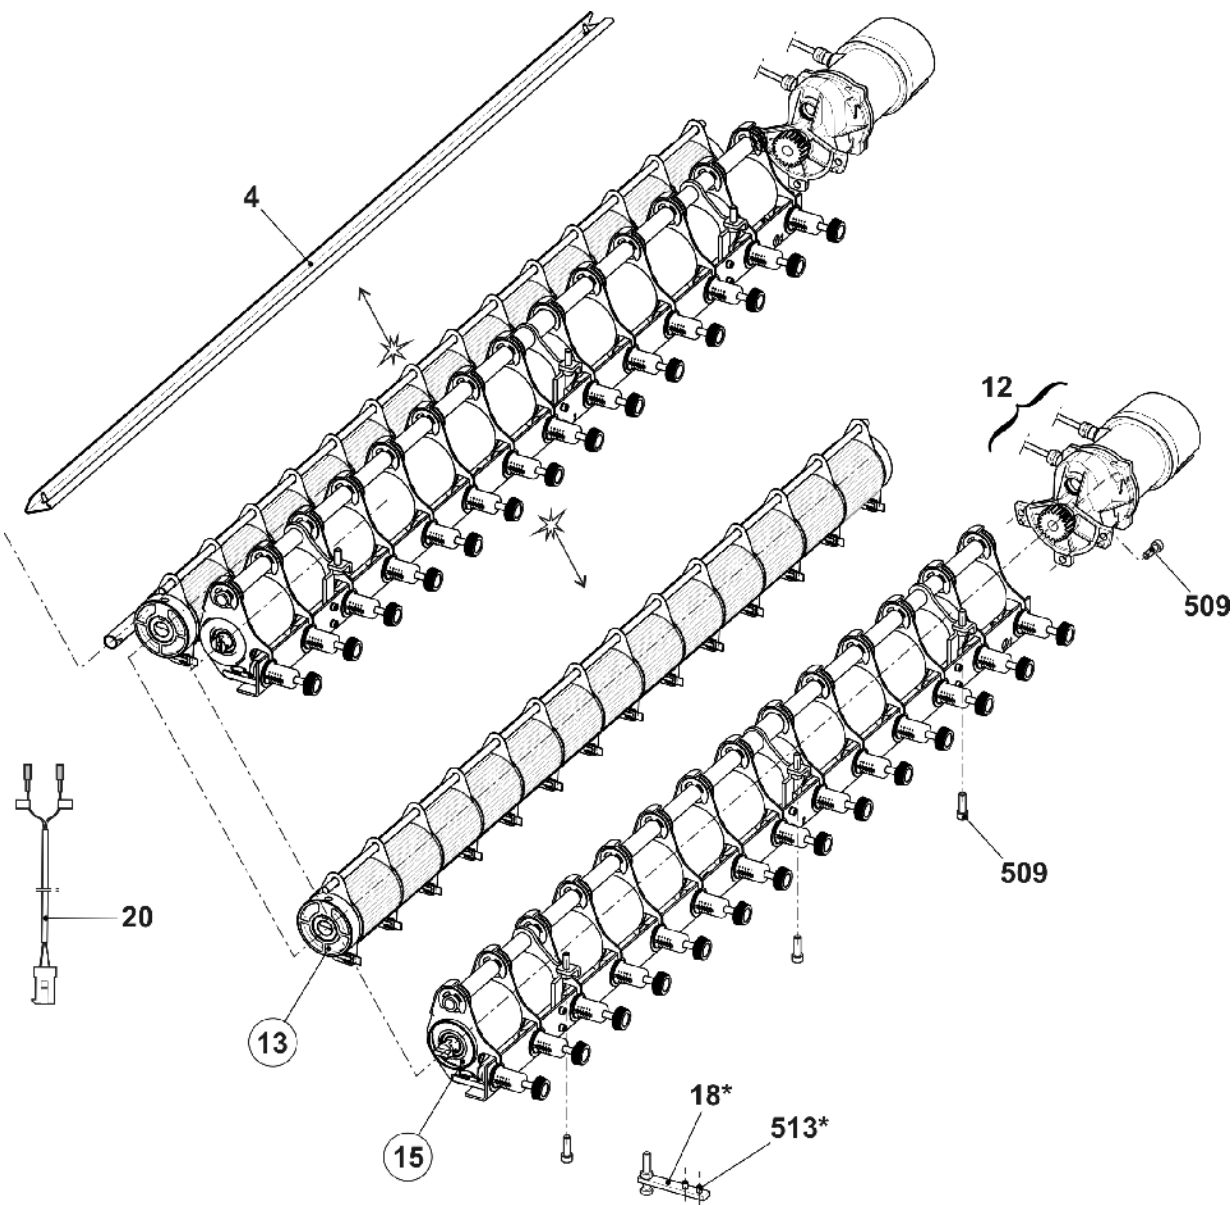


6.1.3.1 Rear take-down roller

Pos	Designation	ID	Pos	Designation	ID
Σ	Take-down roller at the rear complete	253 853			
1	Ring on the left	255 830	7	Roller (E5-14)	264 624
2	Stop ring on the left	204 369	8	Spacer slide	222 062
3	Shaft	221 011	9	Brush	225 819
4	Stripper	241 612	12	Rod	253 301
5	Spacer slide	264 669	500	Dowel pin 6x32	020 685
6	Ring on the right	255 831	501	Setscrew M8x16	258 910

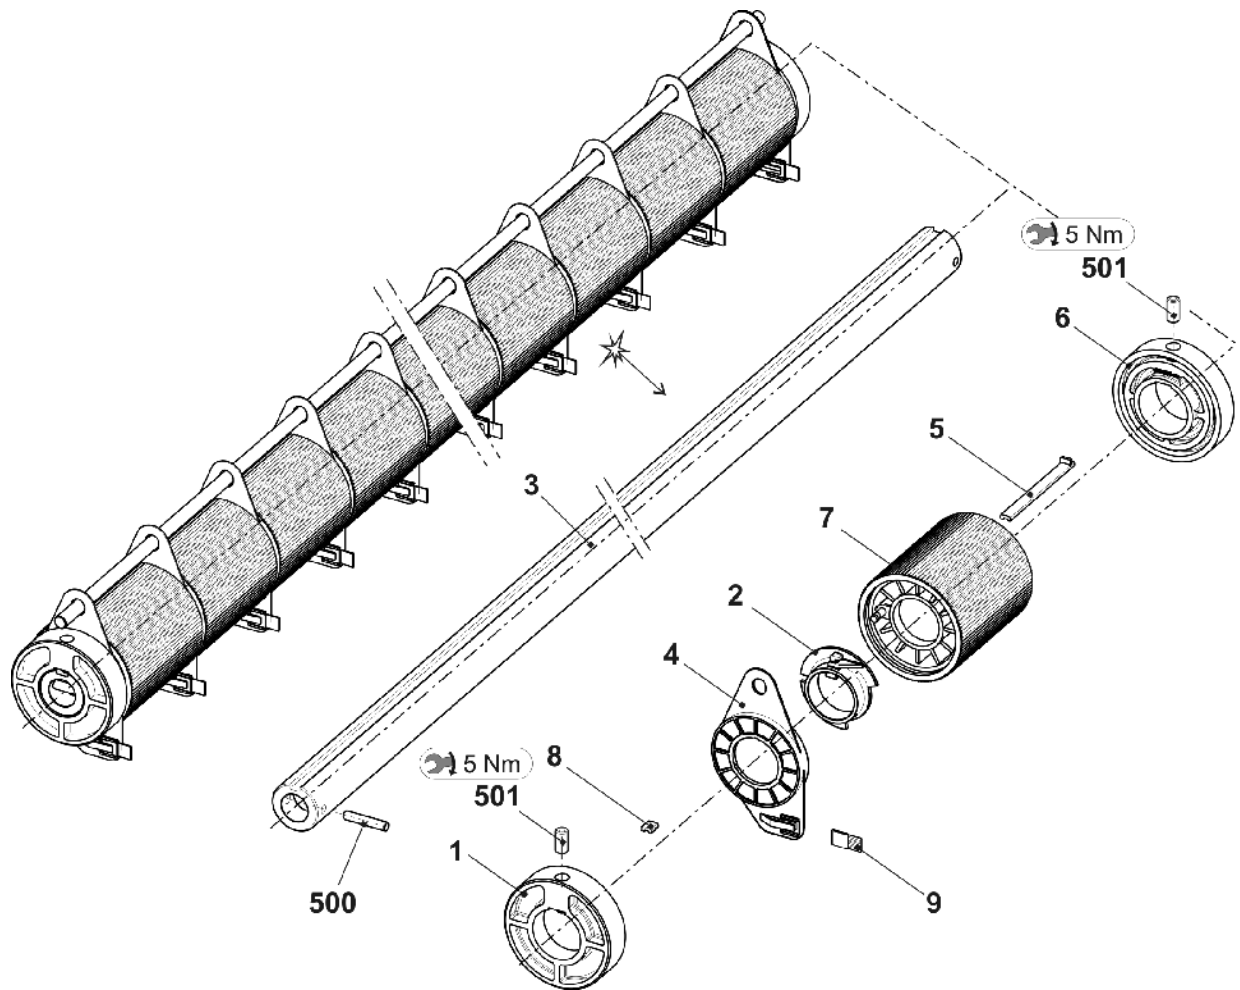


6.1.3.2 Front take-down roller

Pos	Designation	Id	Pos	Designation	Id
Σ	Take-down roller at the front complete	241 426	4	Locating piece	221 935
1	Take-down roller at the front	221 243	500	Compression spring 1x10x30	023 741
2	Angle rail complete	241 425	501	Cap screw M5x12	020 132
3	Pressure sleeve	220 911	502	Washer 5-200	020 880

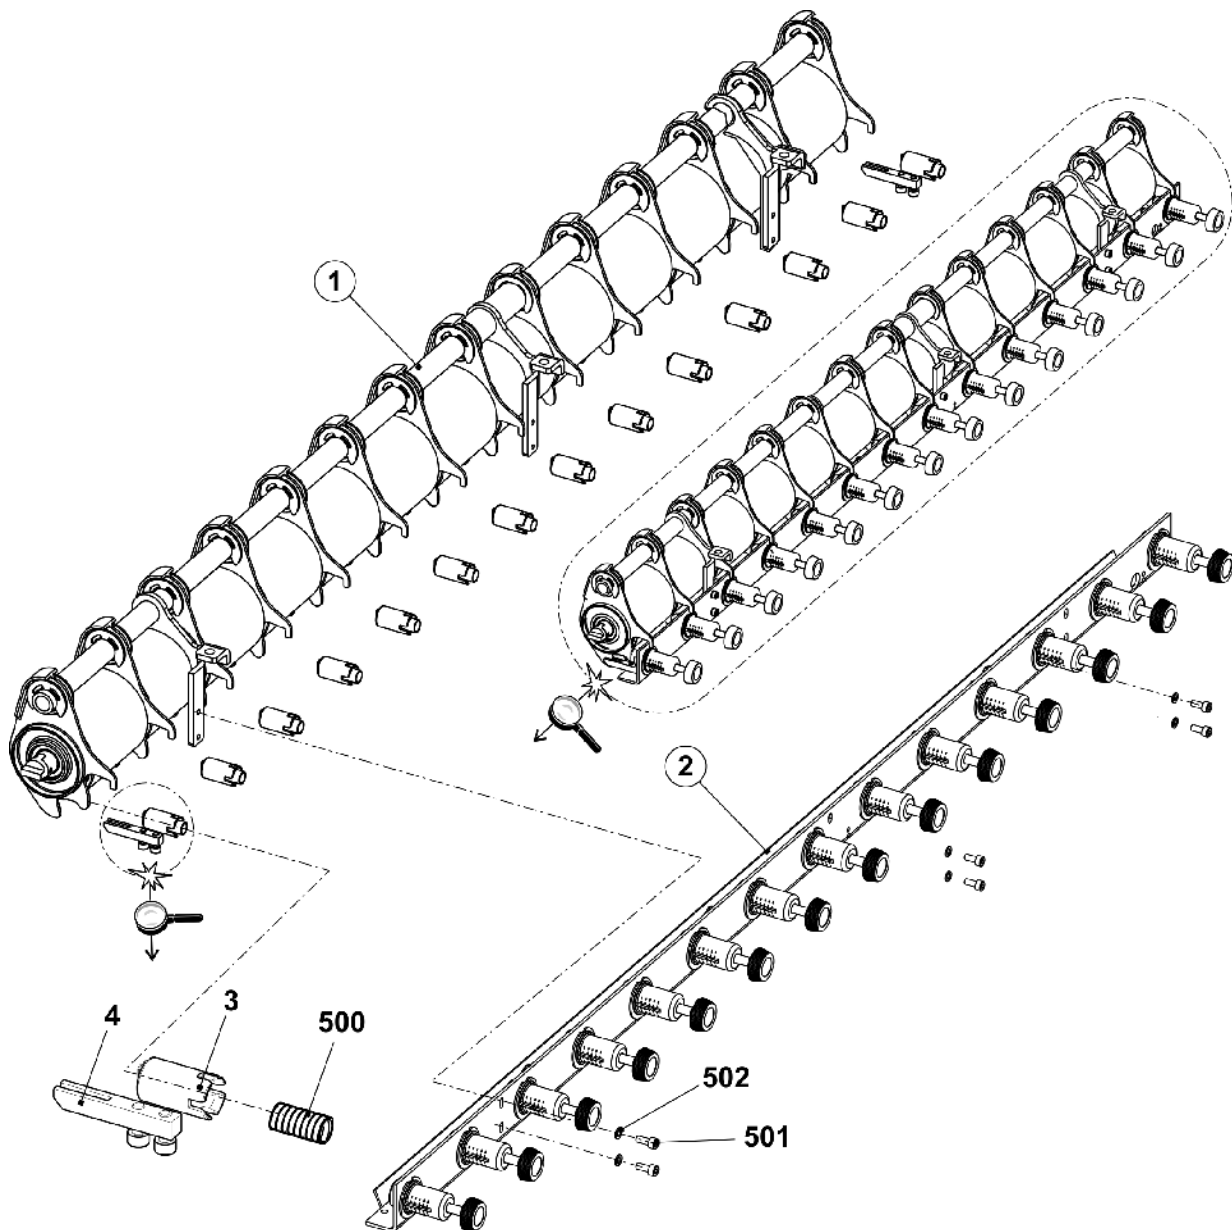


6.1.3.2.1 Front roller elements

Pos	Designation	Id	Pos	Designation	Id
Σ	Take-down roller at the front	221 243			
1	Bearing support on the left complete	221 225	4	Roller	220 905
aa	Universal joint	221 137	5	Tube	221 092
ab	adaptor	221 132	6	Bearing support on the right complete	221 240
b	Bearing support	220 913	aa	Universal joint	221 137
c	Gear wheel	220 910	ab	adaptor	221 132
501	Spring dowel sleeve 4x20	023 551	b	Bearing support	220 913
510	Cap screw M5x20	020 133	c	Gear wheel	220 910
511	Washer 5	023 542	501	Spring dowel sleeve 4x20	023 551
2	Straps	251 557	510	Cap screw M5x20	020 133
3	Bearing support complete	221 241	511	Washer 5	023 542
3b	Bearing support	220 913	7	Spacer pipe on the right	253 407
3a	Gear wheel	220 910	8	Spacer pipe on the left	253 408
530	Hexagon nut M5	023 541	500	Circlip	021 025
531	Washer 5-100hv	023 542			
532	Cap screw M5x30	022 396			

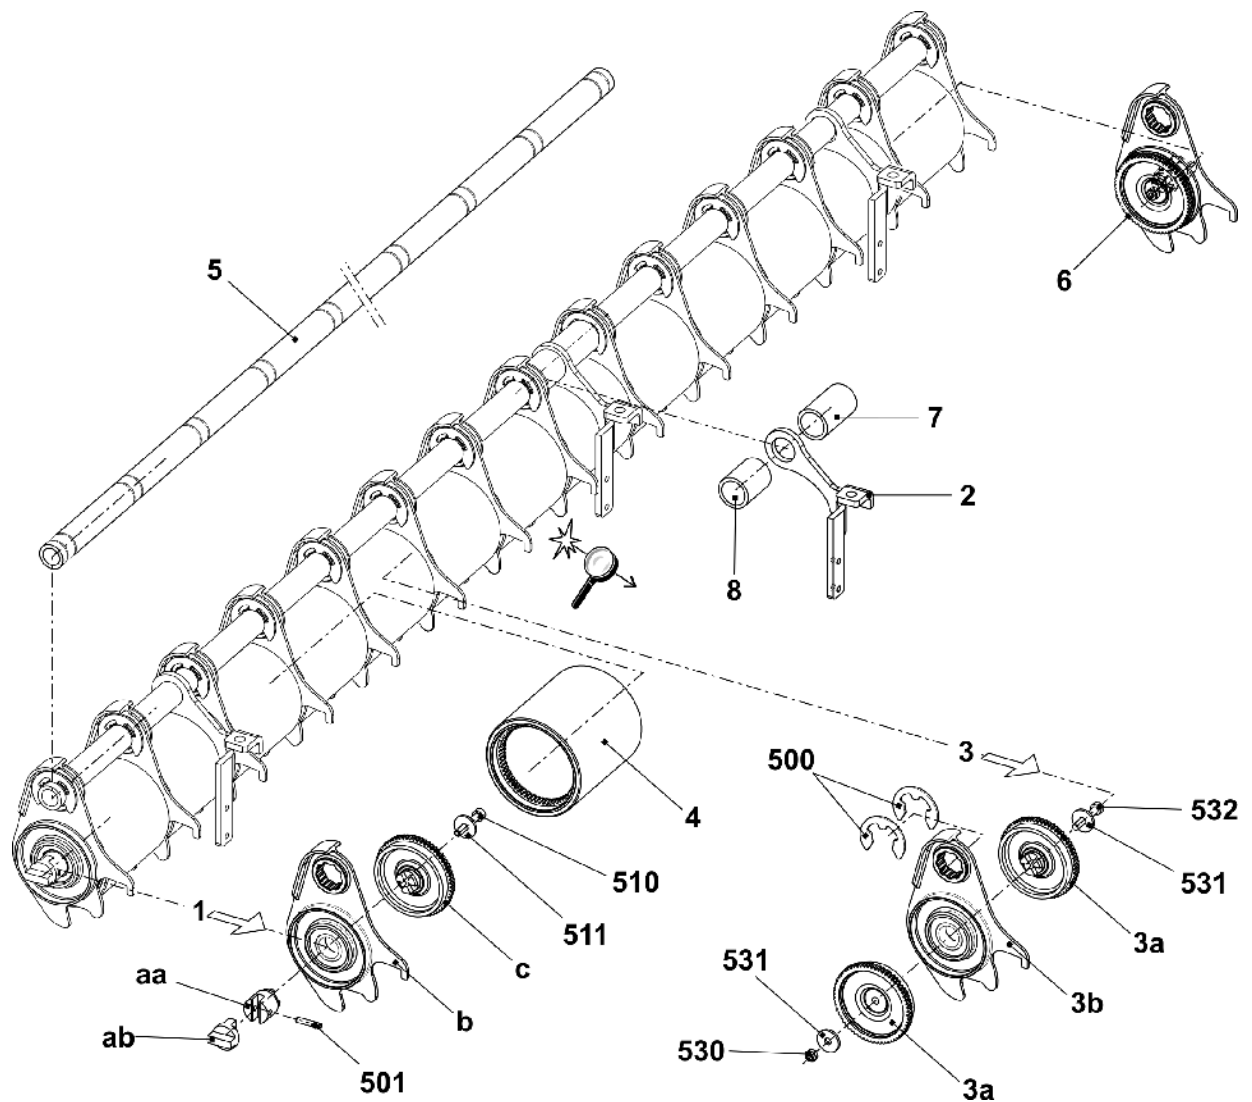


6.1.3.2.2 Pressure angle rail

Pos	Designation	Id	Pos	Designation	Id
Σ	Angle rail complete	241 425	500	Washer 6-200	022 431
1	Switch complete with cable	221 265	501	Hexagon nut M5-8	023 541
2	Spring flange	242 327	502	Compression spring 0,8x9,2x27,5	023 537
3	Angle rail	241 773	503	Cap screw M2x12	023 522
4	Winding plate	221 101	504	Washer 2-200	022 908
5	Retaining ring	242 325	505	Shoulder screw M5x20x5	023 675

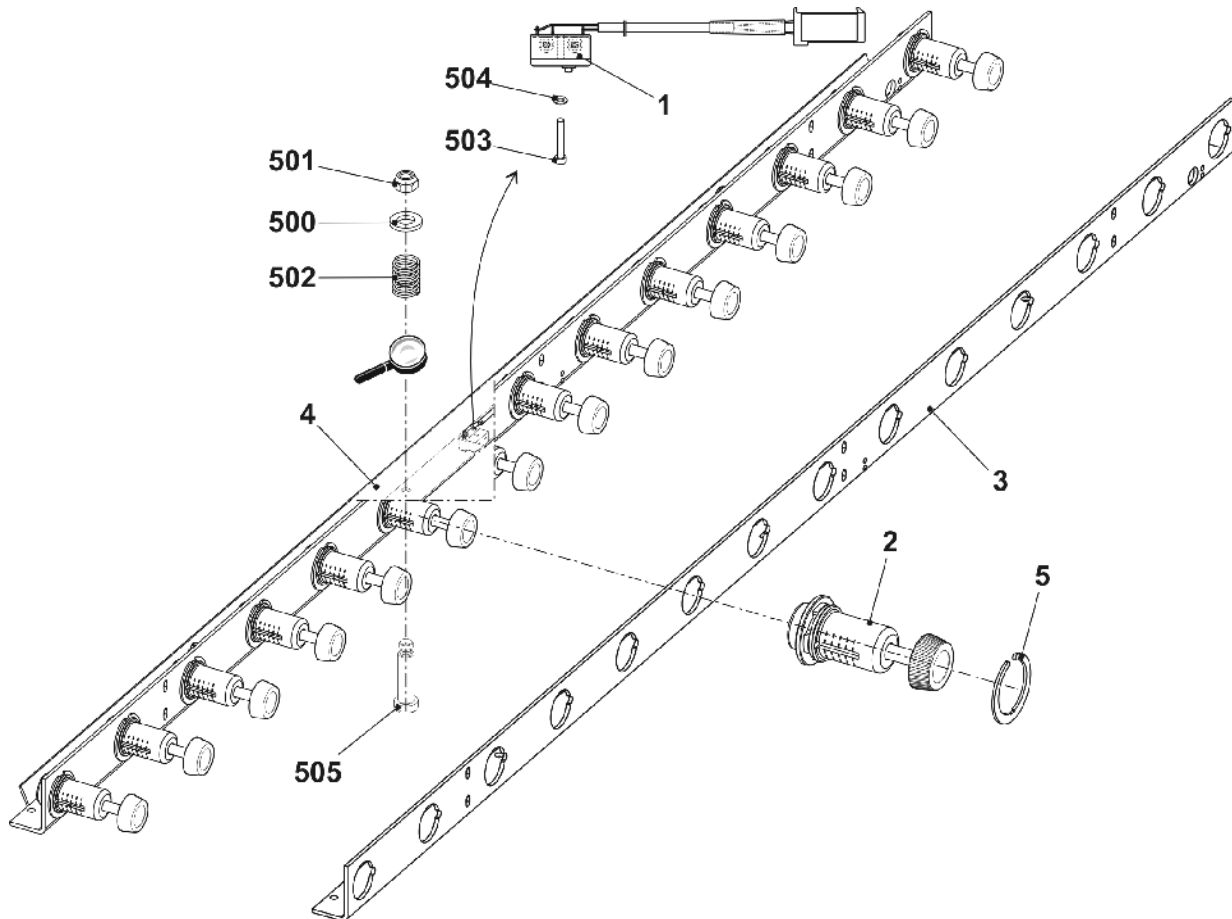


7 Auxiliary Take-down

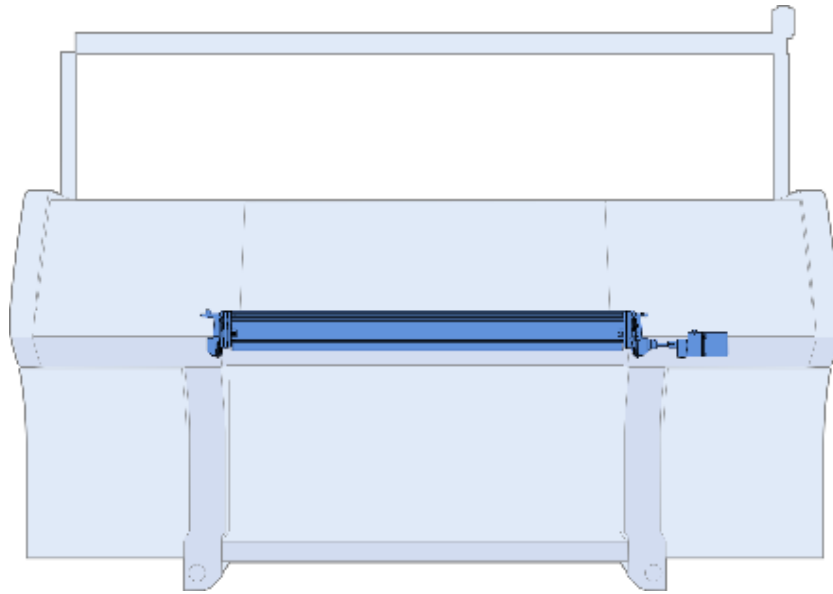


7.1 Auxiliary Take-down

Pos	Designation	ID	Pos	Designation	ID
1	Auxiliary take-down pre-assembled 50"	268 623	501*	Cap screw M6x16	020 135
2	Take-down motor complete auxiliary take-down	265 820	530*	Pan head screw M6x12	235 935
3	Sheet metal guide	225 890			

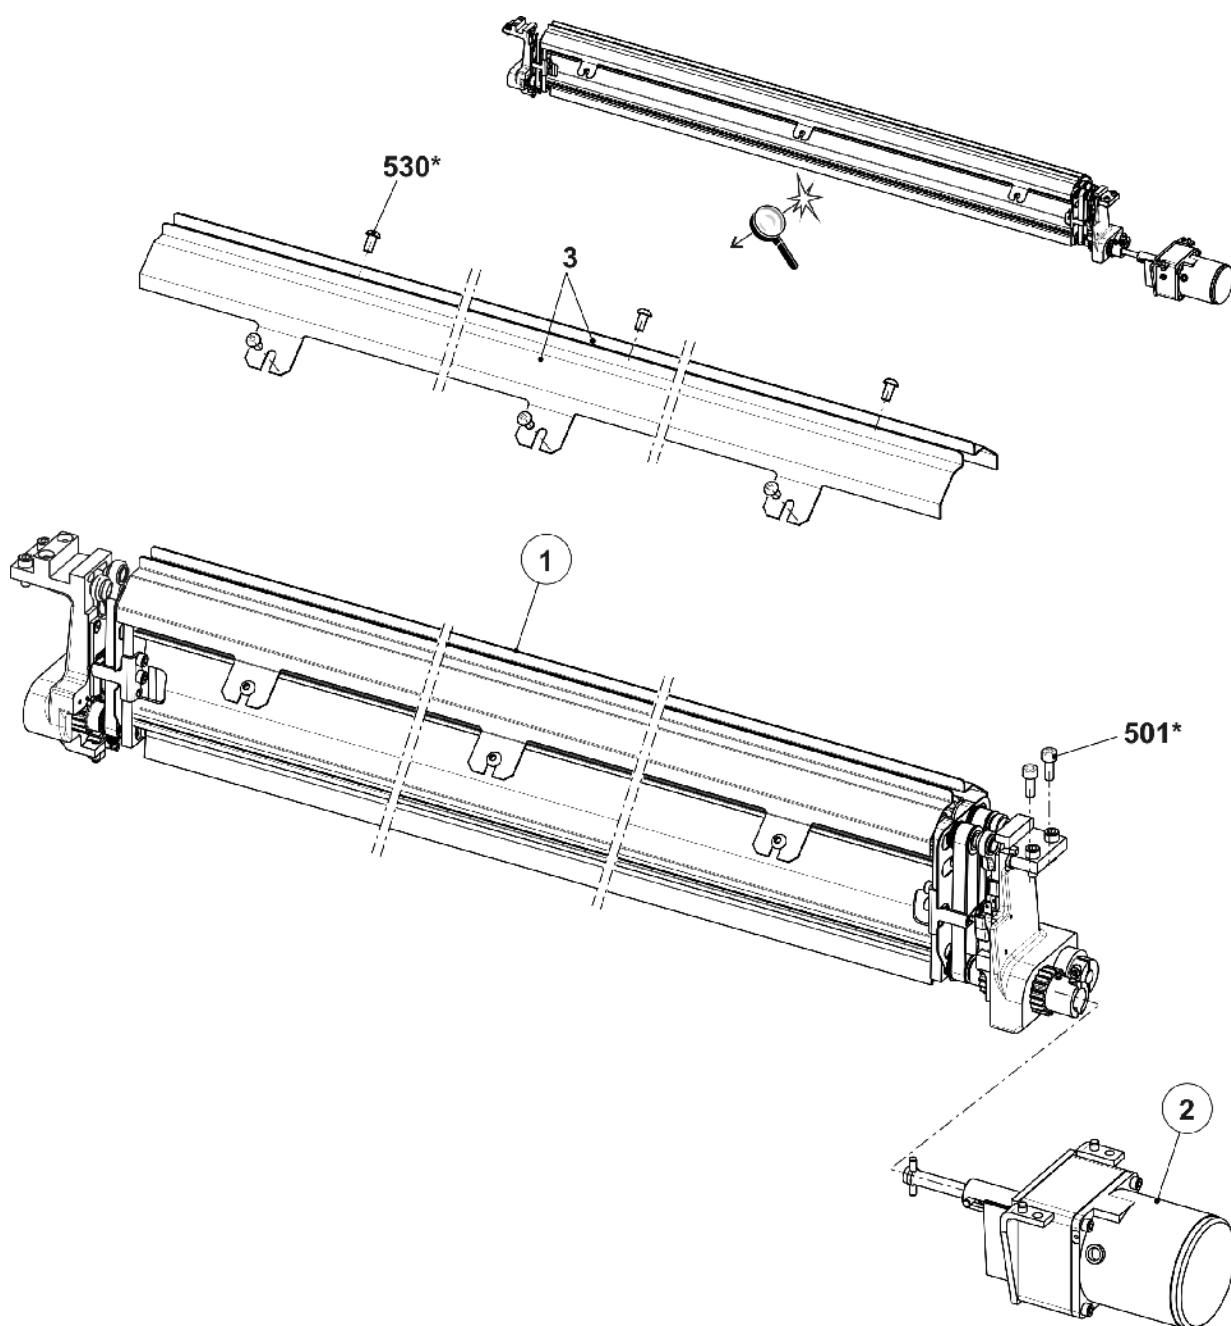


7.2 Auxiliary take-down pre-assembled

Pos	Designation	Id	Pos	Designation	Id
Σ	Auxiliary take-down pre-assembled	268 623	9	Timing belt pulley complete	226 708
1	Bearing on the right complete	268 631	10	Bolts	227 914
2	Bearing on the left complete	268 632	11	Protective plate	264 958
3	Toothed belt 10T5/260	208 832	12	Support spring	264 961
4	Take-down roller	224 891	500	Set collar	020 934
5	Lever at the front on the left	264 036	501	Stop disk	023 646
6	Lever at the front on the right	264 035	502	Spring dowel sleeve 3x20	020 776
7	Lever at the rear on the left	264 034	503	Setscrew M5x6	023 391
8	Lever at the rear on the right	264 033	504	Compression spring 1,0x8x59	264 966

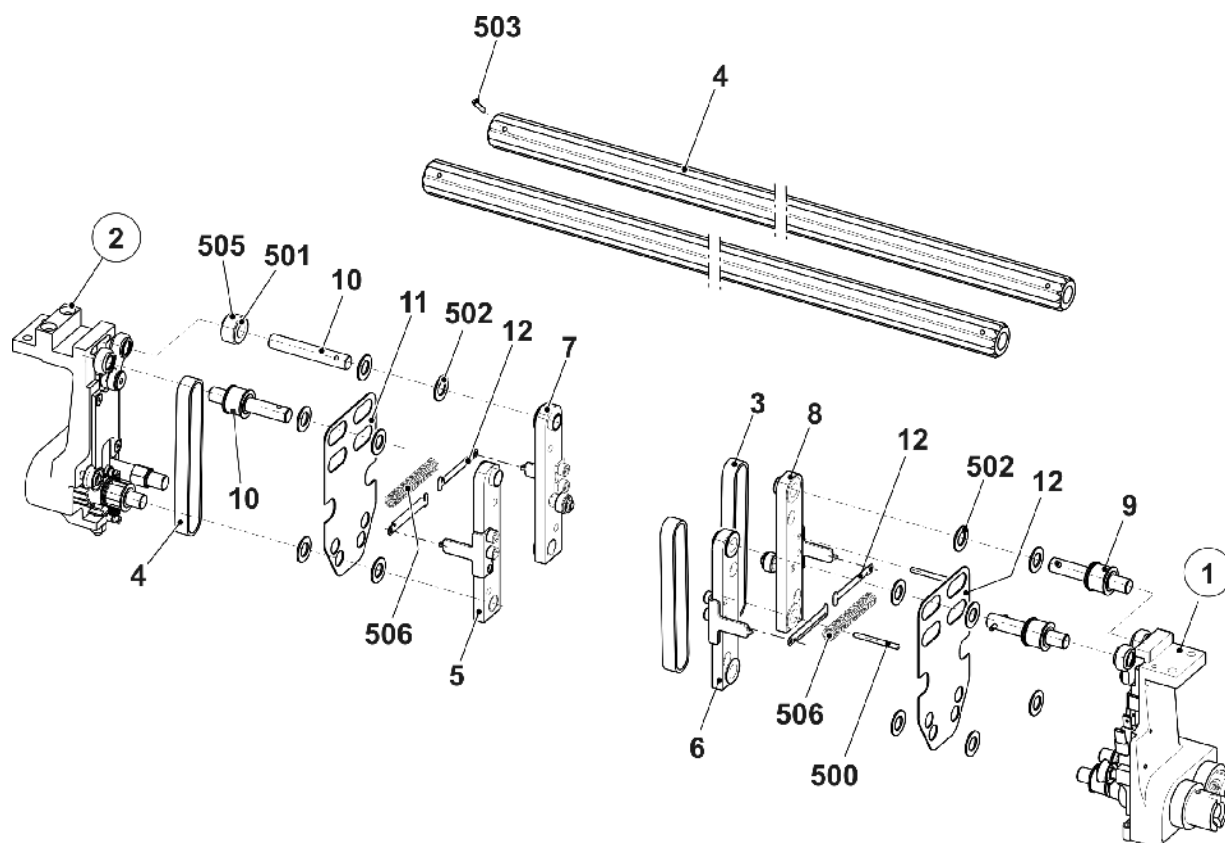


7.2.1 Right bearing of the auxiliary take-down

Pos	Designation	Id	Pos	Designation	Id
Σ	Bearing on the right complete	268 631			
1	Bearing block on the right	258 913	13a	Connecting rod	255 696
2	Cover	257 466	531	Needle roller bearing HK1010	023 664
3	Drive shaft complete	268 611	532	Slide bearing GFM-081014-06	023 358
4	Drive shaft complete	268 610	500	Cap screw M3x16	022 560
5	Gear wheel M=1,5, Z=20	213 880	501	Countersunk head screw M4x12	023 062
6	Gear wheel M=1,5, Z=20	210 504	502	Hexagon nut M6-6	020 836
7	Gear wheel on the right complete	218 524	503	Shoulder screw M4x9x14	020 602
8	Gear rack on the right	253 487	504	Setscrew M6x16-45	023 092
9	Threaded spacer	229 683	505	Spiral pin 4x24	023 544
10	Sleeve	227 257	506	Shim ring 10x16x1,5	023 261
11	Collar bolt	210 551	507	Retaining ring 26x1,2	023 359
12	Cable with switch auxiliary take-downokc	243 142	508	Tension spring 7,5x0,7x28	023 595
13	Connecting rod complete	226 710	509	Grooved ball bearing 6000-2Z	022 599

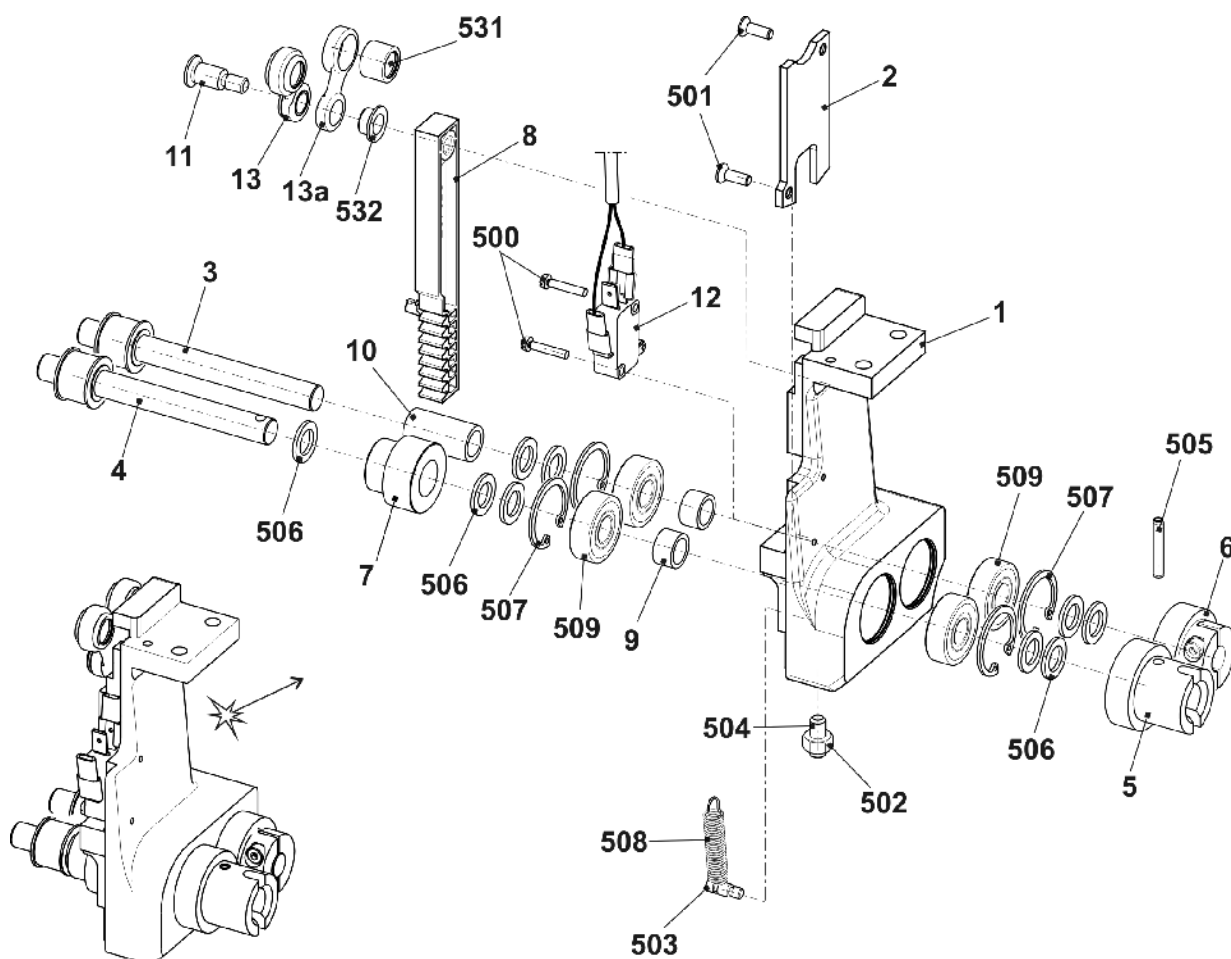


7.2.2 Left bearing of the auxiliary take-down

Pos	Designation	Id	Pos	Designation	Id
Σ	Bearing on the left	268 632			
1	Bearing block on the left	258 914	8	Gear wheel on the left complete	218 523
2	Cover	257 466	9	Gear rack on the left	253 488
3	Drive shaft complete	268 612	500	Shoulder screw M4x9x14	020 602
4	Collar bolt	210 551	501	Hexagon nut M6-6	020 836
5	Bolts	268 610	502	Retaining ring 26x1,2	023 359
6	Connecting rod complete	226 710	503	Shim ring 10x16x1,5	023 261
6a	Connecting rod	255 696	504	Countersunk head screw M4x12	023 062
530	Slide bearing GFM-081014-06	023 358	505	Grooved ball bearing 6000-2Z	022 599
531	Needle roller bearing HK1010	023 664	506	Setscrew M6x16-45	023 092
7	Threaded spacer	229 683	507	Tension spring 7,5x0,7x28	023 595

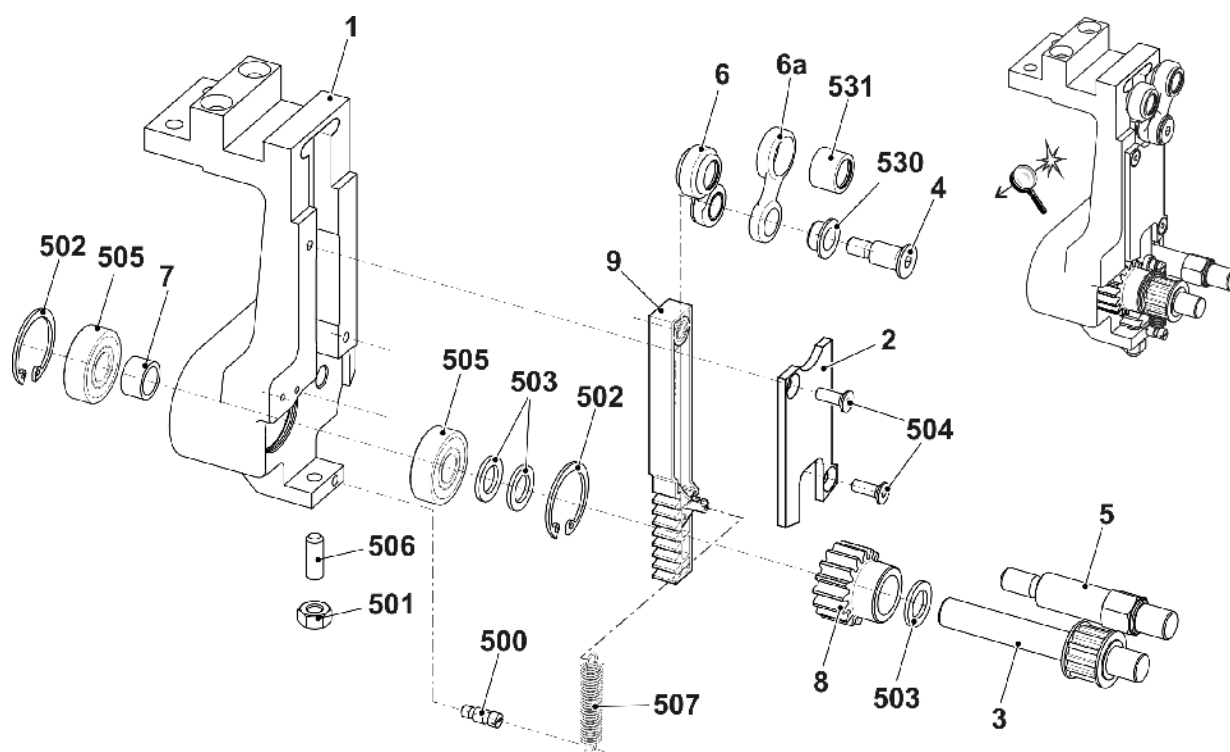


7.3 Motor

Pos	Designation	Id	Pos	Designation	Id
Σ	Motor auxiliary take-down complete	265 820			
1	Motor auxiliary take-down	266 528	500	Cap screw M3x6	022 589
2	Motor bracket	218 040	501	Setscrew M6x10	023 543
3	Drive sleeve	219 024	502	Cap screw M5x55	023 321
4	Impulse disc	218 449	503	Compression spring 0,63x10,97x40	023 500
5	Gear unit 4GN36K	220 353	504	Shim ring 6x12x1	023 444
7	Light barrier Auxiliary take-down	217 462	508	Dowel pin 5x28	241 686
8	Shaft	219 025	520*	Cap screw M6x12	020 134

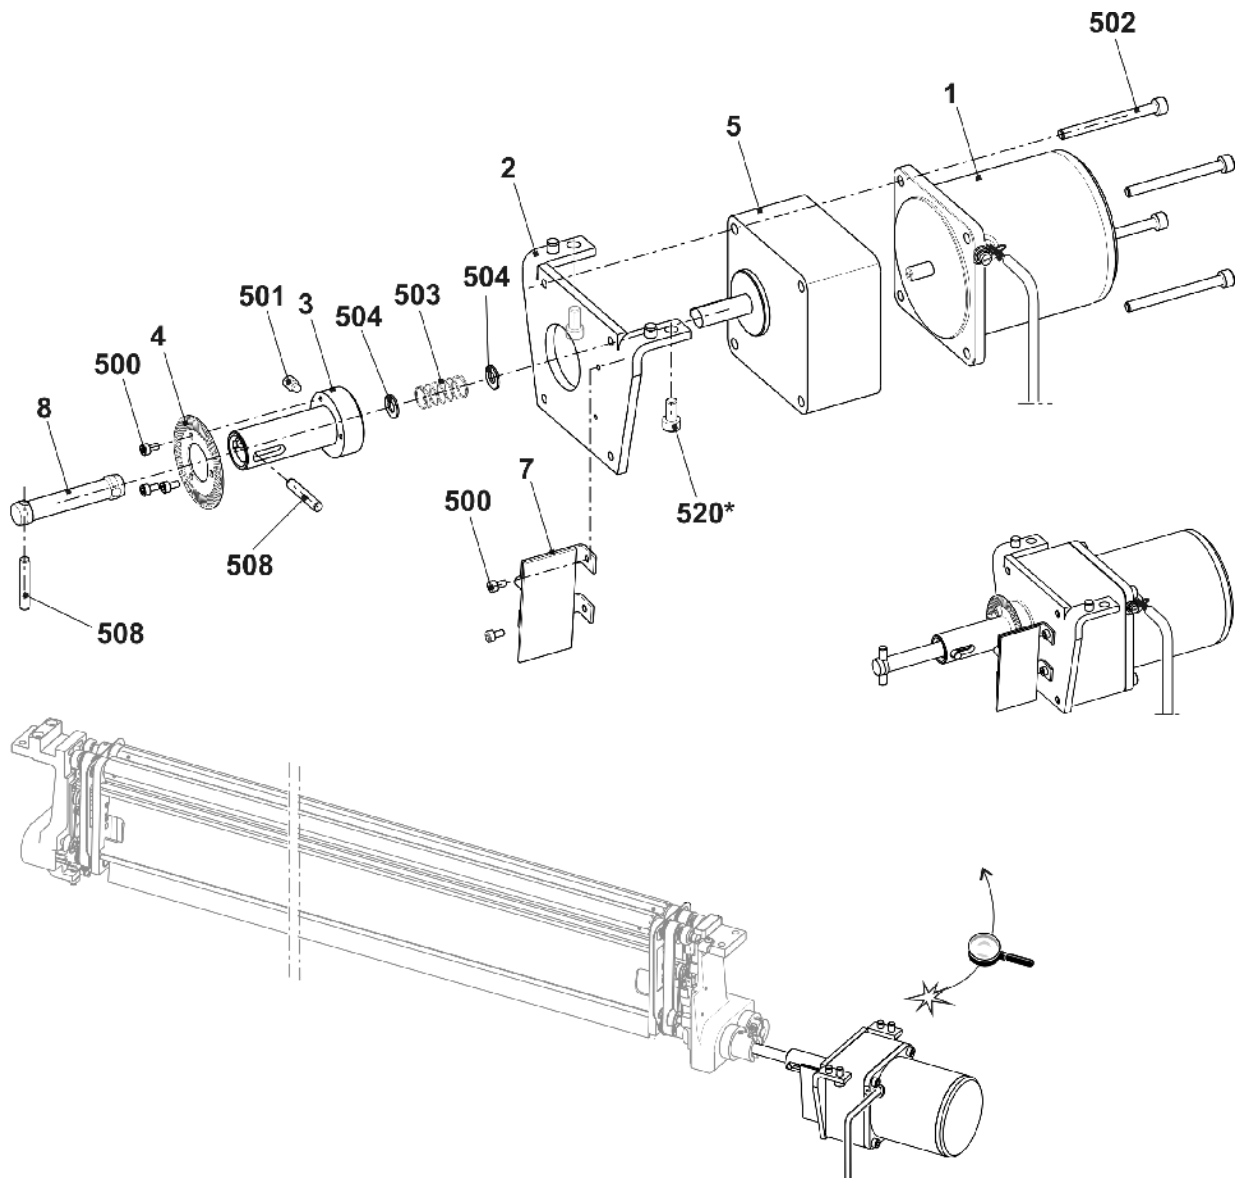


7.4 Yarn brake at clamping and cutting bed

Pos	Designation	Id	Pos	Designation	Id
Σ L	Yarn brake on the left	262 367	Σ R	Yarn brake on the right	262 368
1	Cover on the left	262 365	3	Cover on the right	262 366
2	Leaf spring	256 712	1	Leaf spring	256 712
3	Test clamping plate	256 713	2	Test clamping plate	256 713
500	Cap screw M4x6	023 067	500	Cap screw M4x6	023 067

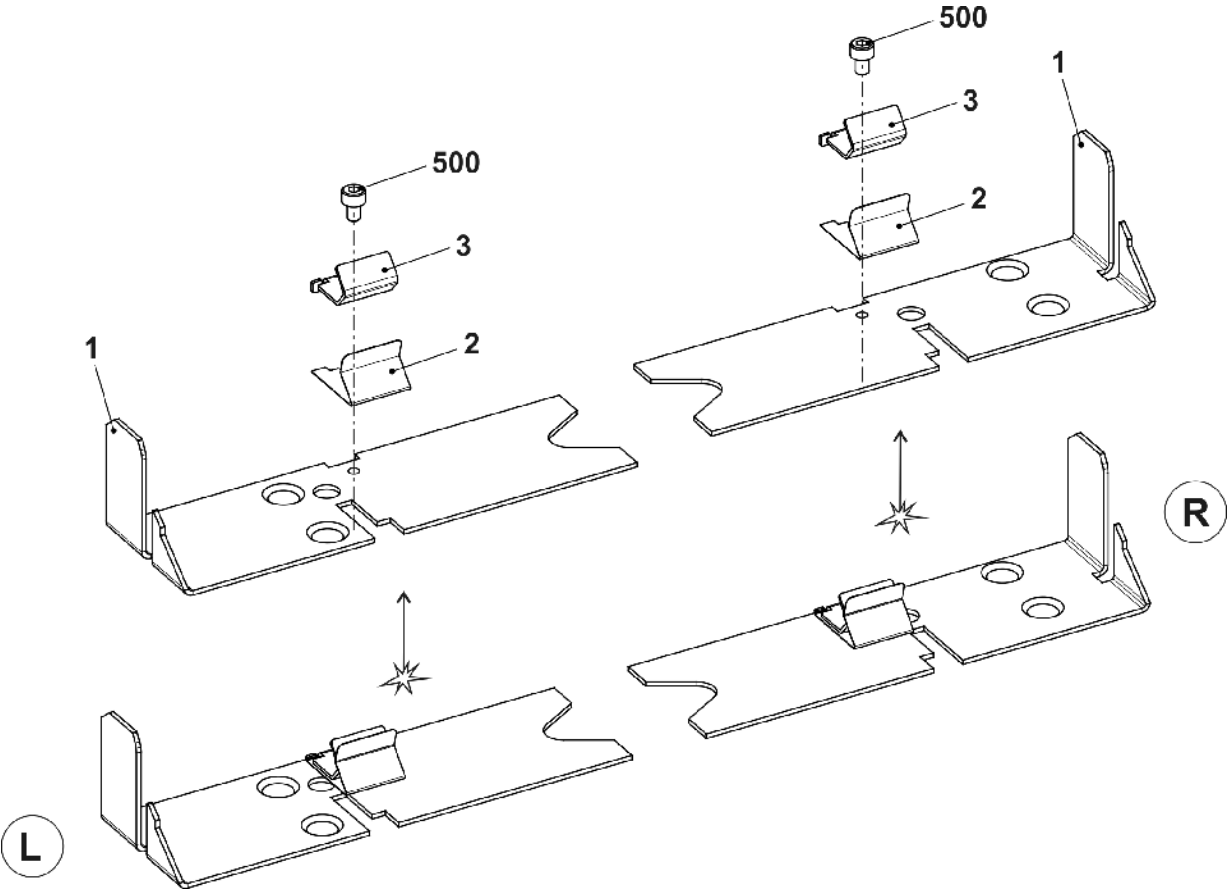


8 Comb Take-down

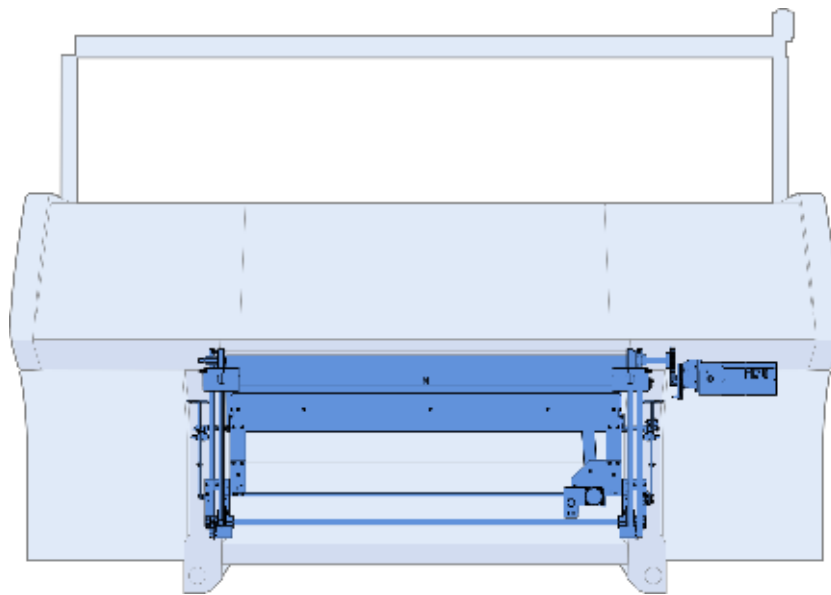


8.1 Comb Take-down

Pos	Designation	ID	Pos	Designation	ID
Σ	Comb take-down				
1	Comb take-down on the left	256 834	3	Comb take-down in the middle E3	266 255
2	Comb take-down on the right	256 835		Comb take-down in the middle E4	267 143

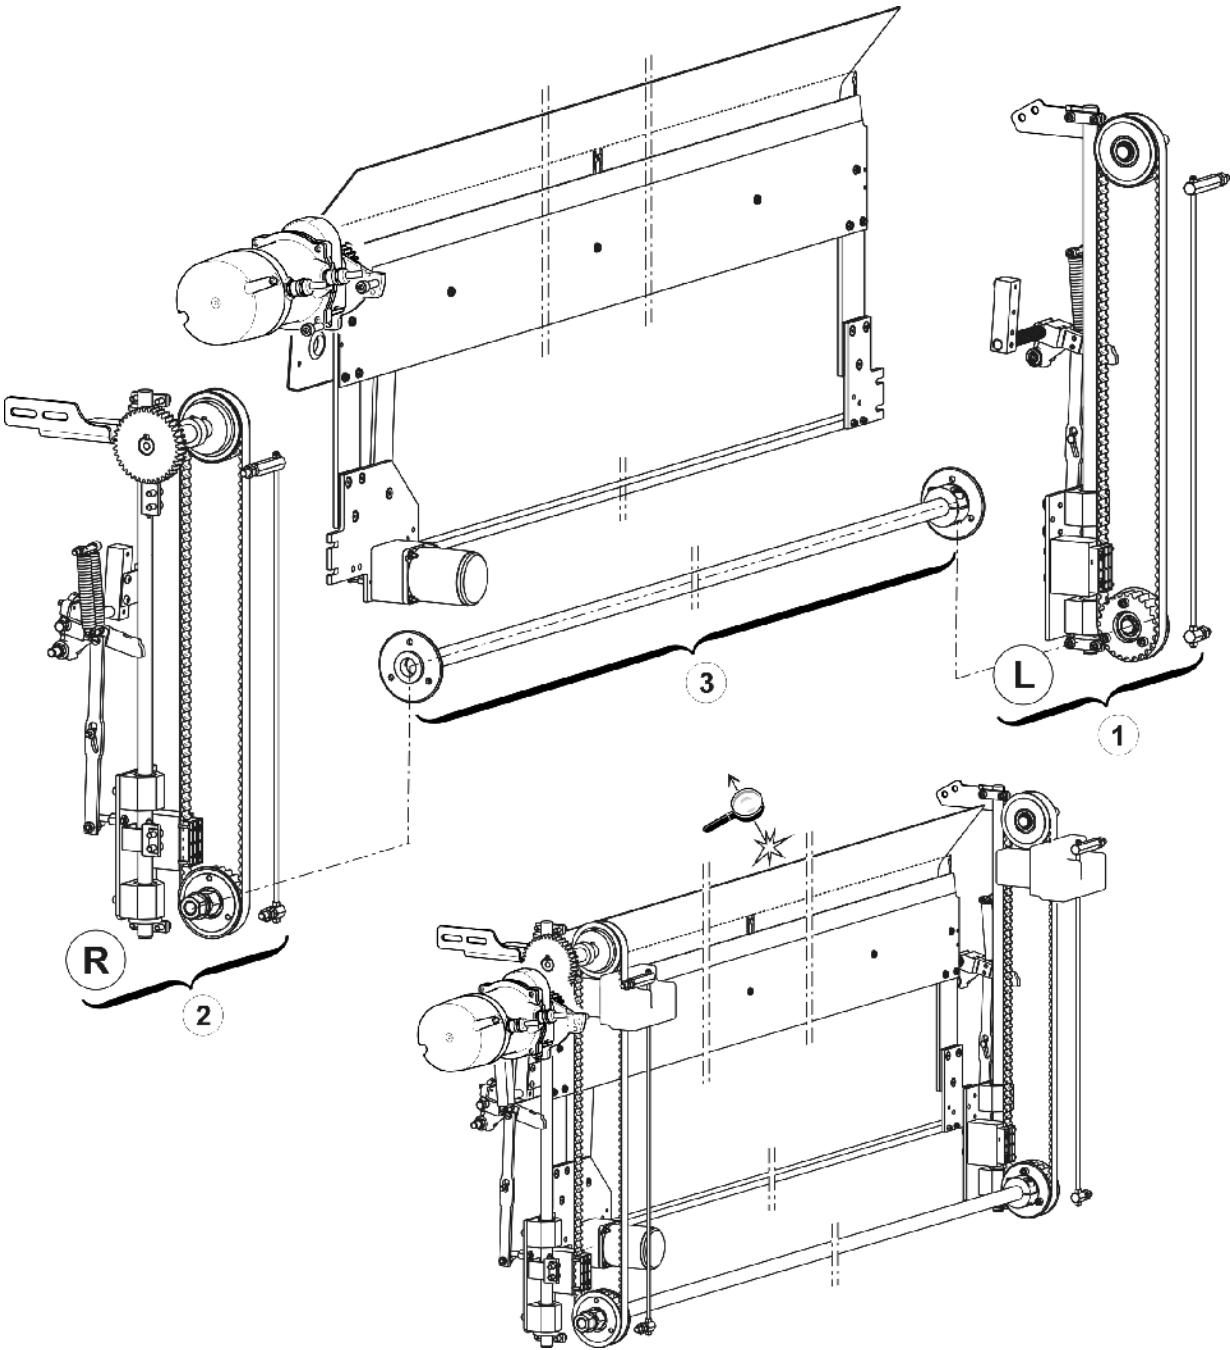


8.2 Comb take-down on the left

Pos	Designation	Id	Pos	Designation	Id
Σ	Comb take-down on the left	256 834			
1	Clamping piece	209 379		528 Hexagon nut M8-6	020 838
2	Pressure plate	241 967	34	Swivel lever on the left	252 859
3	Bolts	222 152	36	Clamping plate	227 159
5	Toothed belt 16T10/1300	240 065	500	Cap screw M6x16	020 135
6	Eccentric pin	222 320	507	Cap screw M6x65	240 162
11	Bolts	207 689	508	Cap screw M6x45	022 689
14	Toothed lock washer at the bottom complete	211 822	511	Hexagon nut M5-8	023 541
15	Toothed lock washer at the top complete	211 823	512	Hexagon nut M5-6	020 835
17	Stay bolt	222 315	513	Hexagon nut M6-6	020 836
18	Stay bolt	240 056	514	Hexagon nut M8-6	020 838
19	Threaded rod M5	240 057	515	Hexagon nut M16-6	020 845
25	Reflector complete	256 826	517	Washer 16	020 876
26	Guide bar C35	206 560	524	Retaining ring 17x1	023 299
27	Rubber buffer	206 561	530	Tension spring Din2097 15x1,50x70,94	251 614
28	Comb guide on the left	255 425	531	Cap screw M6x12	020 134
28a	Driving bolt	255 427	540*	Pan head screw M5x10	023 247

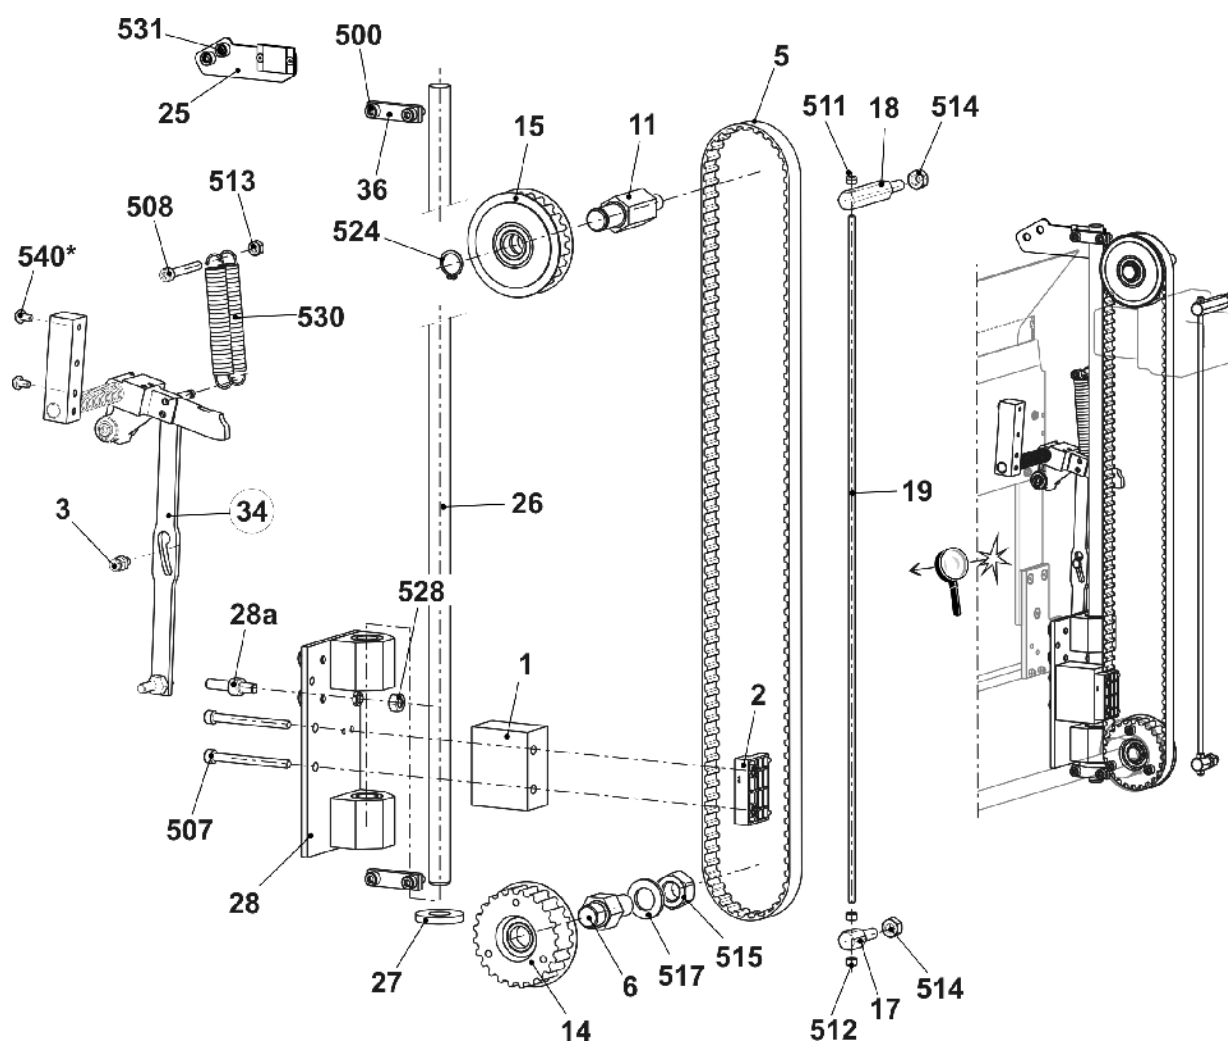


8.3 Comb take-down on the right

Pos	Designation	Id	Pos	Designation	Id
Σ	Comb take-down on the right	256 835			
1	Clamping piece	209 379		529 Hexagon nut M8-6	020 838
2	Pressure plate	241 967	33	Swivel lever on the right	252 858
3	Bolts	222 152	36	Clamping plate	227 159
5	Toothed belt 16T10/1300	240 065	500	Cap screw M6x16	020 135
6	Eccentric pin	222 320	507	Cap screw M6x65	240 162
12	Drive shaft comb complete	214 583	508	Cap screw M6x45	022 689
14	Toothed lock washer at the bottom complete	211 822	511	Hexagon nut M5-8	023 541
17	Stay bolt	222 315	512	Hexagon nut M5-6	020 835
18	Stay bolt	240 056	513	Hexagon nut M6-6	020 836
19	Threaded rod M5	240 057	514	Hexagon nut M8-6	020 838
22	Proximity switch inductive at the top	231 516	515	Hexagon nut M16-6	020 845
23	Proximity switch inductive at the bottom	231 520	517	Washer 16	020 876
24	Light barrier complete	256 825	530	Tension spring 15x1,50x70,94	251 614
26	Guide bar C35	206 560	531	Cap screw M6x12	020 134
27	Rubber buffer	206 561	532	Washer 6	020 872
29	Comb guide on the right	255 424	533*	Shim 0,2x12x27	023 735
29a	Driving bolt	255 427	534*	Shim 0,5x12x27	023 736
29b	Angle	240 112	540*	Pan-head screw M5x10	023 247

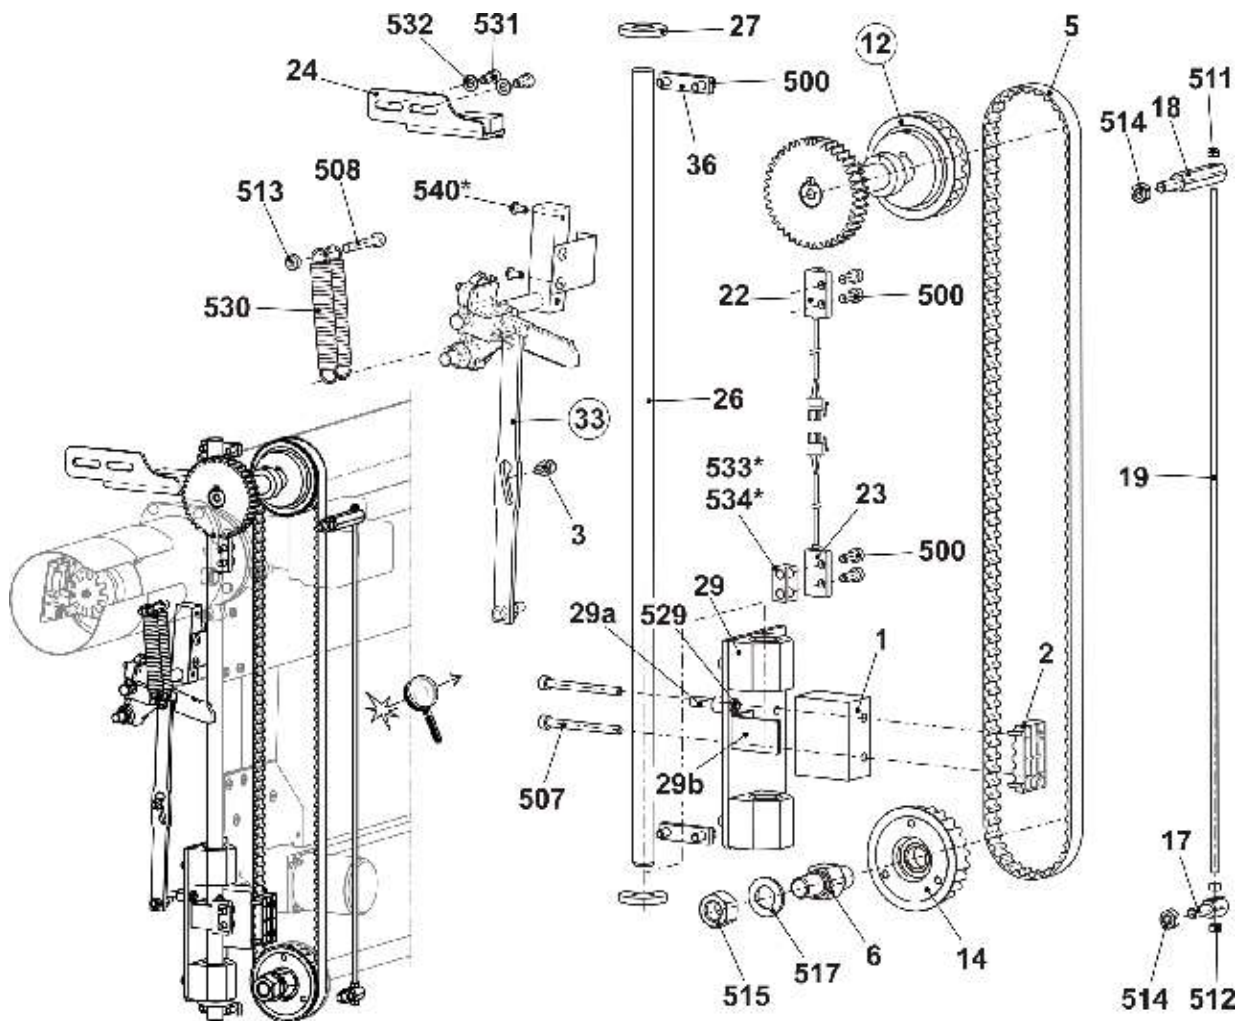

8.3.1 Drive shaft of comb



Pos	Designation	Id	Pos	Designation	Id
Σ	Drive shaft comb complete	214 583			
1	Shaft	213 969	500	Feather key A 6x6x25	023 017
2	Gear wheel Z=40, M=2	213 744	502	Setscrew M6x8	022 684
	Always order position 502 additionally		503	Setscrew M6x12	023 898
3	Toothed belt pulley at the top	206 394	504	Set collar	020 938
	Always order position 503 additionally				

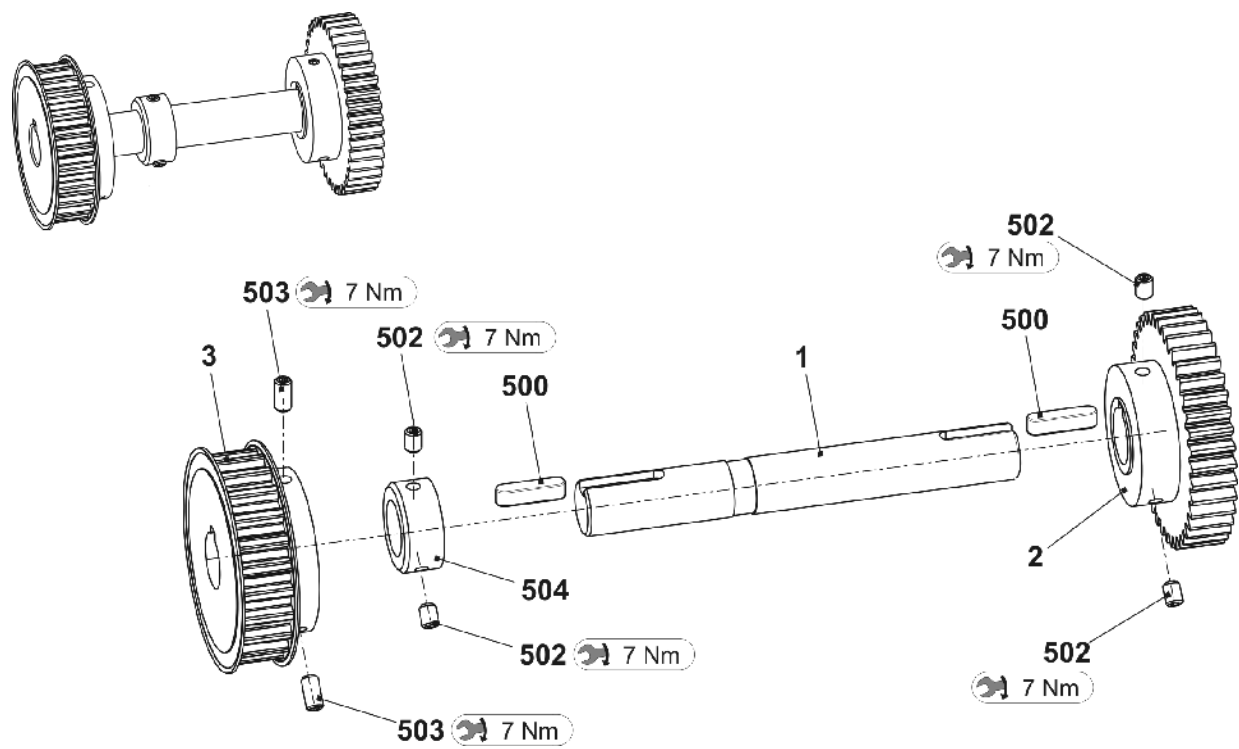

8.3.2 Swivel lever comb take-down


Pos	Designation	Id
Σ L	Swivel lever on the left	252 859
1	Support	252 780
2	Shaft	223 994
4	Plunger	255 650
5	Swivel lever	239 248
6	Bolts	214 053
7	Eccentric bolt	255 651
500	Compression spring 1,4x13,6x93	023 572
501	Spring dowel sleeve Iso8752-5x20	020 794
502	Dowel pin5x22	023 716
504	Shoulder screwM5x29x35	251 618
505	Shoulder screw M5x5,8x6,2	023 365
507	Washer 10	020 884
508	Retaining ring	020 950
509	Shoulder screw M5x12x18	020 539
511	Hexagon nut M8-6	020 838
Σ R	Swivel lever on the right	252 858
1	Support	252 780
2	Shaft	238 339

Pos	Designation	Id
3	Microswitch	026 259
4	Plunger	255 650
5	Swivel lever	239 248
6	Bolts	214 053
7	Angle	224 009
8	Angle	238 304
9	Eccentric bolt	255 651
500	Pan-head screw M5x10	023 247
501	Spring dowel sleeve 5x20	020 794
502	Dowel pin5x22	023 716
503	Spring dowel sleeve 5x12	020 793
504	Shoulder screwM5x29x35	251 618
505	Shoulder screw M5X5,8X6,2	023 365
506	Cap screw M4x8	022 501
507	Washer 10	020 884
508	Retaining ring10x1	020 950
509	Shoulder screwM5X12X18	020 539
510	Cap screw M3x16	022 583
511	Washer 3	020 877
513	Hexagon nut M8-6	020 838

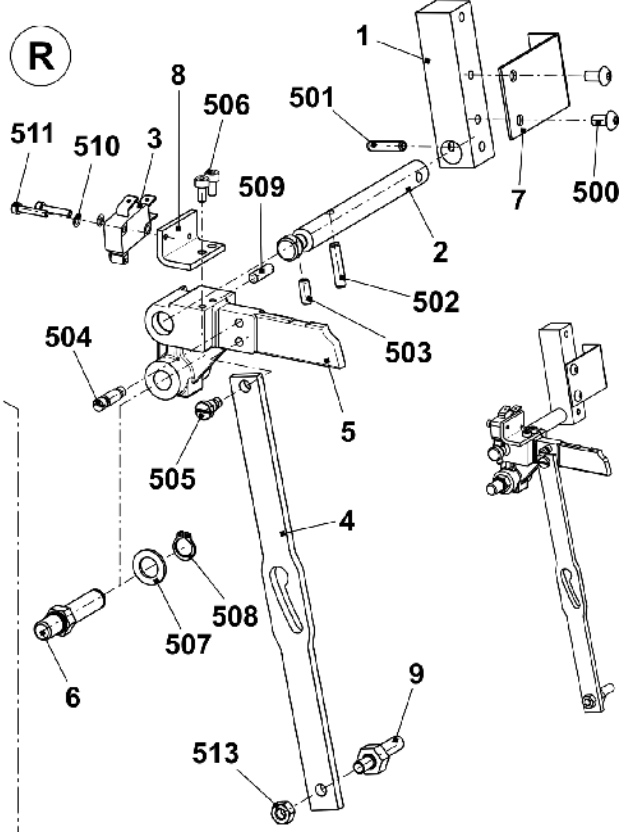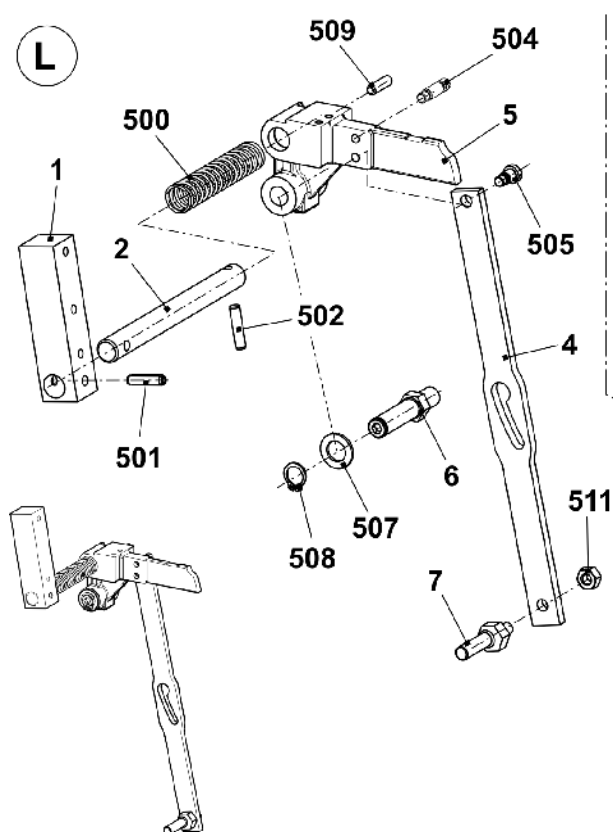


8.4 Comb take-down in the middle

Pos	Designation	ID	Pos	Designation	ID
Σ	Comb take-down in the middle		31	Comb unit	
	E3	266 255		E3	266 254
	E4	267 143		E4	267 144
8	Flange	207 695	32	Three phase servo motor of take-down	259 655
9	Shaft long	213 968	35	Marking plate	259 237
500	Cap screw M6x16	020 135	502	Cap screw M8x25	020 142
501	Pan head screw M5x10	023 247	525	Serrated lock washer J5,3	022 489

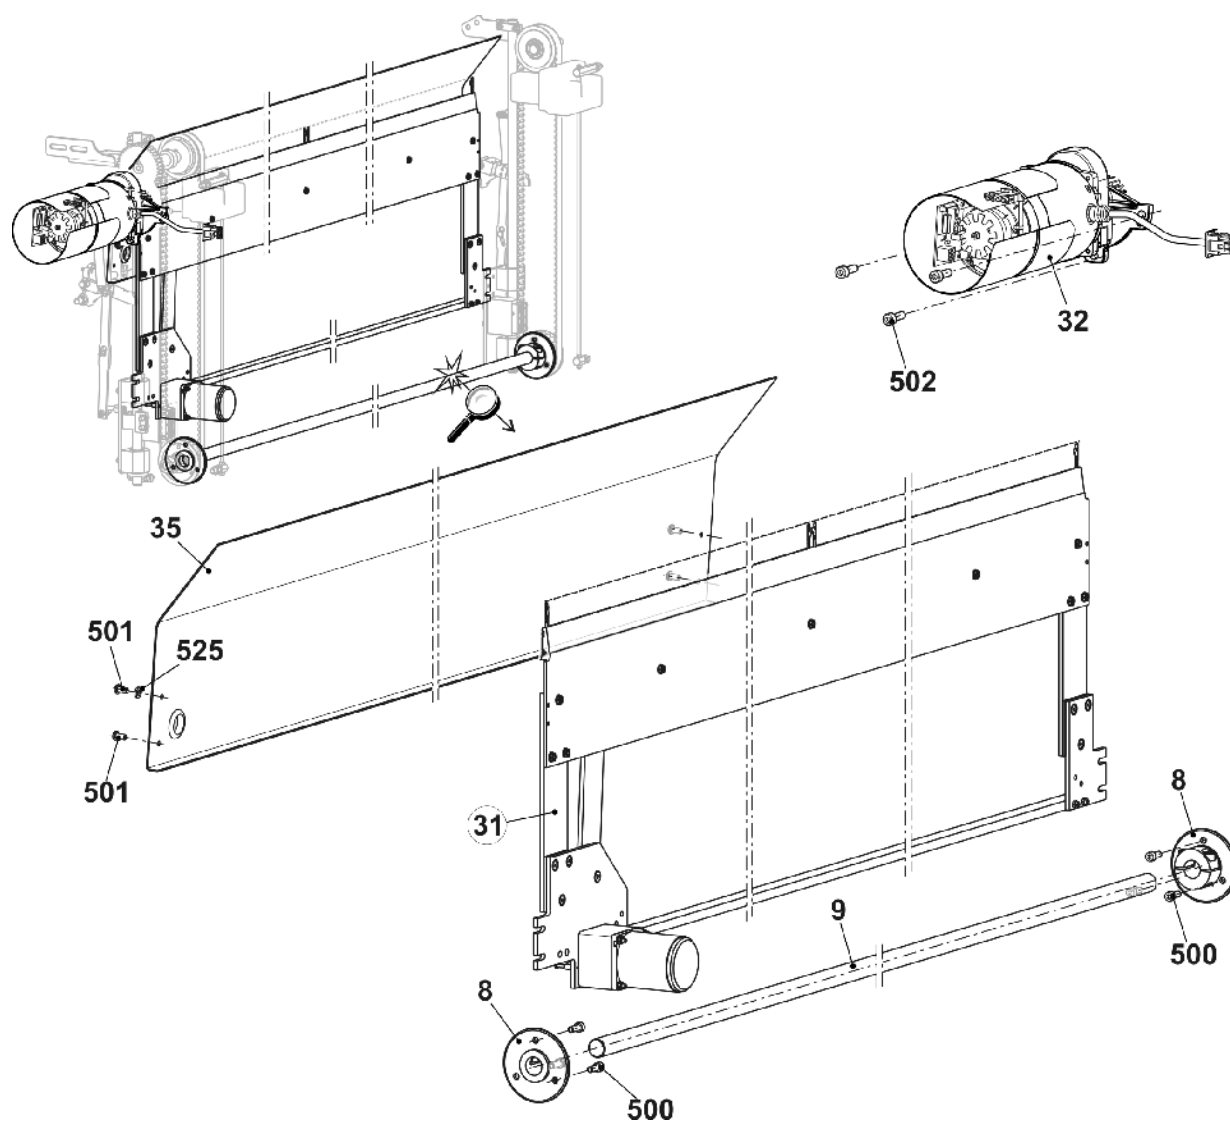


8.4.1 Comb unit

Pos	Designation	ID	Pos	Designation	ID
Σ	Comb unit				
	E3	266 254	8	Cross slider	213 429
	E4	267 144	9	Cover rail	222 866
1	Hook bed		10	Plunger	205 678
	E3	267 315	11	Switching lever complete	265 827
	E4	267 318	15	Stabilizer	215 253
2	Closer E3-8	230 105	500	Cap screw M4x30	023 290
3	Body E3-8	230 093	502	Countersunk head screw M5x12	023 340
4	Cover rail E3-14	213 428	504	Hexagon nut M4-8	023 046
5	Hook slider		505	Hexagon nut M5-04	020 854
	E3	220 992	508	Washer 5	020 871
	E4	220 994	510	Cap screw M4x35	023 550
7	Collar bolt complete	211 036	511	Circlip	022 774

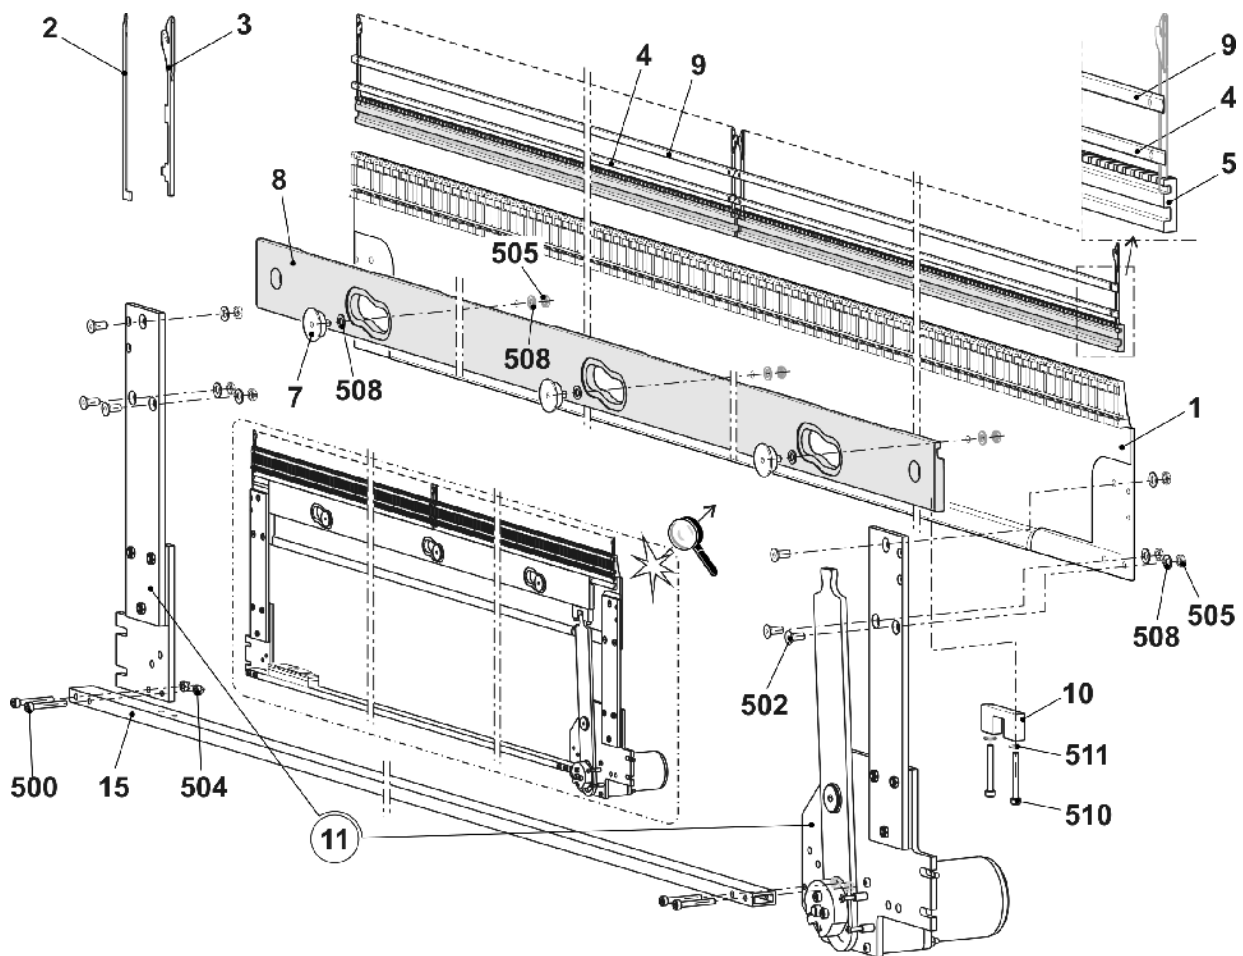


8.4.2 Switching lever comb take-down

Pos	Designation	Id	Pos	Designation	Id
Σ	Switching lever complete	265 827	500	Cap screw M3x25	023 093
1	Screw-on plate on the right	240 058	501	Cap screw M4x20	023 171
2	Screw-on plate on the left	240 059	502	Cap screw M4x16	023 123
3	Lever	215 228	504	Pan-head screw M6x12	023 435
4	Bearing bolt	215 675	505	Pan-head screw M5x16	023 417
5	Eccentric	205 681	506	Shim ring 16x22x2	023 449
6	Tension cam	215 287	507	Shim ring 10x16x1	023 260
13	Intermediate plate	213 980	510	Hexagon nut M5	020 854
14	Holding plate	218 977	511	Collar bearing 10x16x22	022 841
15	Motor comb hook with 2 phases	244 635	515	Threaded spacer	210 488

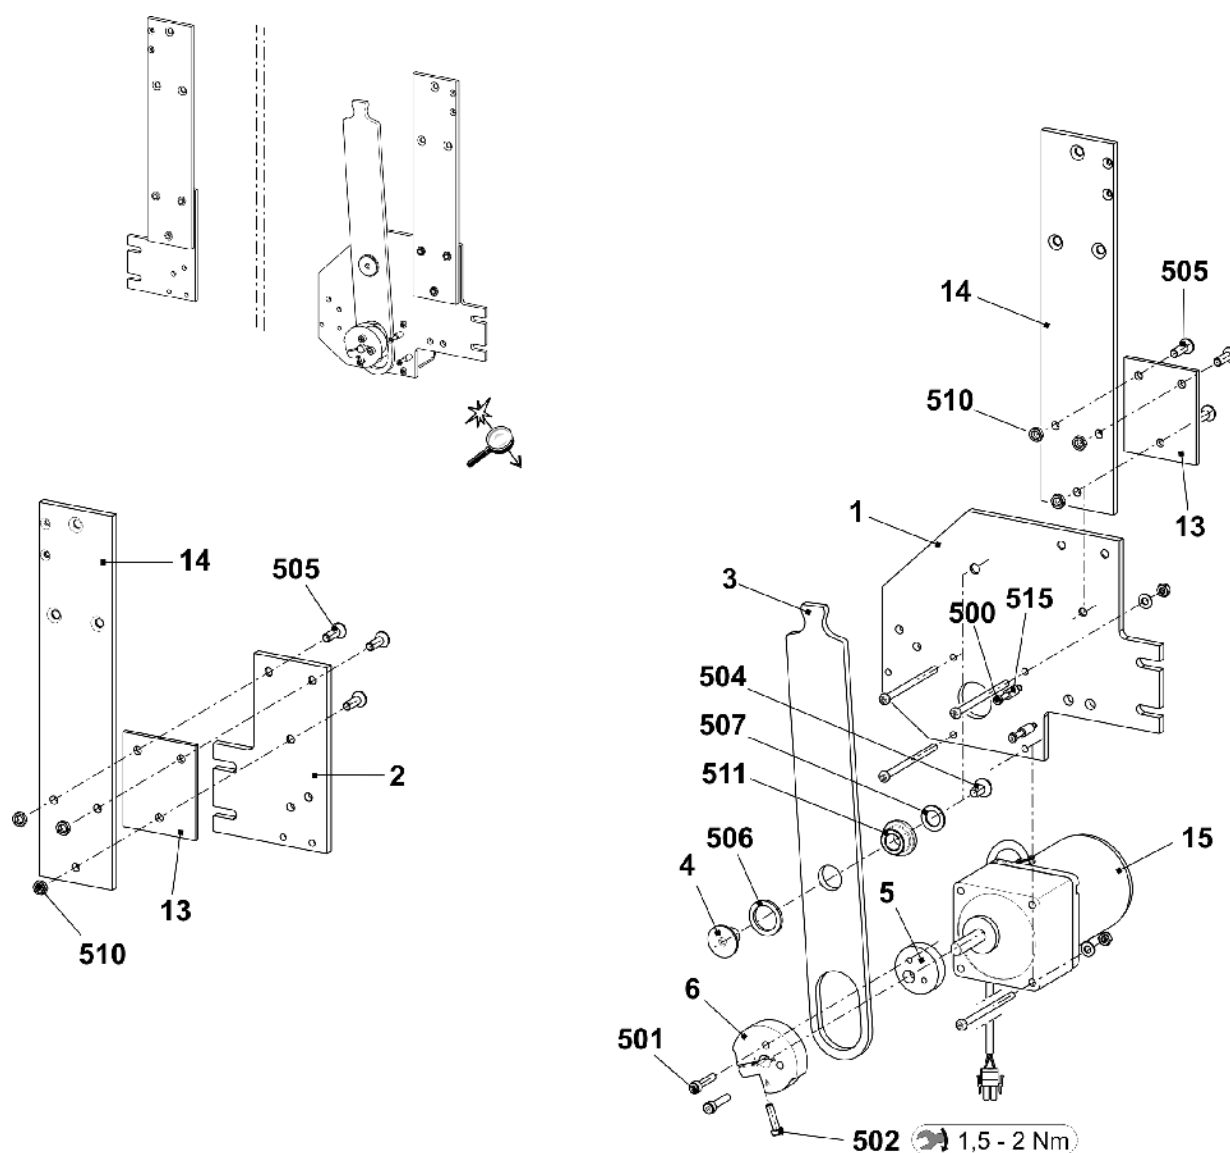


9 Yarn delivery device

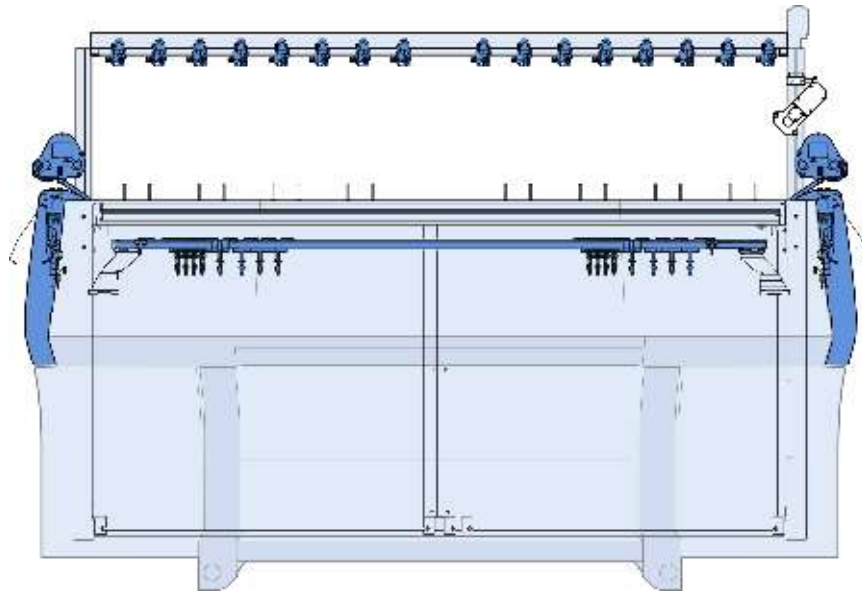


9.1 Yarn guide device

Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn guide device 24 FKE 50"	241 549			
1	Support 50"	264 400	10	Support on the right	243 603
2	Yarn control device(FKE)	237 124	11	Slot nut	228 851
3	Connection cable FKE 50" BM ECO	254 056	501	Self-locking screw M6x12	023 415
4	Yarn guide bar50"	240 324	502	Screw M6x20	023 721
5	Support on the right	264 519	503	Serrated nut M6-10	023 414
6	Support on the left	264 518	505	Washer 6	022 431
7	Straps	264 520	506	Pan-head screw M8x16	023 113
8	Yarn guide bracket complete	241 581	507	Square nut M8	023 269
9	Support on the left	243 602	508	Serrated lock washer	023 388

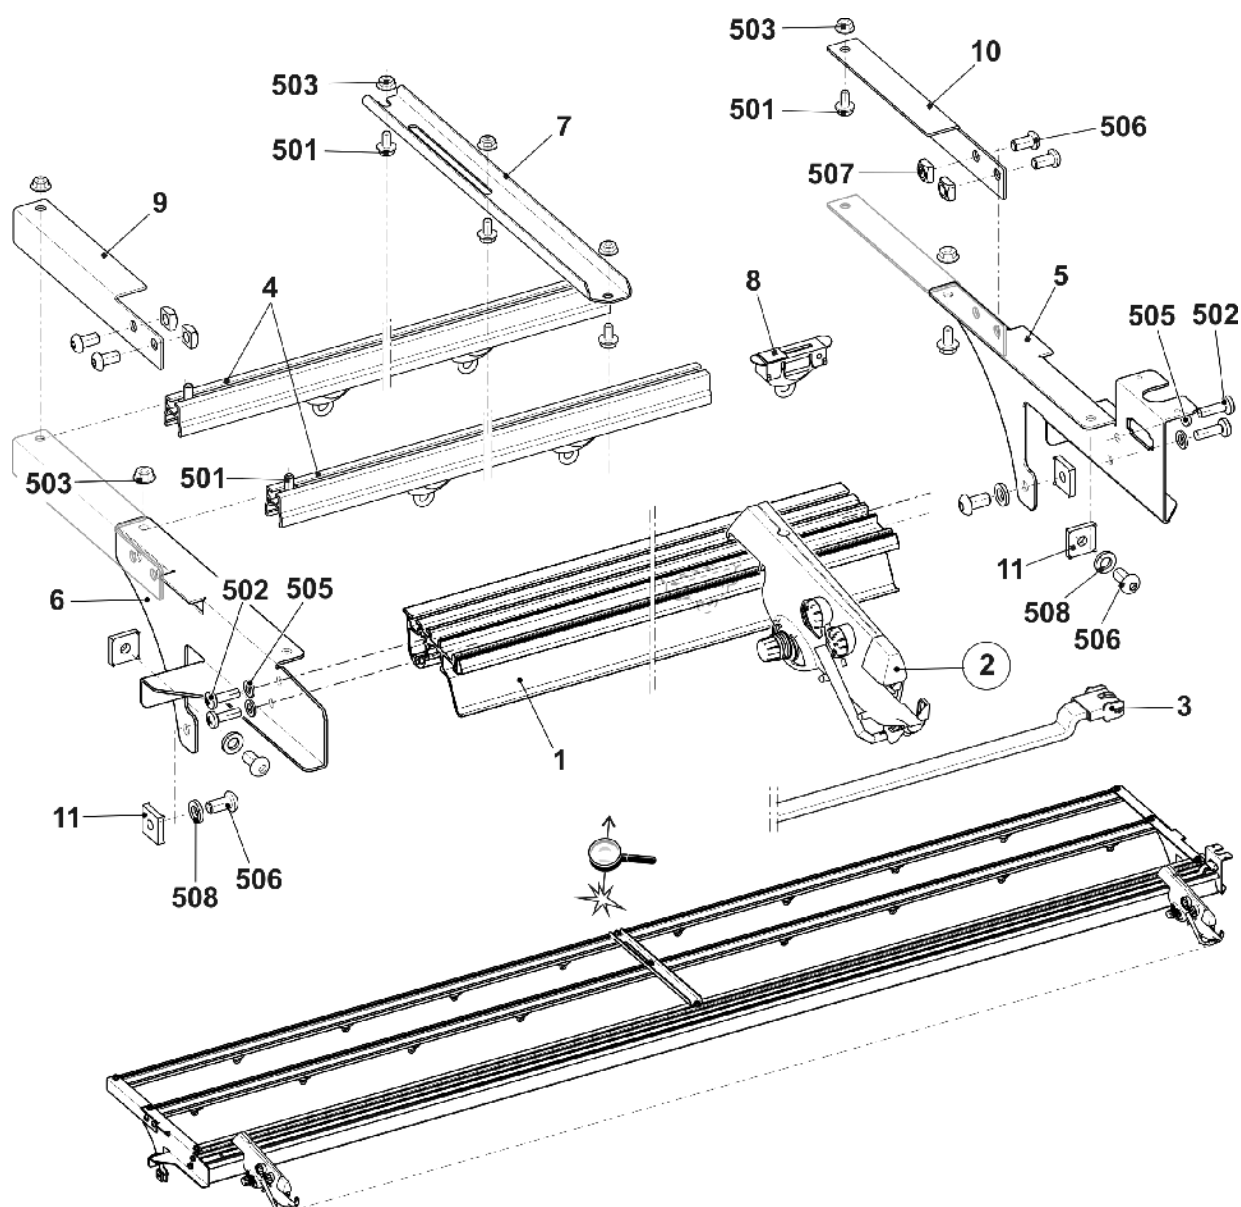


9.2 Left yarn guide

Pos	Designation	ID	Pos	Designation	ID
Σ	Safety door on the left complete	267 342			
4	Shaft	241 318	500	Ceramic eyelet	240 640
5	Yarn tensioner on the left complete	265 386	504	Pan head screw M5x16	265 377
6	Wire bow on the left	265 052	505	Washer 5,3x18x1,5	020 909
7	Yarn deflector on the left complete	267 340	506	Screw 6x20	265 379
8	Connection cable yarn tensioner okc	240 808	507	Flat connector 2x45° M6	243 117

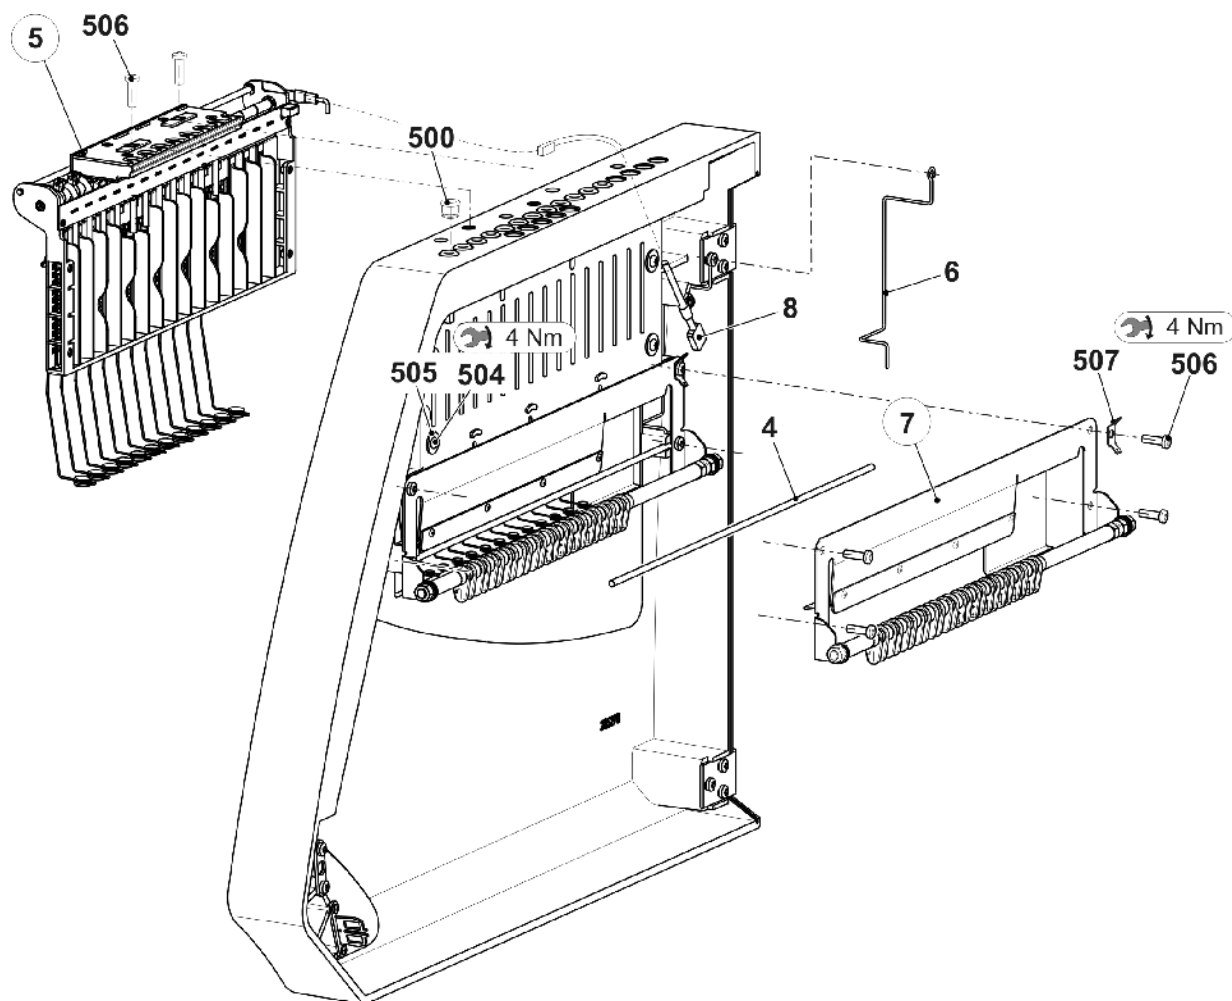


9.2.1 Left yarn tensioner

Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn tensioner on the left complete	265 386			
1	Card yarn tensioner 16-fold on the left	241 345	8	Grounding plate of tension axle	243 121
2	Tension axle on the left complete	265 388	9	Ground cable yarn tensioner okc	243 105
3	Housing	241 367	500	Screw KB 30x8	236 228
4	Slider	241 694	501	Circlip	021 022
5	Stop point	241 368	502	Tension spring 5,6x0,63x53,7	023 722
6	Border	242 268	503	Circlip	021 020
7	Spacer	242 048	504	Countersunk screw M4x10	241 914

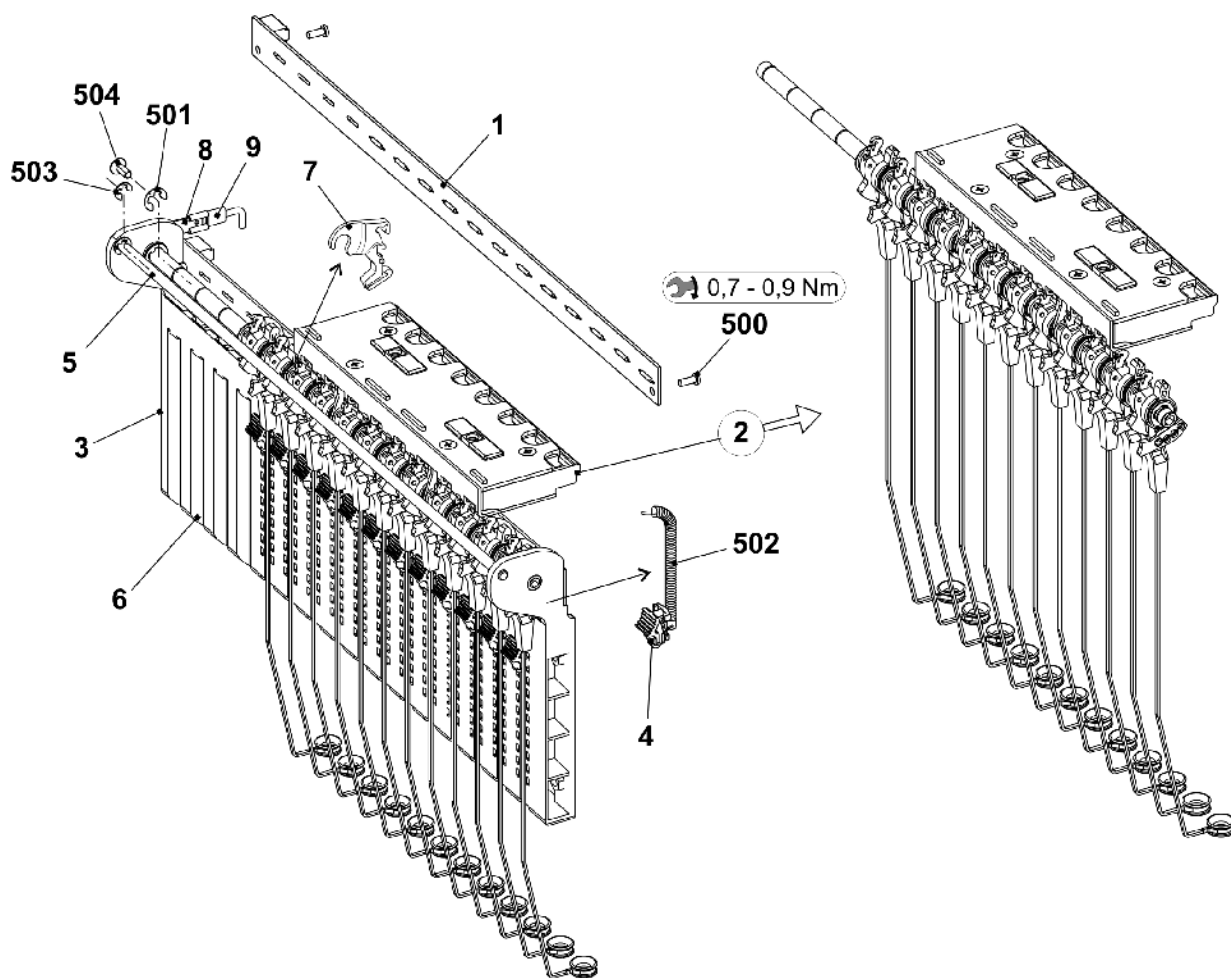


9.2.2 Left tension axle

Pos	Designation	Id. no.	Pos	Designation	Id. no.
Σ	Tension axle on the left complete	265 388	53	Sheet metal at the bottom (housing AKF)	240 719
1	Axle	243 107	54	Lever AKF	238 692
2	Tension arm pre-assembled	242 770	55	Pressure piece AKF	238 690
6	Wire bow	238 694	56	Slider AKF	238 691
500	Shim ring 8x14x0,5	023 501	57	Wire bow	238 694
501	Circlip	021 022	58	Wire	237 940
502	Grooved pin 2x6	243 172	551	Screw KB 35x12	237 681
5	Thread clamp AKF	238 695	552	Screw KB 40x8	236 227
51	Housing AKF	238 689	553	Compression spring 0,30x4,50x18,50	241 437
52	Cover AKF	237 926	554	Grooved pin 2x6	243 172

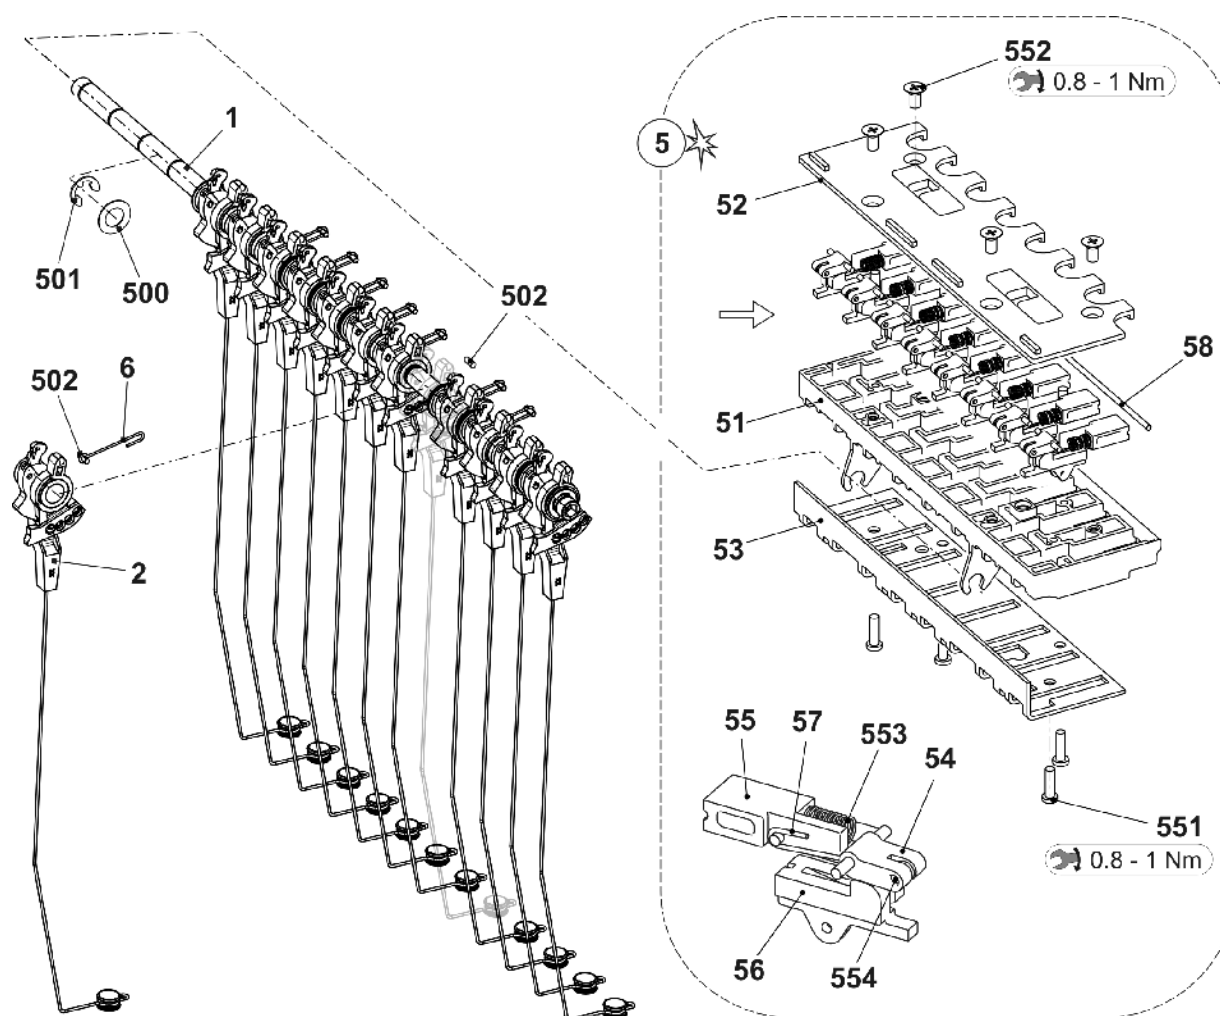


Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn deflector on the left complete	267 340	5	Stop sleeve	266 433
1	Axle	265 284	6	Distance bushing	264 997
2	Threaded spacer	267 346	7	Stop plate left complete	265 276
3	Threaded spacer	267 347	500	Washer 8	022 854
4	Yarn Carriers MH10 E3-4	265 606	501	Hexagon nut M8-6	261 011

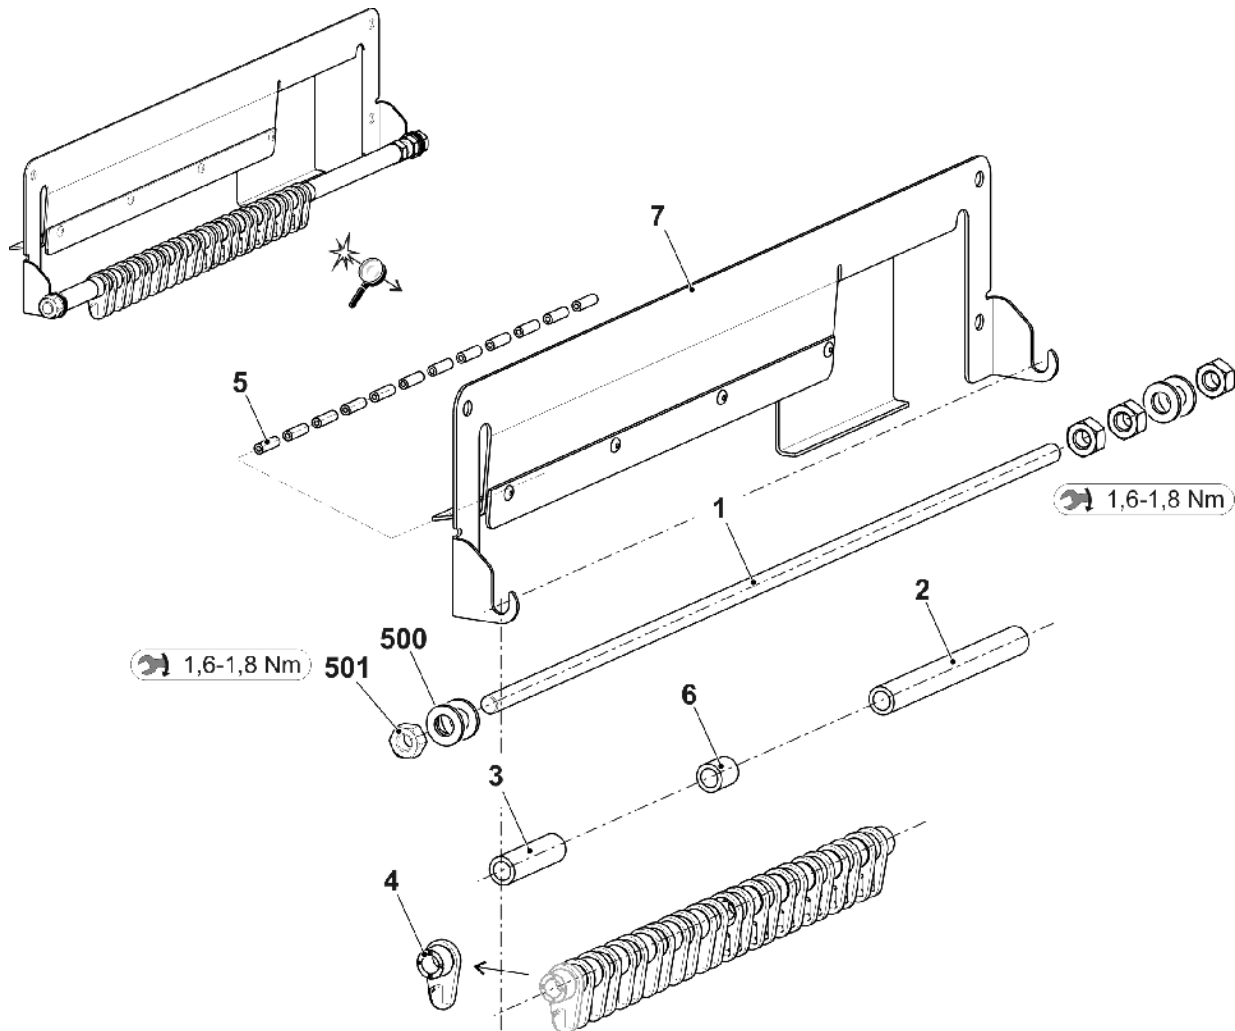


9.3 Right yarn guide

Pos	Designation	ID	Pos	Designation	ID
Σ	Safety door on the right complete	267 343			
4	Shaft	241 318	500	Ceramic eyelet	240 640
5	Yarn tensioner on the right complete	265 387	504	Pan head screw M5x16	265 377
6	Wire bow on the right	265 053	505	Washer 5,3x18x1,5	020 909
7	Yarn deflector on the right complete	267 341	506	Screw 6x20	265 379
8	Connection cable yarn tensioner okc	240 808	507	Flat connector 2x45° M6	243 117

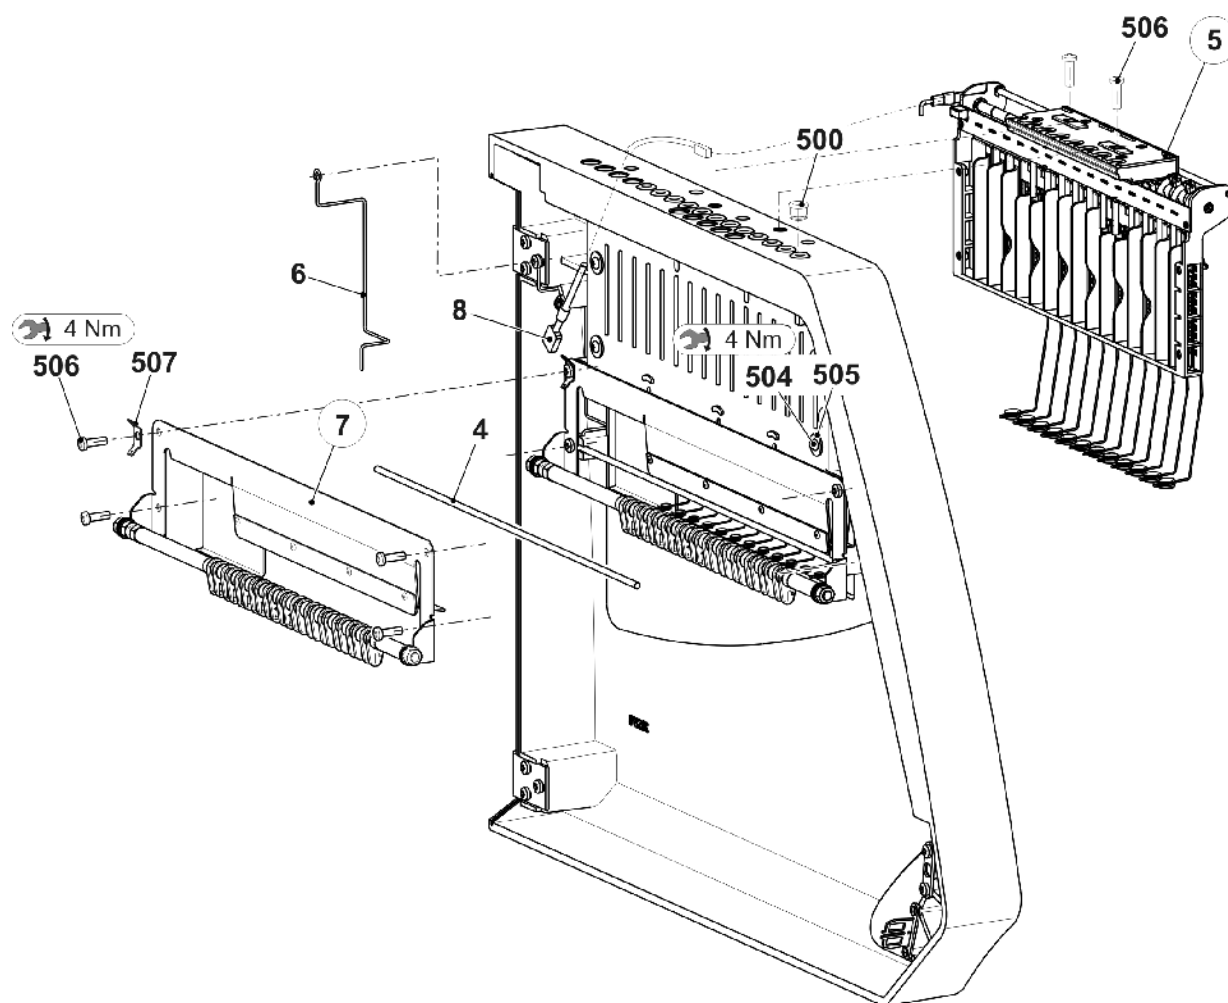


9.3.1 Right yarn tensioner

Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn tensioner on the right	265 387			
1	Card yarn tensioner 16-fold on the right	241 346	8	Grounding plate of tension axle	243 121
2	Tension axle on the right complete	265 389	9	Ground cable yarn tensioner OKC	243 105
3	Housing	241 367	500	Screw KB 30x8	236 228
4	Slider	241 694	501	Circlip	021 022
5	Stop point	241 368	502	Tension spring 5,6x0,63x53,7	023 722
6	Border	242 268	503	Circlip	021 020
7	Spacer	242 048	504	Countersunk screw M4x10	241 914

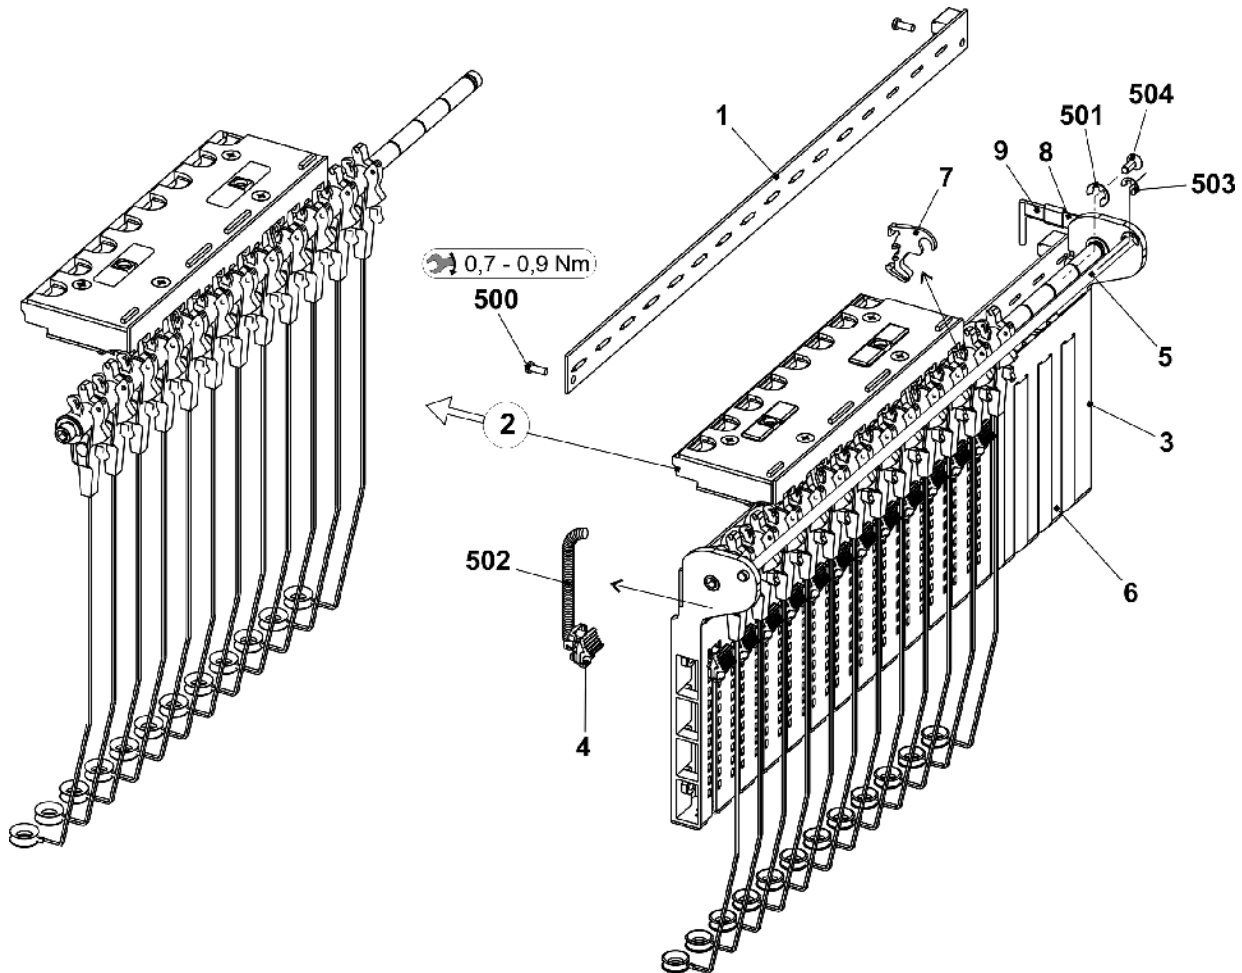


9.3.2 Right tension axle

Pos	Designation	Id. no.	Pos	Designation	Id. no.
Σ	Tension axle on the right complete	265 389	53	Sheet metal at the bottom (housing AKF)	240 719
1	Axle	243 107	54	Lever AKF	238 692
2	Tension arm pre-assembled	242 770	55	Pressure piece AKF	238 690
6	Wire bow	238 694	56	Slider AKF	238 691
500	Shim ring 8x14x0,5	023 501	57	Wire bow	238 694
501	Circlip	021 022	58	Wire	237 940
502	Grooved pin 2x6	243 172	551	Screw KB 35x12	237 681
5	Thread clamp AKF	238 695	552	Screw KB 40x8	236 227
51	Housing AKF	238 689	553	Compression spring 0,30x4,50x18,50	241 437
52	Cover AKF	237 926	554	Grooved pin 2x6	243 172

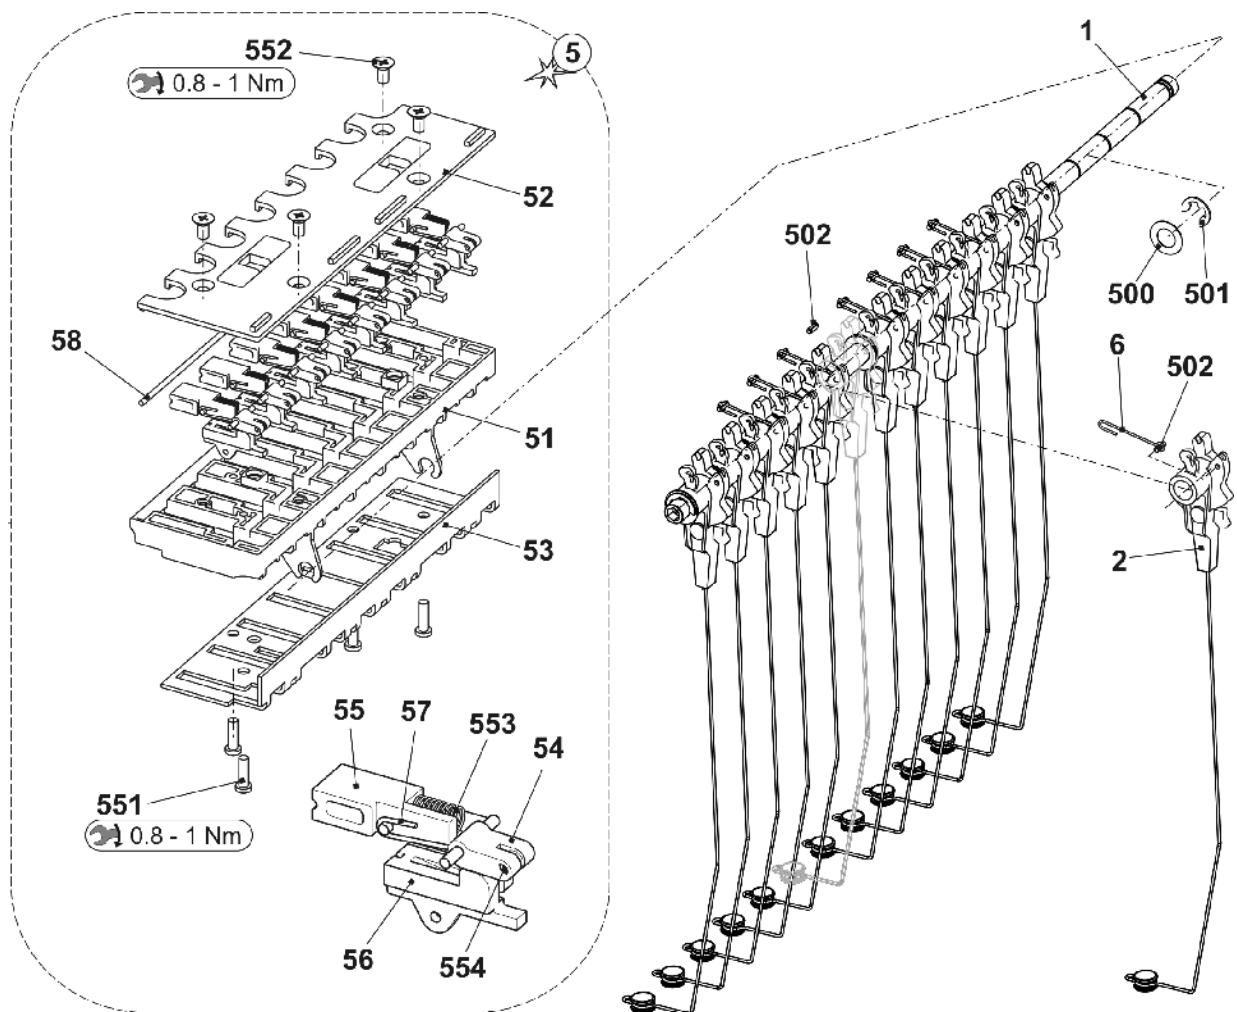


9.3.3 Yarn deflector on the right complete

Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn deflector on the right complete E3-4	267 341	5	Stop sleeve	266 433
1	Axle	265 284	6	Distance bushing	264 997
2	Threaded spacer E3-4	267 346	7	Stop plate right complete	265 277
3	Threaded spacer E3-4	267 347	500	Washer 8	022 854
4	Yarn Carriers E3-4	265 606	501	Hexagon nut M8-6	261 011

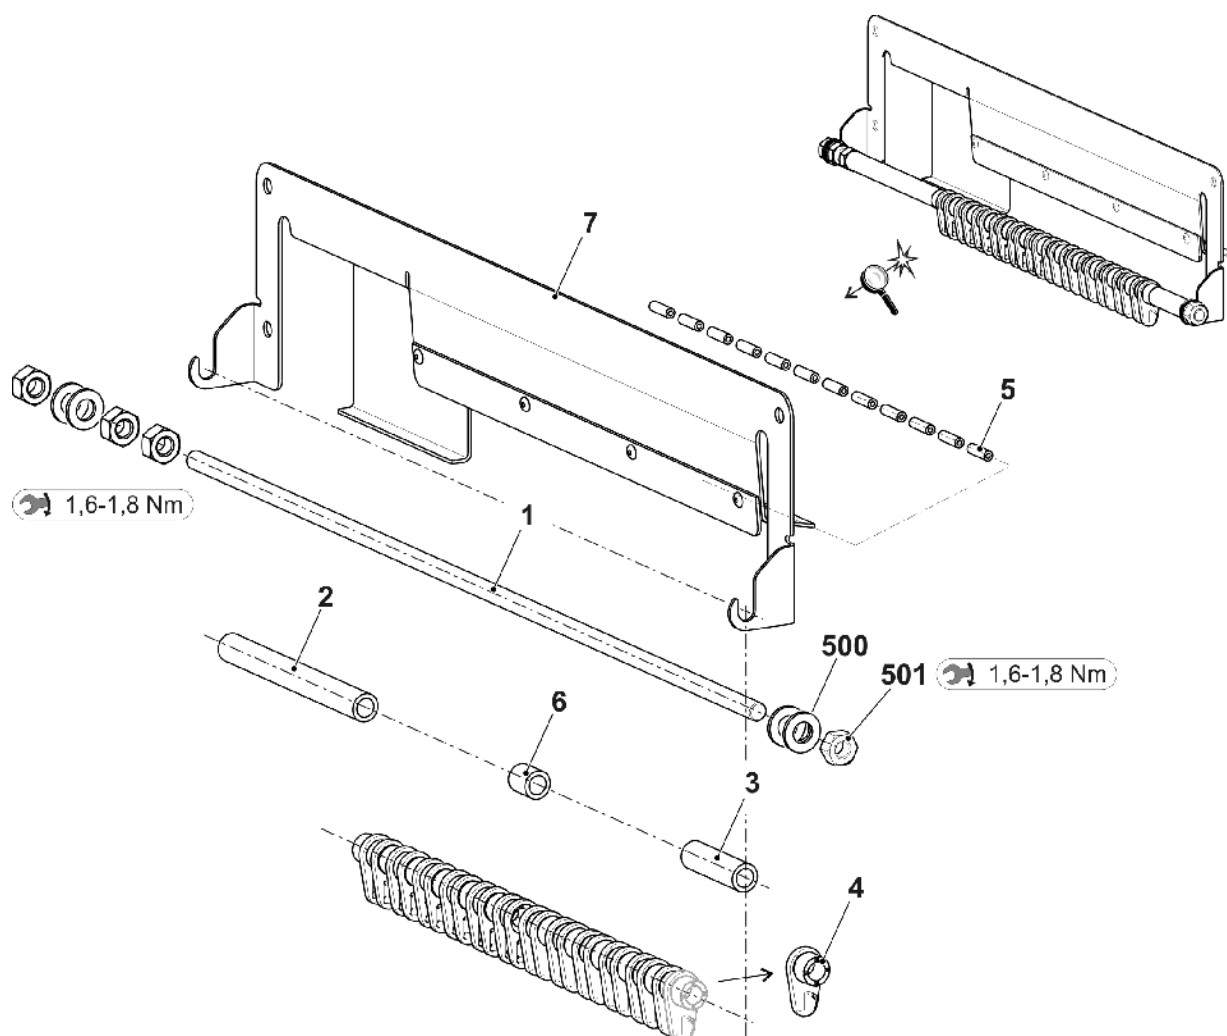


9.4 Bobbin board

Pos	Designation	Id	Pos	Designation	Id
Σ	Table complete50"	265 824			
1	Table	251 244	19	Support of left feed wheel	264 453
4	Support element	228 594	20	Lamp LED complete	264 759
6	Guide rail at the top complete	264 763	21	Card safety door switch outside	264 696
7	Positioning pin	204 819	22	Card safety door switch middle	264 695
11	Energy chain display 38 links	253 888	503	Pan head screw M8x16	023 113
17	Slot nut	228 851	504	Washer 5	020 901
18	Support of right feed wheel	264 454	507	Pan head screw M8x18	251 331

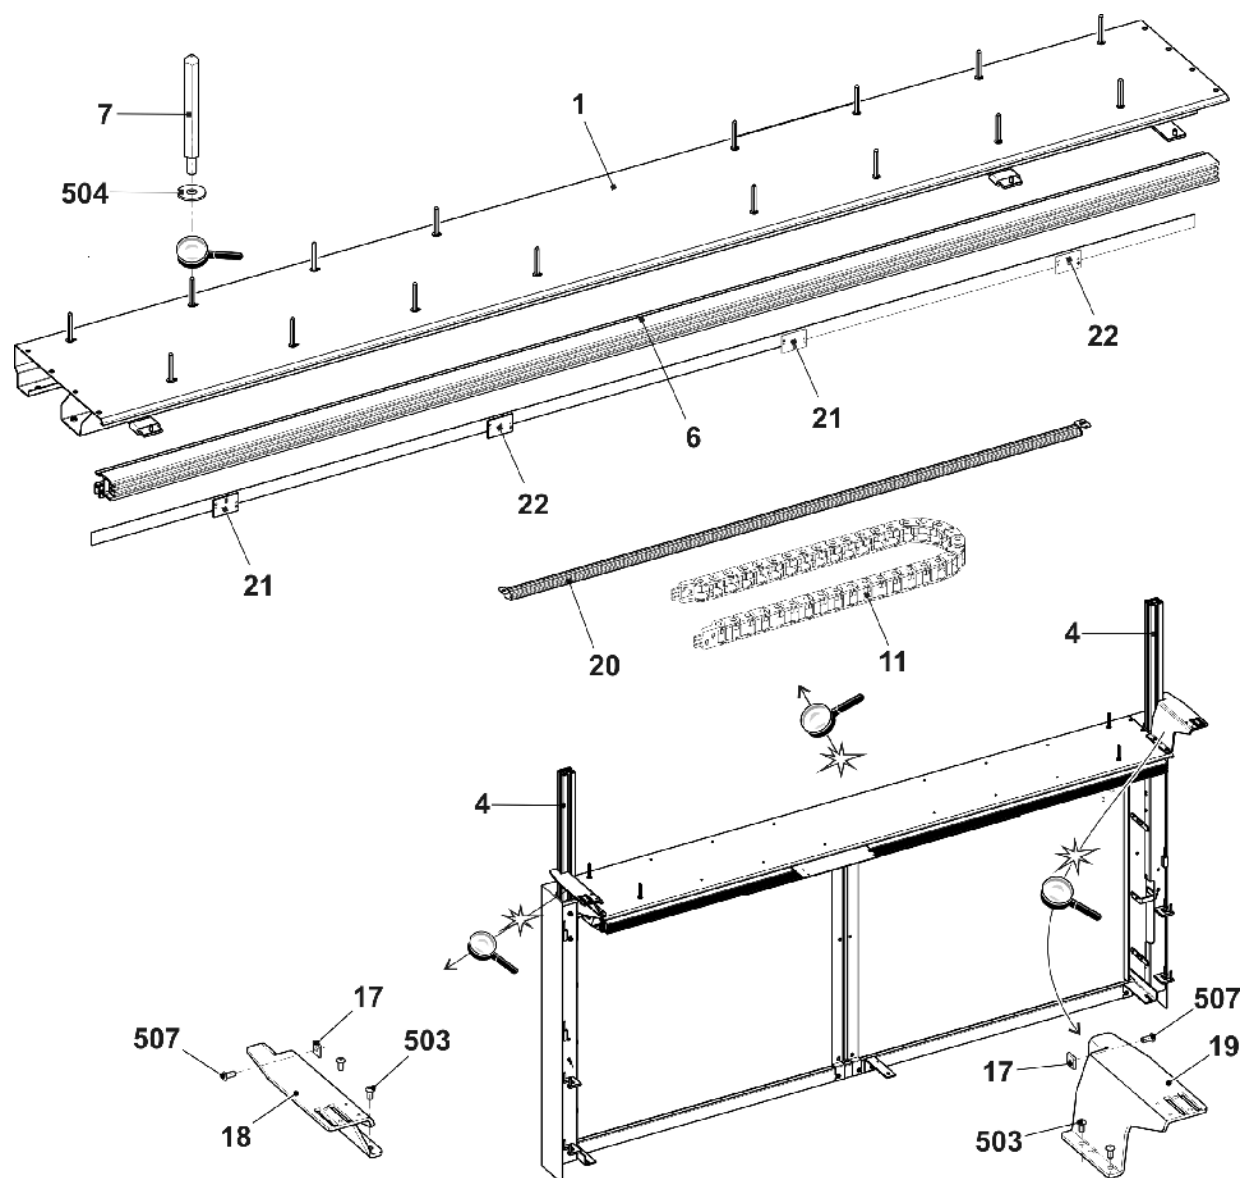


9.5 Carriage of yarn carrier

Pos	Designation	ID	Pos	Designation	ID
Σ	Yarn guide complete	262 422	1-4/a	FF carriage complete	241 887
1	FF carriage 1+8 complete E3-4m.3L	217 486	1b	FF bow 1+8 complete E3-4	216 266
2	FF carriage 2+7 complete E3-4m.3L	262 386	2b	FF bow 2+7 complete E3-4m.3L	262 383
3	FF carriage 3+6 complete E3-4m.3L	262 387	3b	FF bow 3+6 complete E3-4m.3L	262 384
4	FF carriage 4+5 complete E3-4m.3L	262 388	4b	FF bow 4+5 complete E3-4m.3L	262 385
5	Limiter on the left	244 099	2-4/c	Shim	213 035
6	Limiter on the right	244 098	A	Yarn guide star	202 146
7	Slider with eyelet	230 709	B	Yarn guide star complete	262 036
500	Hexagon screw M5x10	020 351	510	Pan-head screw M3x12	023 033
501	Washer 8	259 666	520	Pan-head screw M3x10	023 032

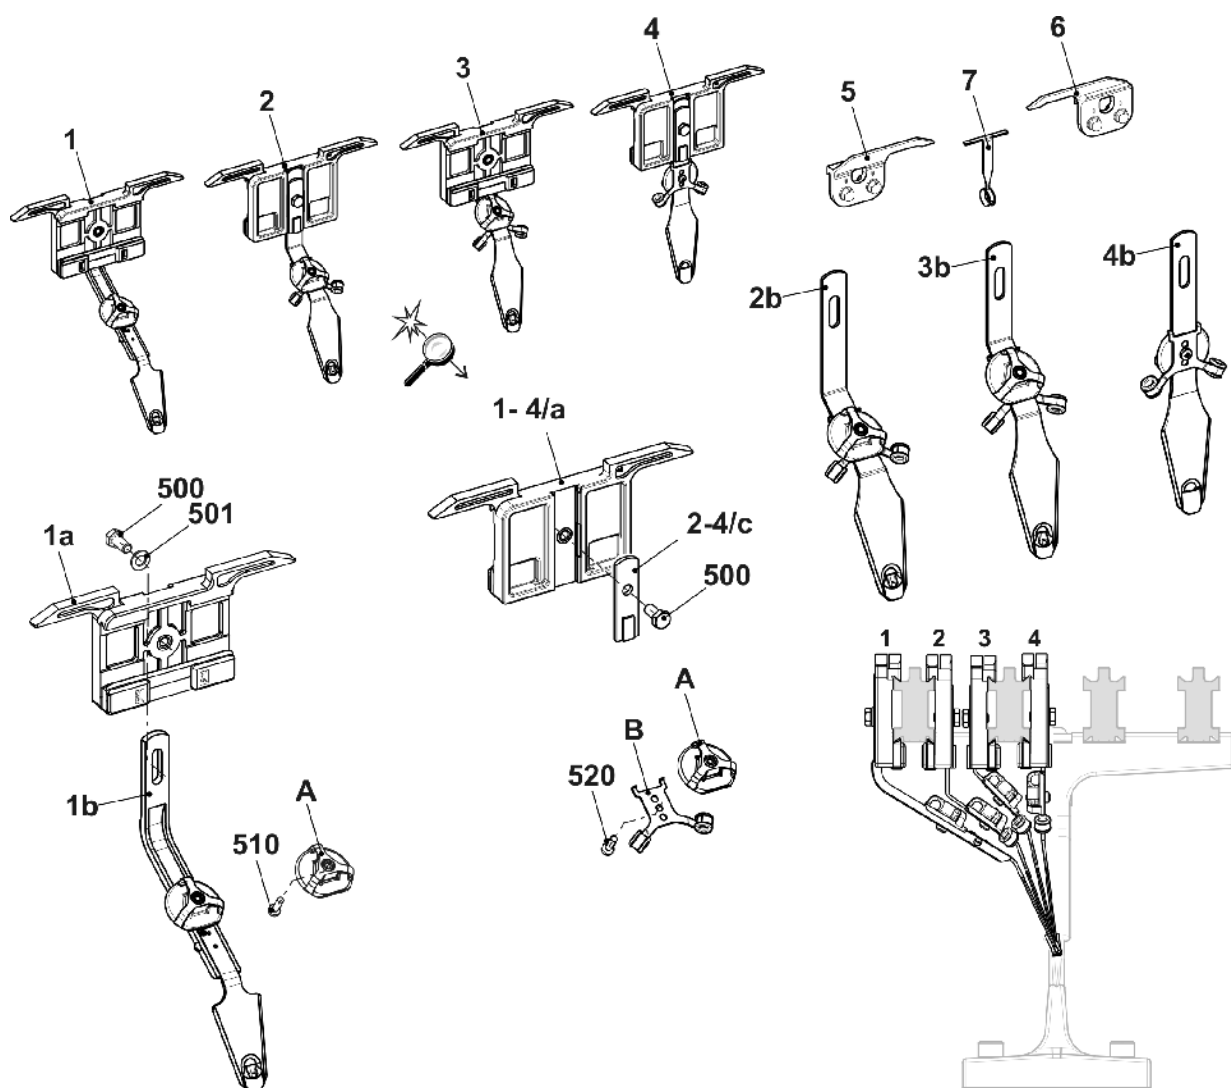


9.6 Bar unit

Pos	Designation	ID	Pos	Designation	ID
Σ	Bar unit	267 393			
2	Yarn carrier rail	255 465	540	Pan head screw M6x10	023 183
3	FF support	258 508	541	Cap screw M8x90	022 698
4	Yarn deflector completeE3-4	267 378	542	Washer 8	023 183
	4a Holding angle	262 463	543	O-ring 8x3	022 858
	4b Bolts	262 462	500	Cap screw M6x35	020 139
	4c Yarn Carriers E3-4	265 606	501	Pan head screw M6x10	023 183
			900	Cap screw M8x25	020 142

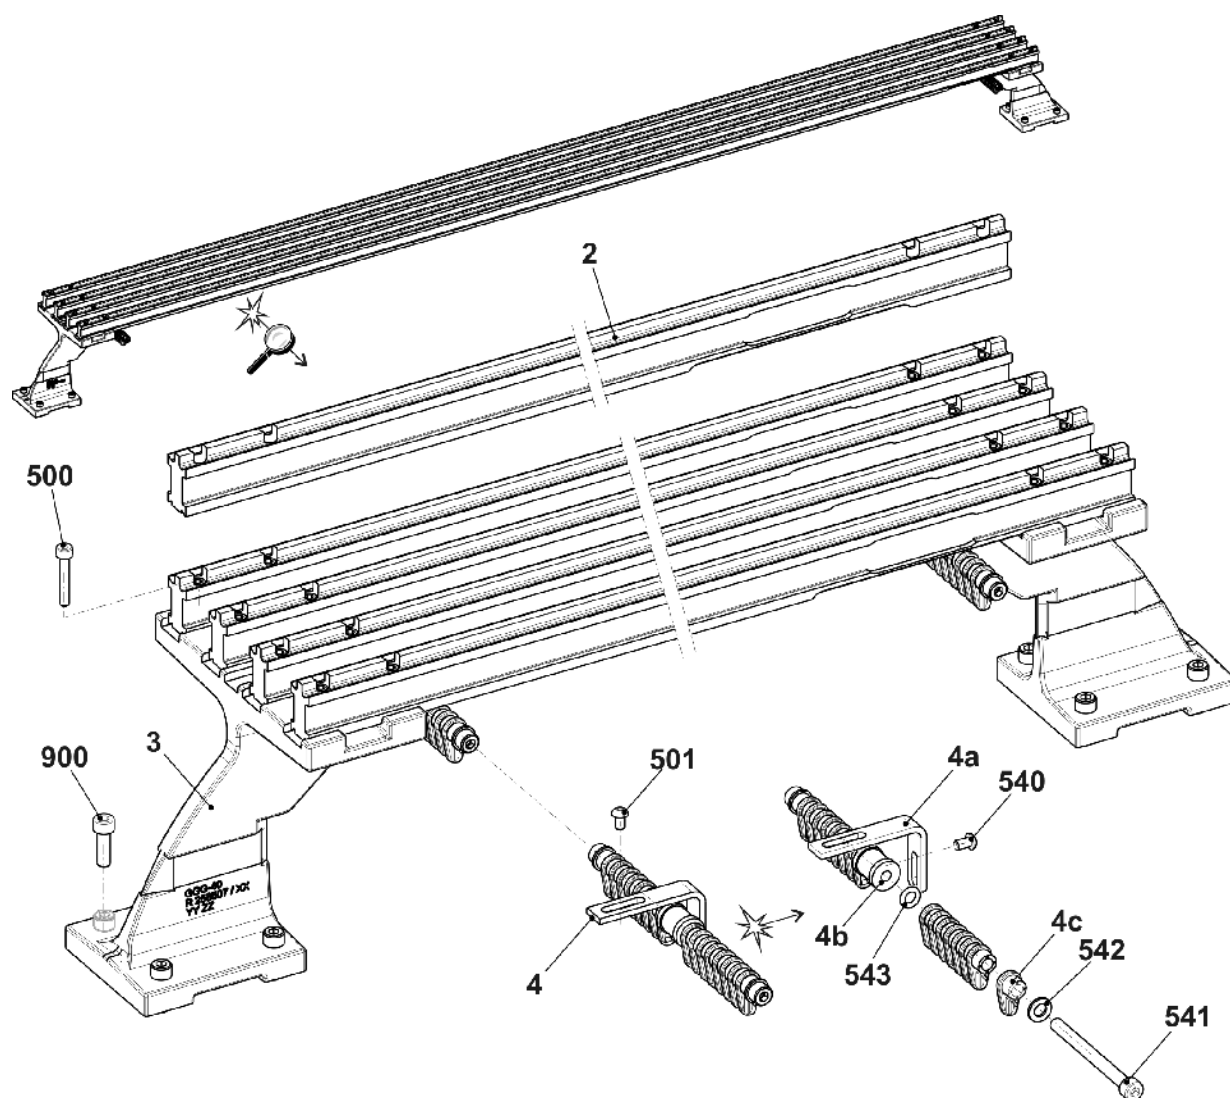


9.7 Left friction feed wheel

Pos	Designation	ID	Pos	Designation	ID
Σ	Friction feed wheel on the left	269 403			
1	Three-phase AC motor complete	219 800	2	Friction roller complete	269 400
1a	Micro Switches	008 664	3	Ribbed V-belt V3J 406	206 927

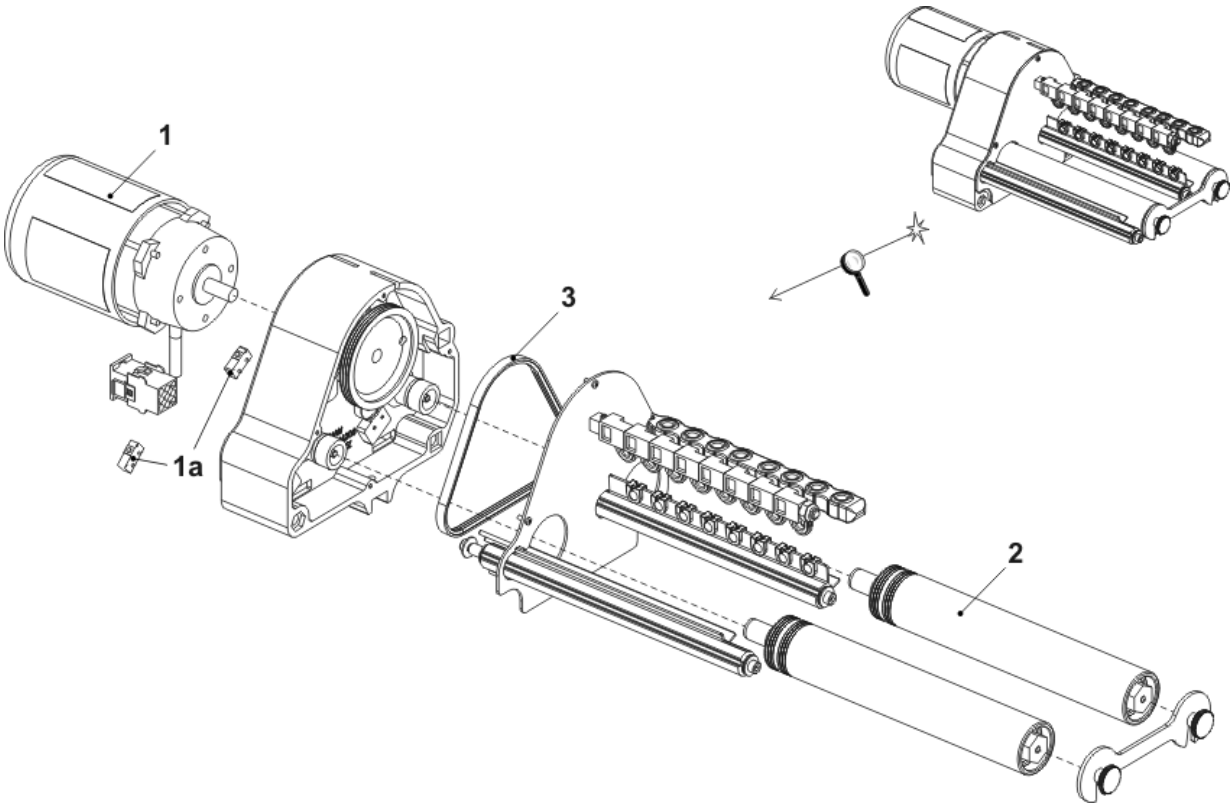


9.8 Right friction feed wheel

Pos	Designation	ID	Pos	Designation	ID
Σ	Friction feed wheel on the right	269 398			
1	Three-phase AC motor complete	219 800	2	Friction roller complete	269 400
1a	Micro Switches	008 664	3	Ribbed V-belt V3J 406	206 927

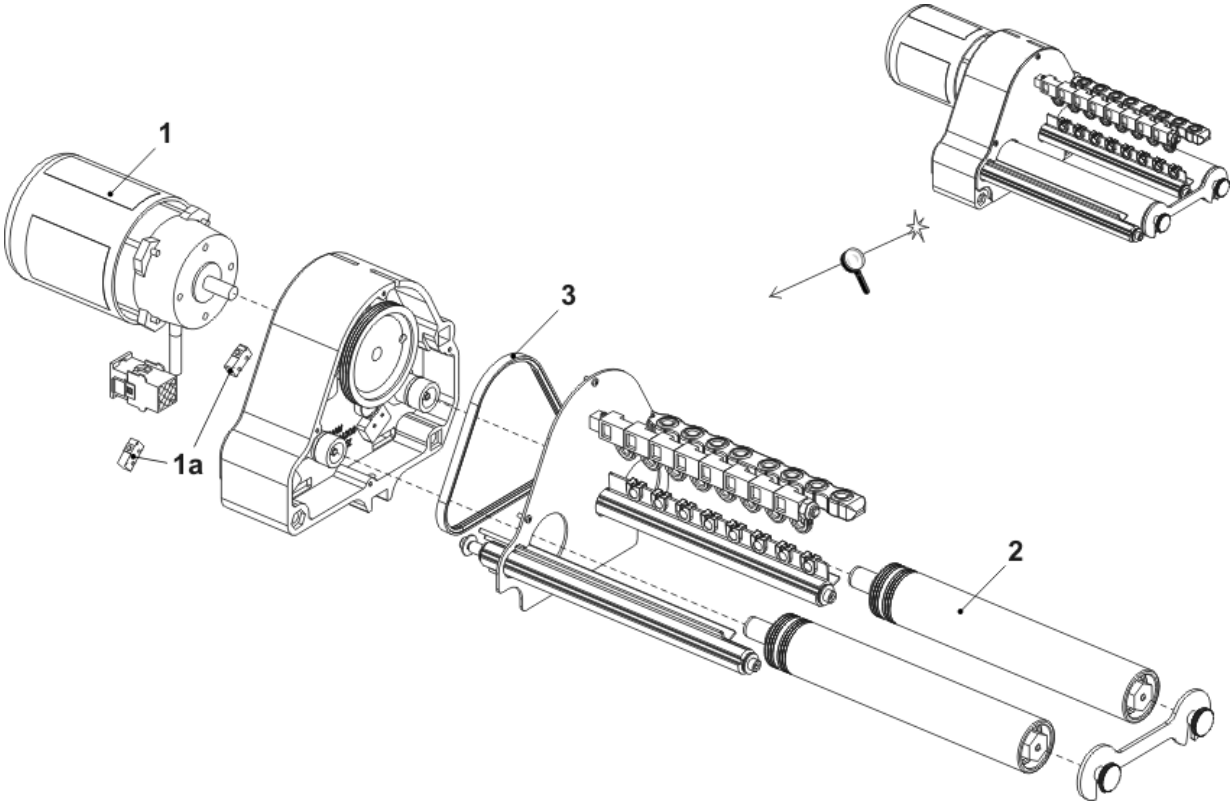


9.9 Stopping device on the left

Pos	Designation	Id	Pos	Designation	Id
Σ	Stopping device on the left	267 345	2	Yarn brake	264 352
1	Stopping device on the left	264 993	500	Ceramic eyelet open	240 733

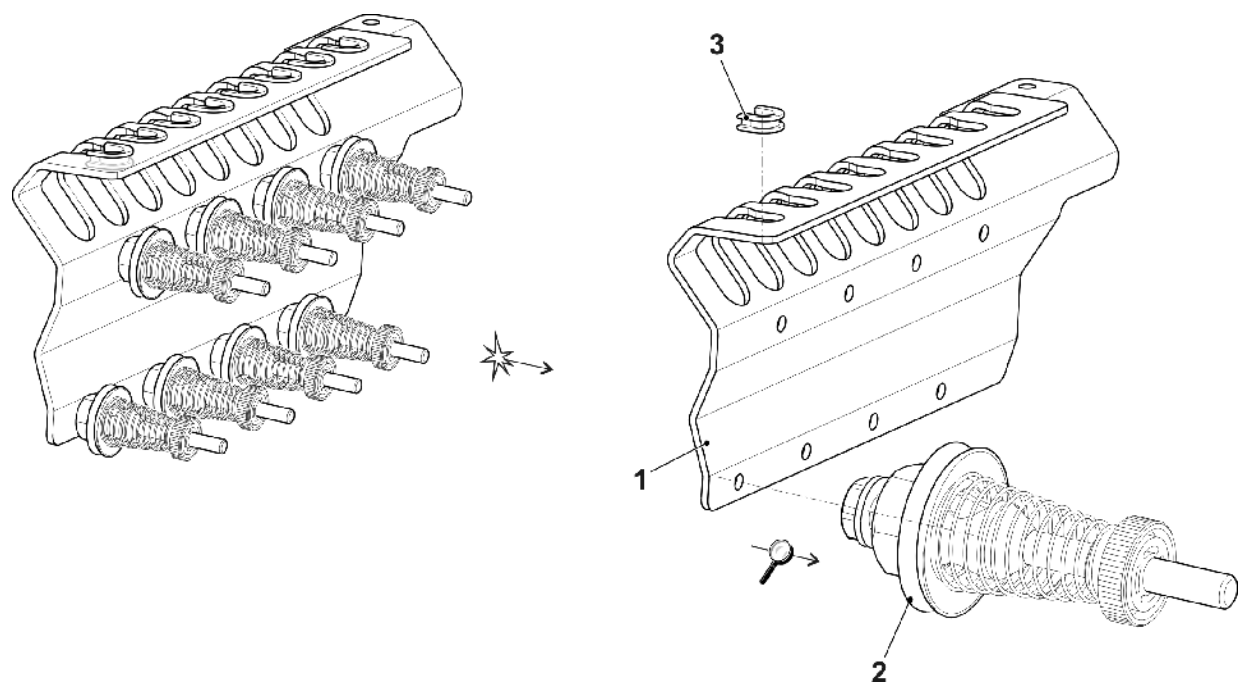


9.10 Stopping device on the right

Pos	Designation	Id	Pos	Designation	Id
Σ	Stopping device on the right	267 344	2	Yarn brake	264 352
1	Stopping device on the right	264 992	500	Ceramic eyelet open	240 733

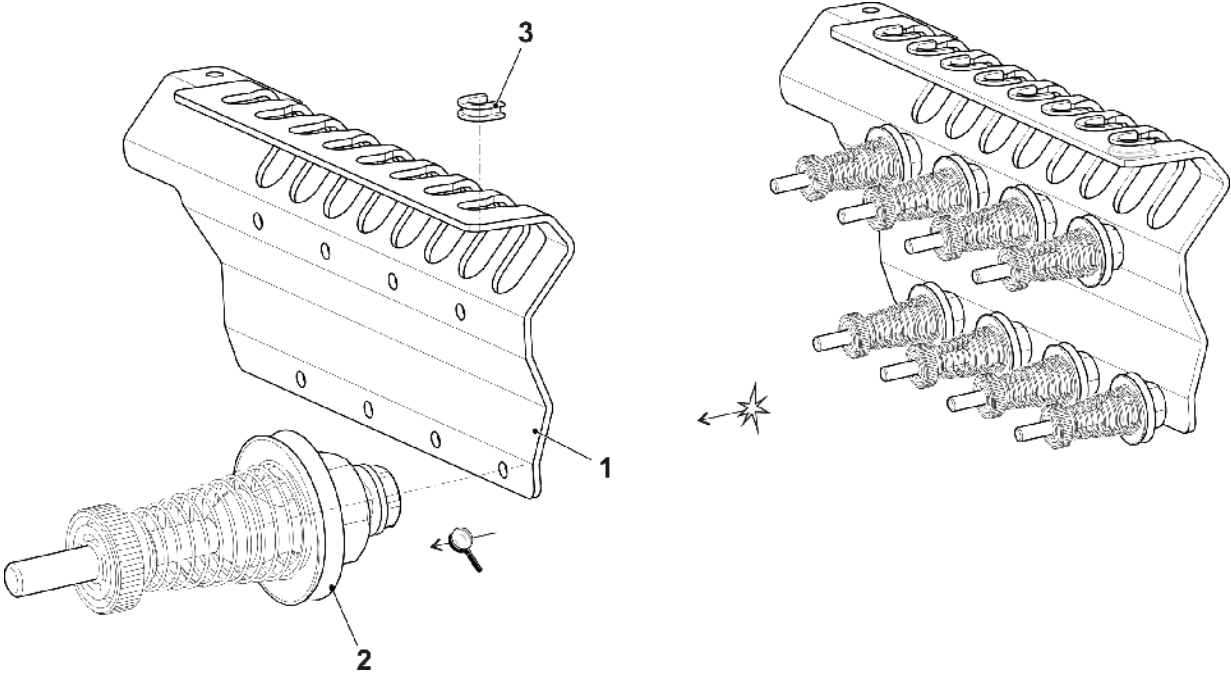


10 Fluff absorption

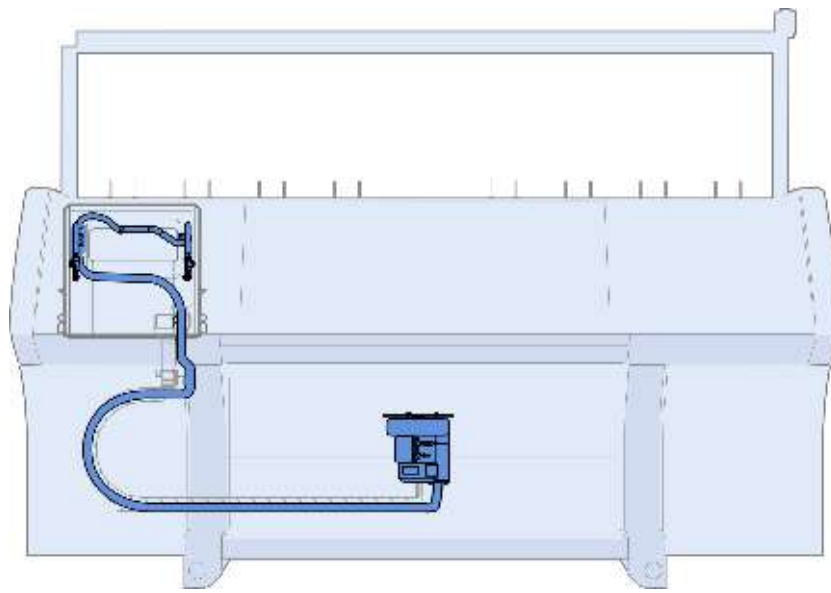


10.1 Fluff absorption

Pos	Designation	ID	Pos	Designation	ID
Σ	Fluff absorption		4	Lint container	245 024
1	Suction fan complete	265 836	5	Set of hose complete	251 339
2	Suction hose 29x25x2800	252 627	550	Countersunk head screw M4x12	023 062
3	Cable clip	250 051	551	Cap screw M4x8	022 501

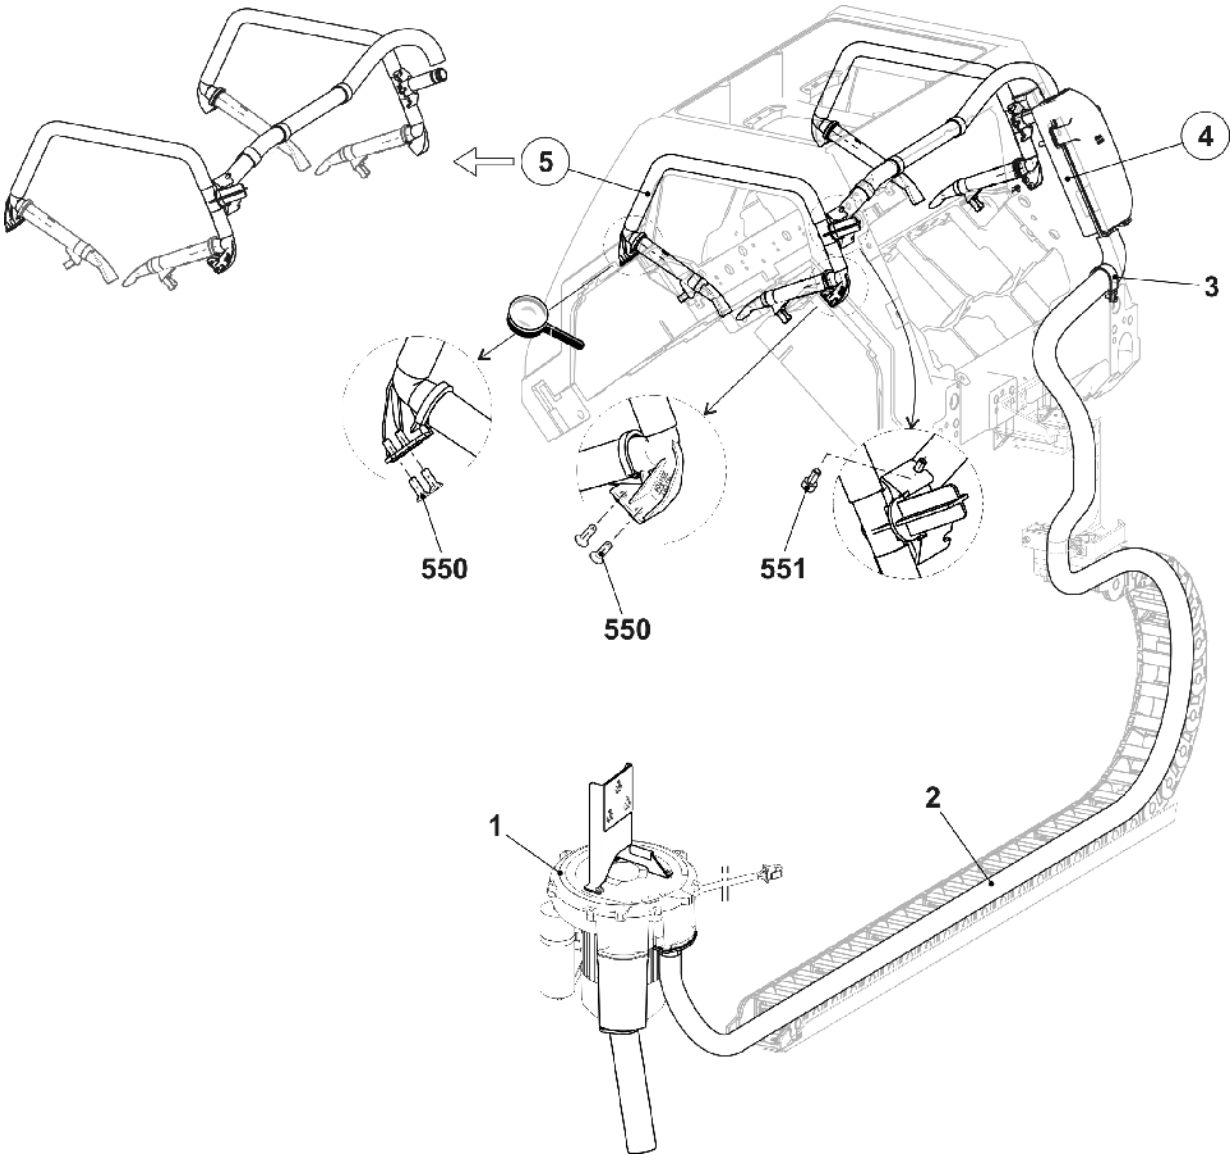


10.1.1 Lint container

Pos	Designation	Id	Pos	Designation	Id
Σ	Lint container		6*	Sealing plug	245 029
1	Lint container	245 024	10*	Cover with filter	251 335
5*	Sealing plug	245 028	501*	Cap screw M6x10	023 690

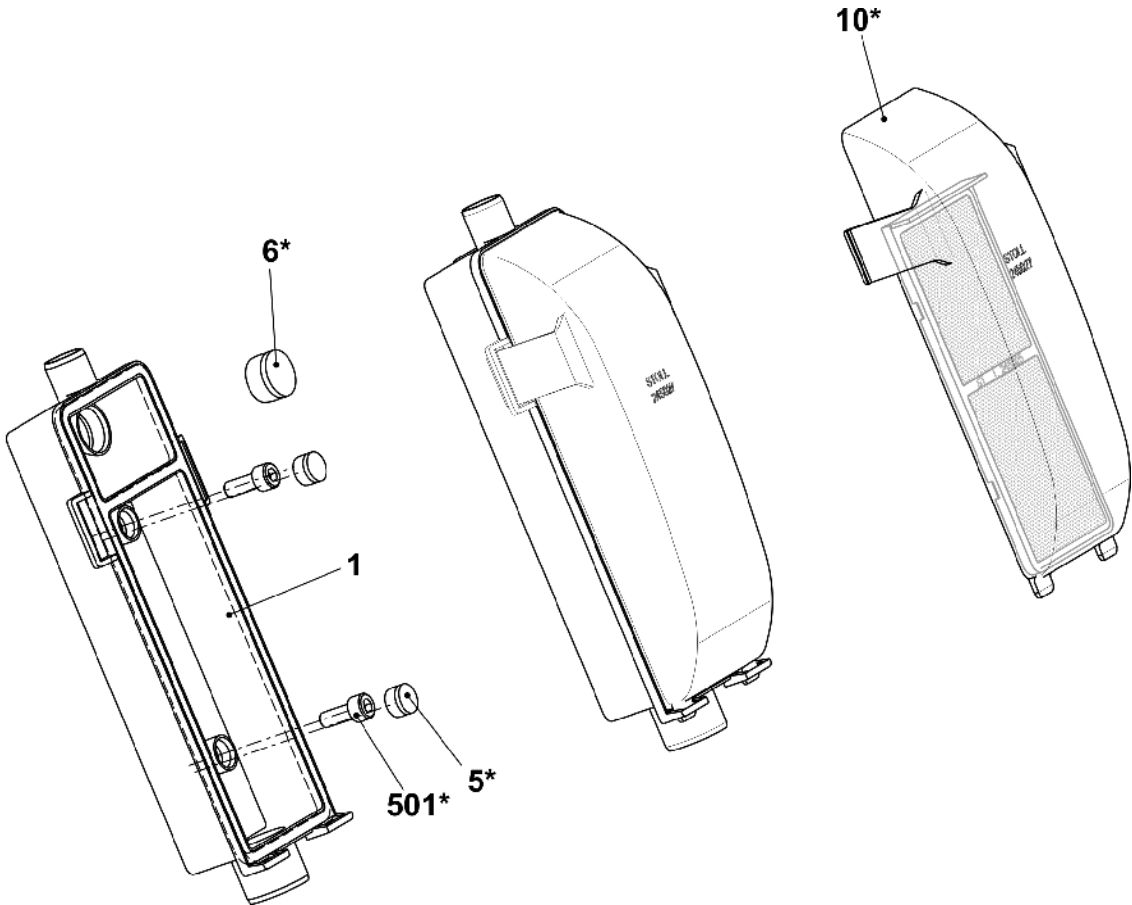


10.1.2 Set of hose

Pos	Designation	ID	Pos	Designation	ID
Σ	Set of hose complete 530/520C	251 339	500	Suction hose 20x16x400	244 983
1	Angle connection on the right	250 121	501	Suction hose 20x16x40	251 043
2	Angle connection on the left	251 101	502	Suction hose 20x16x570	251 044
3	T-piece FLENT	245 021	504*	Countersunk head screw M4x12	023 062
530	O-ring 15x1,5	250 054	506*	Cable clip	250 051
4	Connection piece Flent	245 022	531*	Cap screw M4x8	022 501

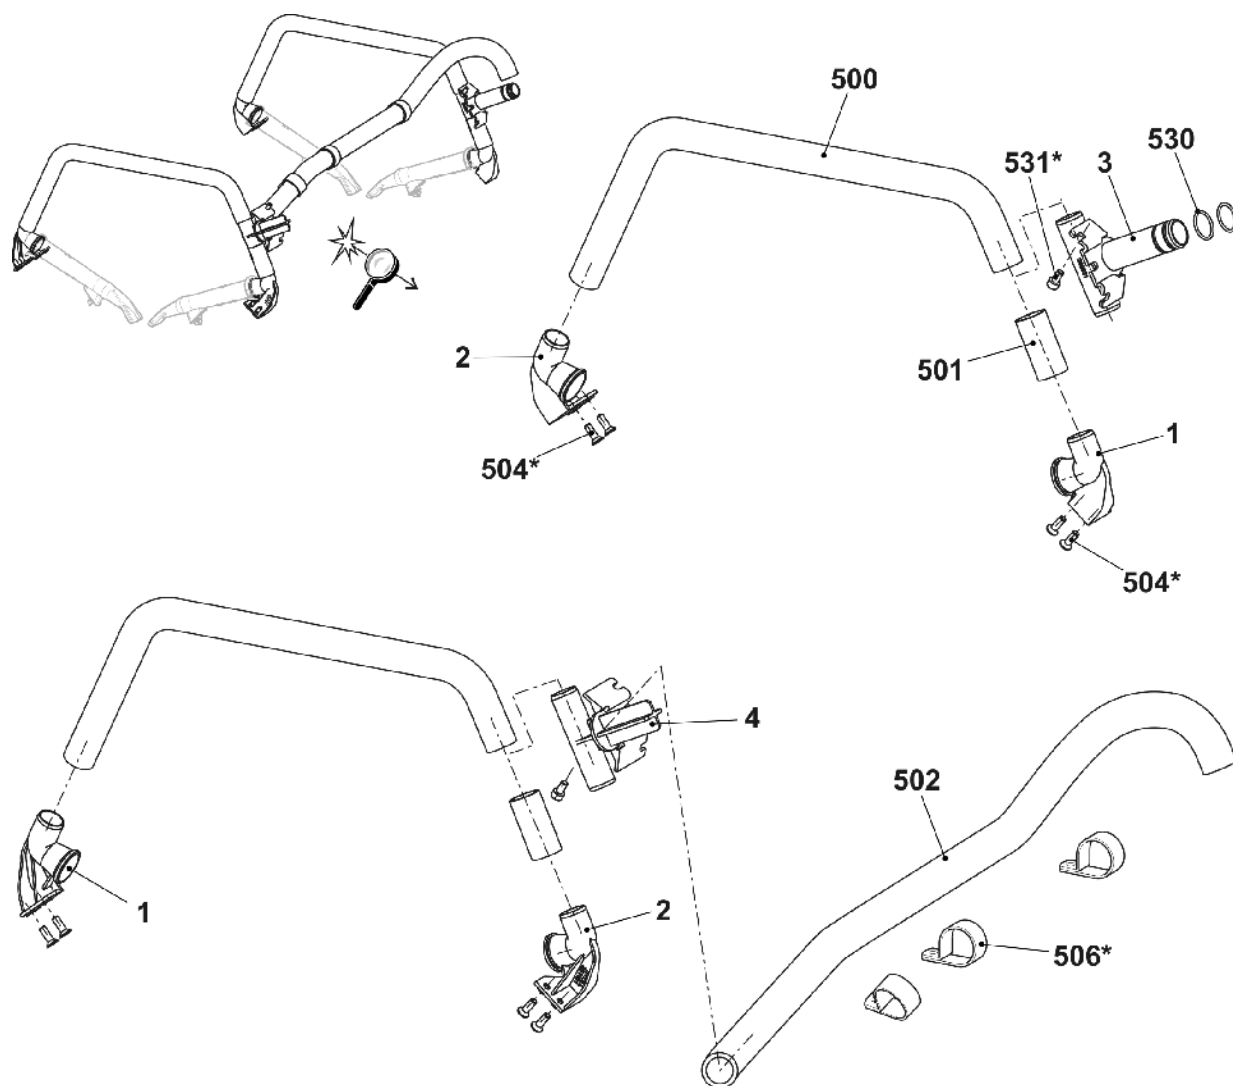


10.1.3 Suction tube

Pos	Designation	Id	Pos	Designation	Id
Σ	Suction tube complete E3-4 + 16-18	251 313	2	Bracket	255 628
1	Suction tube	255 605	500	Screw KB30x6	241 424

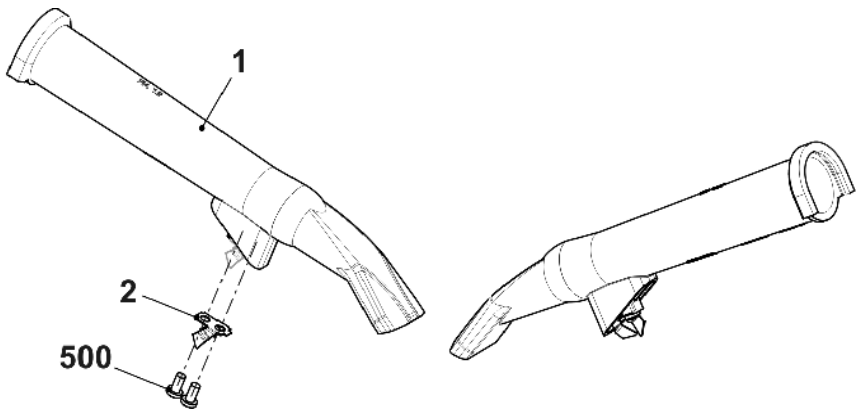


11 Operation and control

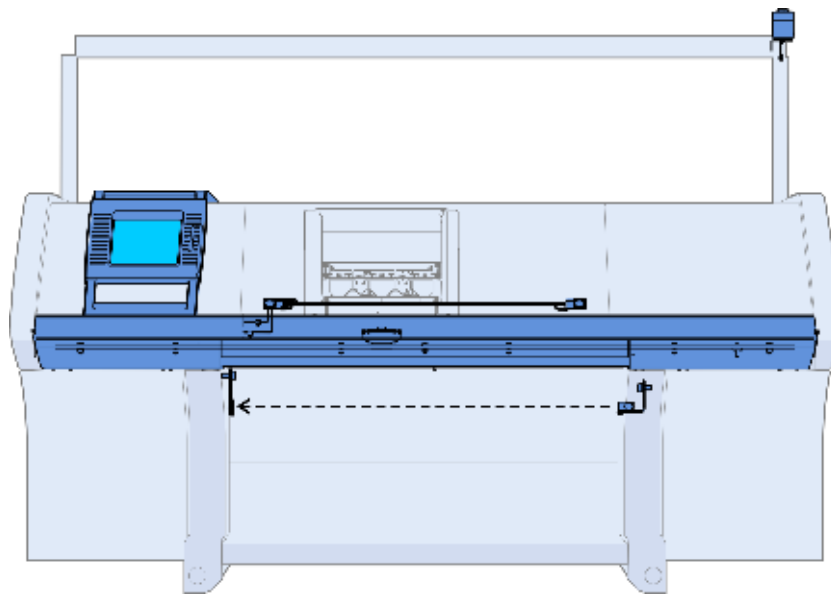


11.1 Input unit

Pos	Designation	Id	Pos	Designation	Id
Σ	Input unit complete	265 822	551	Hexagon nut M3-8	022 884
1	Base frame	266 578	552	Disk2,2x4,6x0,35	023 362
2	Installation set seal 12.1	261 327	6	Cover plate	267 051
3	Input medium Touch 12,1" LCD	263 307	7	Bearing strip complete	267 030
5	Frame complete	266 970	9	Pencil touch	242 812
5a	Display LCD Color 12,1 LED	262 508	500	Screw 35x10	251 729
5b	FrameCMI 12,1"	266 971	503	Pan-head screw M4x6	022 946
5c	Fastening plate	266 972	504	Washer 5	020 901
550	Cap screw M2x4	023 624	506	Serrated lock washer A4,3	022 482

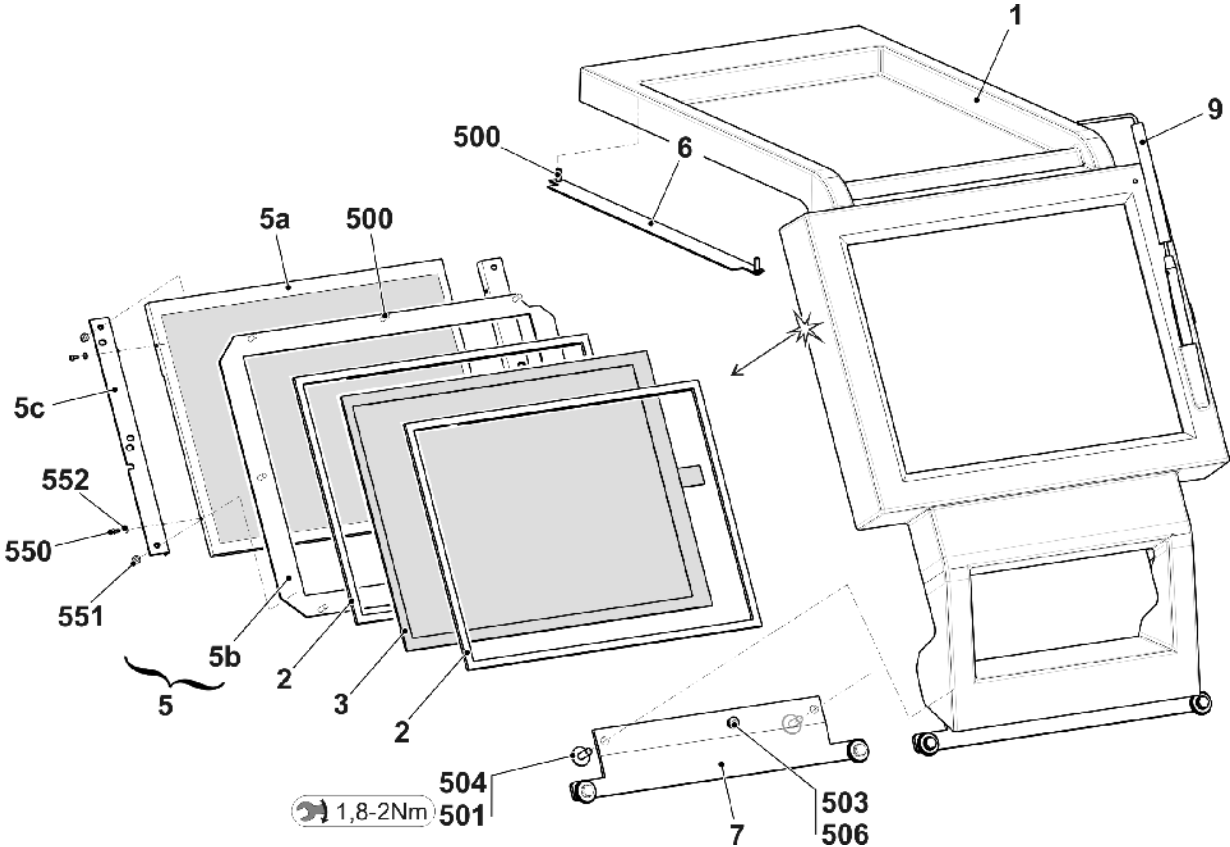


11.2 Starting device

Pos	Designation	Id	Pos	Designation	Id
Σ	Starting device complete	240 306			
1	Engaging Rod	240 227	13	Bearing on the right	264 800
2	Bearing on the left complete	250 071	502	Screw M6x25	023 510
3	Guide rail at the bottom complete	257 309	503	Cap screw M6x16	020 135
6*	Cover plate on the right	250 931	504	Pan head screw M5x14	023 588
7*	Cover plate on the left	250 932	506*	Cap screw M6x12	020 134
8	Bearing on the right	265 444	507	Cap screw M6x20	020 136
9	Switch with cable to safety doors	223 350	508	Washer	020 872
11	Locating bolt	219 107	511	Cable holder	262 037
12	Sliding nut (slot nut)	225 099	512	Cap screw M6x10	023 690

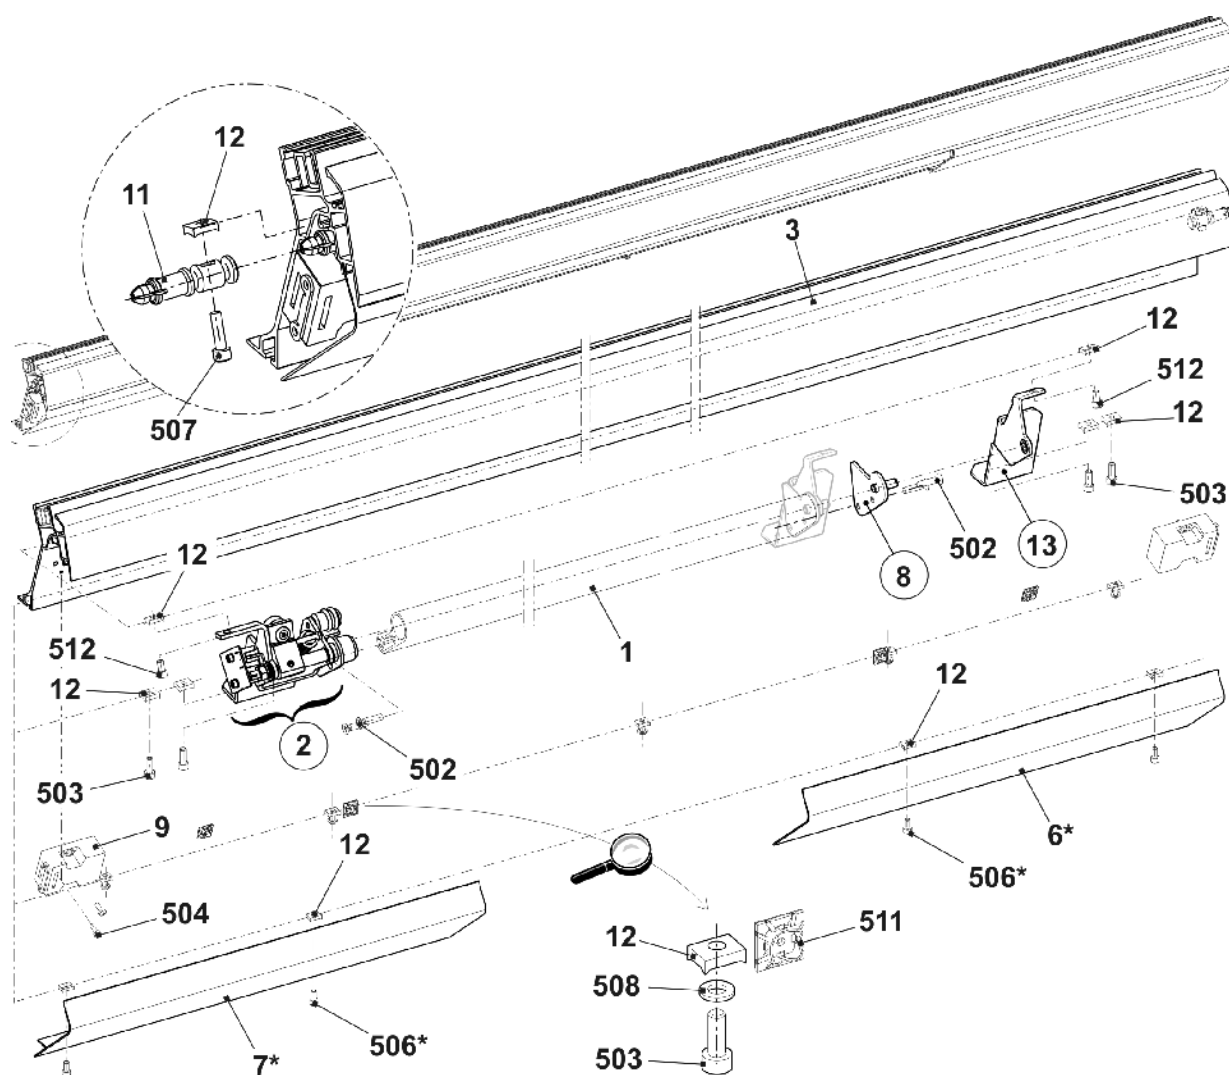


11.3 Signal light

Pos	Designation		Id	Pos	Designation		Id
Σ	Signal light LED		240 395				
	500	Pan head screw M4x14	023 037				
	501	Serrated lock washer A4,3-FS	022 482				

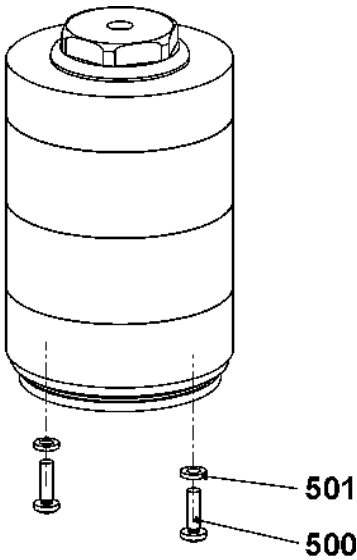


11.4 Control of Collecting Area

Pos	Designation	Id	Pos	Designation	Id
Σ	Reflector complete	256 826	Σ	Light barrier complete	256 825
1	Mounting plate reflector	256 675	1	Holding angle light barrier	256 674
500	Blind rivet A3x8-Al	023 158	500	Cap screw M3x10	022 991
501	Reflector 20x20 mm	243 356	501	Light Barrier	243 355
900*	Cap screw M6x12	020 134	900*	Cap screw M6x12	020 134
			901*	Washer 6	020 872

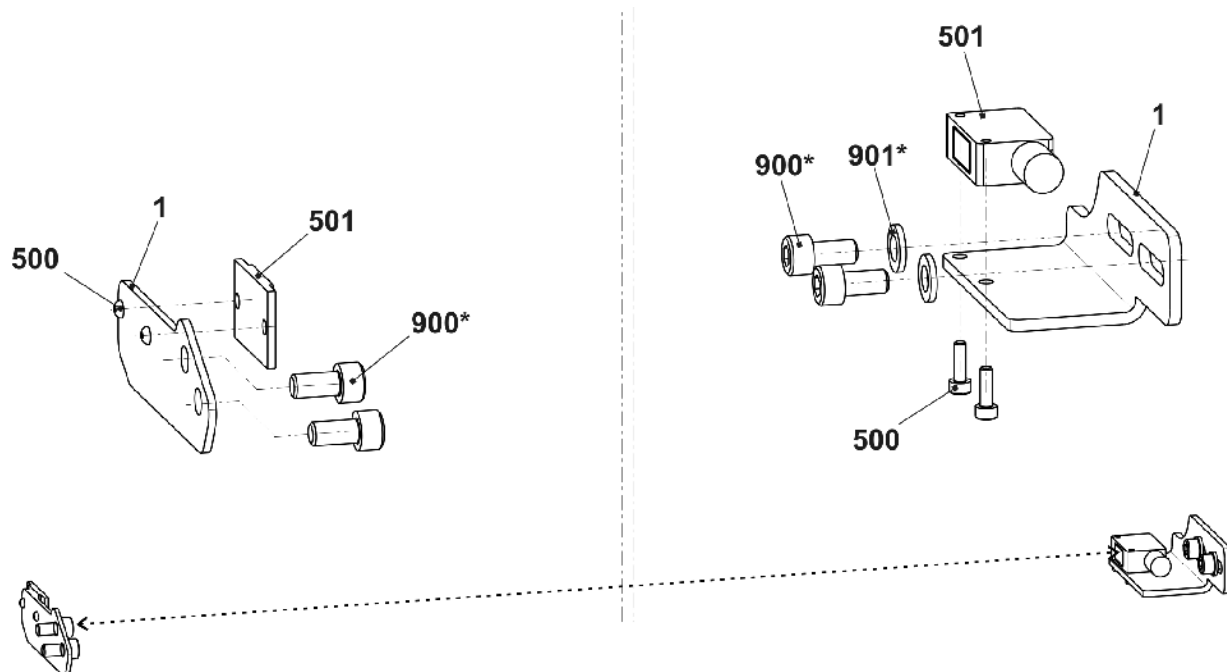


11.5 Shock stop motion E3-4

Pos	Designation	ID	Pos	Designation	ID
Σ	Shock stop motion complete E3 E4	224 242	3	End plug piezo sensor	220 062
1	Shock stop motion (Piezo)	220 011	500*	Pan-head screw M4x8	023 036
2	Connecting cable piezo sensor	220 061	502*	Cable clip N-3B, 5 mm	210 729

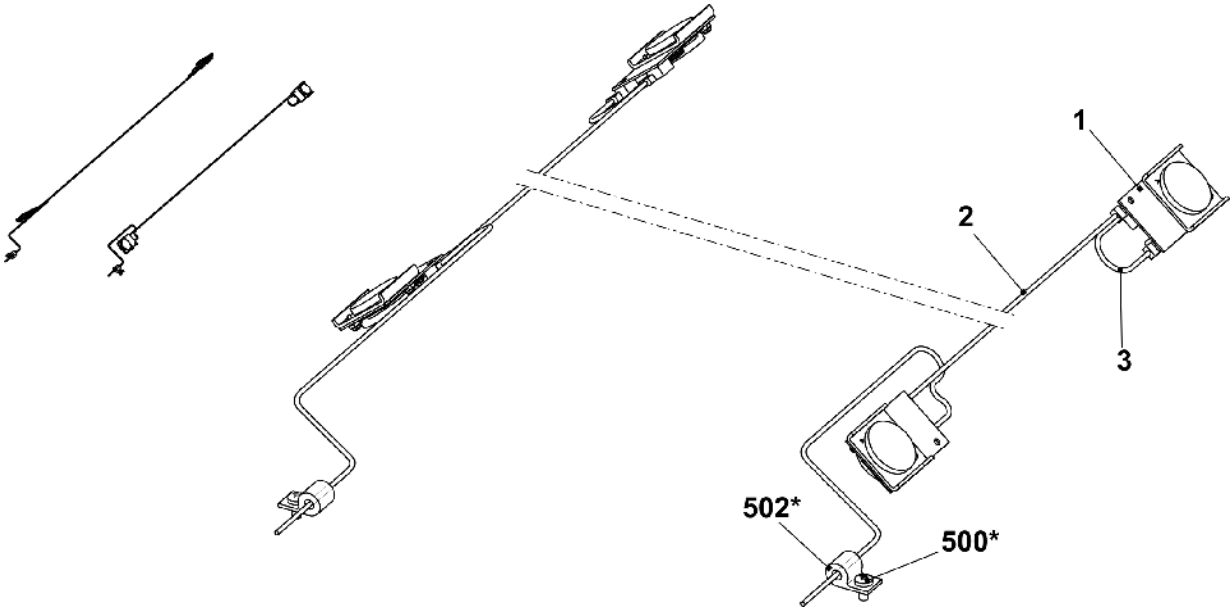


11.6 Measuring device

Pos	Designation	Id	Pos	Designation	Id
Σ	Measuring device		10*	Spare parts package impulse sensor GLM OH	266 961
1	Measuring bar	263 743	502	Pan-head screw	241 603
2	Guide	251 676	503	Screw 60x20	243 625
4	Guide	240 672	530	Setscrew	230 803

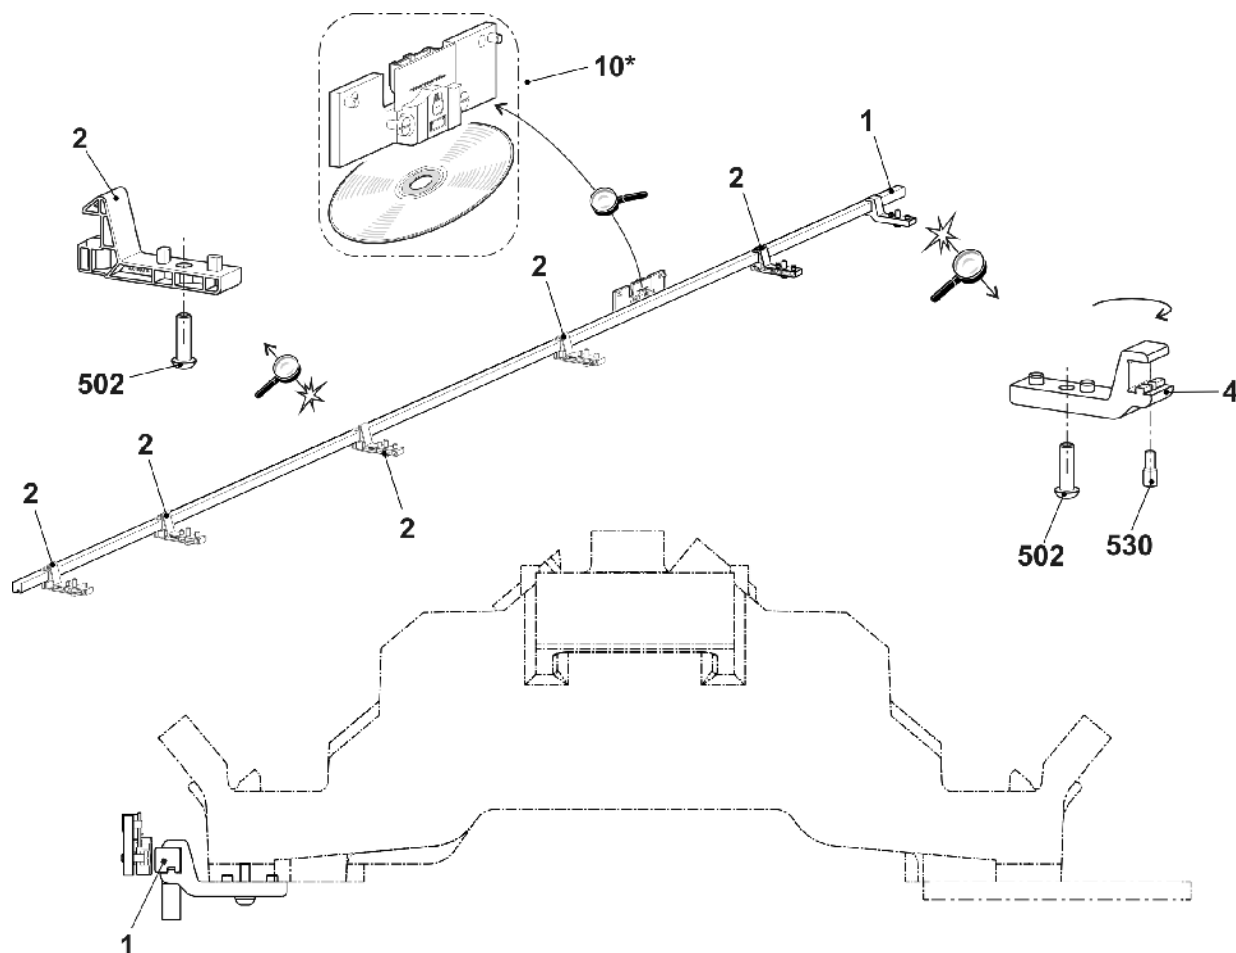


12 Protective devices

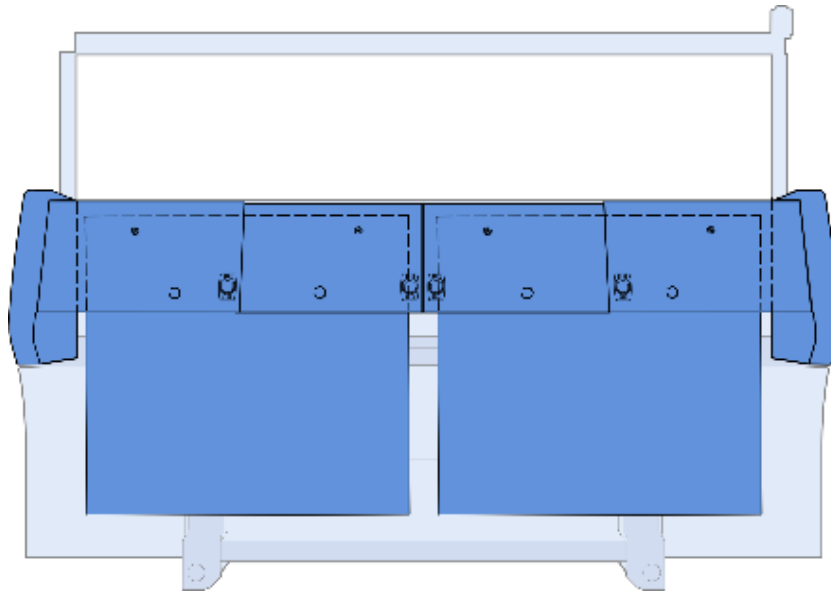


12.1 Lateral safety doors

Pos	Designation	Id	Pos	Designation	Id
Σ	Safety door on the left		Σ	Safety door on the right	
1	Safety door on the left	265 278	1	Safety door on the right	265 279
2	Hinge	263 939	2	Hinge	263 939
4	Locking plate	219 748	4	Locking plate	219 748
10	ActuatorAZ 15/16	255 492	10	ActuatorAZ 15/16	255 492
501	Screw 6x30	265 380	501	Screw 6x30	265 380
502	Screw 4x16	263 995	502	Screw 4x16	263 995
506	Screw 6x20	265 379	506	Screw 6x20	265 379

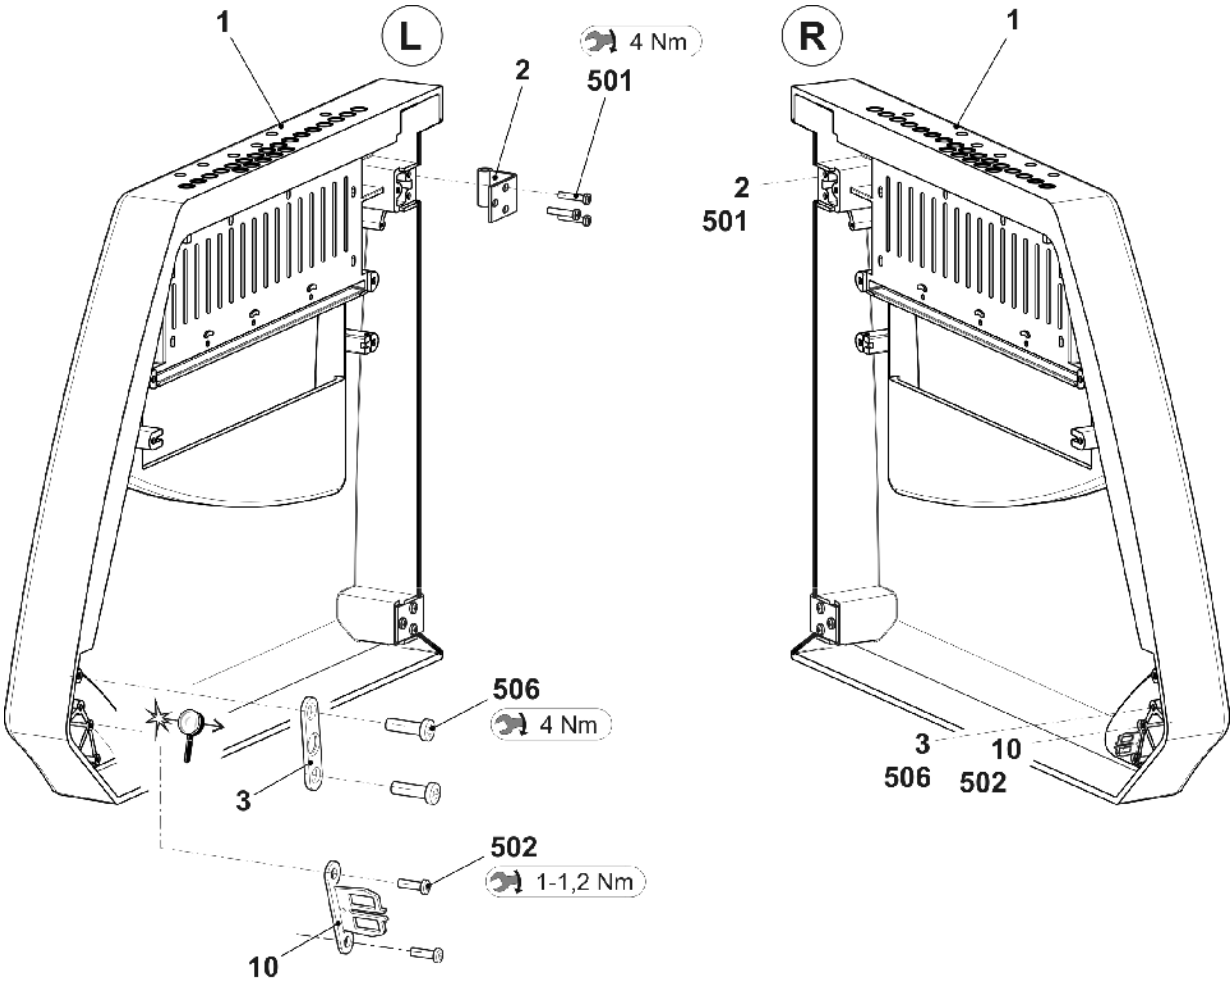


12.2 Panelling

Pos	Designation	Id	Pos	Designation	Id
1	Cover 1 complete	264 573	3	Cover 3 complete	264 577
	1a Cover 1	264 572		3a Cover 3	264 576
	1b Inlet type handle	251 376		1b Inlet type handle	251 376
	1c Stripper	219 393		1c Stripper	219 393
	1d Magnet	264 015		1d Magnet	264 015
2	Cover 2 complete	264 575	4	Cover 4 complete	264 579
	2a Cover 2	264 574		4a Cover 4	264 578
	1b Inlet type handle	251 376		1b Inlet type handle	251 376
	1c Stripper	219 393		1c Stripper	219 393
	1d Magnet	264 015		1d Magnet	264 015
5	Control unit panelling on the left complete	251 233	6	Control unit panelling on the right complete	251 234
	5a Control unit panelling on the left	251 185		6a Control unit panelling on the right	251 186
	5b Side part	244 989		6b Side part	244 989
	5c Hinge	250 273		6c Hinge	250 273
	5d Bracket	240 412		6d Bracket	240 412
	550 Screw KB 50x12	240 359		550 Screw KB 50x12	240 359
	551 Cap screw M6x16	020 135		551 Cap screw M6x16	020 135

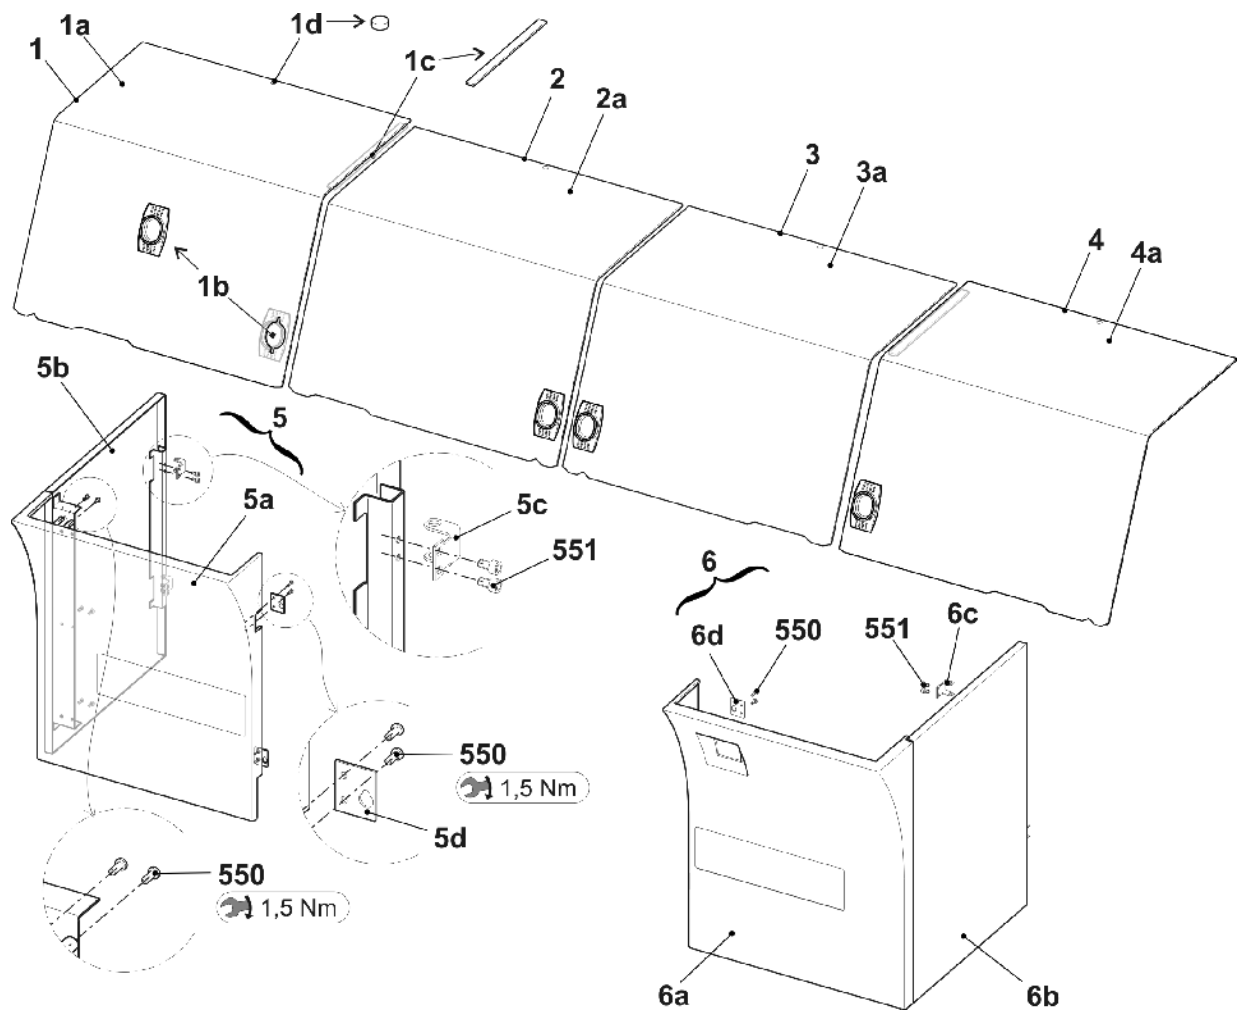


12.3 Rear panel

Pos	Designation	Id	Pos	Designation	Id
1	Panelling at the rear complete	257 668	1a	Panelling	257 662
			1b	Safety sash fastener	243 052

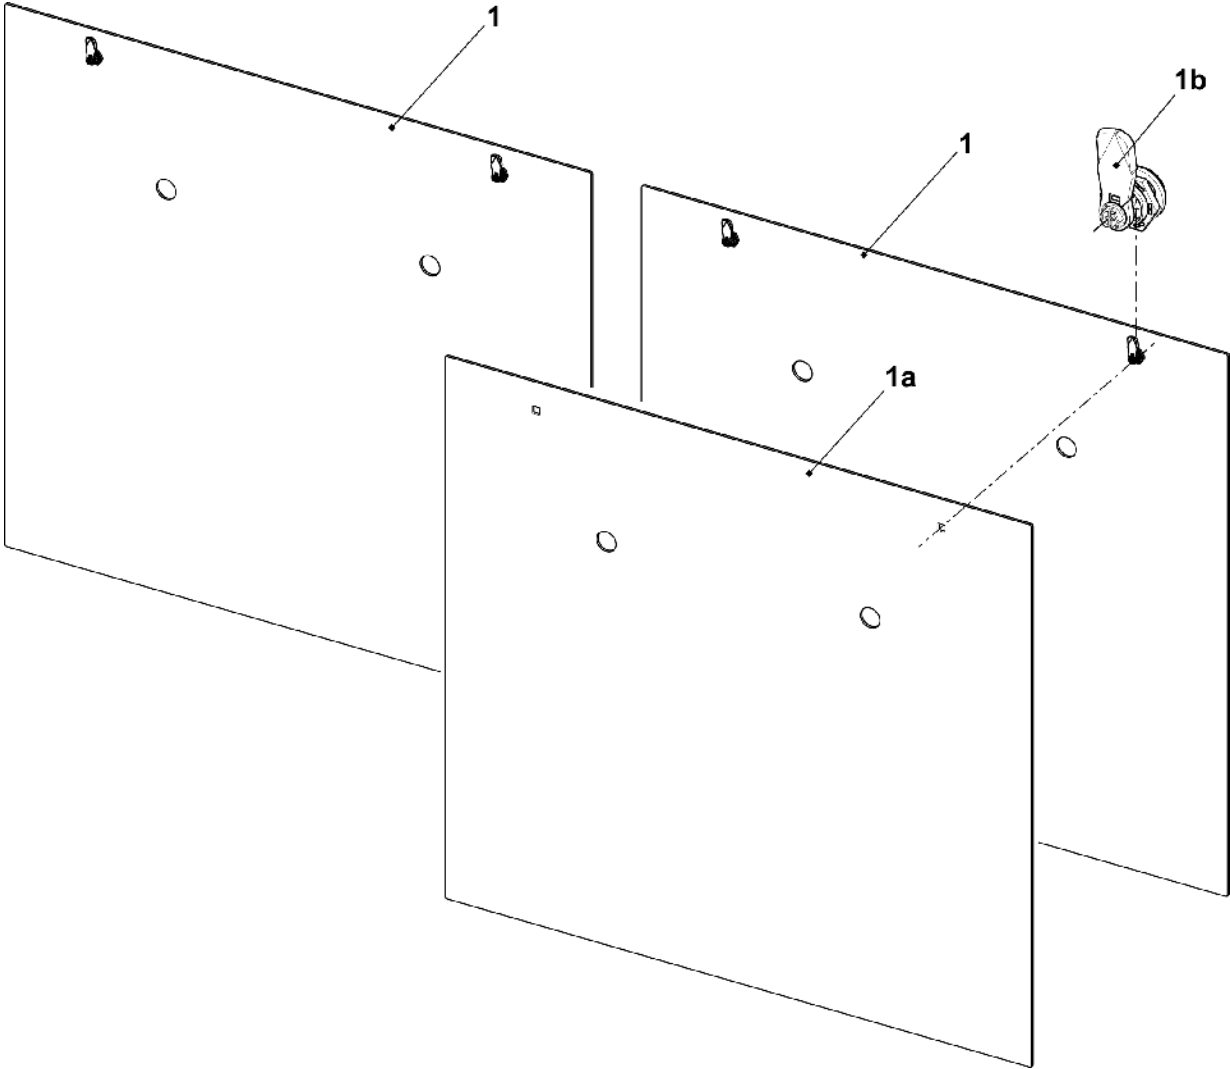


13 Electrical equipment

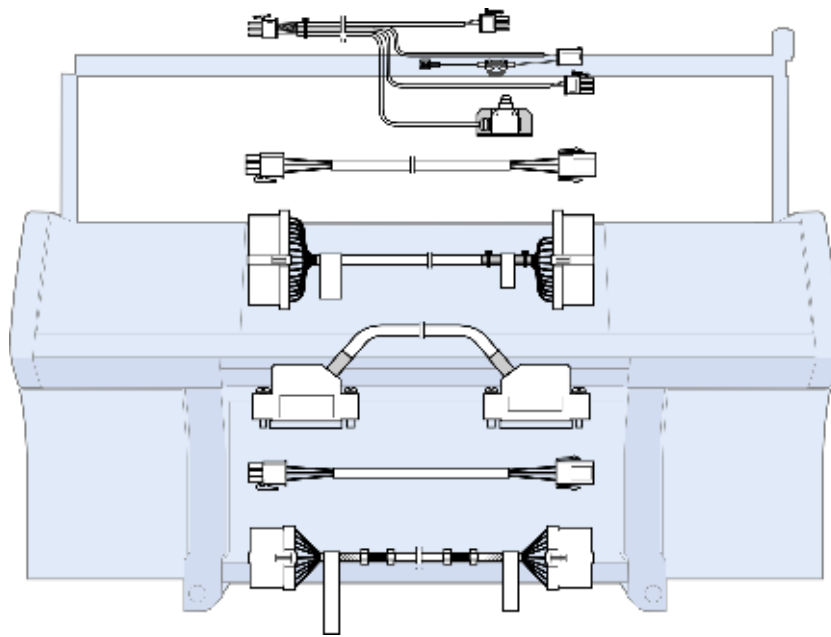





13.1 Circuit diagram (223) as PDF

Designation	ID	Marking
Circuit diagram 223 German	267 956	_DE
Circuit diagram 223 English	267 956	_GB
Circuit diagram 223 Chinese	267 956	_CN









You will find the circuit diagram 223 on the CMS documentation DVD with the ID no. 257 157

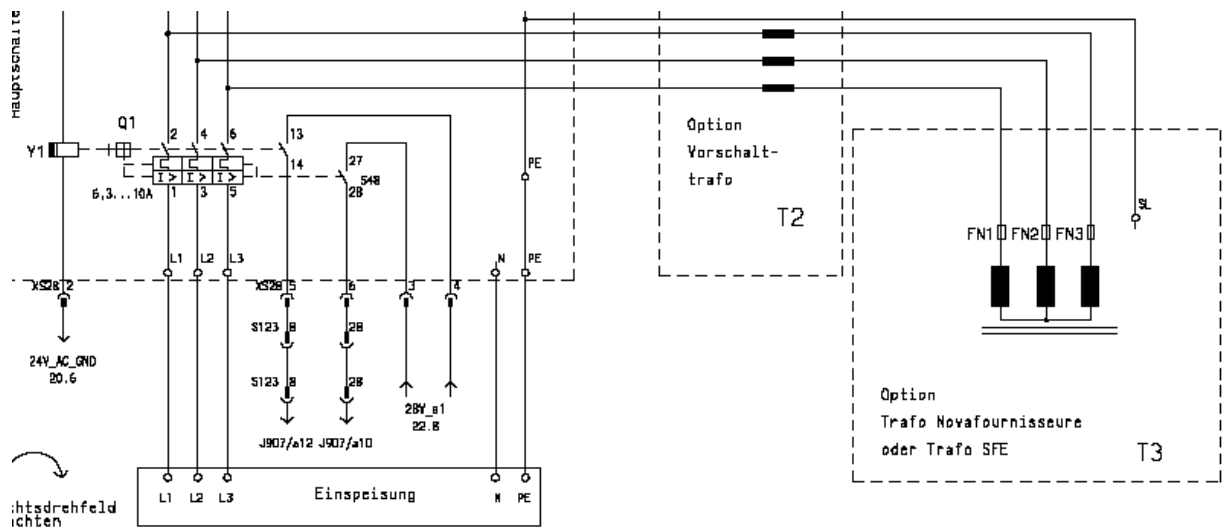









13.2 Trailing cable

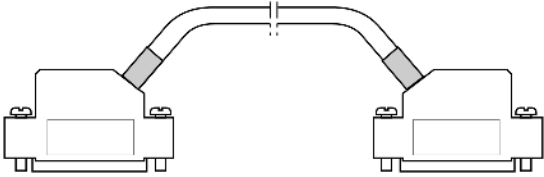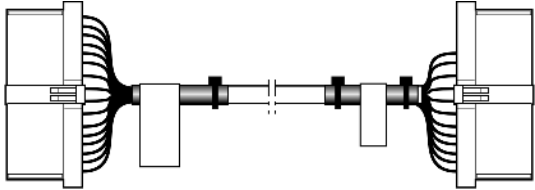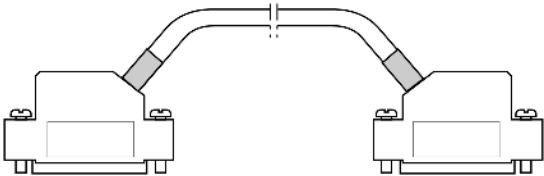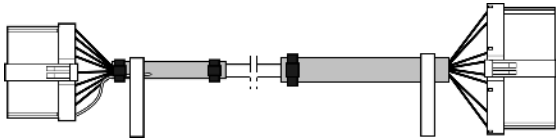Designation		ID	Designation		ID
Σ	Trailing cable set 520HP 1IMP	264 938			
Cable carriage at the rear XR332 BME2		255 054	Cable yarn carrier XR161 BME2		254 886
					
Cable carriage at the front XR333 BME2		254 888	Cable impulse sensor OH at the rear XR136 520/530 BM2		264 589
					


13.3 Cable set installation part 1

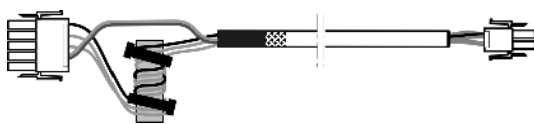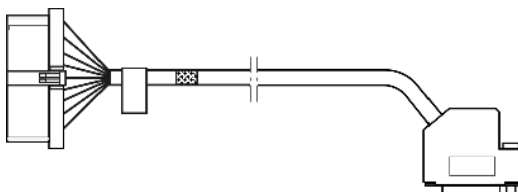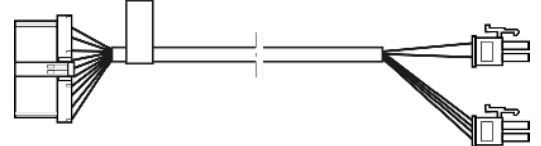Designation	ID	Designation	ID
Σ Cable installation OKC5	265 560	Limit switch rackingOKC 3XX	240 292
Cable drive motor GA	262 235		
Cable racking motor GA	262 237		
		Cable Engaging rod ECO2	252 538
Cable resolver drive OKC5	262 236		
Cable resolver racking OKC5	262 238		
		Transformer cable XT7 servo	261 350
Cable fan drive 3XX OKC	240 293		
		Cable sensor HIAB OKC5	265 698
Cable protective device on the right OKC5	265 694		
Cable protective device on the left OKC5	265 695		
		Cable switch auxiliary take-down OKC5	265 677
LightingLED OKC5	265 675		
			

13.4 Cable set installation part 2

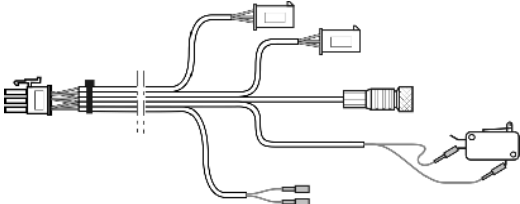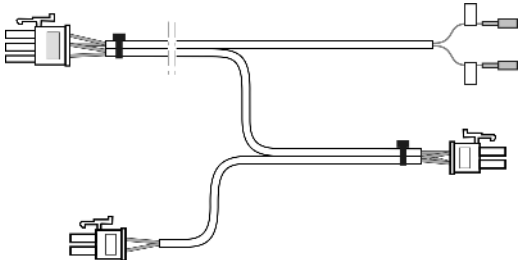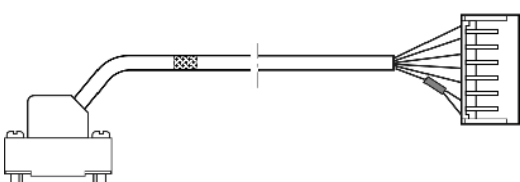
Designation	ID	Designation	ID
Σ Cable installation OKC5	265 560		
Cable switch comb OKC5	262 241	Cable switch main take-down OKC5	262 240
			
Cable resolver comb	260 327	Cable Feed wheel on the right OKC 3XX	240 294
Cable resolver HAAB	260 325		
		Transformer cable XT9 power supply unit	261 351
Cable power comb	260 326		
Cable power HAAB	260 324	Cable supply FKE lamp OKC5	266 268
			
Cable power auxiliary take-down OKC5	265 676	Cable of right cover OKC5	265 696
Cable power comb hook	260 328		
			
Cable of comb hook switch OKC5	262 239		
			
Transformer XT9 cable power supply unit	261 351		
			

14 Control electronics

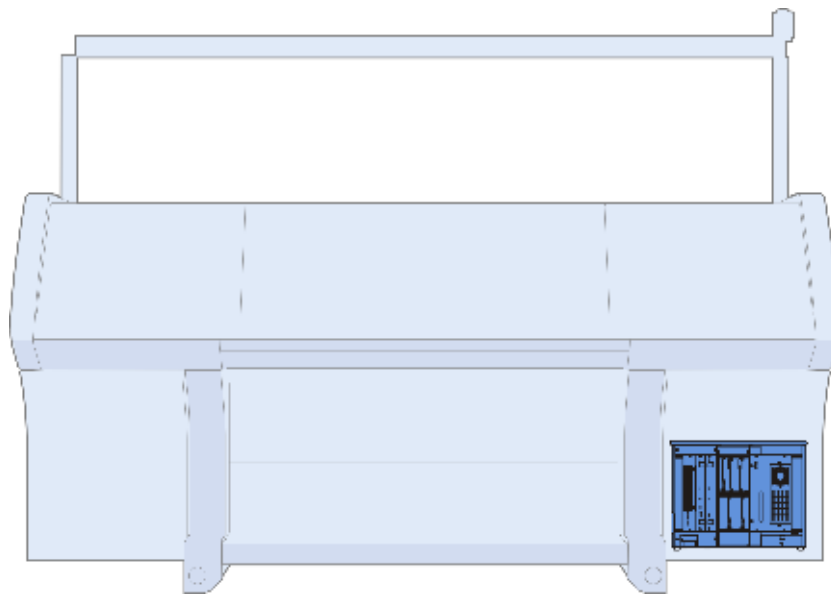


14.1
Control cabinet

Pos	Designation	Id	Pos	Designation	Id
Σ	Control unit complete	269 474	6	Card Power CPU B	301 009
1	Control unit on the right without equip- ment	269 475	7	I/O card	301 023
2	Power supply unit JSE10	301 020	8	Card WASERVO	301 018
3	Battery plug-in unit complete	301 027	9	Card Servo 7 HUV	301 041
4	Card final stages 6SM	301 040	10	Card N-CPU 432	300 965
5	Card IPC P12 XP	301 039	20*	Axial blower Servo	229 059

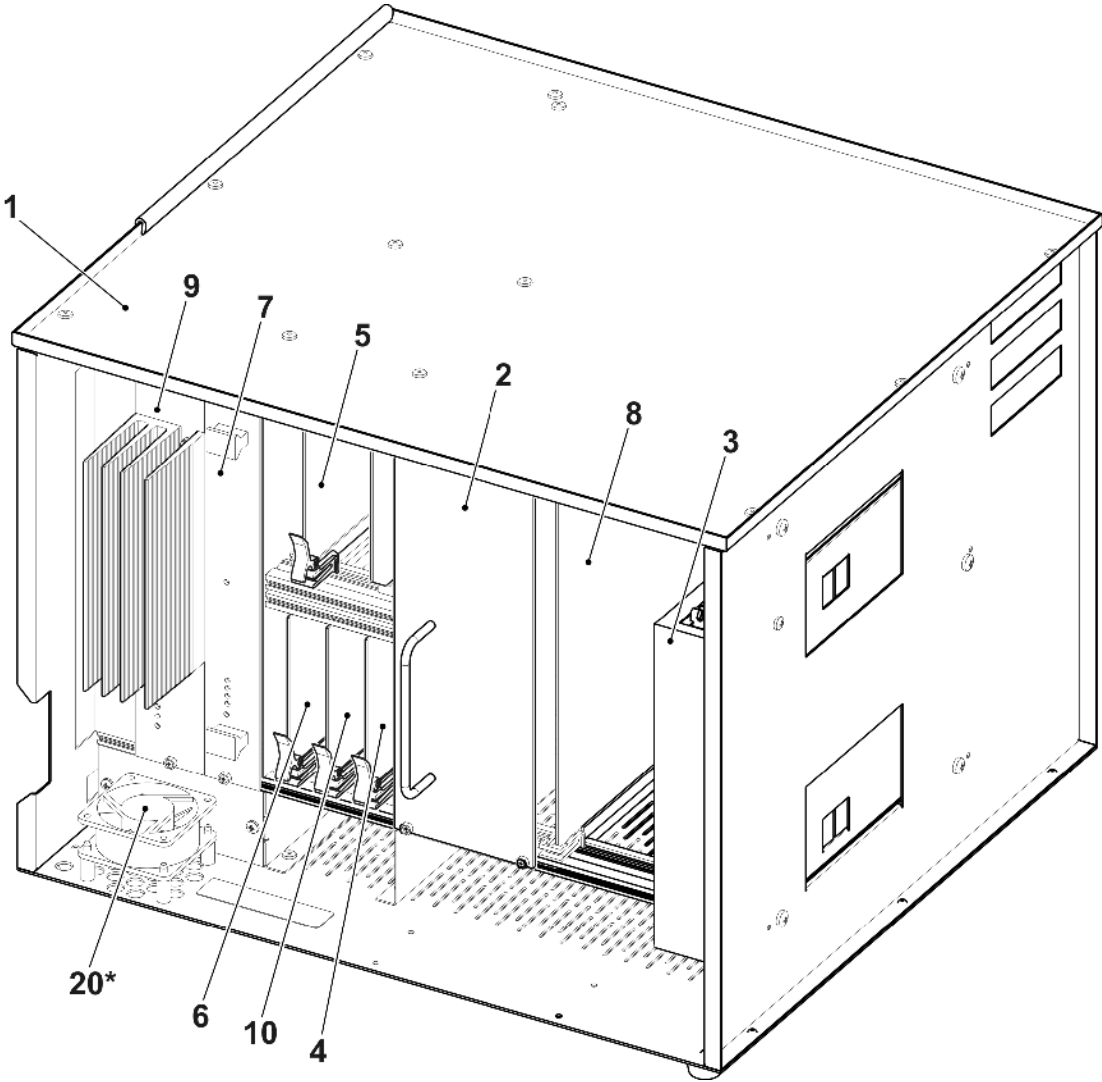


15 Deliverable accessories

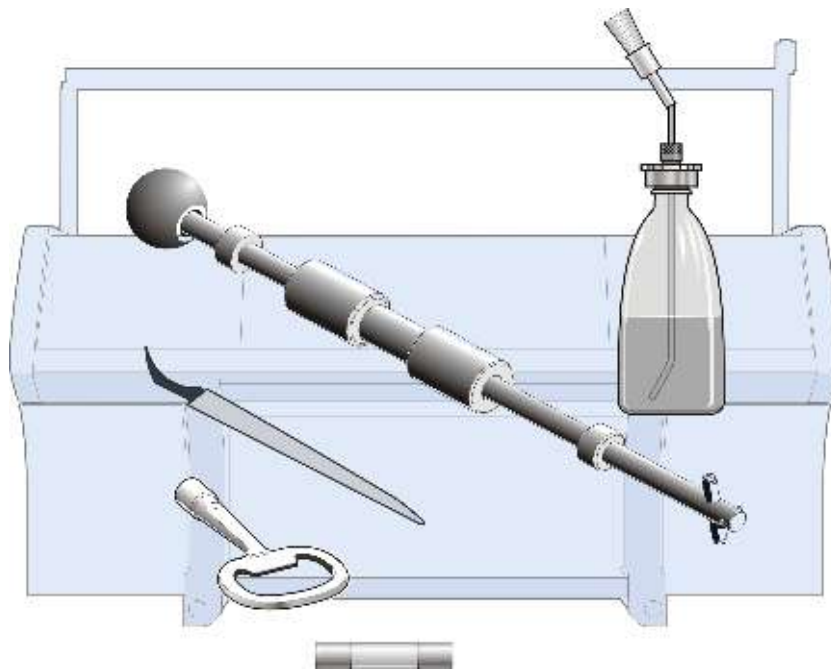

You can order the following tools, lubricants and expendables.
The following list does not correspond to the scope of delivery of the knitting machine.


15.1 Accessories part 1

Pos	Designation	Id	Pos	Designation	Id
Σ	Accessories standard part 1	265 182			
2	Extraction hook	232 027	8	Working hook	227 249
2a	Small pin	202 843	9	Fuse 3,15A T/440V 6,3x32	025 261
2b	Pencil	232 022	10	Fuse 6,3A T/440V 6,3x32	026 809
3	Grease Stoll Grease 0475, 150g	270 721	11	Fuse 10A T/440V 6,3x32	025 258
4	Textile machine oil Stolltex T 46, 1l	268 621	12	Fuse 2,5A T/440V 6,3x32	217 465
5	Oil combifix	216 732	13	Fuse 1A T/440V 6,3x32	209 321
6	Measuring tape L=150cm	228 180	14	Fuse 1,6A T 5x20	008 715
7	Key of switch cabinet	009 346	15	Micro fuse F1,0A	008 748

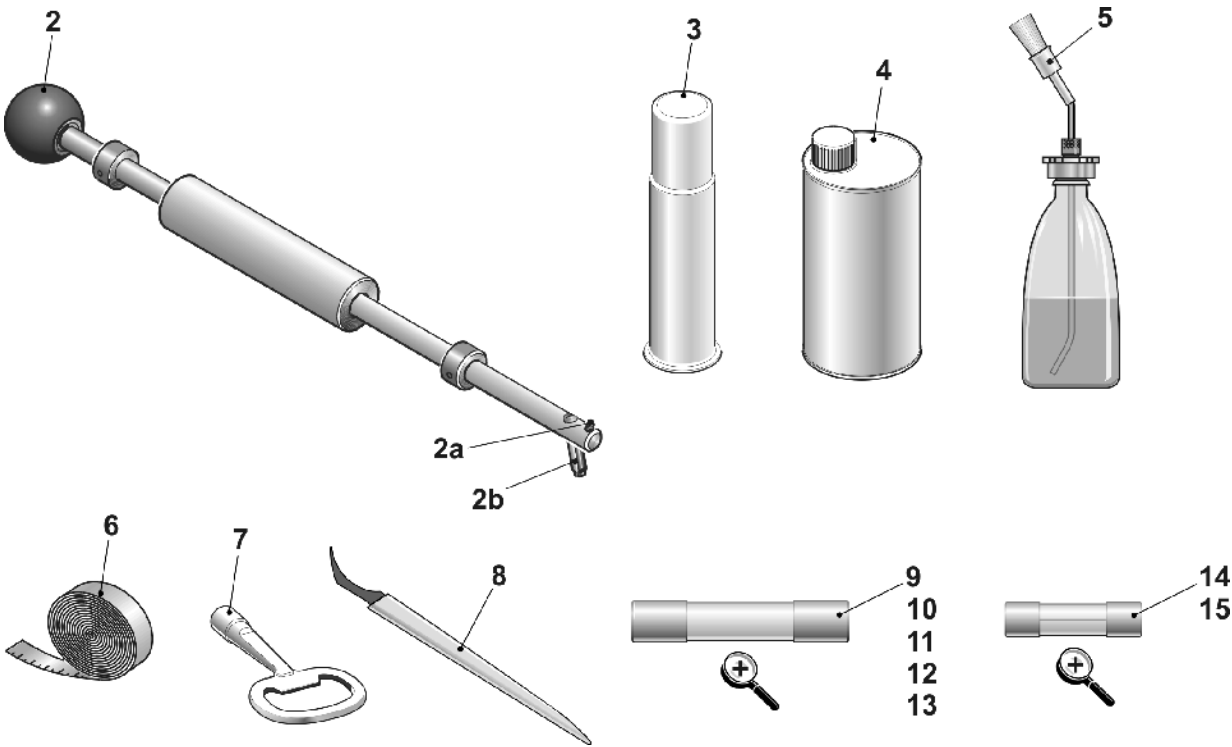


15.2 Accessories part 2

Pos	Designation	Id	Pos	Designation	Id
Σ	Accessories standard part 2	265 183	3	Signal lightLED	240 395
2	Shim	056 569	500	Setscrew M16x40	244 061

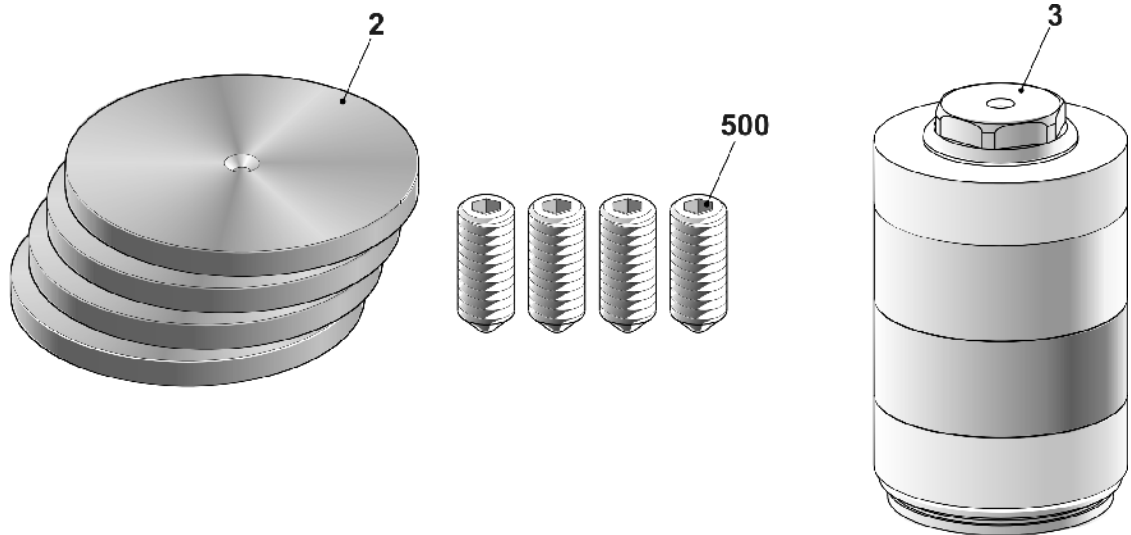


16 Special attachments

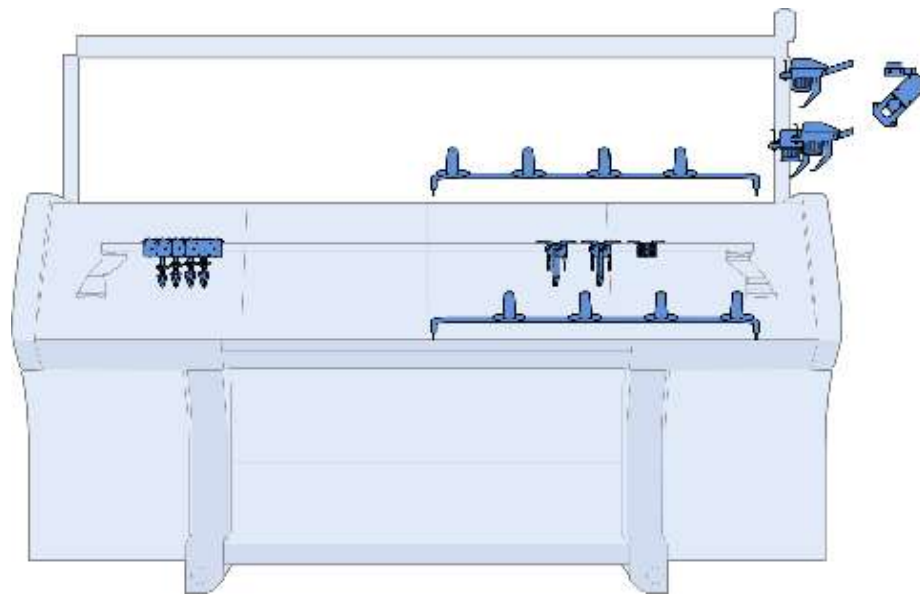


16.1 Additional bobbin board

Pos	Designation	Id	Pos	Designation	Id
Σ	Additional bobbin board 5XX	241 852			
1	Additional bobbin board welded	241 851	4	DiskD=130	062 385
2	Positioning pin	202 777	500	Pan-head screw M4x35	266 663
3	Bobbin support	200 363	501	Washer 5,3x30x1,25	023 556

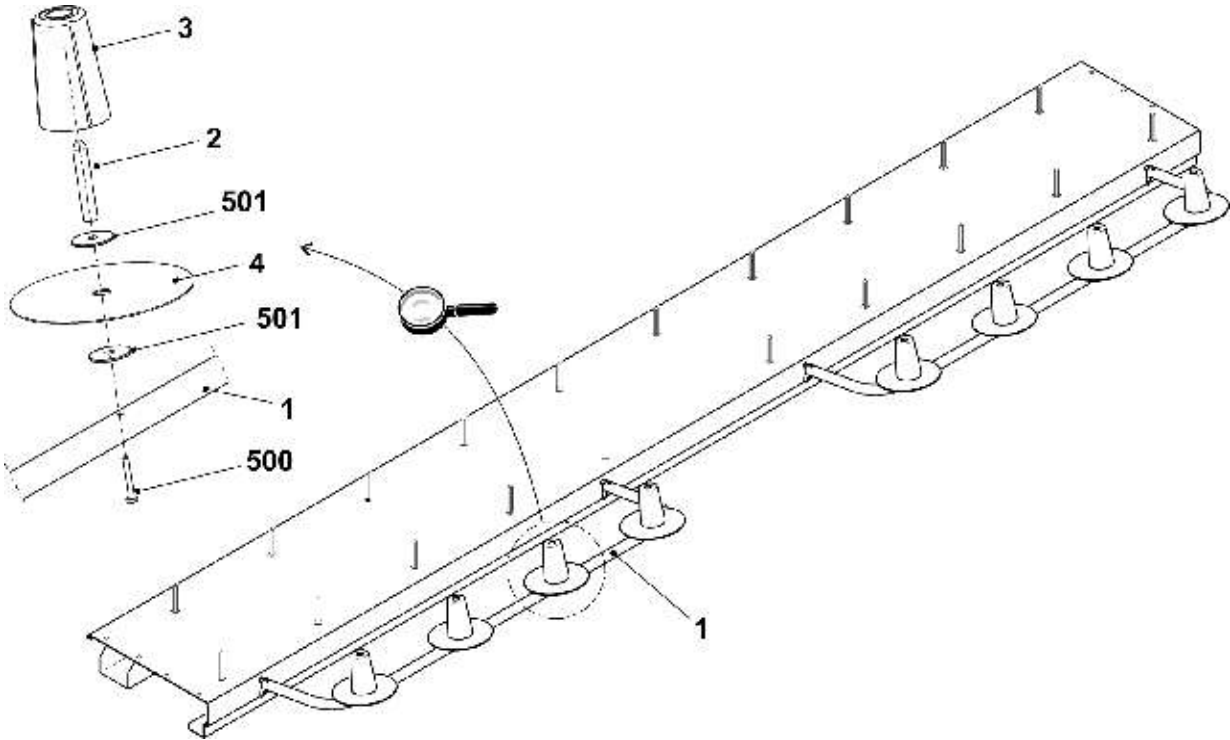


16.2 Additional bobbin board (top, bottom)

Pos	Designation	Id	Pos	Designation	Id
Σ	Additional bobbin board 50" IFF complete	244 424			
1	Additional bobbin board welded	243 608	5	550 Dowel pin 3x12	020 647
2	Positioning pin	202 777		551 Eyelet	021 504
3	DiskD=130	062 385		552 Snap ring A12	020 996
4	Bobbin support	200 363	500	Pan-head screw M4x35	266 663
5	Yarn guide	243 765	501	Washer 5,3x30x1,25	023 556
5a	Guide part	243 623	502	Pan-head screw M4x25	023 511

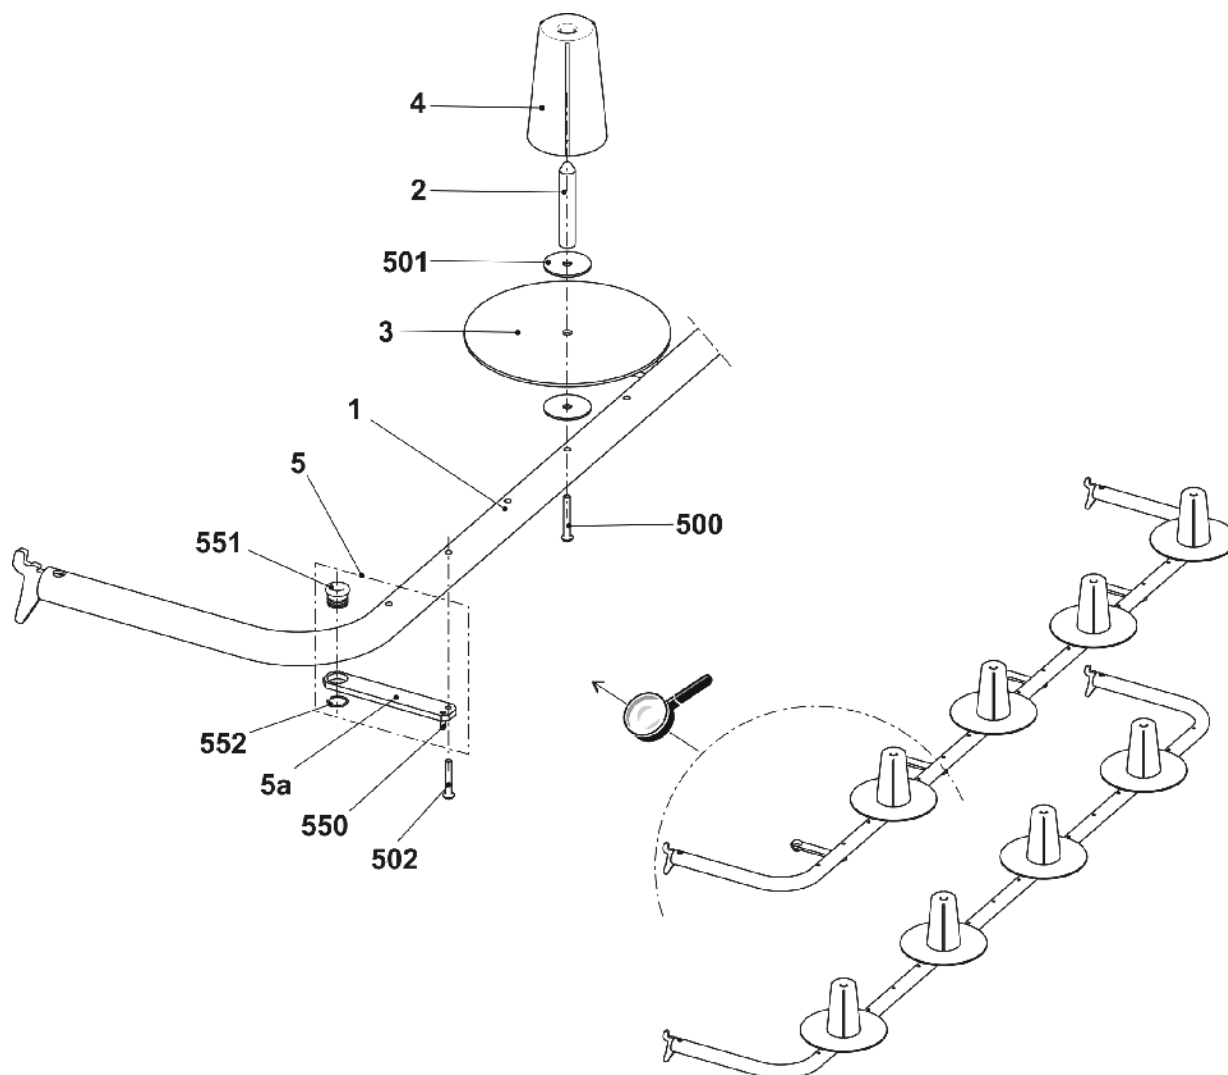


16.3 Yarn carrier carriage (for ultra coarse yarns)

Pos	Designation	ID	Pos	Designation	ID
1	Yarn carrier carriage 1+8 complete	268 903	3	Yarn carrier carriage 3+6 complete	268 901
2	Yarn carrier carriage 2+7 complete	268 902	4	Yarn carrier carriage 4+5 complete	268 900

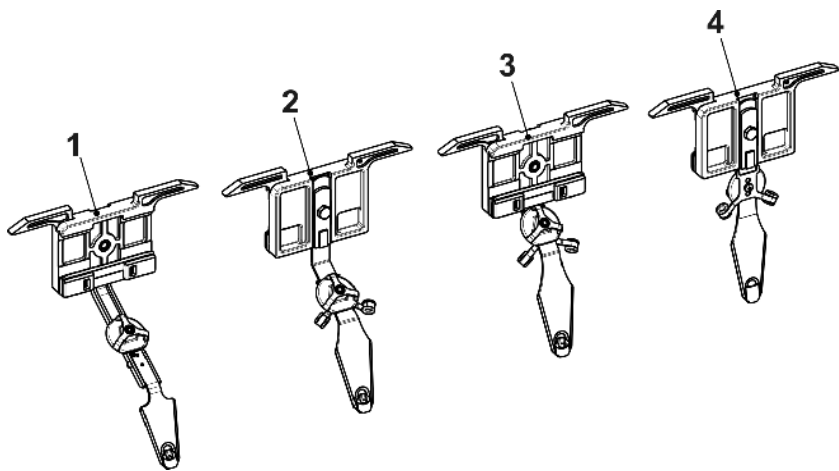


16.4 Complete intarsia yarn carriers

Pos	Designation	ID	Pos	Designation	ID
ΣA	IFF carriage 1+8 complete	213 773	10	Pressure roller	212 774
ΣB	IFF carriage 2+7 complete	213 774	11	Cover	213 392
ΣC	IFF carriage 3+6 complete	213 775	12	Clamping lever on the right	216 100
ΣD	IFF carriage 4+5 complete	213 776	13	Clamping lever on the left	216 101
1	Basic plate complete	213 408	14	Pressure plate 2,04	201 654
2	Slider	217 188		Pressure plate 2,06	208 924
3	Locking bar	212 508	16	Spring pin	201 677
4	Sliding block	213 807	17	Lifter	212 547
5	FF bow x+y complete		18	Sliding part	213 391
7	Locating pin 3,3 (2+7/3+6)	212 504	21	Threaded bolt	213 399
	Locating pin 3,4 (1+8/2+7/3+6/4+5)	212 505	500	Countersunk head screw M4x6	022 994
8	Locating pin 3,3 (2+7/3+6/4+5)	212 504	502	Countersunk head screw M4x12,5	022 979
	Locating pin 3,4 (2+7/3+6/4+5)	212 505	506	Compression spring 4,0x0,7x25	022 969
	Locating pin 3,5 (1+8)	212 506	508	Compression spring 2,8x0,35x19	023 394
9	Thrust piece	212 773			

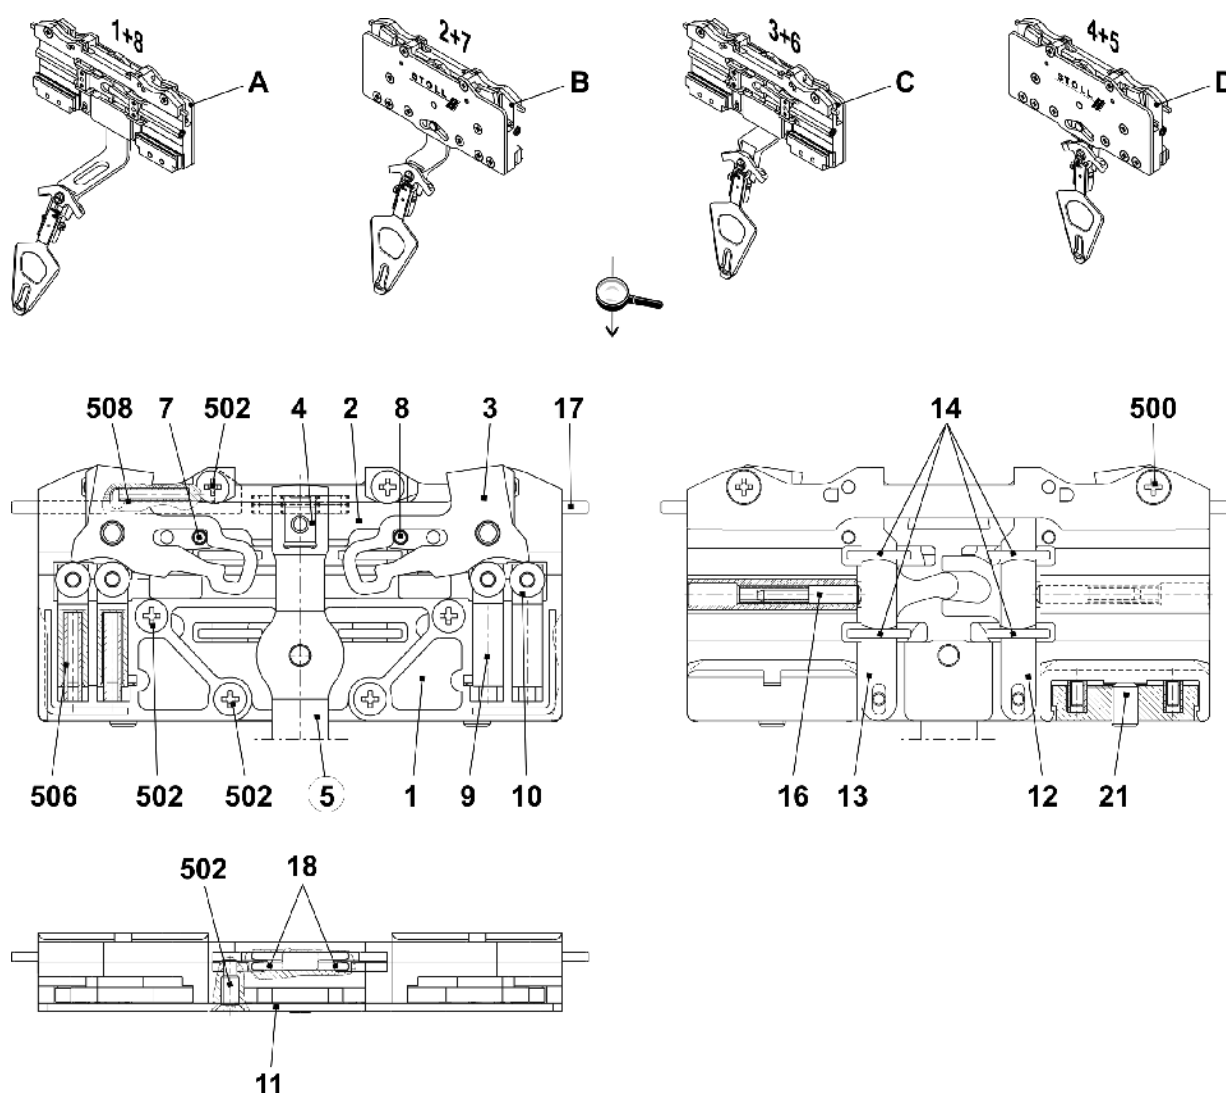


16.4.1 Bow and head IFF

Pos	Designation	ID	Pos	Designation	ID
Σ	IFF carriage 1+8 complete	213 773			
	IFF carriage 2+7 complete	213 774	5	YC head 1+8 complete	216 352
	IFF carriage 3+6 complete	213 775	6	YC head 2+7 complete	216 353
	IFF carriage 4+5 complete	213 776	7	YC head 3+6 complete	216 354
1	FF bow 1+8 complete	213 768	8	YC head 4+5 complete	216 355
2	FF bow 2+7 complete	213 769	a	Yarn guide angle	201 672
3	FF bow 3+6 complete	213 770	500	Pan head screw M4x8	023 579
4	FF bow 4+5 complete	213 771	501	Circlip S4-FST	022 774

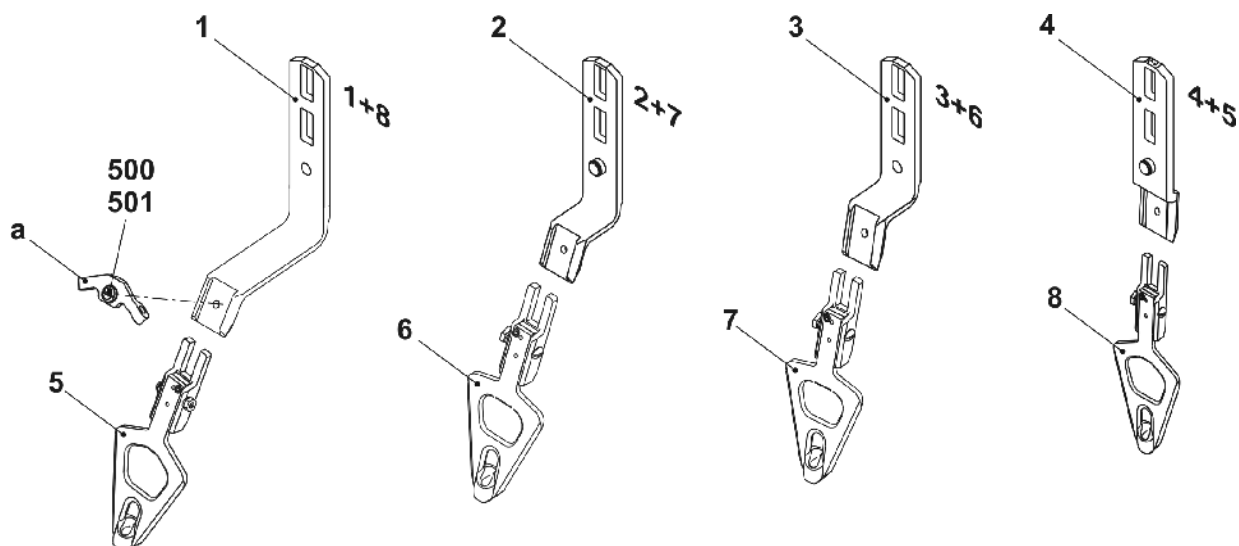


16.5 Complete intarsia yarn carriers (for ultra coarse yarns)

Pos	Designation	ID	Pos	Designation	ID
ΣA	IFF carriage 1+8 complete	268 051	10	Pressure roller	212 774
ΣB	IFF carriage 2+7 complete	268 052	11	Cover	213 392
ΣC	IFF carriage 3+6 complete	268 053	12	Clamping lever on the right	216 100
ΣD	IFF carriage 4+5 complete	268 054	13	Clamping lever on the left	216 101
1	Basic plate complete	213 408	14	Pressure plate 2,04	201 654
2	Slider	217 188		Pressure plate 2,06	208 924
3	Locking bar	212 508	16	Spring pin	201 677
4	Sliding block	213 807	17	Lifter	212 547
5	FF bow x+y complete		18	Sliding part	213 391
7	Locating pin 3,3 (2+7/3+6)	212 504	21	Threaded bolt	213 399
	Locating pin 3,4 (1+8/2+7/3+6/4+5)	212 505	500	Countersunk head screw M4x6	022 994
8	Locating pin 3,3 (2+7/3+6/4+5)	212 504	502	Countersunk head screw M4x12,5	022 979
	Locating pin 3,4 (2+7/3+6/4+5)	212 505	506	Compression spring 4,0x0,7x25	022 969
	Locating pin 3,5 (1+8)	212 506	508	Compression spring 2,8x0,35x19	023 394
9	Thrust piece	212 773			

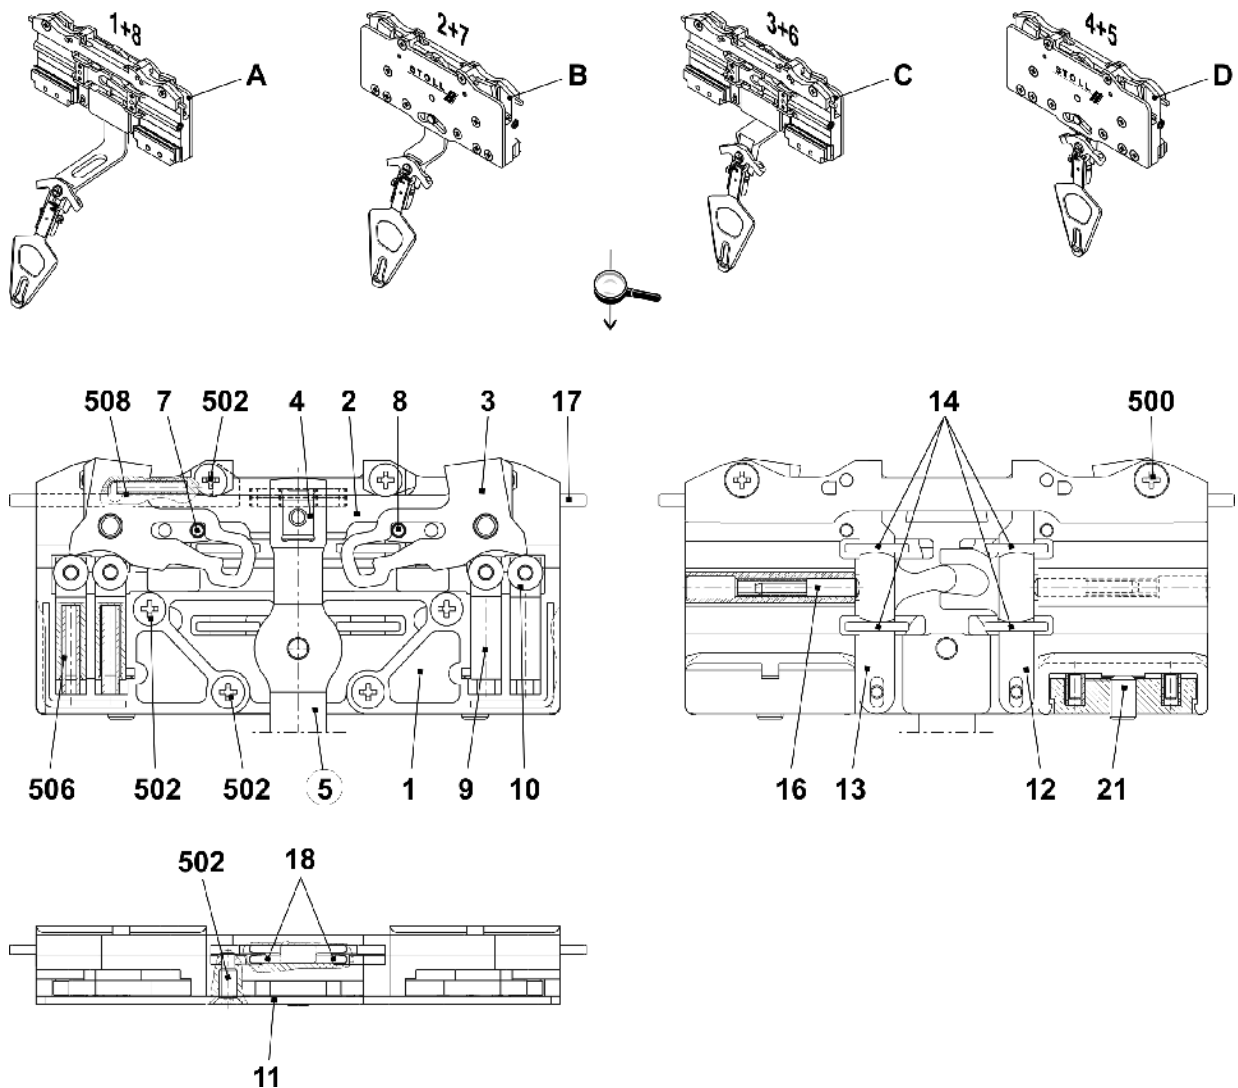


16.5.1 Bow and head IFF (for ultra coarse yarns)

Pos	Designation	ID	Pos	Designation	ID
Σ	IFF carriage 1+8 complete	268 051			
	IFF carriage 2+7 complete	268 052	5	YC head 1+8 complete	268 048
	IFF carriage 3+6 complete	268 053	6	YC head 2+7 complete	268 049
	IFF carriage 4+5 complete	268 054	7	YC head 3+6 complete	268 050
1	FF bow 1+8 complete	213 768	8	YC head 4+5 complete	268 049
2	FF bow 2+7 complete	213 769	a	Yarn guide angle	266 997
3	FF bow 3+6 complete	213 770	500	Pan head screw M4x8	023 579
4	FF bow 4+5 complete	213 771	501	Circlip S4-FST	022 774

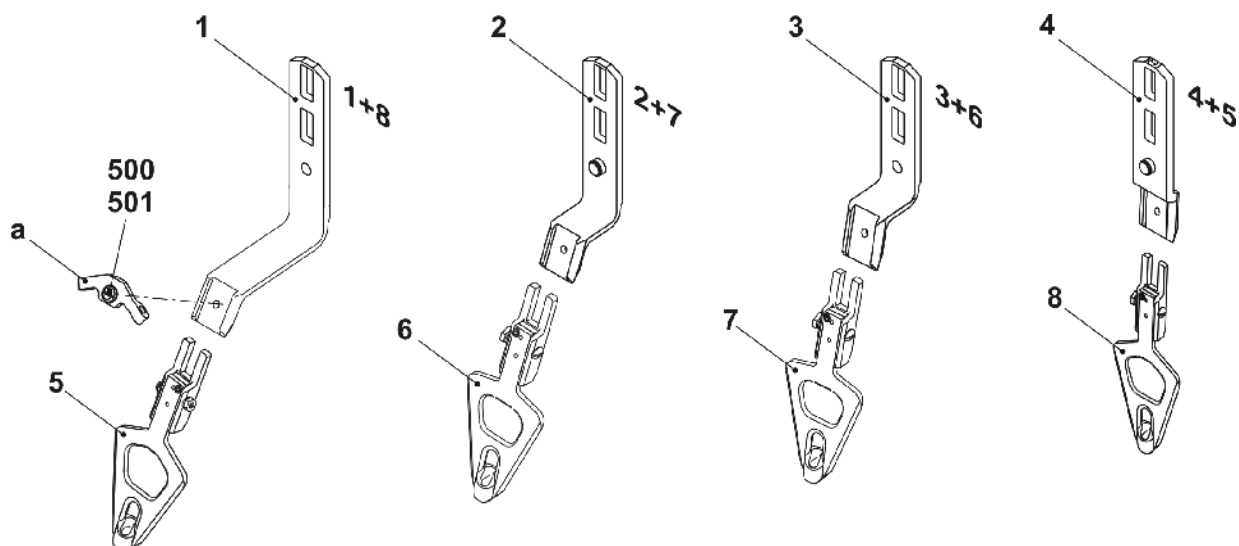


16.6 Bobbin holder on the left

Pos	Designation	ID	Pos	Designation	ID
Σ	Bobbin holder on the left	253 965	501	Pan-head screw M4x25	023 511
1	Support	253 969	502	Washer 4	022 481
2	Support	252 769	503	Hexagon nut M4-6	022 536
3	Leaf spring	253 350	505	Washer 6	022 431
4	Support on the left	253 347	506	Hexagon nut M6-6	022 899
5	Spacer	253 349	507	Pan-head screw M4x16	023 412
6	Yarn detector Massardi	226 964	508	Pan-head screw M4x12	023 062
7	Clamp	228 583	509	Pan-head screw M8x16	023 113
8	Slot nut	228 851	510	Pan-head screw M8x18	251 331
10	Cover	253 968	511	Pan-head screw M6x30	023 451
11	Holding angle	253 964	512	Serrated lock washer A4,3	022 482
12	Holding angle	253 963	513	Pan-head screw M4x6	022 946
13	Holding angle	253 967	514	Pan-head screw M4x10	023 450
14	Cable plating	253 468	515	Cap nut M4-6	253 805

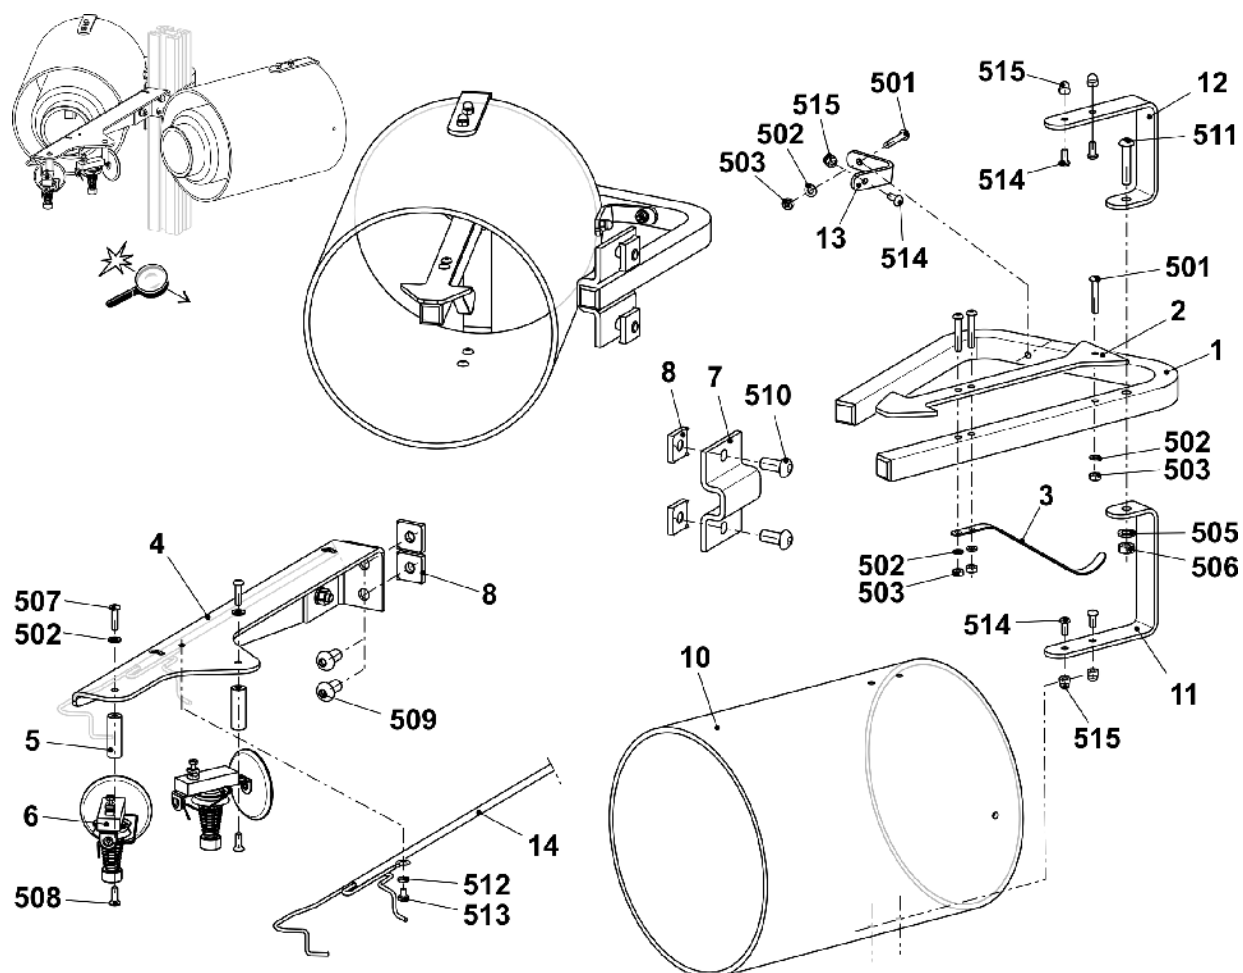


16.7 Bobbin holder on the right

Pos	Designation	ID	Pos	Designation	ID
Σ	Bobbin holder on the right	253 966	501	Pan-head screw M4x25	023 511
1	Support	253 969	502	Washer 4	022 481
2	Support	252 769	503	Hexagon nut M4-6	022 536
3	Leaf spring	253 350	505	Washer 6	022 431
4	Support right	253 348	506	Hexagon nut M6-6	022 899
5	Spacer	253 349	507	Pan-head screw M4x16	023 412
6	Yarn detector Massardi	226 964	508	Pan-head screw M4x12	023 062
7	Clamp	228 583	509	Pan-head screw M8x16	023 113
8	Slot nut	228 851	510	Pan-head screw M8x18	251 331
10	Cover	253 968	511	Pan-head screw M6x30	023 451
11	Holding angle	253 964	512	Serrated lock washer A4,3	022 482
12	Holding angle	253 963	513	Pan-head screw M4x6	022 946
13	Holding angle	253 967	514	Pan-head screw M4x10	023 450
14	Cable plating	253 468	515	Cap nut M4-6	253 805

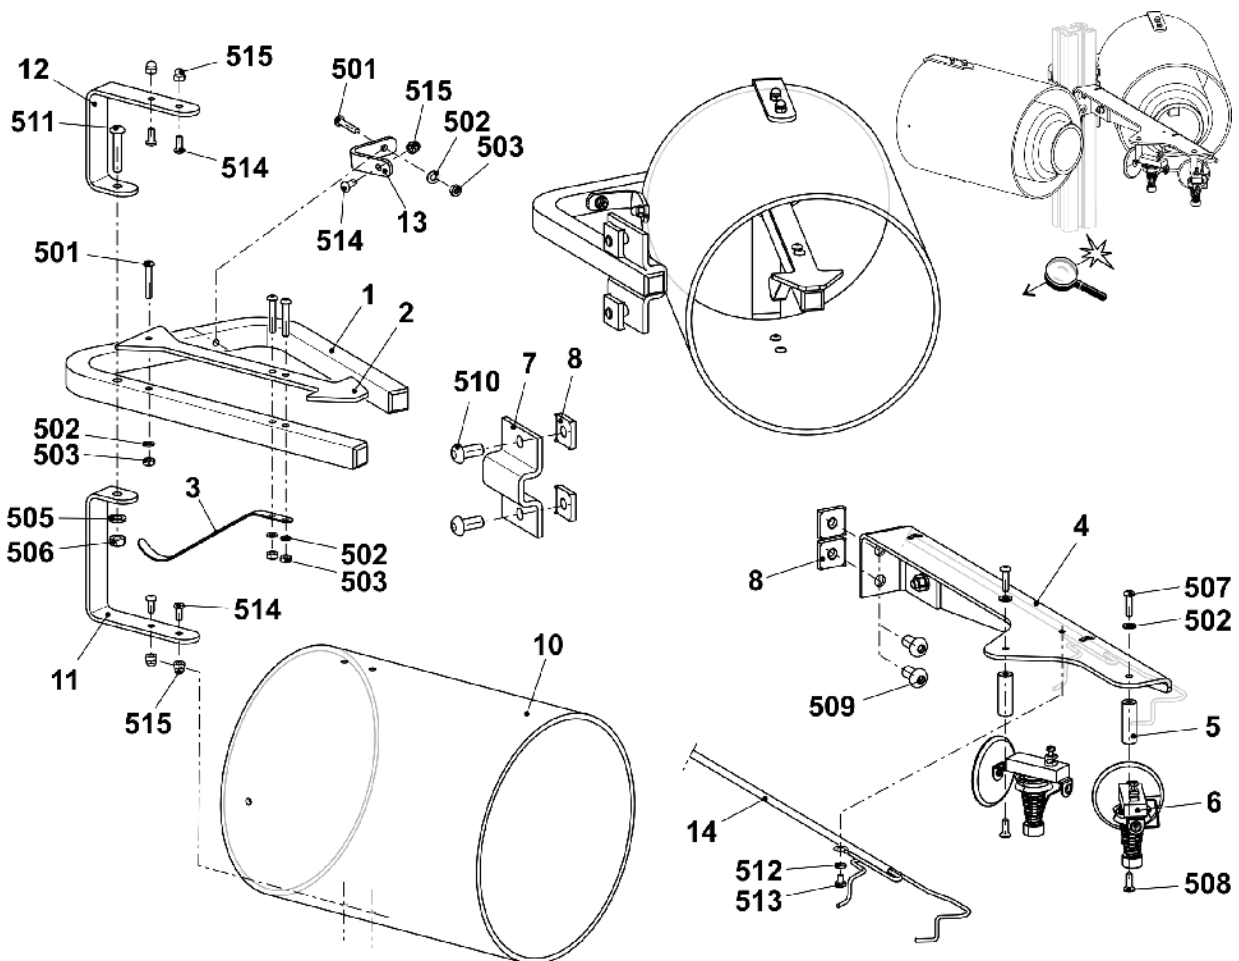


16.8 Yarn length measuring device on the right complete

Pos	Designation	Id	Pos	Designation	Id
Σ	Yarn length measuring device on the right complete	265 392			
1	Yarn length measuring device on the right complete	257 282	10	Operating instructions of ASCON assembly	266 069
2	Cable ASCON	257 239	500	T-head bolt M8x25	022 866
3	Support right	265 045	501	Serrated nut M8-10	023 026
5	Adjustment weight	212 241	503	Cable tape 302x4,8	008 642
8	DVD with operating instructions	258 391	504	Cap screw M5x12	020 132
9	Holding plate	258 386	505	Washer 5	020 871

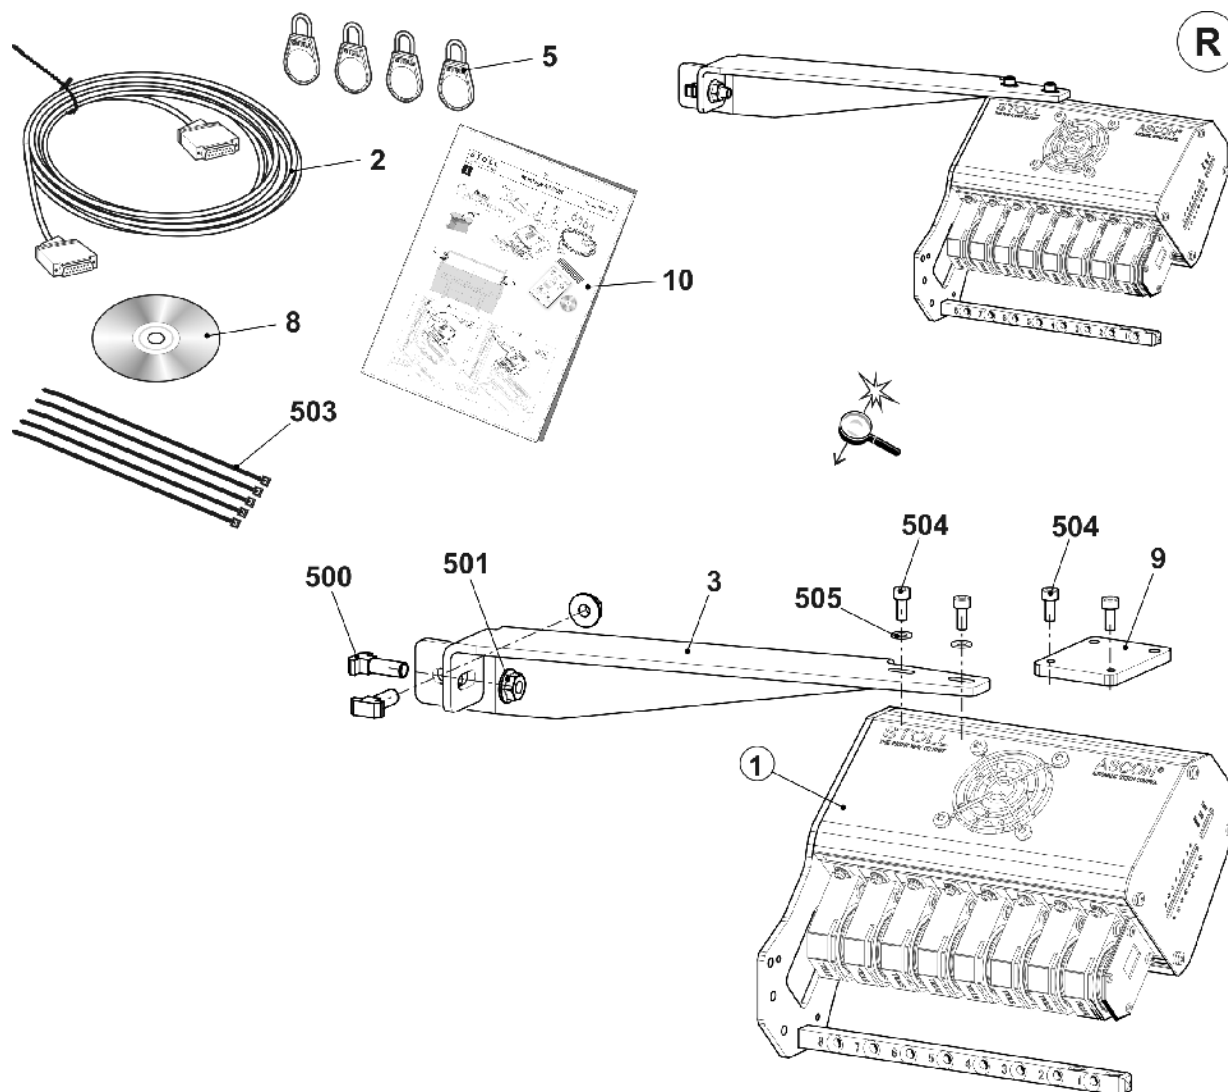


16.8.1 Yarn length measuring device on the right

Pos	Designation	Id	Pos	Designation	Id
Σ	Yarn length measuring device on the right complete	257 282	8	Yarn guide rod	257 139
1	Housing	257 281	9	Card Ascon	255 000
2	Support	257 278	10	Threaded strip	257 138
3	Cover	257 273	500	Pan-head screw M5x10	023 247
4	Fan with plug	257 048	501	Screw 50x15	251 728
5	Protective grid fan Servo5	229 142	502	Sheet metal screw ST3,5x13	022 940
6	Sensor	211 354	503	Oval head screw with washer M3x10	023 380
6a	Rubber running ring	258 582	504	Spring nut M5	022 873
7	Sensor complete	212 406	505	Serrated lock washer J3,7	022 554

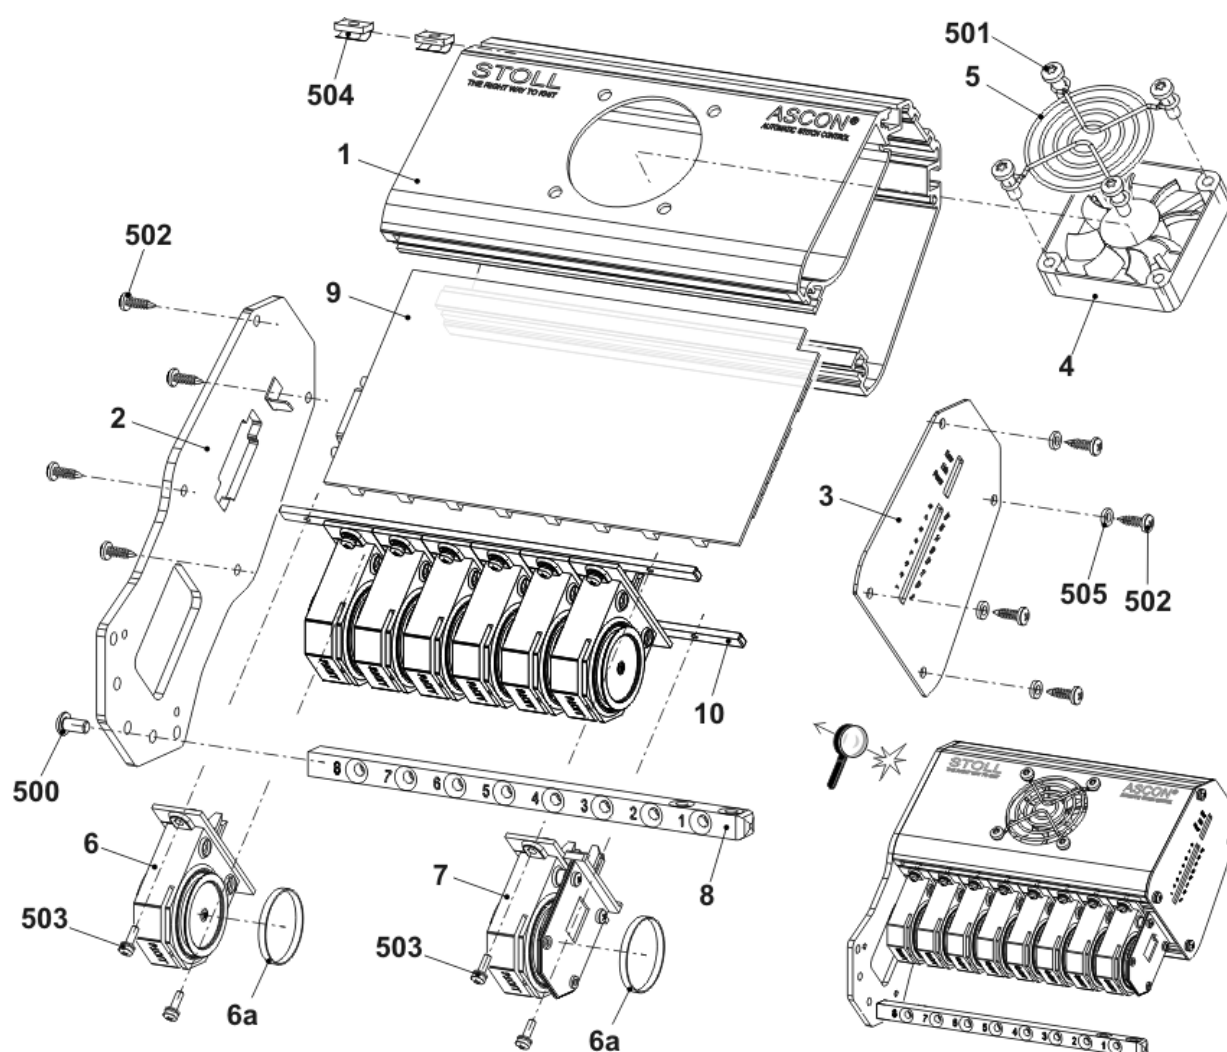


16.9 Yarn length measuring device on the left complete

Pos	Designation	Id	Pos	Designation	Id
Σ	Yarn length measuring device on the left complete	265 391			
1	Yarn length measuring device on the left complete	257 283	10	Operating instructions of ASCON assembly	266 069
2	Cable ASCON	257 239	500	T-head bolt M8x25	022 866
3	Support on the left	265 046	501	Serrated nut M8-10	023 026
5	Adjustment weight	212 241	503	Cable tape 302x4,8	008 642
8	DVD with operating instructions	258 391	504	Cap screw M5x12	020 132
9	Holding plate	258 386	505	Washer 5	020 871

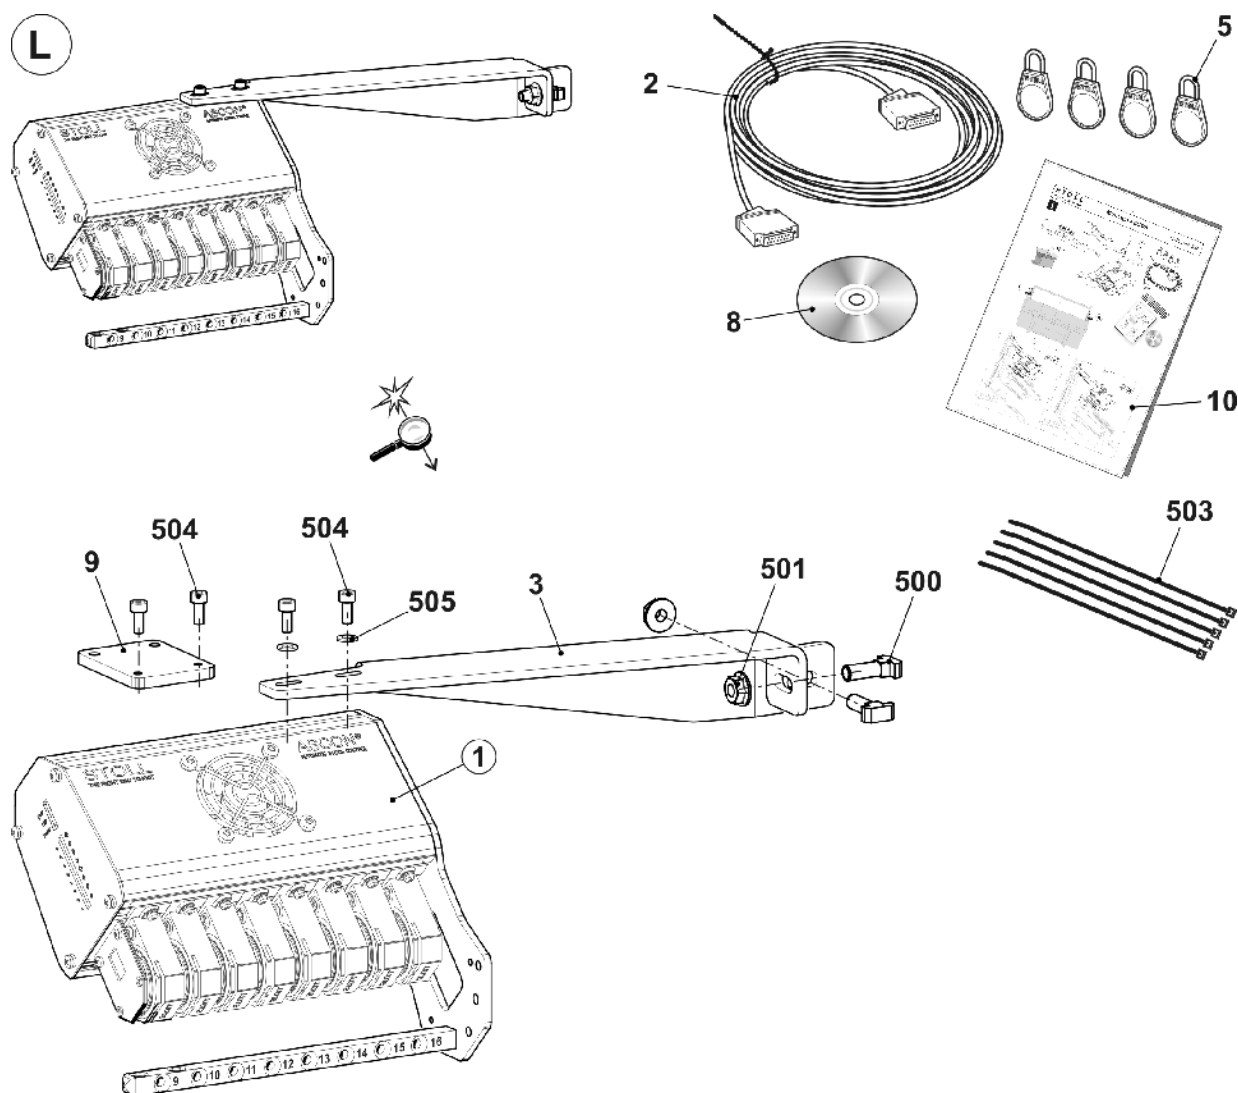

16.9.1 Yarn length measuring device on the right

Pos	Designation	Id	Pos	Designation	Id
Σ	Yarn length measuring device on the right complete	257 282	8	Yarn guide rod	257 139
1	Housing	257 281	9	Card Ascon	255 000
2	Support	257 278	10	Threaded strip	257 138
3	Cover	257 273	500	Pan-head screw M5x10	023 247
4	Fan with plug	257 048	501	Screw 50x15	251 728
5	Protective grid fan Servo5	229 142	502	Sheet metal screw ST3,5x13	022 940
6	Sensor	211 354	503	Oval head screw with washer M3x10	023 380
6a	Rubber running ring	258 582	504	Spring nut M5	022 873
7	Sensor complete	212 406	505	Serrated lock washer J3,7	022 554

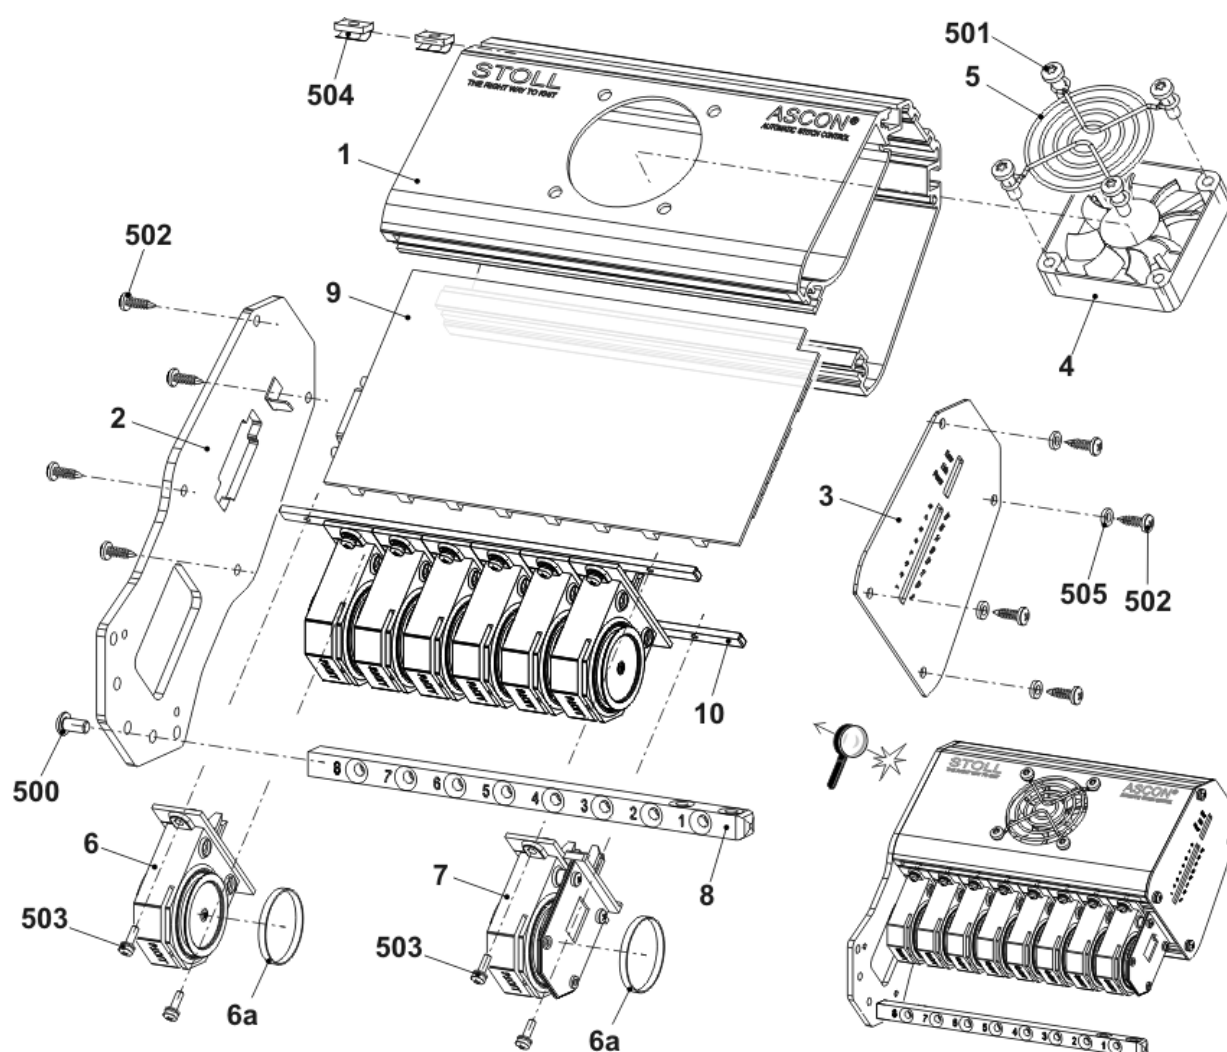

16.10 Adjusting plates, Devices needle bed

Pos	Designation	Id	Pos	Designation	Id
A	Yarn carrier adjusting plate set	266 736			
2	Adjusting plate E16-18	265 064	7	Adjusting plate V 0,25	267 253
3	Adjusting plate E3-4	265 061	8	Adjusting plate V 0,5	258 199
4	Adjusting plate E10-14	265 063	9	Adjusting plate V 1	258 200
5	Adjusting plate E2,5.2-8	265 062	10	Adjusting plate V 1,5	258 201
B	Device needle bed complete	263 625	C	Support of needle bed	268 961

